




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH H2534Y3. You'll find the answers to all your questions on the ZENITH H2534Y3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH H2534Y3
User guide ZENITH H2534Y3
Operating instructions ZENITH H2534Y3
Instructions for use ZENITH H2534Y3
Instruction manual ZENITH H2534Y3

machine numbers | H19340T | H20340T | H25340T | H2539Y

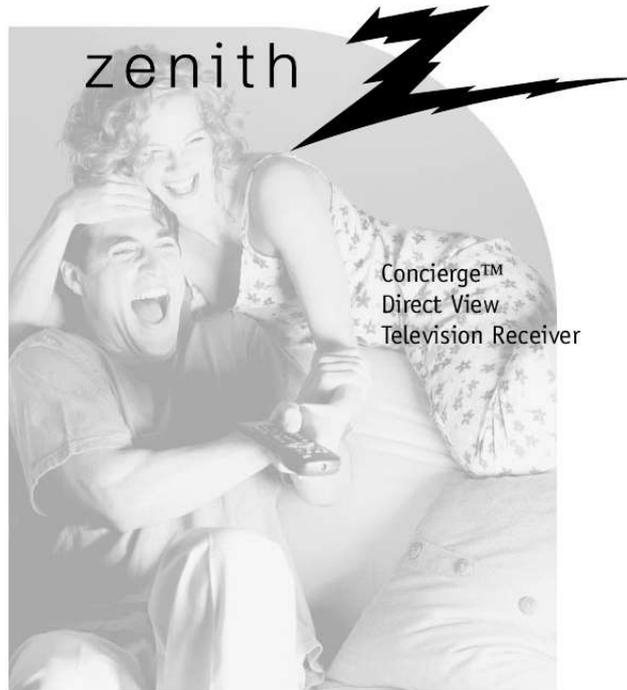

installation & operating guide / warranty



[You're reading an excerpt. Click here to read official ZENITH H2534Y3 user guide](http://yourpdfguides.com/dref/341060)
<http://yourpdfguides.com/dref/341060>

Manual abstract:

REFER TO QUALIFIED SERVICE PERSONNEL. @@@@ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND. NOTE TO CABLE/TV INSTALLER:

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

@@@ · Increase the separation between the equipment and receiver. @@@ Unauthorized modification could void the user's authority to operate this product. Concierge is a trademark of Zenith Electronics Corporation. IMPORTANT SAFETY INSTRUCTIONS Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards.

To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference. Observing the simple precautions discussed in this booklet can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.S. Federal safety requirements, and those of the Canadian Standards Association.

1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 2. Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label.

If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6. Water and Moisture Do not use this product near water for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool. 12.

Line-Cord Polarization This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet.

Do not defeat the safety purpose of the polarized plug. 7. Accessories Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 13. Power-Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8. Transporting Product A product and cart combination should be moved with care.

Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) PORTABLE CART WARNING 206-3490-O PAGE 3 IMPORTANT SAFETY INSTRUCTIONS (Continued from previous page) 18. Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20. Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a.

If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c. If the product has been exposed to rain or water.

d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. e. If the product has been dropped or the cabinet has been damaged.



[You're reading an excerpt. Click here to read official ZENITH](#)

[H2534Y3 user guide](#)

<http://yourpdfguides.com/dref/341060>

f. If the product exhibits a distinct change in performance. Example of Grounding According to National Electrical Code Instructions Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 15. Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

21. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 16. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 22. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition. 23. Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. 24. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. PAGE 4 206-3490-O Table of Contents Turn to the next page to begin the TV setup.

Safety Warnings

.....

.....

.. .2 Important Safety Information ..

.....

.....

.. .3 Table of Contents

.....

.....

.....5 Step 1.

Hook Up TV TV and other Equipment Hookups Antenna

.....

.....

.....

.. .6 Cable service

.....

.....

.....

.. .7 Antenna with VCR

.....

.....

.....8 Cable service with VCR .

.....

.....

.....

.. .9 External Speaker

.....

.....

...10 Step 2.

Channel Search and Reception Setup Auto Program

.....

.....

...11 (Select Antenna, or cable service and perform channel search) Front Panel Controls ..

.....

.....

.. .12 Guest Remote Key Functions . . .

.....

.....

.13 Installer's Remote Key Functions

.....

.. .14 On-Screen Menus Overview . . .

the Audio/Video jacks on the back of the TV as the source of the picture and sound.) ENTER Press to view the Channel/Time/Audio display or to remove any on-screen display or menu. TIMER Press repeatedly to adjust TV turn-off time up to 4-hours. Picks AM/PM on the Sleep Timer menu. 7 0 TIMER ALARM CHPREVIEW remote control part number SC652 124-213-02 206-3490-O PAGE 13 Installer Remote Key Functions A quick list of the keys on the LP702 installer's remote and what they do. POWER Turns TV On or Off. CC (CLOSED CAPTIONING) Press to access closed captions. Press ENTER to exit. TV/FM Selects TV or Radio on TVs equipped with FM radio. VOLUME LEFT/RIGHT Adjusts the sound levels. POWER FLSH CC MUTE Turns sound Off and On, while the picture remains. BK MUTE TV /FM VO LUM E FLASHBK(FLASHBACK) Return to the last channel viewed. CHAN NEL 1 4 2 5 8 3 6 9 ENTER CHANNEL (UP/DOWN) Flip through available channels.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341060)

[H2534Y3 user guide](http://yourpdfguides.com/dref/341060)

<http://yourpdfguides.com/dref/341060>

NUMBER KEY PAD Selects channels directly and enters numeric values for some options. **BANK** Press and repeat to select a Memory Bank - - 1, 2, 3, or 4. **ENTER** Press to view the Channel/Time display or to remove any on-screen display or menu. **7 0 TIMER MENU BANK TIMER** Press repeatedly to adjust TV turn-off time up to 4-hours. Use to pick AM/PM in Clock/Timer menu.

MENU/SELECT/ADJ (ADJUST) Press **MENU** repeatedly to scroll through either the Installer's, or User menus. Use **SELECT** to choose an option and **ADJ** (adjust) to change the selected option. **SELECT CHPREVIEW ADJ ADJ CHANNEL PREVIEW** Gives installer access to the guest's menus. Displays the available TV channels and hotel guest's Parental Control menu. Allows user to select the Aux Channel. (Use the Audio/Video jacks on the back of the TV as the source of the picture and sound.) remote control part number LP702 124-213-04 **PAGE 14 206-3490-O** On-Screen Menus Overview Descriptions of all the menus on the TV. Using the Menu button on the installer's remote, the installer can access all the menus below. Menu Name Page Description **ON-SCREEN MENUS SETUP MENU** Auto Program Add/Del/Blk Channel Labels Timer Setup Clock Set Caption/Text Language **VIDEO MENU PARENTAL CONTROL MENU 11 16 17 18 19 20 21 22 23** Adjusts the basic characteristics of the TV Automatically finds and stores active channels to scroll through using Channel Up/Down. Manually picks and chooses which active channels will appear when using Channel Up/Down Labels your channels with their network names (ABC, CBS, HBO, etc.

). Programs a time for the TV to turn itself on or off, or to turn itself off after a certain amount of time. Sets the time. Chooses the captioning or text option. Picks the language the on-screen menus will appear in. Adjusts the picture for any viewing situation. The options are: Contrast, Brightness, Color, Tint, Sharpness, Picture Pref. Allows installer to block any channel or A/V source for up to 99 hours, with the use of a password. **25 Channel/Time Alarm Sleep Timer Volume Captions Ch Preview Channel Bank OTHER MENUS AND ON-SCREEN DISPLAYS** Shows the current time, channel, video and type of incoming audio signal. Sets the wake-up time.

Sets the time the TV will turn off. Shows current sound level. Use to select Caption/Text options. Displays the available channels list. Shows currently selected channel bank.

INSTALLER MENUS 29 206-3490-O PAGE 15 Setting Add/Delete/Blank Fine-tune the guest's channel selection list. **CH 44 ADDED 1 2 3** Press the **MENU** key on the Installer's remote so the Setup menu appears. Press **SELECT** repeatedly to highlight the Add/Del/Blk menu. Using either the **NUMBER** keypad and **ENTER** or the Channel Up/Down arrows on the remote, select a channel. (If adding a deleted channel, you will need to use the number pad and **ENTER**.)

POWER 4 5 Using the Right/Left **ADJ** arrows, pick whether that channel is Added, Deleted, or Blank. To continue, select another channel and repeat Step 3.

When you are finished, press **ENTER** to remove menu. **TV /FM FLSH CC BK MUTE VO LUM E CHAN NEL** Adding Aux, VCR 3, VCR 4, or FM to the Channel Preview List Go to the Setup menu, select the Add/Del/Blk option. Use Channel Up/Down to select the option and choose Added. Note: If the option was turned off in the Service menu, you will have to reinstate it before it can appear as an option in the Channel Preview list. Notes: Adding VCR 3 and/or

VCR 4 as available channels forces TV Channel 3 and/or 4 to be retained, when running Auto Program, even though the equipment connected to the Antenna/Cable (RF) jack (like a cable converter and/or VCR) may be turned off. You can elect to Add, Delete or Blank: VCR 3, VCR 4, and Aux. FM can be Added or Deleted, but not Blanked. **3 1 2 5 8 3 6 9 ENTER 3 4 7 0 3/5 1 TIMER MENU BANK 2 ADJ SELECT CHPREVIEW ADJ 4** If you delete a channel, it isn't gone for good.

Just select it using the **NUMBER** keypad on the remote, or add it later. Mini glossary **ADD DELETE BLANK** Adds new channels to the list that the guest can scroll through when using the remote. Removes channels for one reason or another from the list that the guest can scroll through. Removes the video signal from a channel so the guest will only receive the audio signal. **PAGE 16 206-3490-O** Setting Up Channel Labels Customizing the channel selection names.

Overview Channel Labels help the user identify the channel or network being viewed. In the Setup menu with the **CH LABELS** option highlighted, use the Adjust Left/Right arrows to scroll through the available channel labels, such as, A & E, AMC, ESPN, HBO, etc. These are a series of alphabetically organized preset labels from which you can choose the more common networks. Use any of these or create custom labels. - - - -, The 4 dashes will allow a channel label to appear; if one is provided by XDS.

(Extended data service) **NONE**, prevents any channel label from appearing. **LAB 1, thru LAB 20**, are the 20 programmable labels. The 20 programmable labels can be customized for your needs. Each programmable label has 5 characters spaces available. **A&E POWER FLSH CC BK MUTE TV /FM To** Program a Channel Label First select a channel using the **NUMBER** keypad and **ENTER** or the Channel Up/Down arrows, on the Installer's remote control.

(To select a deleted channel, use the **NUMBER** keypad and **ENTER**.) To program a channel label, go to the Setup menu and select **CH LABELS**. Press the Right/Left adjust arrow to scroll the available preset labels. Scroll past - - - -, scroll past **NONE**, to go to the first programmable label slot, **LAB 1**. Notice that the label appears with the title **LAB 1**, and is also on a dark background; which will distinguish it from the preset labels.

VO LUM E CHAN NEL 1 4 7 0 2 5 8 3 6 9 ENTER TIMER MENU BANK Operating the Menu Use Volume Up/Down to select the first letter. Press **MUTE** to clear the label if necessary. Use Channel Up/Down to change the character to one of the 255 characters available. Adjust Left/Right Switches to the next label. - - moves to the next or previous label. Selects character spaces - - moves to the next or previous character space. Scrolls through the available characters. Accept the channel label and removes the menu. Removes current label, - - if first character space is selected. **ADJ SELECT CHPREVIEW ADJ Volume Up/Down Channel Up/Down ENTER MUTE 206-3490-O PAGE 17** Timer Set Up Set times to turn the Concierge TV on or off automatically.

TO SET TIMERS Be sure to set the Clock first, see next page. **1 2 3 4 5 6 7 8** With Timer Setup highlighted as shown above, press a Left/Right **ADJ** arrow to display the Timer setup menu. Use the **SELECT** key to pick On Time. Use the Number keypad to enter the hours, then minutes of the time you want the TV to turn on. Use the **TIMER** key to specify AM or PM.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341060)

[H2534Y3 user guide](http://yourpdfguides.com/dref/341060)

<http://yourpdfguides.com/dref/341060>

Use the **SELECT** key to pick **Off Time**. Use the Number keypad to enter the hours, then minutes of the time you want the TV to turn off. Use the **TIMER** key to specify **AM** or **PM**. Press **ENTER** to set the timer and return to TV viewing. **POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 1 1 2 5 8 3 6 9 ENTER 3/6 4 7 0 8 2 4/7 2/5 1 TIMER MENU BANK SELECT CHPREVIEW ADJ ADJ** The Sleep Timer may be instantly set by pressing the **TIMER** key repeatedly.

When you have made your selection, press **ENTER** to set the Sleep Timer and return to TV viewing. The **On/Off Timer** will not work until the Clock on your television has been set. Mini glossary **ON TIME OFF TIME ON/OFF TIMER** The time the TV will automatically turn itself on each day. The time the TV will automatically turn itself off each day. Activates or deactivates the on/off timer feature.

PAGE 18 206-3490-O Set the Clock Set the clock on the Concierge TV. **11:44 PM 1 2 3 4** With the Clock Set option highlighted as shown above, press a **Left/Right ADJ** arrow to display the clock set menu. Set the current time; use the Number keypad to enter the hours, then minutes. For example, enter **06**, then **30**, to set **6:30** on the clock. Use the **TIMER** key to specify **AM** or **PM**.

Press **ENTER** to start the clock and return to TV viewing. **POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 1 2 5 8 3 6 9 ENTER 2** The Sleep Timer may be instantly set by pressing the **TIMER** key repeatedly. when you have made your selection, press **ENTER** to set the timer and return to TV viewing.

The **On/Off timer** will not work until the Clock on your television has been set. **4 7 0 4 3 TIMER MENU BANK SELECT CHPREVIEW ADJ ADJ 1** Mini glossary **TIME HOURS** A four-digit figure broken down into hours and minutes, that is used to enter the current time when setting the clock or on/off timer. First two digits that are entered when setting the clock, or the on/off timer. **MINUTES** The last two digits that are entered when setting the clock, or the on/off timer. **206-3490-O PAGE 19 Caption/Text** Turns on closed-captioning or text that appears at the bottom of the screen. **CAPTION 1 1 2 3** Using **SELECT** on the remote control, select **Captions/Text** on the screen. Use the **Right/Left ADJ** arrows to choose any of the following options: **Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3, or Text 4.**

Press **ENTER** to remove menu. **POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 1 4 7 2 5 8 3 6 9 ENTER** Captions come in handy when the television is on mute. Standard closed captioning is available using the **Caption 1** option. Not all programming has closed captioning or text available. **0 3 TIMER MENU BANK 1 ADJ SELECT CHPREVIEW ADJ** Caption/Text is a feature which allows the Concierge TV to receive the closed caption and/or text options if made available by the broadcaster. Availability and functionality of Caption/Text features is determined only by each broadcaster and may not be available in your area. **2** Mini glossary **CAPTIONS** The term for the words that scroll across the bottom of your TV screen; usually the audio portion of the program provided for the hearing impaired. **TEXT** The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster. **PAGE 20 206-3490-O Language** Choose the language for the on-screen menus. **ENGLISH 1 2 3 4** Press the **MENU** key on the remote control so the Setup menu appears.

Use the **SELECT** key on the remote control, to highlight **Language** on your screen. Press a **Right/Left ADJ** arrow to choose one of the following options: **English, Spanish or French**. Press **ENTER** to return to TV viewing. **POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 1 4 7 0 2 5 8 3 6 9 ENTER 4 1 TIMER MENU BANK 2 ADJ SELECT CHPREVIEW ADJ 3** **206-3490-O PAGE 21 Video Menu** Use the Video menu to customize the picture. **1** Press the **MENU** key repeatedly until the Video menu appears.

Your options are: **· Contrast:** Adjusts the level of difference between white and black in the TV picture. The more contrast, the brighter the picture appears. **· Brightness:** Increases or decreases amount of white in the TV picture. **· Color:** Adjusts levels of all colors in the TV picture. **· Tint:** Balances between amounts of red and green in the TV picture.

· Sharpness: Raises or lowers the definition of the TV picture. The lower the level, the softer the images will appear. **· Picture Preference:** Choose either **Custom or Preset**. Custom allows you to set the picture the way you want. Preset moves all the above options back to their original, factory-set levels. **POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 1 4 7 0 2 5 8 3 6 9 ENTER 4 2 3 4 5 6** Using **SELECT** on the installer's remote control, choose **Contrast** on your screen. Using a **Right/Left ADJ** arrow, change the contrast level to your preference. Press **ENTER**, or **MENU** one more time to return to TV viewing, or repeat from step two to set the other menu options. Use **SELECT** to choose **Picture Preference** on your screen. Use the **Right/Left ADJ** arrows, to choose either the original settings with **Preset**, or use your own settings with **Custom**.

1 TIMER MENU BANK 2 ADJ SELECT CHPREVIEW ADJ 3 Choose the **Preset** option in **Picture Preference** to quickly reset the levels to their original values. **PAGE 22 206-3490-O Installer Parental Control Menu** If used, this optional feature can "block" undesirable programming from appearing on your TV. **Parental Control** offers the user a wide variety of options and settings that restrict or "block" the programming that can appear on the TV. **Parental control** allows the user the capability of defining which program rating they consider acceptable, to the younger or more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password. The number of hours blocked are specified. **General audience and children viewer blocks** can both be programmed into the TV's memory. **Viewer ratings** are specified for both TV and the motion picture industry; both rating systems can be used. The ratings are based mainly on the ages of children. **Overview** To insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for **MPAA**, from the selections below **AND** choose ratings from the **TV Parental Guidelines Rating System** on the next page, using the **Age Block** option for **General Audiences** and for **Children**.

In addition to those, you may wish to add additional restrictions from the **Content Block** menu. See the **Parental Control** menu, and submenus example on the next page. **Things to Consider before Setting Up Parental Control** Determine which rating you consider acceptable to the viewer.



[You're reading an excerpt. Click here to read official ZENITH H2534Y3 user guide](http://yourpdfguides.com/dref/341060)
<http://yourpdfguides.com/dref/341060>

(For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as a VCR, connected to the TV Audio/Video input jacks; in the Aux.

Block option.) Or leave unblocked, then choose allowable ratings. Block program "Content" based on individual parameters such as: Strong Dialog, Mature Language, Sex Scenes, Violence Scenes, or Fantasy Violence Scenes; in the Content Blk option. How many hours do you want Parental Control to be active? You can set the Hours option for up to 99 hours. Select a secret password; in the Set Password option.

Use the number keys on the remote. Don't forget the password, it is the only way you can access the Parental Control menu and change rating selections, or turn Parental Control off. Do you want Parental Control to be active all the time? If not, you can turn it on or off; with the Lock On/Off option. You can set different Parental Control viewing restrictions for general audiences and for children - both can be active at the same time. Simply specifying one content block such as Sex Scenes, will not automatically block another content in the programs from appearing. Note If you choose to have the Aux inputs blocked, the ratings you specify will automatically restrict the programming that appears from the video sources. You cannot disable Parental Control by disconnecting the TV from power. Block hours will automatically reset to the original block time setting specified if power is disconnected. Reset Parental Control Block Hours to Zero and Cancel Password This provides the lodge staff and the installer a means to reset the TV to normal operation, if a guest has either forgotten the password or has left Parental Control Block active after checking out. On the installer's remote control, press and hold down MENU until the menu disappears (about 6 seconds).

Immediately press 9, 8, 7, 6 and then CC. This will reset the Block Hours to Zero and cancel the current 4-number password. 206-3490-O PAGE 23 Installer Parental Control Menu After you have read the preceding page, follow instructions below to set up and activate Parental Control. AGE BLOCK GENERAL CHILDREN UNBLOCKED TO BLOCK TO BLOCK Note: Use the installer's remote control to specify Parental Control settings. CONTENT BLOCK DIALOG LANGUAGE SEX SCENES VIOLENCE F VIOLENCE NO CONTENT 1 2 3 4 Press the MENU button repeatedly until the Parental Control Menu appears. With the Parental Control menu on-screen, use the SELECT button to access the MPAA menu and customize the level of restriction. Use the Left/Right ADJ arrow to adjust or set the rating for an option, for example, use the "PG" setting. (See the Mini Glossary, Ratings Charts on this and the previous page for rating meanings.) After you have selected and adjusted the parental control menu options to your preferences: - Set the number of hours Advanced TV Control will be on. - Set a 4-number password.

- Set the Lock On/Off option to either on or off. Note: Some broadcasts do not include rating information. POWER FLSH CC BK MUTE TV/FM VO LUM E CHAN NEL 1 4 7 0 2 5 8 3 6 9 ENTER TIMER MENU BANK 1 2 3 SELECT CHPREVIEW ADJ ADJ Notes Reset the Maximum Number of Parental Control Default Block Hours You can change the Block hours from the 12-hour default setting to up to 99 hours. In the Service Menu, item: 49 MAX BLK HRS 12, use the Left/Right adjust arrow to set a different default number of hours. To Turn the Parental Control Feature Off/On In the Service Menu, item: 53 V-CHIP 0 or 1, use the Left/Right adjust arrow to set to 0, Parental Control will be disabled.

use the Left/Right adjust arrow to set to 1, Parental Control will be on. PAGE 24 206-3490-O Other Menus & On-Screen Displays Press the remote keys indicated below to access these menus and displays. CH 9 3:12 PM STEREO Channel/Time/Audio Display Press ENTER. Shows currently selected channel or source, current time if the clock has been set, and incoming audio signal. Alarm Menu Press ALARM.

Sets the time the wake up alarm will sound. Sleep Timer Menu Press TIMER. Shows remaining time before TV shutoff. CAPTIONS 20 32 44 66 CH CC 5 9 VOLUME CHANNEL PREVIEW -----TO SELECT, ENTER TO QUI FOR PARENTAL CONTROL Volume Display Press VOLUME. Shows currently selected sound setting. Closed Captions Menu Press CC. Shows Caption/Text options. Ch Preview Menu Press CH PREV. Displays list of the available TV Channels, Guest Parental Control menu and Video Channel access. CHANNEL BANK BANK 3 Channel Banks Menu Press BANKS.

Gives access to the Channel Banks menus: Bank 1, Bank 2, Bank 3, Bank 4. 206-3490-O PAGE 25 Managing the Channel Banks The TV has four channel banks, where the administrator or installer can store groups of TV channels. PLANNING THE CHANNEL BANKS Generally, TV channels are grouped into "program packages" with terms that are proposed to the end user. The user then opts for a package. Below is an example of how TV channels may be grouped. You may plan your package by using a chart like the one after the following page. Remember, you can "blank" a channel for accommodating audio-only, such as an FM radio station or in-house communication. Sometimes, only one or two channel banks may be needed. You may leave any unused bank with the channels entered during Auto Program; or, you may delete the channels. @@@@1.

Run Auto Program (in the Setup menu). @@@@2. @@CHANNEL BANK and BANK number will be displayed. 3. @@You may delete channels or add some that have not been entered.

@@The "ADD/DEL/BLNK" item on pages

. has more details. Note: The Blank Channel feature is global. A channel will be blanked in all channel banks. 4. @@@@1 Channel was blanked using BLANK channel option (ADD/DEL/BLNK). ADDING / DELETING CHANNELS It is best to do ADD / DEL customizing before doing "BLNK." AUTO PROGRAM enters the same channels in banks 1, 2, 3, and 4. AUTO PROGRAM removes any channels previously customized with ADD / DEL / BLNK. The channels available on your antenna / cable will be entered, and any channels previously entered but not currently available will be deleted.

ADD and DEL (not BLNK) can be used independently for channel banks 1, 2, 3, and 4. A channel blanked, is blanked in all channel banks. Channel allocations in tuning bands: BROADCAST: 2 69 CABLE CATV, HRC or ICC: 1 125 206-3490-O PAGE 27 Managing the Channel Banks PLAN YOUR CHANNEL BANKS BY FILLING IN THESE CHARTS (or use photocopies). B Purpose A N K 1 2 3 4 Channel Number 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 1 2 3 4 5 6 7 8 9 B Purpose A N K 1 2 3 4 Channel Number 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 B Purpose A N K 1 2 3 4 Channel Number 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 B Purpose A N K 1 2 3 4 Channel Number 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100 B Purpose Channel Number A 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 FM N K 1 2 3 4 PAGE 28 206-3490-O Installer's Menus Use the Installer's Menus to make adjustments.



[You're reading an excerpt. Click here to read official ZENITH H2534Y3 user guide](http://yourpdfguides.com/dref/341060)
<http://yourpdfguides.com/dref/341060>

Accessing the Installer's Menu Installer's menus can be accessed by using the installer's remote control. @@To exit the Installer's Menu, press ENTER again. Any changes you make will be stored in nonvolatile memory. The Installer's Menu opens with item 05, HORZ POS. Press the Up/Down arrow keys to sequence through the various items. @@@@SCAN MODE TEXT MODE SLEEP TIMER ALARM CH.

@@@@@When set to 0, Power Manage is OFF. @@@@Use the ADJUST keys. Typical value is 5. Black bars top and bottom define the active screen area. @@Use the ADJUST keys. Typical value is 8. Black bars top and bottom define the active screen area. @@@(2) Other numbers determine the start channel. (3) Set the volume level as desired before exiting the installer menu. 0 is the "AUX" channel.

11 HOSPITAL MODE Not used in Concierge-series TVs. Leave at default setting 0 12 CHAN LOCK (Channel Lock) When set to 1 the CHAN LOCK is ideal if a cable box (or similar) is 206-3490-0 06 MIN VOLUME (Minimum Volume) This function determines the minimum volume level allowable with the VOLUME (VOL) Up/Down control. In this way, for example, someone cannot set the volume too low to hear. The range is from 0 to 63--change values with ADJUST. The factory default is 0, which provides full range of volume control. It may be best to set the same value on every TV. NOTE: The minimum volume level cannot have a value setting higher than in the MAX VOLUME level (described below). 07 MAX VOLUME (Maximum Volume) This function determines the maximum volume level allowable with the VOLUME VOL Up/Down control. In this way, for example, someone cannot set the volume level high enough to disturb others. The range is 0 to 63, with 63 as the default which gives the patient the full range of volume control.

Change values with ADJUST keys. It may be best to set the same value on every TV. NOTE: The maximum volume level cannot have a value setting lower than the MIN VOLUME level (described above). 08 AC ON (AC Power Switchable) Allows the TV to turn ON just by applying AC power. Pressing the ON button is not necessary. This is desirable when the TV is plugged into a cable box or a power outlet controlled by a wall switch. Use ADJUST to select 0 or 1, where 0 is the default is OFF, and 1 is ON. NOTE: When set to 1 (ON), the TV does not respond to ON/OFF commands from either the remote or the control panel, and the SLEEP TIMER is also nonfunctional. 09 KEY DEFEAT (Keyboard Defeat) When set to 1, it prevents the end user from accessing screen menus on the front panel--MENU, SELECT, and ADJUST do not function. When set to 0, those keys are functional.

The menus can always be accessed with MENU on the remote. 10 STRT CH/VOL (Start Channel/Volume) When active, this function allows you to determine the initial volume level setting and channel number when the TV is turned ON. This feature is useful for an in-house information channel, since the TV would always select that channel when it is turned on. When inactive, the volume level and channel retain the settings when the set was last used. Channels are accessed faster when fixed modes are used.

The AFC (search modes) should only be used when some channels are not on nominal frequencies. NOTE: BAND is automatically set by AUTO PROGRAM. @@@@Channel Lock is inactive when set to 0 (default). @@If the start channel is 3 then the TV will remain on channel 3. NOTE: When channel lock is active AUTO PROGRAM and CH.

ADD/DEL in the SETUP MENU are not active. 13 GHOST CH. @@The number moves slightly to prevent damage to the screen. The default is "0" or OFF. @@@@Channel down below lowest FM station (or Channel up higher than the highest) and TV channels return @@@@19 OLD OCV (On Command VideoTM) Set to 1 for operation with "SpectraMate" systems from On Command Corporation. 20 CAPTION LOCK Set to 1 to restore previous caption On/Off state after TV turns off when set to 0, captions are always off when TV is initially turned on. 21 FUNCTION PRE Set to 0 to suppress channel prev function with some pay per view systems. 22 FEATURE LEVEL Set to 1 for default Zenith features. 15 TEXT MODE Determines whether TEXT 1 and TEXT 2 decoding is enabled when CAPTIONS are turned on (either from the Setup Menu or directly with CC on the remote). When set to 1, only Caption 1 and Caption 2 are enabled.

When set to 2, Caption 1, Caption 2, and Text 1 and Text 2 are enabled. TIP: Set Text Mode to 1 only if text is offered in your video system. 16 SLEEP TIMER When set to 1, a patient may use the SLEEP TIMER feature (but no message is displayed prior to turn-off). When set to 0, the sleep timer is not available. 17 ALARM Gives you the option of making the alarm function available to the end-user. Set to 1, alarm function is available. Set to 0 to withhold this function. 18 CH. OVERRIDE (Channel Override) When set to 1, the user is allowed to select channels with either Channel up/down or by direct keypad entry. When set to 0, only those channels that are entered for scanning may be selected.

2 3 206-3490-0 PAGE 31 LT1500 QuickSet Programmer Use the LT1500 QuickSet Programmer to duplicate the TVs setup. The optional QuickSet II Programmer (LT1500) allows custom setup and programming information to be quickly copied from a master TV into multiple television sets. Once learned from the master, setup data is retained in the LT1500 for future use and recall. When using the LT1500, operation will be easier if the TV set is connected to a good quality signal and operating with a stable picture displayed. To operate the LT1500, use the indicated keys on an HP602, LP702, or MBR3447 remote, or the front panel keys on the TV receiver.

1 2 3 Set up a master TV set using your remote and following the instructions in this operating guide. Set all features you wish to customize including the channel scan list, channel labels, and installer menu setups. Connect the LT1500 to the master TV set using the cable provided with the programmer. Connect the cable between the MPI jack on the TV and the programmer. Connecting the programmer to the TV set automatically activates the programmer powerswitching circuits.

Once connected, check the "Status Indicator" LED on the programmer. The indicator should be flashing a green double-blink "heartbeat" pattern. If communications are good, the sign-on screen will be displayed on the TV screen as shown on the quick setup instructions which accompany the LT1500. If you intend to set the TV or programmer real-time clocks, note the clone clock and TV clock time settings, then press a key to proceed to the main clone menu. If you have previously stored a TV setup in a particular clone memory, it may be changed if desired by overwriting it with a new setup. There is no need for a separate memory clear operation. Item 1: Learn From TV Setups stored in programmer memory are nonvolatile and will be retained even after a battery change. 1 2 3 4 5 Press (1) then ON/OFF, POWER, or ENTER to begin the learning process.



[You're reading an excerpt. Click here to read official ZENITH H2534Y3 user guide](http://yourpdfguides.com/dref/341060)
<http://yourpdfguides.com/dref/341060>

Alternatively, use the TV front panel CHANNEL UP or CHANNEL DOWN keys to highlight your choice, then press ON/OFF, POWER, or ENTER to activate. The next screen will allow you to choose which of the available memories will be used to store this TV setup.

With four memories available, four different TV setups can be stored in the LT1500. Using the on screen menu, choose a memory or choose to return to the main selection menu, then press ON/OFF, POWER, or ENTER to activate the selection. The next screen gives you one last opportunity to check the versions of TV and clone setups. Press ON/OFF, or POWER to activate the learning cycle or any other key to return to the selection menu to make other choices. Once the process has begun, the TV screen will display the "LEARNING IN PROGRESS" message. Please wait until the process is completed. When the TV screen displays "LEARNING COMPLETED", press any key to end the learning process and return to the clone selection menu. A slow flashing green light indicates there is a problem with the communications between the TV and the programmer. In this case, check for a damaged cable, poor contacts, or other connection troubles. If the status indicator is red, the programmer batteries are low and should be replaced.

Use 4 good quality alkaline AA batteries. PAGE 32 206-3490-O Clone Selection Menu Choices Use the LT1500 QuickSet Programmer to duplicate the TVs setup. Item 2: Teach to TV 1 2 3 4 5 6 Press (2) then ON/OFF, POWER, or ENTER to begin the teaching process. Alternatively, use the TV front panel CHANNEL UP or CHANNEL DOWN keys to highlight your choice, then press ON/OFF, POWER, or ENTER to activate. The next screen will allow you to choose which of the 4 available memories will be copied to this TV.

Press the desired memory number, then ON/OFF, POWER, or ENTER to begin the teaching process. Alternatively, use the TV front panel CHANNEL UP or CHANNEL DOWN keys to highlight your choice, then press ON/OFF, POWER, or ENTER to begin. Using the on screen menu, choose a memory or choose to return to the main selection menu, then press ON/OFF, POWER, or ENTER to activate the selection. The next screen gives you one last opportunity to check the versions of TV and clone setups. Press ON/OFF, or POWER to activate the teaching cycle or any other key to return to the selection menu to make other choices.

The TV screen will display the "TEACHING IN PROGRESS" message. Please wait until the process is complete. When the TV screen displays "TEACHING COMPLETED", press any key to return to the clone selection menu. Item 3: Set Clone Clock From TV 1 2 To initially set the real time clock in the LT1500 or update the time, press (3), then press ON/OFF, POWER, or ENTER to copy the current TV time to the clone clock. Alternatively, use the TV front panel CHANNEL UP or CHANNEL DOWN keys to highlight your choice, then press ON/OFF, POWER, or ENTER to activate. This process will return you to the sign-on screen to display the clone and TV clock settings. You may press a key to go to the clone selection menu and perform other functions, or simply disconnect if time setting was your only task. Item 4: Set TV Clock From Clone 1 2 To set the real time clock in the TV, press (4), then press ON/OFF, POWER, or ENTER to copy the current clone time to the TV clock. Alternatively, use the TV front panel CHANNEL UP or CHANNEL DOWN keys to highlight your choice, then press ON/OFF, POWER, or ENTER to activate. This process will return you to the sign-on screen to display the clone and TV clock settings.

You may press a key to go to the clone selection menu and perform other functions, or simply disconnect if time setting was your only task. Item 5: Display TV Setup 1 2 3 Press (5) then ON/OFF, POWER, or ENTER to begin the teaching process. Alternatively, use the TV front panel CHANNEL UP or CHANNEL DOWN keys to highlight your choice, then press ON/OFF, POWER, or ENTER to activate. The TV screen will display the items in the installer menu setups for you to observe. Use this function to quickly check a TV for the correct setup. Press any key to clear the display and return to the clone selection menu.

206-3490-O PAGE 33 Clone Selection Menu Choices Use the LT1500 QuickSet Programmer to duplicate the TVs setup. Item 6: Display Clone Setup 1 2 3 4 5 Press (6) then ON/OFF, POWER, or ENTER to begin the teaching process. Alternatively, use the TV front panel CHANNEL UP or CHANNEL DOWN keys to highlight your choice, then press ON/OFF, POWER, or ENTER to activate. The TV screen will display the memory selection menu.

Press the desired memory number, then ON/OFF, POWER, or ENTER to display the contents of the selected memory. Alternatively, use the TV front panel CHANNEL UP or CHANNEL DOWN keys to highlight your choice, then press ON/OFF, POWER, or ENTER to begin. The TV screen will display the items in the installer menu setups for you to observe. Use this function to quickly check the contents of a particular clone memory for the correct setup. Press any key to clear the display and return to the clone selection menu.

Operation Notes Disconnect the LT1500 from the TV set when you have completed the desired task. Disconnecting the clone automatically switches it off. The real-time clock continues to run when the main circuits are switched off. After replacing exhausted batteries, or if the programmer behaves strangely after a static shock, use a paper clip or similar instrument inserted through the small hole marked "RESET" to activate the internal reset switch and restore normal operation. After a reset, check the real-time clock setting.

It may be necessary to reset the clock from a TV containing the correct time. The LT1500 programmer is designed to be used with TV sets containing the 221-01006 and later processors. Use with earlier TV sets may give unpredictable results. The specific microprocessor used in any TV set may be determined by activating the installer menu. The microprocessor part number appears at the top of the screen when the installer menu is activated. Processors before the 221-01006-04 have a limited screen display capability. They can not display entire screens as shown in the quick setup instructions accompanying the LT1500 programmer. Use the printed menu illustrations on the quick setup sheet as an aid to making your programming choices. When cloning operations are completed, unplug the LT1500 from the TV set. If the TV does not display a picture (blank screen) after a few seconds, change channels.

PAGE 34 206-3490-O Remote Control Key Functions A quick list of the keys on your remote and what they do. POWER Turns TV On or Off. CC (CLOSED CAPTIONING) Press to access closed captions. Press ENTER to exit. VOLUME LEFT/RIGHT Adjusts the sound levels. POWER FLSH BK MUTE Turns sound Off and On, while the picture remains. MUTE CC VO LUM E FLASHBK (FLASHBACK) Return to the last channel viewed.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341060)

[H2534Y3 user guide](http://yourpdfguides.com/dref/341060)

<http://yourpdfguides.com/dref/341060>

CHAN NEL 1 4 2 5 8 3 6 9 ENTER CHANNEL (UP/DOWN) Flip through available channels, and the Video Channel (Audio/Video source). NUMBER KEYPAD Select channels directly: enter channel numbers and press ENTER to go to new channel. ALARM Press to display menu, the follow on-screen instructions to set a wake-up time.

ENTER Press to view the Channel/Time/Audio display or to remove any on-screen display or menu. TIMER Press repeatedly to adjust TV turn-off time up to 4-hours. Use to pick AM/PM on the Timer menu. 7 0 TIMER ALARM CHPREVIEW CHANNEL PREVIEW Displays the available TV channels and gives hotel guest access to the Parental Control menu. Allows guest to select the Video Channel.

(Use the Audio/Video jacks on the back of the TV as the source of the picture and sound.) remote control part number SC652 124-213-02 206-3490-O PAGE 35 Parental Control Menu This optional feature can be used to "block" undesirable programming from appearing on your TV. This TV offers the user a wide variety of options and settings that restrict or "block" the programming that can appear on the TV. Parental control allows the user the capability of defining which program rating they consider acceptable, to the younger or more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password.

The number of hours blocked are specified. General audience and children viewer blocks can both be programmed into the TV's memory. Viewer ratings are specified for both TV and the motion picture industry; both rating systems can be used. The ratings are based mainly on the ages of children. Overview To insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections below AND choose ratings from the TV Parental Guidelines Rating System on the next page, using the Age Block option for General Audiences, and for Children. In addition to those, you may wish to add additional restrictions from the Content Block menu. See the Parental Control menu, and submenus example on the next page. Things to Consider before Setting Up Parental Control Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as a VCR, connected to the TV Audio/Video input jacks; in the Aux.

Block option.) Or leave unblocked, then choose allowable ratings. Block program "Content" based on individual parameters such as: Strong Dialog, Mature Language, Sex Scenes, Violence Scenes, or Fantasy Violence Scenes; in the Content Blk option. How many hours do you want Parental Control to be active? You can set the Hours option for up to 99 hours. Select a secret password; in the Set Password option. Use the number keys on the remote. Don't forget the password, it is the only way you can access the Parental Control menu and change rating selections, or turn Parental Control off. Do you want Parental Control to be active all the time? If not, you can turn it on or off; with the Lock On/Off option. You can set different Parental Control viewing restrictions for general audiences and for children - - both can be active at the same time. Simply specifying one content block such as Sex Scenes, will not automatically block another content in the programs from appearing.

Mini glossary When the Aux input is set to block, your TV will block all programming you have set for cable or over-air broadcasts. You cannot disable Parental Control by disconnecting the TV from power. Block hours will automatically reset to the original block time setting specified if power is disconnected. MOTION PICTURE ASSOCIATION OF AMERICA (MPAA) RATING SYSTEM G PG PG-13 R NC-17 X General Audiences Parental Guidance Suggested Parental Guidance Suggested Restricted viewing Restricted Viewing Hard Core Films Content not offensive to most viewers. Content is such that parents may not want their children to view the program.

Program is inappropriate for preteens, with a greater degree of offensive material than a PG rated program. Not for children under age 17. Strong elements of sex and/or violence. Not for children under age 17 under any circumstances. Strong sexual content.

Same as NC-17 rating. Note: Zenith Electronics Corporation is not liable for any program content that appears when using this rating system; as always, user discretion is advised. PAGE 36 206-3490-O Parental Control Menu After you have read the preceding page, follow instructions below to set up and activate Parental Control. CHANNEL PREVIEW 5 9 20 32 44 66 CH CC -----TO SELECT, ENTER TO QUIT FOR PARENTAL CONTROL TO CONFIG CONTENT BLOCK DIALOG LANGUAGE TV-MA SEX SCENES VIOLENCE F VIOLENCE NO CONTENT 1 2 3 4 5 6 7 Press CH PREVIEW. Use CHANNEL Up/Down to highlight PARENTAL CONTROL. POWER Press ADJ Right arrow to go to Parental Control menu. Use SELECT to highlight an option like CONTENT BLOCK. Press ADJ Right arrow to go to the CONTENT BLOCK menu. Use SELECT to highlight an option like SEX SCENES. Press ADJ Right arrow to choose: Unblocked, TV-PG AND ABOVE, TV-14 AND ABOVE, or TV-MA.

(AND ABOVE means more restrictive headings are automatically included when you choose a low restriction setting like TV-PG.) See the Mini Glossary,

Ratings Charts on this and the previous page for rating meanings. After you have selected and adjusted the parental control menu options to your preferences: - Set the number of hours Advanced TV Control will be on. - Set a 4-number password. - Set the Lock On/Off option to either on or off. Note: some broadcasts do not contain rating information. 1 4 7 0 TV /FM FLSH CC BK MUTE VO LUM E CHAN NEL 2 2 5 8 3 6 9 ENTER 8 TIMER MENU BANK 4/6 ADJ SELECT CHPREVIEW 1 ADJ 3/5/7 Mini glossary TV PARENTAL GUIDELINE RATING SYSTEM TV-G TV-PG TV-14 TV-MA General Audience Parental Guidance Suggested Parents Strongly Cautioned Mature Audience Only Considered suitable for all audiences; children may watch unattended. Unsuitable for younger children, may contain: Suggestive Dialog, Mature Language, Sex, and Violence Scenes. Unsuitable for children under 14, may contain: Strong Dialog, Mature Language, Sex, and Violence Scenes. Adults only, may contain: Strong Dialog, Mature Language, Sex, and Violence Scenes.

CHILDREN'S CLASSIFICATIONS TV-Y TV-Y7 Children Children 7 and over Considered suitable for all children under 7 years old. Considered suitable for children over 7, may contain Fantasy Violence Scenes. 206-3490-O PAGE 37 Menus & On-Screen Displays Press the remote keys indicated below to access these menus and displays. CH 9 3:12 PM STEREO Channel/Time/Audio Display Press ENTER.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341060)

[H2534Y3 user guide](http://yourpdfguides.com/dref/341060)

<http://yourpdfguides.com/dref/341060>

Shows currently selected channel or source, current time if the clock has been set, and incoming audio signal.

Alarm Menu Press ALARM. Sets the time the wake up alarm will sound. Sleep Timer Menu Press TIMER. Shows remaining time before TV shutdown.
CAPTIONS 20 32 44 66 CH CC 5 9 VOLUME CHANNEL PREVIEW -----TO SELECT, ENTER TO QU FOR PARENTAL CONTROL Volume
Display Press VOLUME.

Shows currently selected sound setting. Closed Captions Menu Press CC. Shows Caption/Text options. Ch Preview Menu Press CH PREV. Displays list of the available TV Channels, Guest Parental Control menu and Video Channel access. PAGE 38 206-3490-O Maintenance Routine TV cabinet and screen cleaning. Careful and regular cleaning can extend the the useful service life of the TV. Be sure to turn the power off and pull out the plug before you begin any cleaning. Screen Cleaning 1. Here's a great way to keep the dust off the screen for a while.

Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen. 2. Make sure the excess water is off the screen, and then let it air-dry before turning it on. Cabinet Cleaning 1. Use a soft cloth with a mild soap solution to wipe the cabinet. (Avoid using any harsh, industrial strength variety of cleaner.) 2. Rinse the cloth and wipe the cabinet again. 3. Let the cabinet air-dry before turning the Concierge TV on. Wood Cabinet Use a quality wood cleaner and polish. This will protect the TV from dirt and dust, as well as keep the cabinet looking new. Extended Absence If you leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power to protect against possible damage from lightning or power surges. If you use an off-air antenna, you may also want to disconnect it from the back of your TV before leaving.

If you unplug the TV, you may have to reset the clock using the Clock Set menu described earlier. See page 20. 206-3490-O PAGE 39 Troubleshooting Some quick and easy tips to resolving problems. SYMPTOMS Snowy picture and unclear sound. SOLUTIONS · Check your antenna connection or location · Check your cable input.

· Check to see if the TV/VCR button on your VCR has the TV selected · Check your antenna direction and/or location. · Check your cable input · Make sure the cable from your antenna to your Entertainment Machine is properly connected. The following may cause image problems or distortion: Electrical appliances, powerful lights, cars, trucks; computers or portable phones; medical equipment · If possible increase the distance between your Entertainment Machine and the offending appliance. Or shut one of them off. · Check volume levels. · Make sure the TV is not Muted. · Try another channel. The problem may be the broadcast, not your Entertainment Machine. · Are the Audio A/V cables properly installed? · Are the wires for external speakers (if you have external speakers) properly installed? · Make sure your speakers turned on under the Audio menu.

· If your audio mode is set to SAP, that channel may not have a SAP program. · Are you in TV or cable tuning mode, and should be in the other? · Make sure output channels on all A/V equipment are on the same channel (3 or 4). · Check that all connections are tight. · Is the AC power plugged in? · Check that your AC power outlet works. (Test it by plugging in something else or try another plug.) · Make sure your brightness and audio controls are set properly. · Try another channel. The problem may be with the broadcast. · Check the color control in the Video menu. · Try another channel.

The problem may be with the broadcast. · The CC (closed caption) option may be in Text mode. Select Caption 1, or OFF in the Captions/Text menu. Make sure the batteries are fresh and installed properly. · Make sure the battery on the single side (located on bottom right when remote transmitter is pointed toward the TV) is polarized properly .

· Try unplugging the TV for a few minutes, then plug it back in. Multiple images or 'ghost shadows.' Interference: Sharp lines across the screen and lousy sound. Normal picture but no sound. No picture and unclear sound.

No picture and no sound. No color, but the sound is O.K. Picture has a big black box on it, but the sound is O.K. Remote control doesn't work. Menu options can't be changed or selected. No picture or sound when any non-cable source is selected. PAGE 40 206-3490-O Glossary A list of definitions for words found in this guide. 75 OHM RF CABLE The wire that comes from an off-air antenna or cable service provider.

The end looks like a hex-shaped nut with a wire sticking through the middle. It screws onto the threaded jack on the back of the TV. A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end. Any device that produces video or sound (VCR, DVD, cable box, or television). This function lets you add new channels to list that you'll scroll through when using your remote. An electronic device that amplifies sound from a television, CD player, VCR, DVD or other A/V device. The physical receiver of television signals sent over the air. A large metal piece of equipment does not always have to be visible for your home to be using an antenna. Auto Program has the Concierge TV automatically find all the channels available in your area.

Lets you remove channels from the list the guest will scroll through using the guest remote. Refers to the jack that receives a signal from a TV, VCR or other A/V device. A connection on the back of a TV, VCR, or any other A/V device. Mono (monaural) sound is one channel of sound. On more than one speaker, all the speakers play the same audio.

@@@@@@@ We believe that you will be pleased with your new Zenith Concierge™ TV. Please read this warranty carefully, it is a "LIMITED WARRANTY" as defined under Federal Law. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state within the U.S.A.

ZENITH RESPONSIBILITY Service Labor During a period of 1 year from effective warranty date, Zenith will provide service labor by a Zenith authorized service center when needed, as determined by the Zenith service center, as a result of manufacturing defects. New or remanufactured replacements for factory-defective parts will be supplied by a Zenith authorized service center for one year from effective warranty date (color picture tube -- two years).

@@@@@@@ THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ZENITH SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, OR INCIDENTAL DAMAGES OF ANY KIND, INCLUDING LOST REVENUES OR PROFITS IN CONNECTION WITH THIS PRODUCT.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341060)

[H2534Y3 user guide](http://yourpdfguides.com/dref/341060)

<http://yourpdfguides.com/dref/341060>