



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH H25F34DT. You'll find the answers to all your questions on the ZENITH H25F34DT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ZENITH H25F34DT**  
**User guide ZENITH H25F34DT**  
**Operating instructions ZENITH H25F34DT**  
**Instructions for use ZENITH H25F34DT**  
**Instruction manual ZENITH H25F34DT**

**Installation / Operating Guide | Warranty**

**Model Numbers | H19F34DT | H20F34DT | H25F34DT | Concierge™ TVs**

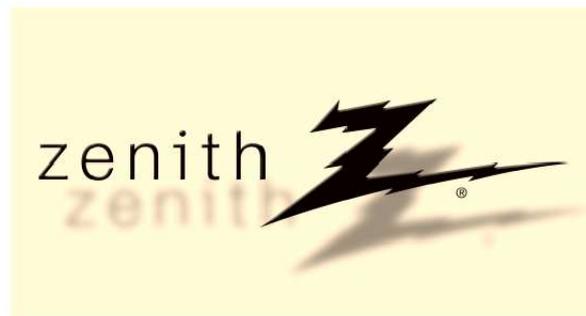


 table of contents **page 5**

© Copyright 2003, Zenith Electronics Corporation



[You're reading an excerpt. Click here to read official ZENITH H25F34DT user guide](http://yourpdfguides.com/dref/341090)  
<http://yourpdfguides.com/dref/341090>

**Manual abstract:**

**REFER TO QUALIFIED SERVICE PERSONNEL. @@@@POWER CORD POLARIZATION: CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND. NOTE TO CABLE/TV INSTALLER:**

*This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.*

*@@@@@ · Increase the separation between the equipment and receiver. @@ · Consult the dealer or an experienced radio/TV technician for help.*

**CAUTION:** Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. **COMPLIANCE:** The responsible party for this product's compliance is: Zenith Electronics Corporation, 2000 Millbrook Drive, Lincolnshire, IL 60069, USA.

Phone: 1-847-941-8000. 2-WIRE COMM WARN Concierge™ is a trademark of Zenith Electronics Corporation © Copyright 2003 Zenith Electronics Corporation **IMPORTANT SAFETY INSTRUCTIONS** Important safeguards for you and your new product This product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into the new product, please read and observe the following safety points when installing and using the new product, and save them for future reference. Observing the simple precautions discussed in this installation and operating guide can help the lodge get the many years of enjoyment and safe operation that are built into the new product.

1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 2. Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label.

If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6. Water and Moisture Do not use this product near water for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool. 12.

**Power Cord Polarization** This product is equipped with a polarized alternating-current power plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet.

Do not defeat the safety purpose of the polarized plug. 7. Accessories, Carts, and Stands Do not place this product on a slippery or tilted surface, or on an unstable cart, stand, tripod, bracket, or table. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 13. Power Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8. Transporting Product A product and cart combination should be moved with care.

Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) **PORTABLE CART WARNING 206-3743 PAGE 3 IMPORTANT SAFETY INSTRUCTIONS** (Continued from previous page) 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. Example of Grounding According to National Electrical Code Instructions short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. 19.

**Servicing** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20. Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged.

b. If liquid has been spilled, or objects have fallen into the product. c. If the product has been exposed to rain or water. d.

If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.



[You're reading an excerpt. Click here to read official ZENITH H25F34DT user guide](http://yourpdfguides.com/dref/341090)  
<http://yourpdfguides.com/dref/341090>

e. If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance. Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 15. Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. 21.

Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 16. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 22. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition. 23. Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. 24. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 18.

Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or PAGE 4  
206-3490-O Table of Contents Use the steps outlined below as a setup guide and to determine the TV features that will require adjustment for the needs of the

end user Safety Warnings . . . . .  
.....  
.....  
.. 2 Important Safety Instructions . . .  
.....  
.....  
3 Table of Contents . . . . .  
.....  
.....  
..... 5 Step 1. Hook Up TV TV and other Equipment Hookups Antenna . . .  
.....  
.....  
..... 6 Cable service .  
.....  
.....  
..... 7 Antenna with VCR . .  
.....  
.....  
..... 8 Cable service with VCR . . . . .  
.....  
.....  
.. 9 External Speaker . . .  
.....  
.....  
... 10 Add/Del/Blank . .  
.....  
.....  
.....  
Channel Labels . . . . .  
.....  
.....  
..... Clock Set . . .  
.....  
.....  
.....  
..... Timer (On/Off Timer) . .  
.....

.....  
 .....  
 . Captions (Caption/Text) .....  
 .....  
 .....  
 .. Language .....  
 .....  
 .....  
 .....  
 ... Video Menu .....  
 .....  
 .....  
 .....  
 .. Installer Parental Control Menu .....  
 .....  
 .... 23 Other Menus and On-Screen Displays .....

.....  
 .. Managin SPEAKER OUT RF Coaxial Wire (75 ohm) Super Port M.P.I.

VIDEO IN AUDIO IN Back of Remote TV Back Panel (Expanded View) 4 Plug in the TV. The Concierge TV is designed to operate on standard current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC power. 120 V AC 60 Hz Cable TV Wall Jack TV Back 5 Go to page 11 to Auto Program the Concierge TV. In Out Cable Box Output Switch 3 4 ANTENNA CABLE If you're using a cable box, leave the TV tuned to channel 3 or 4 and use the cable box to change channels. If you're using a cable box, Auto Program might only find the channel your cable service is on (usually channel 3 or 4). RF Coaxial Wire (75 ohm) Super Port SPEAKER OUT M.P.I. VIDEO IN AUDIO IN TV Back Connections Panel (Expanded View) 206-3745 PAGE 7 Antenna With VCR Hook Up Antenna Connect an off-air antenna and VCR to the Concierge TV Flat wire (300 ohm) VCR Back 1 2 3 Locate the Antenna/Cable jack on the back of the VCR.

Connect the antenna wire that runs from the antenna, according to one of the diagrams to the right. Make other connections as needed. Remove the back of the remote and put in two AA batteries. Super Port TV Back VCR Back AV Panel output 0" - Front panel controls give access to menus. Set Menu Option 11, Key defeat to "1" - Menus not available with front panel controls. CAPTION VOL VOL CH CH OFF ON H20F34DT power H19F34DT channel volume captions 1 2 3 4 5 Press POWER to turn on your TV. To access the menus, press the MENU button on the control panel. Cycle through the various menus by pressing MENU repeatedly. Use the SELECT button to highlight the option you want to modify. Use either the Right or Left ADJUST button to modify the option you have chosen.

Press CAPTIONS to turn captions on and off. The menu will disappear after a few seconds. A B C D E F TV Operation Power turns the TV on and off. captions H25F34DT Front Panel Controls volume channel power Channel Up/Down tunes to next channel. Volume Up/Down adjusts sound level. Captions turns selected Caption/Text option on and off. 5/D C B I/A Campport: Front Audio/Video Inputs Video Input L-Audio-R Inputs Note: TV sound is always monaural. Left/Right Audio input is processed into monaural sound by the TV. Front panel control menu operation buttons are not labeled and are not usually available to the guest. You can use Channel to tune to available channels and Volume to set the sound level, regardless of the key defeat setting. Campport jacks are not available on some models. adjust select menu video in L audio R 2 4 E 3 F PAGE 12 206-3852 Guest's Remote Key Functions A brief overview of the keys on the guest's remote and what their function POWER Turns TV On or Off. CC (CLOSED CAPTIONING) Press to access closed captions. Press ENTER to exit. VOLUME LEFT/RIGHT Adjusts the sound level. POWER FLSH BK MUTE Turns sound Off and On, while the picture remains. MUTE CC VO LUM E FLASHBK (FLASHBACK) Returns to the last channel viewed. CHAN NEL 1 4 2 5 8 3 6 9 ENTER CHANNEL (UP/DOWN) Scrolls through available channels, and the Video Channel (Audio/Video source). NUMBER KEYPAD Selects channels directly: enter channel numbers and press ENTER to go to new channel. ALARM Press to display menu, then follow onscreen instructions to set a TV turn-on time.

CHANNEL PREVIEW Displays the available TV channels, including access to guest's Parental Control menu. Allows guest to select the Aux Channel. (Use the Audio/Video jacks on the back of the TV as the source of the picture and sound.) ENTER Press to view the Channel/Time display or to remove any on-screen display or menu.



[You're reading an excerpt. Click here to read official ZENITH H25F34DT user guide](http://yourpdfguides.com/dref/341090)  
<http://yourpdfguides.com/dref/341090>

7 0 TIMER ALARM TIMER Press repeatedly to choose a TV turn-off time, up to 4-hours. Use to pick AM/PM in the Alarm menu. CH PREVIEW remote control part number SC652Z 124-213-18 6710V00108A 206-3852 PAGE 13 Installer Remote Key Functions An overview of the keys on the LP702 installer's remote and what they do POWER Turns TV On or Off. CC (CLOSED CAPTIONING) Press to access closed captions. Press ENTER to exit. TV/FM Selects TV or Radio on TVs equipped with FM radio.

VOLUME LEFT/RIGHT Adjusts the sound levels. ENTER Press to view the Channel/Time display or to remove any on-screen display or menu. POWER FLSH CC MUTE Turns sound Off and On, while the picture remains. BK MUTE TV /FM VO LUM E FLASHBK (FLASHBACK) Returns to the last channel viewed. CHAN NEL 1 4 7 0 2 5 8 3 6 9 ENTER CHANNEL (UP/DOWN) Flips through available channels.

NUMBER KEYPAD Selects channels directly and enters numeric values for some options. ALARM Press to go to the Alarm menu. Set a time for the TV to turn itself on. CHANNEL PREVIEW Gives installer access to the guest's menus. Displays the available TV channels and hotel guest's Parental Control menu. Allows user to select the Aux Channel. (Use the Audio/Video jacks on the back of the TV as the source of the picture and sound.) TIMER MENU ALARM TIMER Press repeatedly to choose a TV turn-off time, up to 4-hours. Use to pick AM/PM in the Clock/Alarm menus, on some TVs. MENU/SELECT/ADJ (ADJUST) Press MENU repeatedly to scroll through either the Installer, or User menus. Use SELECT to choose an option and ADJ (adjust) to change the selected option. SELECT CH PREVIEW ADJ ADJ remote control part number LP702 124-213-04 PAGE 14 206-3490-O On-Screen Menus Overview Descriptions of the menus and on-screen displays on the TV available to the installer Using the Menu button on the installer's remote, the installer can access all the menus below. Menu Name Page Description ON-SCREEN MENUS SETUP MENU Auto Program Add/Del/Blk Channel Labels Clock Set Timer Captions Language VIDEO MENU PARENTAL CONTROL MENU 11 16 17 18 19 20 21 22 23 Adjusts the basic characteristics of the TV Automatically finds and stores active channels in memory to scroll through using Channel Up/Down. Picks and chooses which active channels will appear when using Channel Up/Down Labels available channels with their network names (ABC, CBS, HBO, etc.).

Sets the time. Sets times for the TV to turn itself on and off each day. Chooses the captioning or text option. Select the language the on-screen menus will appear in. Adjusts the picture settings. The options are: Contrast, Brightness, Color, Tint, Sharpness, Picture Pref. Allows installer to block any channel or A/V source for up to 99 hours, with the use of a password. 25 Channel/Time Alarm Sleep Timer Volume Captions Ch Preview Channel Bank OTHER MENUS AND ON-SCREEN DISPLAYS Shows the current time, channel, video, type of incoming audio signal, and XDS\* data if available. Sets a time for the TV to automatically turn itself on. Sets the time the TV will turn itself off.

Shows current sound level. Selects Caption/Text options. Displays the available channels list, access to Parental Control, and Aux source selection. Shows currently selected channel bank. INSTALLER MENUS INSTALLER MENUS 29 Make adjustment to the TV's operational features.

\*XDS (Extended Data Service) Additional program information provided at the discretion of the broadcaster. May include: title of broadcast, elapsed time, and time remaining on program. 206-3745 PAGE 15 Channel Add/Delete/Blank SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CH 44 ADDED Fine-tuning the guest's channel selection list 1 2 3 Press the MENU key on an Installer's remote so the SETUP MENU appears. Press SELECT repeatedly to go to the Add/Del/Blk option.

POWER FLSH CC BK MUTE TV /FM Using either the NUMBER keypad and ENTER or the Channel Up/Down arrows on the remote, select a channel. (If adding a deleted channel, you will need to use the number keypad and ENTER.) Using the Right/Left ADJ arrows, pick whether that channel is Added, Deleted, or Blank. To continue, select another channel and repeat from Step 3. When you are finished, press ENTER to remove menu. VO LUM E CHAN NEL 3 1 2 5 8 3 6 9 ENTER 4 5 3 4 7 0 Adding Aux, VCR 3, or VCR 4 to the Channel Preview List Go to the Setup menu, select the Add/Del/Blk option. Use Channel Up/Down to select the option and choose Added. Note: If the option was turned off in the Service menu, you will have to reinstate it before it can appear as an option in the Channel Preview list. Note: You can Add, Delete, or Blank: VCR 3, VCR 4, and Aux. Caution: If you delete CH3, VCR3 is deleted also, if you delete CH4 VCR4 is deleted also, and vice versa.

If you delete a channel, it isn't gone for good. Just select it using the NUMBER keypad on the remote, or add it later. TIMER MENU ALARM 3/5 1 2 ADJ SELECT CH PREVIEW ADJ 4 Mini glossary ADD DELETE BLANK Adds new channels to the list that the guest can scroll through when using the remote. Removes channels for one reason or another from the list that the guest can scroll through. Removes the video signal from a channel so the guest will only receive the audio signal. PAGE 16 206-3599-O Setting Up Channel Labels Customizing the channel selection names Overview Channel Labels help the user identify the channel or network being viewed. In the Setup menu with the CH. LABELS option highlighted, use the Adjust Left/Right arrows to scroll through the available channel labels, such as, A & E, AMC, ESPN, HBO, etc. These are a series of alphabetically organized preset labels from which you can choose the more common networks. Use any of these or create custom labels.

- - - -, The 4 dashes will allow a channel label to appear; if one is provided by XDS. (Extended data service) NONE, prevents any channel label from appearing. LAB 1, thru LAB 20, are the 20 programmable labels. The 20 programmable labels can be customized for your needs. Each programmable label has 5 characters spaces available.

SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CH 32 ABC POWER FLSH CC BK MUTE TV /FM Creating Custom Channel Labels First select a channel using the NUMBER keypad and ENTER or the Channel Up/Down arrows, on an Installer's remote control. (To select a deleted channel, use the NUMBER keypad and ENTER.) To create a channel label, go to the SETUP MENU and select CH. LABELS.

Press the Right/Left ADJ key to scroll the available preset labels. Scroll past - - - -, scroll past NONE, to go to the first programmable label slot, LAB 1. (Label 1) Notice that the label appears with the title LAB 1, and is also on a dark background; which will distinguish it from the preset labels.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341090)

[H25F34DT user guide](http://yourpdfguides.com/dref/341090)

<http://yourpdfguides.com/dref/341090>

VO LUM E CHAN NEL 1 4 7 0 2 5 8 3 6 9 ENTER TIMER MENU ALARM Operating the Menu to Create Custom Labels SELECT CH PREVIEW Use Volume Up/Down to select the first letter; when it blinks it is selected. Press MUTE to clear the label if necessary. Use Channel Up/Down to change the character to one of the 255 characters available. (A blank letter space is available if required, after the "!" symbol.) Adjust Left/Right Switches to the next label. - - moves to the next or previous label. Selects character spaces - - moves to the next or previous character space.

Scrolls through the available characters. Accept the channel label and removes the menu. Removes any custom label, inserts NONE - - if any custom character space is selected. ADJ ADJ Volume Up/Down Channel Up/Down ENTER MUTE 206-3599-O You can press and hold down Channel Up/Down to scroll through the available characters rapidly. PAGE 17 Set the Clock SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CLOCK MENU TO SET CLOCK CLOCK SET TIME ZONE DAY. SAVING AUTO USE SELECT TO CHOOSE USE ADJ TO CHANGE AUTO OFF ON AUTO EASTERN CENTRAL MOUNTAIN PACIFIC SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CLOCK MENU CLOCK SET TIME SET TO SET CLOCK 10:43 AM MANUAL TIMER USE SELECT TO CHOOSE USE ADJ TO CHANGE Clock Auto/Manual Operating Modes Setup Use MENU, SELECT, and ADJ Left/Right to choose the Clock menu and to set up the clock menu options. Clock Mode Auto: TV automatically sets the time. Time Zone: User can choose the time zone or have the TV set it automatically. Day. Savings: User can choose to have daylight savings adjust the clock time one hour, or have the TV adjust it automatically. Manual: User sets the time on the clock. Press ENTER repeatedly to remove menus. The clock can also be set using 24 hour "military time.

" For p.m. settings add 1200. For example, to set 6:30 p.m.

, add 1200 to 630, = enter 1830. For Auto Clock Set to work, TV must be tuned to a channel that has XDS data available. Auto Clock Set, sets the time only once while the TV is on. To set the clock with XDS data, turn TV off, then back on again, or set the clock time manually. Mini glossary TIME HOURS A four-digit figure broken down into hours and minutes, used to enter the current time when setting the clock or wake-up alarm. First two digits that are entered when setting the clock or the wake-up alarm. 1 2 5 8 3 6 9 ENTER 3 1 3 2 3 4 7 0 4 TIMER MENU ALARM SELECT CH PREVIEW ADJ ADJ MINUTES The last two digits that are entered when setting the clock, or the wake-up alarm. TIMER Chooses AM or PM when setting the clock. PAGE 18 206-3683 On/Off Timer Setup SETUP MENU TIMER ON TIME OFF TIME 9:00 AM 7:00 PM ON Set up On/Off Timers Note: On/Off Timers operate independently of each other. AUTO PROGRAM ADD/DEL/BLNK CH.

LABELS CLOCK SET TIMER CAPTIONS LANGUAGE TO SET TIMER ON/OFF TIMER 1 2 3 On the optional HP602 Installer's remote, press MENU repeatedly until the Setup menu appears. Press SELECT repeatedly to highlight the Timer option, press the Right arrow. Use SELECT to choose an option. Use the number keypad and/or the Left/Right ADJ arrows to enter the times. Use the TIMER key to set AM/PM. Your options are: · On Time Sets a time that the TV will turn itself On each day. · Off Time Sets a time that the TV will turn itself Off each day. · On/Off Timer Enables or disables the On/Off Timer functions. (The On/Off Timer can be disabled but the settings will be retained.) POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 1 4 7 0 2 5 8 3 6 9 ENTER 3 2/3 2/3 TIMER MENU ALARM 4 1 SELECT CH PREVIEW 4 Press ENTER to remove menu and return to TV viewing.

The clock must be set before the Timers will function. The Off Timer can be used to turn the TV off at the preset time. Note: No On Timer setting is required to use the Off Timer feature. ADJ ADJ Mini glossary TIME HOURS A four-digit figure broken down into hours and minutes, used to enter the time when setting the clock or programming timers. First two digits that are entered when setting the clock or programming timers.

MINUTES The last two digits that are entered when setting the clock, or programming timers. TIMER Choose AM or PM with the TIMER button when setting the clock. 206-3745 PAGE 19 Captions (Caption/Text Set Up) Set up Closed Caption/Text options for the user SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CAPTIONS SETUP OPER. MODE SEL.

CC TYPE CC CAPTION CC ON MUTE CAPTION LOCK PRESS SELECT TO CHOOSE PRESS ADJ TO CHANGE ON, OFF ON, OFF ON, OFF QUICK/MUTE TO SET CAPTIONS CAPTION 1 CAPTION 2 CAPTION 3 CAPTION 4 TEXT 1 TEXT 2 TEXT 3 TEXT 4 SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CAPTIONS SETUP OPER. MODE SEL. CC TYPE CAPTION LOCK STANDARD CAPTION 1 CAPTION 2 CAPTION 3 CAPTION 4 TEXT 1 TEXT 2 TEXT 3 TEXT 4 OFF TO SET CAPTIONS PRESS SELECT TO CHOOSE PRESS ADJ TO CHANGE ON, OFF Closed Captions/Text Operating Modes Setup Use MENU, SELECT, and ADJ Left/Right to choose the Closed Captions/Text mode and to set up the other menu options for the user. Quick/Mute When CC is pressed: User can only turn Captions on/off. (If CC on Mute is on, shows captions option on mute.) (If locked, type is retained with Power on/off.) When CC is pressed: User can choose a captions type. (If locked, type is retained with Power on/off.) POWER FLSH CC BK MUTE TV /FM VO LUM E 1 N CHAN EL Standard 1 4 2 5 8 3 6 9 ENTER Press ENTER repeatedly to remove menus.

Standard closed captioning is available using the Caption 1 option. Caption/Text are features which allow the Concierge TV to receive the closed caption and/or text options if made available by the broadcaster. Availability and functionality of Caption/Text options are determined only by each broadcaster and may not be available in your area. 7 0 2 Mini glossary CAPTIONS TEXT The term for the words that scroll across the bottom of your TV screen; usually the audio portion of the program provided for the hearing impaired. The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster. PAGE 20 206-3490-O Language SETUP MENU Choose the language the on-screen menus will appear in AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE ENGLISH 1 2 3 4 Press the MENU key on the remote control so the Setup menu appears. Use the SELECT key on the remote control, to highlight Language on your screen. Use the Right/Left ADJ arrow to choose one of the following options: English, Spanish, or French. Press ENTER to return to TV viewing.



[You're reading an excerpt. Click here to read official ZENITH H25F34DT user guide](http://yourpdfguides.com/dref/341090)  
<http://yourpdfguides.com/dref/341090>

POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 1 4 7 0 2 5 8 3 6 9 ENTER 4 1 2 TIMER MENU ALARM SELECT CH PREVIEW ADJ ADJ 3  
206-3490-O PAGE 21 Video Menu VIDEO MENU Use the Video menu to customize the picture appearance CONTRAST BRIGHTNESS COLOR TINT  
SHARPNESS PICTURE PREF PRESET 1 Press the MENU key repeatedly until the Video menu appears. Your options are: · Contrast: Adjusts the level of  
difference between white and black in the TV picture. The more contrast, the brighter the picture appears. · Brightness: Increases or decreases amount of  
white in the TV picture. · Color: Adjusts levels of all colors in the TV picture.

· Tint: Balances between amounts of red and green in the TV picture. · Sharpness: Raises or lowers the definition of the TV picture. The lower the level, the  
softer the images will appear. · Picture Preference: Choose either Custom or Preset. Custom allows you to set the picture the way you want.

Preset moves all the above options back to their original, factory-set levels. POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 1 4 7 0 2 5 8 3 6 9  
ENTER 1 TIMER MENU ALARM 4 2 3 4 Using SELECT on the installer's remote control, choose Contrast on your screen. Using the Right/Left ADJ arrow,  
change the contrast level to your preference. Press ENTER, or MENU one more time to return to TV viewing, or repeat from step two to set the other menu  
options. 2/A ADJ SELECT CH PREVIEW ADJ 3/B Picture Preference A B Use SELECT to choose Picture Preference on your screen. Use the Right/Left ADJ  
arrows, to choose either the original settings with Preset, or use your own settings with Custom. Choose the Preset option in Picture Preference to quickly  
reset the Video menu settings to their original values. PAGE 22 206-3490-O Installer Parental Control Menu If used, this optional feature can "block"  
undesirable programming from appearing on the TV Parental Control offers the user a wide variety of options and settings that restrict or "block" the  
programming that can appear on the TV. Parental control allows the user the capability of defining which program rating they consider acceptable, to the  
younger or more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password.

The number of hours blocked are specified. General audience and children viewer blocks can both be programmed into the TV's memory. Viewer ratings are  
specified for both TV and the motion picture industry; both rating systems can be used. The ratings are based mainly on the ages of children. Overview To  
insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections below AND choose ratings from  
the TV Parental Guidelines Rating System on the next page, using the Age Block option for General Audiences and for Children. In addition to those, you may  
wish to add additional restrictions from the Content Block menu. See the Parental Control menu, and submenus example on the next page. Things to Consider  
before Setting Up Parental Control Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, all more restrictive  
ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) Do you want to block the auxiliary  
video source entirely? (Blocks the signal sent by the equipment, such as a VCR, connected to the TV Audio/Video input jacks; in the Aux.

Block option.) Or leave unblocked, then choose allowable ratings. Block program "Content" based on individual parameters such as: Strong Dialog, Mature  
Language, Sex Scenes, Violence Scenes, or Fantasy Violence Scenes; in the Content Blk option. How many hours do you want Parental Control to be active?  
You can set the Hours option for up to 99 hours. Select a secret password; in the Set Password option.

Use the number keys on the remote. Don't forget the password, it is the only way you can access the Parental Control menu and change rating selections, or  
turn Parental Control off. Do you want Parental Control to be active all the time? If not, you can turn it on or off; with the Lock On/Off option. You can set  
different Parental Control viewing restrictions for general audiences and for children -- both can be active at the same time. Simply specifying one content  
block such as Sex Scenes, will not automatically block another content in the programs from appearing.

You cannot disable Parental Control by disconnecting the TV from power. Block hours remaining will be retained if power is lost or power cord is  
disconnected. The AUX input source can also be blocked. Reset Parental Control Block Hours to Zero and Cancel Password This provides the lodge staff and  
the installer a means to reset the TV to normal operation, if a guest has either forgotten the password or has left Parental Control Block active after checking  
out. On the installer's remote control, press and hold down MENU until the menu disappears (about 6 seconds). Immediately press 9, 8, 7, 6 and then CC.  
(Based on 0-I INST. SEQ. '0' setting.) This will reset the Block Hours to Zero and cancel the current 4-number password.

206-3852 PAGE 23 Installer Parental Control Menu After you have read the preceding page, follow instructions below to set up and activate Parental  
Control. AGE BLOCK SETUP MENU VIDEO MENU PARENTAL CONTROL AUX SOURCES MPAA RATING AGE BLOCK CONTENT BLK SET HOURS  
SET PASSWORD LOCK ON OFF TO BLOCK TO BLOCK GENERAL CHILDREN UNBLOCKED PRESS CC TO RETURN CONTENT BLOCK DIALOG  
LANGUAGE SEX SCENES VIOLENCE F VIOLENCE NO RATING UNBLOCKED PRESS CC TO RETURN Note: Use the installer's remote control to  
specify Parental Control settings. 1 2 3 4 Press MENU repeatedly until the Parental Control Menu appears. With the Parental Control menu on-screen, use  
the SELECT button to access the MPAA menu and customize the level of restriction. Use the Left/Right ADJ arrow to adjust or set the rating for an option, for  
example, use the "PG" setting. (See the Mini Glossary, Ratings Charts on pages 40 and 41 for rating descriptions.) After you have selected and adjusted the  
Parental Control menu options to your preferences: - Set the number of hours Parental Control will be on. - Set a 4-number password, using the number  
keypad. - Set the Lock On/Off option to either On or Off. On= Programs will be restricted.

Off= Programs will not be restricted; although restriction settings will be retained. Note: Some broadcasts do not include rating information. 7 0 8 9 ENTER  
1 TIMER MENU ALARM 2 ADJ SELECT CH PREVIEW ADJ 3 Make Parental Control restrictions permanent, with no preset or fixed hours time limit In the  
Installer's Menu, Item 84: PERMANENT BLK, 0 or 1.



[You're reading an excerpt. Click here to read official ZENITH  
H25F34DT user guide  
http://yourpdfguides.com/dref/341090](http://yourpdfguides.com/dref/341090)

0 Blocking restrictions always active, no time limit. 1 Restrictions limited to specified hours, 12 - 99.

use the ADJ Left/Right adjust arrow to set a different default number of hours. To Turn the Parental Control Feature Off/On In the Installer's Menu, Items: 21-I V-CHIP, 0 or 1, 51-I DIS. VCHIP M., 0 or 1 Options Setups for V-Chip Menu and Block Functions 21-I V-CHIP 51-I DIS. VCHIP M.

0 0 No menu, no blocking. 0 1 No menu, no blocking. 1 0 Shows menu, Block functions. 1 1 No menu, Block functions. 206-3852 Reset the Maximum Number of Parental Control Default Block Hours You can change the Block hours from the 12-hour default setting to up to 99 hours. In the Installer's Menu, item: 22-I MAX BLK HRS 12, PAGE 24 Other Menus & On-Screen Displays Press the remote keys indicated below to access these menus and displays ALARM MENU TIME NOW 3:11 PM TIMER SLEEP TIMER OFF PRESS TIMER 6:10 AM VOLUME PRESS DIGITS TO SET TIME TIMER TO SELECT AM/PM Volume Display Press VOLUME. Shows currently selected sound setting. Alarm Menu Press ALARM. Sets a time the TV will turn itself on. (Clock must be set.

) Sleep Timer Menu Press TIMER. Shows remaining time before TV shutoff. Choose a preset time for TV turn-off. Ch 25 - PBS 7:15 PM 5 9 20 32 44 AUX CC CHANNEL PREVIEW -----TO SELECT, ENTER TO QUIT FOR PARENTAL CONTROL OLD TIME MOVIES LENGTH 01:00 TIME LEFT 00:36

CAPTION 1 IS ON CH CC Channel/Time/XDS Display Press ENTER. Shows currently selected channel or source, current time if the clock has been set, incoming audio signal, and XDS data (if available). Closed Captions Menu Press CC. Turns selected option on or off. See Caption/Text page to select options.

Ch Preview Menu Press CH PREV. Displays list of the available TV Channels, Guest Parental Control menu, and used to select Auxiliary input source. CHANNEL BANK BANK 3 Channel Banks Menu Press SOURCE/BANK on an Installer remote equipped with those keys. Accesses the Channel Banks menus:

Bank 1, Bank 2, Bank 3, Bank 4. 206-3490-O PAGE 25 Managing the Channel Banks The TV has four channel banks, where the administrator or installer can store groups of TV channels Note: Channel banks set up requires an installer's remote with "Source" or "Bank" keys like the Zenith MBR3447, or a similar remote. PLANNING THE CHANNEL BANKS Generally, TV channels are grouped into "program packages" with terms that are proposed to the end user. The user then opts for a package.

Below is an example of how TV channels may be grouped. You may plan your package by using a chart like the one after the following page. Remember, you can "blank" a channel for accommodating audio-only, such as an FM radio station or in-house communication. Sometimes, only one or two channel banks may be needed. You may leave any unused bank with the channels entered during Auto Program; or, you may delete the channels.

However, you may want to leave at least one channel in any unused bank. Then, if someone selects an "unused" bank, that channel will assure them that the TV is functional. Note: Some channels from factory testing may be in the channel banks if you have not yet run Auto Program. ADDING / DELETING CHANNELS A previously prepared programming chart is helpful. 1. Run Auto Program (in the Setup menu). All channels found on your cable/antenna will be entered in Channel Banks 1, 2, 3, and 4. Note: Be advised that running Auto Program overwrites any custom channel setups; removes Blanked, Deleted. 2.

@@CHANNEL BANK and BANK number will be displayed.

3. @@You may delete channels or add some that have not been entered. @@See the "ADD/DEL/BLNK" menu page for more details. Note: The Blank Channel feature is global. A channel will be blanked in all channel banks. 4. @@@@A channel blanked, is blanked in all channel banks. @@@@To exit the Installer's Menu, press ENTER again. Any changes you make will be stored in nonvolatile memory. The Installer's menu opens with item 0-I, INST.

SEQ. Use the SELECT key to sequence through the available menu items. Or, access an item directly by entering the line number, then pressing MENU. For example, to access the Sleep Timer option which is on line 15-I, press 15, then MENU. To change a setting use the Left/Right ADJ keys.

0IMCRM1038A 01.83 01 0-I. INST. SEQ. 0 SN: XXXX-XXXXXXXXX UPN: XXX-XXX-XXX-XXX XX/XX/XX TE = 10110000 Typical Installer Menu Using the Installer's Menu Items 0-I - 86-I are immediately accessible only upon entering the Installer's Menu.

@@@@@1-I. 2-I. 3-I. 4-I. 5-I. 6-I. 7-I. 8-I. 9-I. 10-I.

11-I. 12-I. 13-I. 14-I. 15-I. 16-I. 17-I. 18-I. 19-I. 20-I.

21-I. 22-I. 23-I. 24-I. 25-I.

@@SCAN MODE STRT CH IN SM SLEEP TIMER EN. @@@@Select number of Parental Control blocking hours. Set to 1 to retain Caption setting at turn off. Set to 1 to add Text option to closed caption menu. Controls channel preview in Pay-Per-View function menu.

@@@Sets number of hours of no activity before auto shutoff. Set to 1 to enable auto turn on at power up. Tuning band, see detailed descriptions. @@When set to 1, cannot tune from current channel. Set to 1 to enable Ghost Channel display. Volume level at TV turn-on (Set 255 to retain last volume level). Minimum volume setting. Maximum volume setting. Set to 1 to disable mute function. Set to 1 to disable Menu, Select, and Adj keys on front panel.

@@@Puts On-Off in Ch Up/Down sequence. Set to 1 to put TV on/off below start channel number. Set to 1 to enable Sleep Timer. Set to 1 to enable Timer.

@@27-I. 28-I. 29-I. 30-I. 31-I. 32-I.

33-I. 34-I. 35-I. 36-I. 37-I.

38-I. 39-I. 40-I. 41-I. 42-I.

43-I. 44-I. 45-I. 46-I. 47-I. 48-I. 49-I. 50-I. 51-I. 52-I.

53-I. 54-I. 55-I. 56-I. 57-I. 58-I. 59-I. 60-I. 61-I. 62-I.

63-I. Function NOT USED NOT USED CH. @@@@NOT USED NOT USED REAR Y/C EN. @@@SETUP M. DIS.

AUDIO M. DIS. VIDEO M. DIS. VCHIP M.

DIS. SOURCE M. DIS. CH-TIME M. EN. SET. COL. FOR. SETUP M. BCK.

SETUP M. EN. AUDIO COL. FOR. AUDIO M. BCK AUDIO M. EN. VIDEO COL. FOR. VIDEO M.

BCK VIDEO M. EN. PTL. @@@OCV should set to 1. M.

P.I. communication parameter. M.P.

I. communication parameter. M.P.I. @@@AUX source reported as Channel number instead of Channel 0. Set to 1 to disable Setup menu. Set to 1 to disable Audio menu. Set to 1 to disable Video menu. Set to 1 to disable V-Chip (Parental Control) menu.

Set to 1 to disable Source menu. Set to 1 to disable Channel-Time display. Set to 1 to enable custom color for Setup menu. Custom foreground color for the Setup menu. Custom background color for the Setup menu. Set to 1 to enable custom color for the Audio menu. Custom foreground color for the Audio menu.

Custom background color for the Audio menu. Set to 1 to enable custom color for the Video menu. Custom foreground color for the Video menu.

Custom background color for the Video menu. @@@65-I. 66-I. 67-I. 68-I.

69-I. 70-I. 71-I. 72-I. 73-I.  
74-I. Function FOR. PTL. M. BCK. PTL. M. EN. SRC. COL.

FOR. SRC. M. BCK. SRC. M. EN. CH-T COL. FOR. CH-T COL BCK.

@@Custom background color for the V-Chip (Parental Control) menu. Set to 1 to enable custom color for the Source menu.



[You're reading an excerpt. Click here to read official ZENITH  
H25F34DT user guide  
http://yourpdfguides.com/dref/341090](http://yourpdfguides.com/dref/341090)

Custom foreground color for the Source menu. Custom background color for the Source menu. Set to 1 to enable custom color for the Channel-Time display. Custom foreground color for the Channel-Time display. @@@@76-I. 77-I. 78-I. 79-I.

80-I. 81-I. 82-I. 83-I. 84-I. 85-I. @MUTE TIME V. @(Line - Day) User programmable number, most significant byte - 1. (Week) User programmable number, most significant byte - 2. (SN-HIGH) User programmable number, least significant byte.

(SN-LOW) Enforces rigid M.P.I.\* checksum. Relaxes M.P.I. timing to be compatible with PC based Windows controlled systems. @@Controls muting audio delay time when switching between AUX sources. Controls muting video delay time when switching between AUX sources.

@@INSTALLER SEQUENCE Gives access to Installer Menu depending on the code selected. 0 = 9876 2 = 1478 1 = 4321 3 = 3698 sending the hours that the TV will remain on, unless there has been activity from either the control panel or remote control. 2-I. AC ON (AC Power Switchable) Allows the TV to turn ON just by applying AC power. Pressing the ON button is not necessary.

This is desirable when the TV is plugged into a cable box or a power outlet controlled by a wall switch. Use ADJUST to select 0 or 1, where 0 is the default is OFF, and 1 is ON. NOTE: When set to 1 (ON), the TV does not respond to ON/OFF commands from either the remote or the control panel, and the SLEEP TIMER is also nonfunctional. 1-I. POWER MANAGE (Power Management) Determines hours of no activity before automatic shutoff. The POWER MANAGE function is for saving energy. When set to 0, Power Manage is OFF. Settings range from 0 - 7, with 1 - 7 repre- \*M.P.I. Multiple Protocol Input: Zenith protocol for remote control of TV through RJ11 (M.P.I.) jack on TV connections panel. 206-3852 PAGE 31 Installer Menus Installer Menu Items 3-I through 13-I: Detailed Descriptions 3-I.

BAND/AFC (Band/Automatic Frequency Control) There are 8 possible settings for this option: 0 5 6 7 = = = Broadcast Fixed CATV Fixed HRC Fixed ICC Fixed 4 1 2 3 = = = Broadcast AFC CATV AFC HRC AFC ICC AFC 7-I. START VOLUME This function allows the Installer to determine the initial volume level setting when the TV is turned ON. This feature is useful for an in-house information channel, since the TV would always select that volume level when it is turned on. The range of values are 0 63, 255. If 255 is selected, the current volume level will be retained in memory when the TV is turned off; at TV turn on, volume level is automatically set to the previous or last level. 8-I. MIN VOLUME (Minimum Volume) This function determines the minimum volume level allowable with the VOLUME (VOL) Up/Down control. In this way, for example, someone cannot set the volume too low to hear. The range is from 0 to 63--change values with ADJUST. The factory default is 0, which provides full range of volume control.

It may be best to set the same value on every TV. NOTE: The minimum volume level cannot have a value setting higher than in the MAX VOLUME level (described below). 9-I. MAX VOLUME (Maximum Volume) This function determines the maximum volume level allowable with the VOLUME VOL Up/Down control. In this way, for example, someone cannot set the volume level high enough to disturb others.

@@Change values with ADJUST keys. It may be best to set the same value on every TV. @@10-I. MUTE DISABLE Enables or disables sound mute function. Set to 1, sound cannot be muted.

Set to 0, sound can be muted. 11-I. @@When set to 0, those keys are functional. The menus can always be accessed with MENU on the remote. 12-I. IR BANKS EN. For direct access to a particular Channel Bank. @@13-I. @@@@NOTE: BAND is automatically set by AUTO PROGRAM. @4-I.

@@@@The range of values is 0 - 255. Use (adjust) keys to choose numbers that determine the start channel. 5-I. CHAN LOCK (Channel Lock) CHAN LOCK is ideal if a cable box (or similar) is the sole source for programming--and the TV must always be on the same channel. Changing channels with Channel Up/Down or keypad numbers is impossible. Channel Lock is inactive when set to 0 (default). Generally, this feature is used in conjunction with START CHANNEL (item 4-I.) where the start channel may, for example, be set to 3 or 4. If the start channel is 3 then the TV will remain on channel 3. NOTE: When CHANNEL LOCK is active and CHANNEL OVERRIDE is disabled, AUTO PROGRAM is not active.

6-I. GHOST CH (Ghost Channel) When set to 1, the current channel number is displayed in the upper right corner of the CRT. The number moves slightly to prevent damage to the screen. The default is "0" or OFF. NOTE: When captions are on, the "Ghost Channel" is not displayed.

PAGE 32 206-3852 Installer Menus Installer Menu Items 14-I through 34-I: Detailed Descriptions Scan mode 0 1 Characteristics Channel up/down keys change channels only. Channel down below the lowest channel (or channel up higher than the highest) and TV turns off. 23-I. CAPTION LOCK Set to 1 to restore previous caption On/Off state after TV turns off. When set to 0, captions are always off, when TV is initially turned on.

24-I. TEXT MODE Determines whether TEXT 1, TEXT 2, TEXT 3, or TEXT 4 decoding is enabled when TEXT is turned on (either from the Setup Menu or directly with CC on the remote). TIP: Set Text Mode to 1 only if text is offered in your video system. 25-I. FUNCTION PRE. Set to 0 to suppress CHANNEL PREVIEW from the FUNCTION menu with some Pay-Per-View systems. 26-I. NOT USED 27-I. NOT USED 28-I. CH.

OVERVERRIDE (Channel Override) When set to 1, the user can select channels with either Channel Up/Down or by direct keypad entry. When set to 0, only those channels that are entered for scanning may be selected by direct keypad entry. Note: If set to 0, Auto Program is locked; (as shown on Setup menu) you cannot do a channel search. 29-I. OLD OCV (On Command VideoTM) Set to 1 for operation with systems from On Command Corporation. 30-I. ACK MASK M.P.I. Communication Parameter. Leave at default setting unless changed by Pay-Per-View provider. 31-I. POLL RATE M.P.I. Communication Parameter. Leave at default setting unless changed by Pay-Per-View provider. 32-I. TIMING PULSE M.P. I. Communication Parameter. Leave at default setting unless changed by Pay-Per-View provider. 33-I. NOT USED 34-I. FRONT AUX ENABLE Set to 1 to enable the front AUX (Camport) input. Set to 0 to disable front AUX input. 14-I. STRT CH IN SM When set to 1, installs TV on/off event below the start channel at TV turn on. 15-I.

SLEEP TIMER When set to 1, the SLEEP TIMER feature may be used (but no message is displayed prior to turn-off). When set to 0, the sleep timer is not available. 16-I. EN. TIMER Set to 1, timer function is available to user. Set to 0 to disable Timer functions. (Clock must be set in order to use Timers.) 17-I. ALARM Gives you the option of making the alarm function available to the user. Set to 1, alarm function is available to user. Set to 0 to disable the Alarm function. Note: Clock must be set in order to set the Alarm. 18-I. NOT USED 19-I.



[You're reading an excerpt. Click here to read official ZENITH H25F34DT user guide](http://yourpdfguides.com/dref/341090)  
<http://yourpdfguides.com/dref/341090>

NOT USED 20-I.

FEATURE LEVEL Default set to ZEN 1 for Zenith IR remote control operation. Set 0, P LBL for Zenith Private Label IR remote control operation. Warning: Do not set to "0" or remote will not control TV. Installer should leave item 0-I FEATURE LEVEL set to 1 (default). 21-I.

V-CHIP Set to 1 to activate V-Chip (Parental Control); have it available to user to filter, control, or restrict programming content. Set to 0 to turn V-Chip feature off, not available to user; no programming restrictions can be set. 22-I. MAX BLK HRS Set to 0 to 99 for the maximum V-Chip (Parental Control) block hours. Default is 12 blocking hours. 206-3852 PAGE 33 Installer Menus Installer Menu Items 35-I through 60-I: Detailed Descriptions 35-I. NOT USED 36-I. NOT USED 37-I. REAR Y/C EN. Set to 1 to enable the rear S-Video input.

Set to 0 to disable the rear S-Video input. 38-I. NOT USED 39-I. NOT USED 40-I. AUTO CAMPORT Set to 1 to automatically switch to camport when equipment is connected to front Video input. Set to 0 to disable front Video automatic source selection. 41-I. NOT USED 42-I. NOT USED 43-I. AUTO REAR Y/C Set to 1 to automatically switch viewing source to rear S-Video input when equipment is connected.

Set to 0 to disable rear S-Video automatic source selection. 44-I. NOT USED 45-I. NOT USED 46-I. STRT AUX SRCE Sets the starting AUX source.

47-I. AUX STATUS Set to 1 for M.P.I. AUX source to be reported as a channel number instead of channel 0.

Set to 0 to disable AUX identification change. 48-I. DIS. SETUP M. Set to 1 to disable the Setup menu. Setup menu will not appear. Set to 0 to enable the Setup menu. 49-I. DIS. AUDIO M.

Set to 1 to disable the Audio menu. Audio menu will not appear. Set to 0 to enable the Audio menu. 50-I. DIS. VIDEO M. Set to 1 to disable the Video menu. Video menu will not appear. Set to 0 to enable the Video menu. 51-I.

DIS. VCHIP M. Set to 1 to disable the Parental Control menu. Parental Control menu will not appear. Set to 0 to enable the Parental Control menu.

52-I. DIS. SOURCE M. Set to 1 to disable the Source menu. Source menu will not appear.

Set to 0 to enable the Source menu. 53-I. DIS. CH-TIME M. Set to 1 to disable the Channel-Time display. Channel-Time display will not appear. Set to 0 to enable the Channel-Time display. 54-I. EN. SET.

COL. Set to 1 to enable custom color settings for the Setup menu. Set to 0 to disable custom color settings for the Setup menu. 55-I. FOR. SETUP M. (Setup Menu Foreground Color) Set according to Color Chart. 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 56-I. BCK. SETUP M.

(Setup Menu Background Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 57-I. EN. AUDIO. COL. Set to 1 to enable custom color settings for the Audio menu.

Set to 0 to disable custom color settings for the Audio menu. 58-I. FOR. AUDIO. COL.

(Audio Menu Foreground Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 59-I. BCK. AUDIO. COL. (Audio Menu Background Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 60-I. EN. VIDEO. COL. Set to 1 to enable custom color settings for the Video menu. Set to 0 to disable custom color settings for the Video menu.

PAGE 34 206-3852 Installer Menus Installer Menu Items 61-I through 82-I: Detailed Descriptions 61-I. FOR. VIDEO M. (Video Menu Foreground Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 62-I. BCK. VIDEO. COL. (Video Menu Background Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 63-I. EN. PTL.

COL. Set to 1 to enable custom color settings for the V-Chip menu. Set to 0 to disable custom color settings for the V-Chip menu. 64-I. FOR.

PTL. M. (V-Chip Menu Foreground Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 65-I. BCK. PTL.

M. (V-Chip Menu Background Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 66-I. EN. SRC. COL. Set to 1 to enable custom color for the Source menu. Set to 0 to disable custom color for the Source menu. 67-I. FOR. SRC.

M. (Source Menu Foreground Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 68-I. BCK. SRC. M. (Source Menu Background Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet. 69-I. EN. CH-T COL. Set to 1 to enable custom color for the Channel-Time display.

Set to 0 to disable custom color for the Channel-Time display. 70-I. FOR. CH-TIME (Channel-Time Display Foreground Color) 0 = Black 3 = Yellow 6 =

Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet Note: If foreground and background color are the same, menu background is transparent. 71-I.

BCK. CH-TIME (Channel-Time Display Background Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet Note: If foreground and background color are the same, menu background is transparent. 72-I. NOT USED 73-I. CH NOT AVBLE When set to 1 and channel override is set to 0, "NOT AVAILABLE" message is displayed when direct accessing a channel not in the favorite channel list.

74-I. CH-TIME SIZE When set to 1 and transparent background is selected for ChannelTime display, (foreground color = background color and custom color enabled) a large channel number is displayed instead of the normal Channel-Time display. 75-I. NOT USED 76-I. DEFEAT XDS Set to 1 to disable XDS display. Set to 0 to enable XDS display. 77-I. NOT USED 78-I. UPN MSB User programmable number, most significant byte readable by M.P.

I. command. 79-I. UPN MSB-1 User programmable number, most significant byte-1 readable by M.P.I. command. 80-I. UPN MSB-2 User programmable number, most significant byte-2 readable by M.P.

I. command. 81-I. UPN LSB User programmable number, least significant byte readable by M.P.

I. command. 82-I. CHKSM ERROR Enforces rigid M.P.

I. checksum validation. Set to 1 for validation. Set to 0 to turn off. 206-3852 PAGE 35 Installer Menus Installer Menu Items 83-I through 86-I: Detailed Descriptions 83-I. HANDSHK TIME Adds an additional delay to the handshake time which is 64 msec, thus relaxing M.P.I. timing requirements to be compatible with PC based Windows controlled systems, range is 0 - 5. Set to 0 to retain standard 64 msec delay.

Set to 1 - 5 to increase @ 16 msec ea., the delay up to 144 msec. 84-I. PERMANENT BLK Allows Parental Control blocking schemes to be permanent by removing the blocking hours function. Set to 1 to install Parental Control blocking restrictions permanently. Set to 0 for user-specified hours control of blocking schemes. 85-I. A. MUTE TIME Controls audio muting delay time when switching between AUX sources. The audio will be muted for 16 msec times the value of this setting.

86-I. V. MUTE TIME Controls video muting delay time when switching between AUX sources. The video will be muted for 16 msec times the value of this setting. PAGE 36 206-3852 LT2000 QuickSet II Programmer Learn Master TV Typical MPI Connections Teach Other TV Typical MPI Connections Use the

Zenith LT2000 QuickSet II "Clone" Programmer to copy the setup from a "Master" TV then quickly transfer the setup to duplicate TVs must be the same model number as the master TV THE CLONE HAS CONTROL OF THE TV THE CLONE IS VERSION THE TV IS VERSION THE SW IS REVISION XX XX XX TV Back TV Back Antenna Antenna ANTENNA CABLE ANTENNA CABLE SPEAKER OUT SPEAKER OUT RF Coaxial Wire (75ohm) Super Port M.



[You're reading an excerpt. Click here to read official ZENITH H25F34DT user guide](http://yourpdfguides.com/dref/341090)  
<http://yourpdfguides.com/dref/341090>

**P.I. VIDEO IN AUDIO IN RF Coaxial Wire (75 ohm) Super Port M.P.I.**

**VIDEO IN AUDIO IN TV Back Panel (Expanded View) TV Back Panel (Expanded View) CLONE CLOCK TV CLOCK = XX:XX = XX:XX -PRESS ANY KEY TO CONTINUE. -DISCONNECT CLONE WHEN DONE.** ® ® QuickSet II Programmer LT2000 QuickSet II Programmer LT2000 Clone Controlling TV Display Clone Clone The optional QuickSet II Clone Programmer (LT2000) allows custom setup and programming information to be quickly copied from a master TV into multiple identical television sets. Once learned from the master, setup data is retained in the LT2000 for future use. When using the LT2000, cloning operations will go easier if the TV set is connected to a good quality signal and operating with a stable picture displayed. To operate the LT2000, use the indicated keys on an HP602, LP702, or MBR3447 remote, or the front panel keys on the TV receiver. Before you begin... The "master TV" should be connected to a good, stable signal from an over-the-air antenna or cable service and turned on.

· Teaching and Learning is only possible between identical model Zenith TVs. (However, the Clone programmer can store 4 different master TV setups.)  
**WARNING:** Copying a blank or incorrect memory into a TV will cause the TV to operate erratically or become inoperable. · Use a Zenith MBR Remote like the MBR3447 or the TV front panel controls to operate Learning and Teaching menus. · Make sure that the batteries in the Clone programmer are fresh. · If the batteries are removed, the Clone Clock time will be lost. · Decide if you want to set the time from the Clone programmer or copy the time to the Clone programmer; from a TV which has the clock set to the current time. · Follow the connection diagrams above to connect the Clone to a master TV and, after learning is complete, to another TV to "teach" it the setup. · Setting the time and transferring it to the Clone or another TV is a separate procedure. · Once a TV's setup is copied to another TV, that TV needs to be disconnected from power for about 5 seconds to activate the newly copied setup.  
· See Troubleshooting to solve problems. A. Set Up a Master TV Using a Zenith Multi-Brand remote like the MBR3447, set up a "Master" TV with custom settings and features as described in the master TV's operating guide. The master TV's Setup is what you will copy to the Clone Programmer and transfer to TVs of the same model so they will operate identically. B.

Connect Clone to Master TV If there is a good connection, the "Clone has Control of TV" message will appear. (See menu above left.) A slow flashing green light indicates there is a problem with the communications between the TV and the programmer. In this case, check for a damaged cable, poor contacts, or other connection troubles. If the status indicator is red, the programmer batteries are low and should be replaced.  
Use 4 good-quality alkaline AA batteries. 206-3490-O PAGE 37 Clone Selection Menu Choices Typical Clone Programmer on-screen menus THE CLONE HAS CONTROL OF THE TV THE CLONE IS VERSION THE TV IS VERSION THE SW IS REVISION XX XX XX CLONE SELECTION MENU (1) LEARN FROM TV (2) TEACH TO TV (3) SET CLONE CLOCK FROM TV (4) SET TV CLOCK FROM CLONE (5) DISPLAY TV SETUP (6) DISPLAY CLONE SETUP CLONE CLOCK= TV CLOCK= XX:XX XX:XX -TO CHANGE MENU ITEMS, PRESS CHANNEL KEYS OR DIGITS. -TO EXECUTE ITEM, PRESS ON/OFF, POWER, OR ENTER -PRESS ANY KEY TO CONTINUE. -DISCONNECT CLONE WHEN DONE. C. Learn Setup from Master TV Press 1 to select the "Learn From TV" option, then press ON/OFF, POWER, or ENTER to go to the Memory Bank Selection Menu. Pick the Memory "Bank" (1, 2, 3, or 4) you want to store this Master TV's Setup in by pressing either Channel key repeatedly to pick Memory 1, 2, 3, or 4. (If you choose a Memory "Bank" that already has a master TV's setup already in it, it will be overwritten by this Master TV's setup.) Once the Clone memory bank is selected, press ON/OFF, POWER, or ENTER. The Clone memory bank you have selected will be shown.

Press ON/OFF or POWER to begin copying the master TV's setup. Ca. Set the Clock (Optional) Set the time on the Master TV's Clock. (If the time has already been copied from another TV into the Clone programmer, you can set the Master TV's clock by copying the time from the Clone programmer.) The Clone Programmer can copy the current time to both a master TV and to the Clone's internal clock; accurate to within one minute. (Another reason that the Clone programmer should be equipped with fresh, high-quality alkaline batteries is for it to keep the time as accurately as possible.) Since the Clone Programmer's time cannot be set directly, the time needs to be copied from a Zenith TV equipped with M.P.I. input capability.

Once the time is copied to the Clone programmer, the current time can then be transferred to another TV. (This can be a Master TV, or another TV which has had the features already set up.) D. Teach Master TV's Setup to Other TV Once Learning is complete, remove the M.P.

I. cable from the master TV and connect it to the TV that you want to copy the master TV's setup to. With the "TV is Controlled by Clone" message displayed, press 2 or use either Channel key to go to the "Teach to TV" option, press ON/OFF, POWER, or ENTER. Follow on-screen instructions to transfer the Setup and other information to the "Learning" TV. After the "Teach to TV is Complete" message is displayed, press any key to return to the Clone menu option, then press ON/OFF, POWER, or ENTER.

If finished, remove M.P.I. cable from the TV. E. Disconnect TV Power for 5 Seconds Remove the TV power cord of the newly "Cloned TV" from the power outlet for about 5 seconds to activate the newly copied setup. PAGE 38 206-3490-O Clone Selection Menu Choices Operation Notes Disconnect the Clone from the TV when you are finished; automatically switching it off. The real-time clock continues to run when the main circuits are switched off. Reset Clone After Static Shock After replacing exhausted batteries, or if the programmer behaves strangely after a static shock, use a paper clip or similar instrument inserted through the small hole marked "RESET" to activate the internal reset switch and restore normal operation. After a reset, check the real-time clock setting.

It may be necessary to reset the Clone Programmer clock from a TV containing the correct time. The LT2000 programmer is designed to be used with TVs containing the 221-01006 and later processors. Usage with earlier TV sets may give unpredictable results. The specific microprocessor used in any TV set can be determined by activating the Installer Menu. The microprocessor part number appears at the top of the screen when the Installer Menu is activated.



[You're reading an excerpt. Click here to read official ZENITH H25F34DT user guide](http://yourpdfguides.com/dref/341090)  
<http://yourpdfguides.com/dref/341090>