



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH H32E46DT. You'll find the answers to all your questions on the ZENITH H32E46DT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH H32E46DT
User guide ZENITH H32E46DT
Operating instructions ZENITH H32E46DT
Instructions for use ZENITH H32E46DT
Instruction manual ZENITH H32E46DT

Installation and Operating Guide | Warranty

**Model Numbers | H25E46DT | H27E46DT | H32E46DT | H36E46DT |
Presentation™ TVs**



© Copyright 2002, Zenith Electronics Corporation



[You're reading an excerpt. Click here to read official ZENITH H32E46DT user guide](http://yourpdfguides.com/dref/341131)
<http://yourpdfguides.com/dref/341131>

Manual abstract:

REFER TO QUALIFIED SERVICE PERSONNEL. @@@@This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the three-wire ground type plug. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help. COMPLIANCE: The responsible party for this product's compliance is: Zenith Electronics Corporation, 2000 Millbrook Drive, Lincolnshire, IL 60069, USA · Phone: 1-847-941-8000. CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation.

Unauthorized modification could void the user's authority to operate this product. 3-WIRE COMM-WARN B-3/99 Presentation™ TV is a trademark of Zenith Electronics Corporation © Copyright 2002 Zenith Electronics Corporation IMPORTANT SAFETY INSTRUCTIONS Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference. Observing the simple precautions discussed in this operating guide can help you get many years of enjoyment and safe operation that are built into your new product. 1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 2.

Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label.

If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6. Water and Moisture Do not use this product near water for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool. 12.

Power Cord Polarization This product is equipped with a 3-wire grounding type alternating-current power plug. This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the three-wire ground-type plug. 7. Accessories, Carts, and Stands Do not place this product on a slippery or tilted surface, or on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

13. Power Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8. Transporting Product A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) PORTABLE CART WARNING 206-3489-O 3-WIRE GRND PAGE 3 IMPORTANT SAFETY INSTRUCTIONS (Continued from previous page) 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. Example of Grounding According to National Electrical Code Instructions short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. 19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.



[You're reading an excerpt. Click here to read official ZENITH H32E46DT user guide](http://yourpdfguides.com/dref/341131)
<http://yourpdfguides.com/dref/341131>

Refer all servicing to qualified service personnel. 20. Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged. b.

If liquid has been spilled, or objects have fallen into the product. c. If the product has been exposed to rain or water. d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. e. If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance.

Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 15. Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. 21. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 22. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition. 16. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits.

When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 23. Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. 17.

Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. 24. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Never place any hot objects on the cabinet surfaces. Contact with hot objects is sure to result in damage to the product.

206-4543 18. Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or

PAGE 4 Table of Contents Use this page as a guide to locate the features on this TV Safety Warnings

.

. . . . 2 Important Safety Information .

.

. 3 - 4 Table of Contents

.
.
.

. . 5 Computer Section Optional: Computer Setups Using the TV as a Computer Monitor Overview: Computer Monitor Setup

6 Computer Hookup

.

. 7 - 8 Windows Environment Image Enhancements

. . . 9 Macintosh Environment Image Enhancements . .

. . . 10 Computer Source Selection . .

.

. 11 Computer Video menu

.
.

. 12 Computer Setup Notes

.
.

13 Computer Setup Troubleshooting

. 53 TV Section Add/Del/Blank . .

.
.
.

. . . . Channel Labels (Preset and Custom)

. . 27 Clock Set

.
.
.

. Timer (On/Off Timers Setup)

.

... Captions (Captions/Text menu) ..

.....

... Alarm Menu (Set a TV Automatic Turn-on Time) ... Language ...

.....

.....

... reseller. Video Mirror Connections (Optional) The computer image can be sent to both the TV screen and a computer monitor at the same time by using the video mirror connection, see the instructions on pages 7 - 8. PC Direct connection to the TV's connectors using the cable provided in the accessory packet.

MAC Macintosh computers may require a Zenith PCZ40 adapter (typical DB-15 adapter which connects the Macintosh 2-row connector to the TV's 3-row connector) see your Zenith dealer or computer reseller. Computer display output settings must be set to SVGA 800 x 600 @ 60 Hz. Set Up the Presentation TV for Computer Requirements If your Computer is hooked up to the TV's front computer port which is 800 x 600 @60 Hz, choose FRONT COMPUTER SVGA input by pressing TV/VCR SOURCE repeatedly on the remote control, or use the on-screen Source menu. If your Computer is hooked up to the TV's rear computer port, choose REAR COMPUTER SVGA input by pressing TV/VCR SOURCE repeatedly on the remote control, or use the on-screen Source menu. Additional Computer Image Enhancements (Optional) Additional computer output adjustments to optimize the computer image quality appearing on the TV screen PC See page 9 for Windows environment. MAC See page 10 for Macintosh environment. Troubleshooting Problems? See troubleshooting on page 46 for Computer/TV setup problems. Notes · Avoid using hookup cables of excessive length (longer than 25 feet). Long cables can adversely affect image quality and Computer/TV performance. · Not all computer cables will work with the TV.

See your Zenith dealer for special computer extension cables. Adjust the Computer Display Output to TV Requirements Note: The optional PCZ3000 Computer Scan Conversion Card Kit is available from your Zenith dealer The PCZ3000 allows the TV to display additional computer formats in addition to 800 x 600 @60 Hz SVGA. It also enhances the image from your computer, and allows you to link or daisy-chain a series of TV sets; allows a computer's image to appear on a series of TVs connected to the TV. See your Zenith dealer for further details. PAGE 6 206-3602 Computer Hook Up Here is the basic setup to use the Presentation TV as a computer monitor Computer Video "Card" Output TV Front 1 2 Make the basic connections as indicated.

(Appearance of components may vary from those in the illustrations.) Plug in your TV. The Presentation TV is designed to operate on standard current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC Current. Video Out to Computer Monitor video in L audio R Back of Computer Computer Sound "Card" Output "Video Mirror" Cable 3 4 Set the computer's image output settings to 800 x 600 @ 60Hz or SVGA. TV Back Using the Source menu, highlight "REAR COMPUTER SVGA" (Rear Computer in) or "FRONT COMPUTER SVGA" (Front Computer in) then press ENTER on the remote to change to the computer image source.



[You're reading an excerpt. Click here to read official ZENITH H32E46DT user guide](http://yourpdfguides.com/dref/341131)
<http://yourpdfguides.com/dref/341131>

Boot up your computer. As it warms up, the TV will adapt to your computer. Note: Unlike a computer monitor, this TV does not show a computer image on the screen until the TV has completely adapted to your computer's output. This is normal when using this TV as a computer monitor. When the TV has completely adapted to your computer, the computer's image will appear on the screen. ANTENNA CABLE S-VIDEO OUT S-VIDEO IN R-AUDIO- L M.P.I. R AUDIO OUT L VIDEO AUX IN R- AUDIO- L R- AUDIO- L COMPUTER AUDIO Components may vary from those in the illustration.

If you have a Macintosh, use the 2-row to 3-row DB15 adapter on the Macintosh video connector. On some notebook models, you must locate the "display toggle key" and switch the display to "external." Refer to the instructions for your computer. Connections to TV front or rear computer port, with computer sound card output to front or rear R - audio - L inputs. 206-4543 PAGE 7 Computer Hook Up An accessory packet is included with all TV models. A 15-ft. cable with a "video mirror" for providing a computer image to two monitors--your computer's monitor and the TV. 1 Make the connections with the 15-ft.

"Video-Mirror" cable exactly as shown. Also refer to the preceding page for audio connections and "Using the monitor function.

" video in L audio R (800 x 600 @60 Hz) TV Back Note: Actual appearance of components may vary. TV C O M P U T E R I N Connect to Computer PC Connect to TV ANTENNA CABLE S-VIDEO OUT S-VIDEO IN R- AUDIO- L M.P.I. R AUDIO OUT L VIDEO AUX IN R- AUDIO- L Back of Computer R- AUDIO- L COMPUTER AUDIO Video-Mirror cable connectors are clearly marked.

Connect as shown in drawing: TV to the television MON to the Computer Monitor PC to the Computer MON Connect to Monitor Video cable from monitor Computer monitor Your TV must be plugged in--not necessarily turned on--for the computer monitor to function. Unless the Mirror Cable is connected exactly as shown above, no computer image will appear on the TV screen. PAGE 8 206-3489-O PC: Windows Environment Setting your computer for optimum picture output in the Windows operating system environment WINDOWS Environment The following is a step-by-step procedure for setting your computer's picture output to optimum display quality. 1. Plug in your computer to the Presentation TV.

Turn on the TV and then the COMPUTER. 2. Open your CONTROL PANEL and click on DISPLAY PROPERTIES. 3. Click on APPEARANCE. This is where you will make changes for Presentation display. At this time you will now CREATE a NEW SCHEME or display for Presentation Display. Once you have created this "new scheme" you'll be able to quickly switch between Normal and a Presentation display Scheme. Once you have made the changes to your computer Scheme, then SAVE AS a Classroom Display. Use the following steps to change each ITEM, FONT and COLOR for optimum computer image viewing on the TV screen.

1. Select under the ITEM and start with ACTIVE TITLE BAR. * Select SIZE to 28 * Select COLOR to GREY * Select FONT * Select TIMES NEW ROMAN * Select SIZE 18 * Select COLOR of BLACK 2. Select under the ITEM category CAPTION BUTTONS * Select SIZE of 25 3. Select under the ITEM category ICON * Select SIZE of 40 * Select FONT SIZE of 20 * Select FONT of TIMES NEW ROMAN (BOLD) Technical Update: Optimum Display November 1998 4. Select under the ITEM category ICON SPACING (Horizontal) * Select SIZE of 100 5. Select under the ITEM category ICON SPACING (Vertical) * Select SIZE of 100 6. Select under the ITEM category INACTIVE TITLE BAR * Select SIZE of 30 * Select FONT SIZE of 18 * Select FONT of TIMES NEW ROMAN 7. Select under the ITEM category MENU * Select SIZE of 30 * Select FONT SIZE 18 * Select FONT of TIMES NEW ROMAN 8. Select under the ITEM category MESSAGE BOX * Select FONT SIZE of 14 * Select FONT of TIMES NEW ROMAN 9.

Select under the ITEM category PALETTE TITLE * Select SIZE of 30 * Select FONT SIZE of 18 * Select FONT of TIMES NEW ROMAN 10. Select under the ITEM category SELECTED ITEMS * Select SIZE of 30 * Select COLOR of BLUE * Select FONT SIZE of 18 * Select FONT of TIMES NEW ROMAN 11. Rename the scheme and SAVE AS, PRESENTATION DISPLAY. 12. CHANGING THE APPLICATION ICON SIZE * Select Excel (Spreadsheet/workbooks) * From the TASK BAR select TOOLS * Select CUSTOMIZE * Select OPTIONS * Click on LARGE ICONS Your Icons within your WORD and EXCEL will now match your new Scheme display.

Now you have set your Windows computer for optimum Presentation Display. 206-3602 PAGE 9 MAC: Macintosh Environment Setting your computer for optimum picture output in the Macintosh operating system environment MACINTOSH Environment The following is a step-by-step procedure for setting your computer picture output to optimum display quality. 1. Plug in your computer to the Presentation TV. Turn on the TV and then the COMPUTER.

2. Open your CONTROL PANEL by choosing under the APPLE icon or by clicking on your HARD DRIVE icon. If you choose the HARD DRIVE icon, you'll have to open your CONTROL PANEL through the SYSTEMS FOLDER. 3. Once you have located the CONTROL PANEL, click on VIEWS. This is where you will make changes for Presentation display. 4. Change the FONT to one that appears well on a television. We would suggest that you use TIMES BOLD. Now, change the FONT SIZE to 18 or better.

Each time that you use the TV with your computer, you will simply change the FONT and SIZE through the CONTROL PANEL and VIEW. You have now changed the appearance of all your folders but NOT your applications. VIEWING FOR PRESENTATION Vs. PRIVATE 1. When viewing an application, such as EXCEL or WORD, you will have to change the appearance of each application. 2. Once the application has been opened, just change the view from 100 percent to a selection over 150 percent. This will not permanently effect your document. Once you have completed your presentation, simply reduce the size back down to 100 percent viewing ratio. 3.

To enlarge the ICONS of the application, click on VIEW and then select TOOLBARS. Slide down and highlight CUSTOMIZE with your mouse, then click. 4. A file folder will now "pop-up". Now selection OPTIONS and then click on LARGE ICONS.

This will only enlarge the ICONS on your menu palette. Due to a less flexible platform, you will not be able to effect the fonts/size on the Menu Bar. The Zenith TV is a high quality, low cost alternative to a true SVGA monitor. PAGE 10 206-3492-O Selecting Computer Sources SOURCE MENU ANTENNA/CABLE CAMPORT AUX VIDEO S-VIDEO FRONT COMPUTER SVGA REAR COMPUTER SVGA PRESS ENTER SOURCE FRONT COMPUTER SVGA PRESS: SOURCE TO CHANGE ENTER TO ACTIVATE Selecting Viewing Sources Pressing TV/VCR Source Key on Remote Choosing the computer input on the Source menus PRESS OR <> TO CHANGE KEYS TO ACTIVATE Selecting Viewing Sources Using Onscreen Menus A Source Selection Press TV/VCR SOURCE on the remote repeatedly to cycle through the available sources.



[You're reading an excerpt. Click here to read official ZENITH](#)

[H32E46DT user guide](#)

<http://yourpdfguides.com/dref/341131>

PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK 1 2 3 Source Selection using Source Menu Press MENU on the remote repeatedly until the Source menu appears.

VOLUME CHANNEL VOLUME Use the Up/Down arrow on the remote control, to select the computer source that you want to appear on your screen. Press Enter, or the Left/Right arrow on the remote, to change to the new source, press ENTER again to remove menu and return to TV viewing. CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 2 MENU QUIT 3 1 The front Computer In connector is an Auto Sense input. If you connect a computer to this connector, it will override any other selected source and show the computer display on the screen. If the source you want to select does not appear as an option on the Source menu, it may be set up as a Auto Sense input. Sources that are specified as Auto Sense inputs will not appear on the Source menu. A B PAUSE C CC TV/VCR

SOURCE 3 RECORD TIMER PLAY A REWIND STOP FFWD 206-3492-A PAGE 11 Computer Video Menu Use the Computer Video Menu when using computer sources to customize the picture appearance to your preference COMPUTER VIDEO MENU CONTRAST BRIGHTNESS RED GREEN BLUE
HORZ. POS. VERT. POS.

HORZ. SIZE VERT. SIZE PICT. PREF PRESET Note: For Computer Video Menu, connect and select a computer source. 1 Press the MENU key repeatedly until the Video menu appears. @@The more contrast, the brighter the picture appears. @@ Red/Green/Blue: Adjusts level of color in the picture. VOLUME VOLUME PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL · HORZ Position: Adjusts horizontal position of picture. · VERT Position: Adjusts vertical position of picture. · HORZ Size: Adjusts horizontal size of picture.

· VERT Size: Adjusts vertical size of picture. · Picture Preference: Choose either Custom or Preset. Custom allows you to set the picture the way you want. Preset moves all the above options back to their original, factory-set levels 1 4 7 CHANNEL 2 5 8 ENTER 3 6 9 2/5 1 3/6 2/5 A 0 4 QUIT 2 3 4 5 6 Using the

Up/Down arrow on the remote control, choose Contrast on your screen. @@@@Use the Up/Down arrow to choose Picture Preference onscreen. MENU B PAUSE C CC TV/VCR SOURCE 3/6 RECORD TIMER PLAY REWIND STOP FFWD Choose the Preset option in Picture Preference to quickly reset the video menu settings to their original values. PAGE 12 206-3492-O Computer Setup Notes Use this blank page to write down notes regarding your particular computer setup 206-3492-O PAGE 13 TV Hook-Up Directory To hook up a computer see pages 6 - 13. To hook up other equipment, see below. IMPORTANT!! Use this page to decide where you need to begin your TV set up. First, find the line below that best describes what you want to do, then go to that page number.

Antenna only If you are using an antenna and no other equipment, go to

. page 15 Cable only If you have cable and no other equipment, go to

.
.
.

. page 16 Cable TV wall jack In Out Cable box Antenna with VCR If you are using an antenna and have a VCR, go to

.
.

. page 17 Cable and VCR If you have cable and a VCR, go to

.
.
.
.

page 18 Cable TV wall jack In Out Cable box S-VHS VCR/Amplifier If you want to connect an S-VHS VCR

.
.
.

. page 19 External Audio Amplifier with speakers

.
.
.

. page 20 PAGE 14 206-4543 Hook Up Your Antenna to the TV Connect an off-air antenna to the Presentation TV TV Back Antenna 1 2 3 Locate the Antenna/Cable jack on the back of the Presentation TV. Connect the cable that runs from the wall directly to this jack, according to one of the diagrams at the right. Remove the back of the remote and put in two AAA batteries. Flat wire (300 ohm) 300/75 ohm Adapter COMPUTER IN VIDEO AUX IN R- AUDIO- L

R AUDIO OUT ANTENNA CABLE S-VIDEO OUT S-VIDEO IN R- AUDIO- L M.P.I.

R- AUDIO- L COMPUTER AUDIO Back of Remote L 4 Plug in the TV. This Entertainment Machine is designed to operate on standard current, 120volt 60 Hertz AC. Do not attempt to operate it on DC Current. Antenna TV Back 5 Go to page 21 to Auto Program the Presentation TV. RF Coaxial Wire (75ohm) COMPUTER IN ANTENNA CABLE S-VIDEO OUT S-VIDEO IN R- AUDIO- L M.

P.I. R AUDIO OUT L VIDEO AUX IN R- AUDIO- L If you have a 75 ohm RF cable, then you don't need any adapters! A 300 to 75 ohm adapter is not included with the Zenith Presentation TV. R- AUDIO- L COMPUTER AUDIO Mini glossary 75 OHM RF CABLE The wire that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle, and it screws onto the threaded jack on the back of your TV.

A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end. 300 TO 75 OHM ADAPTER 206-3602 PAGE 15 Hook Up Your Cable (CATV) to the TV Connect cable service to the Presentation TV Cable TV Wall Jack TV Back 1 2 3 Locate the Antenna/Cable jack on the back of the Presentation TV. Connect the cable that runs from the wall, according to one of the diagrams to the right. Remove the back of the remote and put in two AAA batteries. Back of Remote ANTENNA CABLE S-VIDEO OUT S-VIDEO IN R- AUDIO- L Round Wire (75ohm) COMPUTER IN VIDEO AUX IN R- AUDIO- L R AUDIO OUT L COMPUTER AUDIO M.P.I. R- AUDIO- L 4 Plug in the TV. The Presentation TV is designed to operate on standard current, 120-volt 60 Hertz AC.

Do not attempt to operate it on DC Current. Cable TV Wall Jack In Cable Box output switch 3 4 TV Back 5 Go to page 21 to Auto Program the Presentation TV. Out If you're using a cable box, leave the TV on channel 3 or 4 and use your cable box to change channels. If you're using a cable box, Auto Program might only find the channel your cable service is on (usually channel 3 or 4). Don't worry, that's all you need! ANTENNA CABLE S-VIDEO OUT S-VIDEO IN R- AUDIO- L RF Coaxial Wire (75ohm) COMPUTER IN VIDEO AUX IN R- AUDIO- L R AUDIO OUT L COMPUTER AUDIO M.P.I. R- AUDIO- L PAGE 16 206-4543 Hook Up Antenna and VCR to the TV Antenna VCR Back Connect an off-air antenna and VCR to the Presentation TV Flat Wire (300 ohm) 300/75 ohm Adapter VCR Back AV Panel output In switch 3 4 Out Video Audio 1 2 3 TV Back Locate the Antenna/Cable In jack on the back of the VCR. Connect the cable that runs from the antenna directly to this jack, according to one of the diagrams to the right. Remove the back of the remote and put in two AAA batteries.



[You're reading an excerpt. Click here to read official ZENITH H32E46DT user guide](http://yourpdfguides.com/dref/341131)
<http://yourpdfguides.com/dref/341131>

Back of Remote COMPUTER IN VIDEO AUX IN R- AUDIO- L R AUDIO OUT L COMPUTER AUDIO ANTENNA CABLE S-VIDEO OUT S-VIDEO IN R- AUDIO- L A/V cables not included with TV M.P.I. R- AUDIO- L 4 Plug in the TV. The Presentation TV is designed to operate on standard current, 120-volt 60 Hertz AC.

Do not attempt to operate it on DC Current. Antenna VCR Back 5 Go to page 21 to Auto Program the Presentation TV. RF Coaxial Wire (75 ohm) VCR back AV panel output In switch 3 4 Out Video Audio No A/V cables are included with the Zenith Presentation TV. Without A/V cables, most VCRs will not play videocassettes in stereo sound. ANTENNA CABLE TV Back S-VIDEO OUT S-VIDEO IN COMPUTER IN R- AUDIO- L A/V cables not included with TV M.P.I. R AUDIO OUT L VIDEO AUX IN R- AUDIO- L R- AUDIO- L COMPUTER AUDIO 206-3602 PAGE 17 Hook Up Cable Service (CATV) and VCR Cable TV Wall Jack VCR back Connect a VCR and Cable service to the Presentation TV Round wire (75 ohm) VCR back AV panel output In switch 3 4 Out Video Audio TV Back 1 2 Locate the Antenna/Cable In jack on the back of the VCR. Connect the cable that runs from the wall, according to one of the diagrams at the right. Make other connections as shown. Remove the back of the remote and put in two AAA batteries. ANTENNA CABLE S-VIDEO OUT S-VIDEO IN COMPUTER IN R- AUDIO- L A/V cables not included with TV M.P.I. R VIDEO AUX IN R- AUDIO- L 3 AUDIO OUT L COMPUTER AUDIO R- AUDIO- L Back of Remote 4 Plug in the TV.

The Presentation TV is designed to operate on standard current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC Current. Cable TV wall jack In Out Cable box output switch 3 4 RF coaxial wire (75 ohm) VCR back AV panel output In switch 3 4 Out Video Audio VCR back 5 Go to page 21 to Auto Program the Presentation TV. TV back Leave the VCR and the television tuned to channel three and use the cable box to change channels. No A/V cables are included with your Presentation TV. Without A/V cables, most VCRs will not play videocassettes in stereo sound. COMPUTER IN ANTENNA CABLE S-VIDEO OUT S-VIDEO IN R- AUDIO- L A/V cables not included with TV M.P.I. R AUDIO OUT L VIDEO AUX IN R- AUDIO- L R- AUDIO- L COMPUTER AUDIO PAGE 18 206-3602 Hook Up an S-VHS VCR to your TV Your Zenith TV may be connected to a Super-VHS VCR through the S-Video Input located on the connection panel on your TV.

Also, you may "daisy chain" up to five TVs to one Super VHS VCR through the special S-Video LOOP OUT connection. VCR Back 1 2 Hook up your S-VHS VCR to the Zenith TV according to the diagram at the right. Remove the back of the remote and put in two AAA batteries. VCR Back AV Panel output switch 3 4 S-Video Out Audio Out RL Back of Remote TV Back 3 Plug in your TV. The Zenith TV is designed to operate on standard current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC Current. If you wish to "daisy chain" more than one TV to receive the S-VHS signal, you will need to make the following connections with an S-Video cable, inserting one end of the cable into the LOOP OUT port with the other end inserted into a S-Video In port of the second Zenith TV or equivalent input for any other brand of TV. 4 ANTENNA CABLE S-VIDEO OUT S-VIDEO IN COMPUTER IN R- AUDIO- L M.P.I. R AUDIO OUT VIDEO AUX IN R- AUDIO- L R- AUDIO- L COMPUTER AUDIO 4 L S-Video cable not included with TV Connect Audio Out to an external amplifier and speakers. 206-3602 PAGE 19 Audio Out Hookup You can send the sound from the TV to an external amplifier 1 Audio Output: Use the Left and Right Audio Out jacks to connect an external amplifier and speakers. (Refer to the Audio Menu page for instructions on how to turn the TV's internal speakers off and on.) Control the Volume level settings using your external amplifier. TV Back 2 ANTENNA CABLE S-VIDEO OUT S-VIDEO IN COMPUTER IN R- AUDIO- L M.P.I. R AUDIO OUT L VIDEO AUX IN R- AUDIO- L R- AUDIO- L COMPUTER AUDIO Connect Audio Out to an external amplifier and speakers. PAGE 20 206-3492-A Auto Program (Channel Search) Use Auto Program to specify Antenna or cable service incoming signal source and automatically store all of the channels found by the channel search AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS ALARM MENU LANGUAGE TO PROGRAM 1 2 3 4 5 6 7 With the remote control in hand, press the POWER key to turn on the Presentation TV.

PRG POWER 1 Press MENU repeatedly until the Setup menu appears. CABLE VCR AUX TV MUTE Using the Up/Down arrow on the remote control, highlight Auto Program on the screen. Press the Right or Left arrow to go to the Auto Program menu. Using the Up/Down arrow, choose either Cable TV or OffAir Antenna on the screen. Press the Right or Left arrow to begin the Channel Search. Press ENTER when the channel search is done. SURF FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 7 QUIT Note: Auto Program finds channels being received by the TV tuner. Cable will not work unless you subscribe to a cable service. 3/5 2 3/5 MENU A B PAUSE C CC TV/VCR SOURCE 4/6 RECORD TIMER PLAY REWIND STOP FFWD Mini glossary OFF-AIR-ANTENNA CABLE If only over-the-air channels are available, select Antenna. If you subscribe to a cable service, select Cable. 206-3602 PAGE 21 Front Panel Controls/Source Inputs Using the front control panel to access the menus 1 2 3 4 To access the menus, press the MENU button on the control panel. Cycle through the various menus by pushing the button repeatedly. Press the SELECT button repeatedly to highlight the option you want to modify. Press either the Right or left ADJUST button to modify the selected option. The menu will disappear after a few seconds. captions adjust Typical Front Panel Controls select menu volume channel power There are three jacks on the front of the Presentation TV that make connecting Audio/Video devices like camcorders very simple. To use the front jacks as the signal source, simply plug a composite video cable into the VIDEO jack. The TV will automatically change its source setting to CamPort, as indicated on the channel selection screen. 1 3 2 video in L audio R Auto Sense source connections override all other sources. The front Video In jack and the front Computer In connector are Auto Sense source inputs. If you have device(s) connected to either of these jacks, you will not be able to change channels until you have disconnected the device(s). reset Left/Right Audio (Input) Connects the audio output from external stereo audio devices. ComPort Front Computer (Input) Used for 800 x 600 60Hz SVGA type computer hookup. TM ComPortTM and CamPortTM are trademarks of Zenith Electronics Corporation PAGE 22 CamPort Front Video (Input) Connects the video output from external video devices.



[You're reading an excerpt. Click here to read official ZENITH H32E46DT user guide](http://yourpdfguides.com/dref/341131)
<http://yourpdfguides.com/dref/341131>

TM 206-4543 Remote: TV Mode Key Functions To put remote into TV operating mode, press TV POWER Turns TV On or Off. PRG (PROGRAM) Programs remote to operate other products. SURF Access Channel preview and sources menu. FLASHBK (FLASHBACK) Returns to the last channel viewed. CHANNEL (UP/DOWN) Chooses next higher/lower available channel. VOLUME PRG POWER CABLE SURF VCR AUX TV MUTE LED INDICATOR LIGHT Lights when keys are pressed.

CABLE/VCR/AUX/TV (MODE KEYS) Switches remote mode to control other devices. AUX is for optional devices. MUTE Turns sound Off and On while the picture remains. VOLUME LEFT/RIGHT Adjusts the sound levels on your Presentation TV. FLASHBK CHANNEL VOLUME CHANNEL 1 NUMBER KEYPAD Selects channels directly and enters numeric values for some options. LEFT/RIGHT ARROWS The Left/Right arrows adjust menu options. MENU Displays on-screen menus for TV mode. A B C (No functions) See page 52. 2 5 8 ENTER 3 6 9 ENTER Shows the Channel/Time display. Press after channel numbers for instant selection.

UP/DOWN ARROWS The arrows select menu options. QUIT Not functional. CC (CLOSED CAPTIONING) Displays the closed captions/text menu. TV/VCR-SOURCE Switches between watching TV through the available sources. 4 7 0 MENU QUIT A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY TIMER Displays the Sleep Timer Menu.

REWIND STOP FFWD Keys dedicated to VCR functions will still operate your VCR while the remote is in TV mode. remote control part number MBR3447CT 124-233-04 206-3602 PAGE 23 Picture/Sound Source Selection Make connections, use the TV/VCR Source key, or use Channel Up/Down to choose the available picture and sound sources to appear on the TV screen Video In L- Audio - R VIDEO AUX IN R- AUDIO- L 1 Front (Camport) computer in 4 Rear (Aux) TV back S-VIDEO IN R- AUDIO- L 2 Front Computer In 5 S-Video C O M P U T E R I N ANTENNA CABLE S-VIDEO OUT S-VIDEO IN R- AUDIO- L Video Out M.P.I. R AUDIO OUT L VIDEO AUX IN R- AUDIO- L R- AUDIO- L COMPUTER AUDIO R -AUD AUDIO/V IO-L IDEO VIDEO OUT ANTENNA CABLE C O M P U T E R I N R- AUDIO- L COMPUTER AUDIO R -AUD AUDIO/V IO-L IDEO VIDEO OUT 3 Rear (Ch_) 6 Rear Computer SVGA R -AUD AUDIO/V IO-L IDEO VIDEO OUT 1 Make connections to Front Audio/Video In or Front Computer In, to use these Auto Sense sources, disconnect device(s) when finished.

To access other available sources, press TV/VCR SOURCE repeatedly to show selectable sources on the screen. Highlight the source you want to display, then press ENTER to change to the source. Note: The rear Audio/Video In jacks can be selected by keying in 999 on the remote number keypad Auto Sense source connections override all other sources. The front Video In jack and the front Computer In connector are Auto Sense source inputs. If you have device(s) connected to either of these jacks, you will not be able to change channels or sources until you have disconnected the device(s). Priority of Source Selection Typical Auto Sense Sources available if the Auto Sense feature is on. 1st. Front Audio/Video In (CamPort) -No other sources available 2nd. Front Computer In (ComPort) -No other sources available Other Selectable Sources if: 1. Front Audio/Video In, is not connected, then.

2. Front Computer In, is not connected, then. 3rd. Antenna/Cable 4th. Aux Video 5th. S-Video 6th. Rear Computer SVGA Select 3, 4, 5, and 6 using TV/VCR Source, or the Source menu. Note: Auto Sensing can be disabled and source priority selection can be changed in the service menu, see service manual. 2 PAGE 24 206-4543 On-Screen Menus/Displays Overview Descriptions of the menus and on-screen displays Using the MENU key and other keys indicated on the remote, the user can access the menus and displays described below. Menu Name Page Description ON-SCREEN MENUS SETUP MENU Auto Program Add/Del/Blnk Channel Labels Adjusts the basic characteristics of the TV 21 26 27 Automatically finds and stores active channels to scroll through using Channel Up/Down.

Manually picks and chooses which active channels will appear when using Channel Up/Down. Label the channels with their network names (ABC, CBS, HBO, etc.). Create your own custom channel labels. Sets the time.

Sets times for the TV to automatically turn itself on and off each day. Selects Caption/Text options. Sets a time for the TV to automatically turn itself on. Picks the language the on-screen menus will appear in. Customizes the sound.

The options are: Bass, Treble, Balance, Audio Mode, SoundRite, Front Surround, Speakers, Audio Pref. Customizes the picture. The options are: Contrast, Brightness, Color, Tint, Sharpness, Picture Pref. Allows user to block program content or the A/V sources for up to 99 hours, with the use of a password.

Custom Ch Labels 28 Clock Set Timer Captions Alarm Menu Language 29 30 31 32 33 A U D I O M E N U 34 VIDEO MENU PARENTAL CONTROL MENU SOURCE MENU 38 35 36 Selects between available viewing sources; press TV/VCR/SOURCE to activate. OTHER MENUS AND ON-SCREEN DISPLAYS Channel/Time Alarm Sleep Timer Volume Captions/Text Ch Preview 39 39 39 39 39 39 Shows the current time, channel, video and type of incoming audio signal, or mute. TV turn on time status indicator. Sets a preset time that the TV will turn off to a maximum of four hours; press TIMER to activate. Shows current sound level setting; press VOLUME Up/Down to activate. Shows selected Caption/Text option; press CC once to show option, repeatedly to turn option on/off.

Displays the available channels list; press SURF to activate. 206-4543 PAGE 25 Setting Add/Delete/Blank Fine-tune the channel selection list AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS ALARM MENU LANGUAGE CH 44 ADDED 1 2 3 Press MENU on the remote repeatedly until the Setup menu appears. PRG POWER Press the Up/Down arrow repeatedly to highlight the Add/Del/Blnk option. Using either the NUMBER keypad and ENTER or the Channel Up/Down arrows on the remote, select a channel. (If adding a deleted channel, you will need to use the NUMBER keypad and ENTER.) Using the Right or Left arrow, choose whether that channel is Added, Deleted, or Blanked. To continue, select another channel and repeat Step 3. When you are finished, press ENTER to remove menu. @@See page 22 for menu operation instructions.

If you need to key-in numbers, use the remote control. If you delete a channel, it isn't gone for good. Just select it using the NUMBER keypad on the remote, or add it later. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME 3 3 3 6 9 4 5 CHANNEL 1 2 5 8 ENTER 3 2 1 2 4 7 0 5 QUIT MENU A 4 B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD Mini glossary ADD DELETE BLANK Adds new channels to the list that the user can scroll through when using the remote.



You're reading an excerpt. Click here to read official ZENITH H32E46DT user guide
<http://yourpdfguides.com/dref/341131>

Removes channels for one reason or another from the list that the user can scroll through.

Removes the video and audio signal from a channel. PAGE 26 206-3602 Using Preset Channel Labels Customizing channel names with the Preset Channel Labels (Or, see the next page to create your own custom channel labels) AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS ALARM MENU LANGUAGE CH 32 FOX 1 2 3 4 5 Using either the NUMBER keypad or the Channel Up/Down arrows on the remote, select a channel. PRG

POWER Press MENU on the remote repeatedly until the Setup menu appears. Choose the Ch Labels option using the Up/Down arrow.

Pressing either the Right/Left arrow repeatedly, pick the label you want from the available preset selections; such as A & E. To continue channel labeling, select another channel or if you are finished, press ENTER to remove menu. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME

1 1 3 6 9 CHANNEL 1 2 5 8 ENTER 1 Some channels already provide a channel label which is included with the broadcast signal. Labeling the channels helps the identify which familiar nationwide channels are available. i.e., A & E -Arts and Entertainment, CNN News, ESPN - Sports, HBO - Movies and so on... 4 7 0 3 2 5 QUIT MENU A B PAUSE C CC TV/VCR SOURCE 4 RECORD TIMER PLAY REWIND STOP FFWD Mini glossary ---NONE The 4 dashes will allow a channel label to appear; if one is provided by the broadcaster.

Prevents any channel label from appearing. LAB 1, Are the 20 programmable labels. These 20 labels can be customized with 5 characters spaces available for thru each label, see next page. LAB 20, 206-3685 PAGE 27 Creating Custom Channel Labels Customize channel names by using your own custom channel labels To Make Custom Channel Labels 1 2 3 First select a channel using the NUMBER keypad and ENTER or the Channel Up/Down arrows, on the remote control. (To select a deleted channel, use the NUMBER keypad and ENTER.) To program a channel label, press MENU repeatedly to go to the Setup menu, then select CH LABELS. Press the Right Adjust arrow to scroll the available preset labels. Scroll past - - -, scroll past NONE, to go to the first programmable label slot, LAB 1 (Label 1). Notice that the label appears with the title LAB 1, and is also on a dark background; which will distinguish it from the preset labels. AUTO PROGRAM ADD/DEL/BLNK CH.

LABELS CH 30 MYLAB CLOCK SET TIMER CAPTIONS ALARM MENU LANGUAGE PRESS VOL UP/DN TO SELECT CHAR PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK Operating the Custom Labels Menu 4 5 6 Use Volume Up/Down to select the first letter. a. Press MUTE to clear the label if necessary. Use Channel Up/Down to scroll through and change the character to one of the 255 characters available. Repeat Steps 4 and 5 to set characters for the other spaces available on the label.

Press ENTER to remove menu when finished. Menu Operation Notes: Adjust Left/Right Switches to the next label. - - moves to the next or previous label. Volume Up/Down Selects character spaces - - moves to the next or previous character space. MUTE Removes current label, - - if first character space is selected.

Channel Up/Down Scrolls through the available characters. ENTER Accept the channel label and removes the menu. Mini glossary ---NONE CHANNEL VOLUME VOLUME 4/A 1/5 4 1/5 4 CHANNEL 1 4 7 2 5 8 ENTER 3 6 9 3 2 A 0 6 QUIT MENU 3 B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD The 4 dashes will allow a channel label to appear; if one is provided by the broadcaster. Prevents any channel label from appearing. LAB 1, Are the 20 programmable labels. They can be customized for your needs with 5 characters spaces available on each label. thru LAB 20, (A blank letter space is available if required, after the "!" symbol.) PAGE 28 206-3602 Set the Clock Set the clock on the Presentation TV AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS ALARM MENU LANGUAGE 10:32 AM TIMER AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS ALARM MENU LANGUAGE 6:30 AM TIMER 1 2 3 4 With the Setup menu displayed, use the Up/Down arrow to highlight the Clock Set option as shown.

PRG POWER Set the current time; use the NUMBER keypad to key-in the hours, then minutes. For example, press 06, then 30, to set 6:30 on the clock. Use the TIMER key to set AM or PM, as shown on the menu. Press ENTER to start the clock and return to TV viewing. CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 2 5 8 ENTER 3 6 9 2 1 4 7 0 4 QUIT MENU 1 A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY 3 REWIND STOP FFWD Mini glossary TIME HOURS A four-digit figure broken down into hours and minutes, that is used to enter the current time when setting the clock. The first two digits that are entered when setting the clock. MINUTES The last two digits that are entered when setting the clock.

TIMER Used to choose AM or PM when setting the clock. 206-3602 PAGE 29 On / Off Timers Set up On/Off Timers Note: On/Off Timers operate independently of each other. AUTO PROGRAM ADD/DEL/BLNK CH.

LABELS CLOCK SET TIMER CAPTIONS ALARM MENU LANGUAGE TIMER ON TIME OFF TIME TO SET TIMER ON/OFF TIMER 9:00 AM 7:00 PM ON 1 2 3 4 On the optional Installer's remote, press MENU repeatedly until the Setup menu appears. Use the Up/Down arrow to highlight the Timer option, press the Right arrow. Use the Up/Down arrow to choose an option. Use the number keypad and/or the Left/Right ADJ arrows to enter the times. Use the TIMER key to set AM/PM.

Press ENTER to remove menu and return to TV viewing. Your options are: · On Time Sets a time that the TV will turn itself On each day. · Off Time Sets a time that the TV will turn itself Off each day. · On/Off Timer Enables or disables the On/Off Timer functions. (The On/Off Timer can be disabled but the settings will be retained.

) PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 2 5 8 ENTER 3 6 9 3 4 2/3 3 1 A 7 0 MENU QUIT 3 B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY The clock must be set before the Timers will function. The Off Timer can be used to turn the TV off at the preset time. Note: No On Timer setting is required to use the Off Timer feature. REWIND STOP FFWD 2/3 3 Mini glossary TIME HOURS A four-digit figure broken down into hours and minutes, used to enter the time when setting the clock or programming timers. First two digits that are entered when setting the clock or programming timers. MINUTES The last two digits that are entered when setting the clock, or programming timers. TIMER Choose AM or PM with the TIMER button when setting the clock.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341131)

[H32E46DT user guide](http://yourpdfguides.com/dref/341131)

<http://yourpdfguides.com/dref/341131>

PAGE 30 206-3755 Captions (Caption/Text Setup) Set up Closed Caption/Text options for the user CAPTIONS SETUP OPER. MODE SEL. CC TYPE CC CAPTION CC ON MUTE CAPTION LOCK PRESS SELECT TO CHOOSE PRESS ADJ TO CHANGE ON, OFF ON, OFF ON, OFF ON, OFF CAPTIONS SETUP OPER.

MODE SEL. CC TYPE CAPTION LOCK TIMER TO SET CAPTIONS ALARM MENU PRESS SELECT TO CHOOSE PRESS ADJ TO CHANGE ON, OFF STANDARD CAPTION 1 CAPTION 2 CAPTION 3 CAPTION 4 TEXT 1 TEXT 2 TEXT 3 TEXT 4 OFF QUICK/MUTE TIMER TO SET CAPTIONS ALARM MENU CAPTION 1 CAPTION 2 CAPTION 3 CAPTION 4 TEXT 1 TEXT 2 TEXT 3 TEXT 4 Closed Captions/Text Operating Modes Setup CABLE SURF VCR AUX TV MUTE A B B C Use MENU, SELECT (Up/Down), and ADJ Left/Right arrows to choose the Closed Captions/Text mode and to set up the other menu options for the user. Quick/Mute When CC is pressed: User can only turn Captions on/off. (If CC on Mute is on, shows captions option on mute.) (If locked, type is retained with Power on/off.) When CC is pressed: User can choose a captions type. (If locked, type is retained with Power on/off.) FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 2 5 8 ENTER 3 6 9 Standard 7 0 C QUIT Press ENTER repeatedly until all menus are removed from screen. Standard closed captioning is available using the Caption 1 option. A MENU A B C CC TV/VCR SOURCE B Caption/Text are features which allow the TV to receive the closed caption and/or text options if made available by the broadcaster.

Availability and functionality of Caption/Text options are determined only by each broadcaster and may not be available in your area. RECORD PAUSE TIMER PLAY REWIND STOP FFWD Mini glossary CAPTIONS TEXT The term for the words that scroll across the bottom of your TV screen; usually the audio portion of the program provided for the hearing impaired. The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster. 206-3755 PAGE 31 Setting the Wake Up Alarm Use the Alarm menu to set a time for the TV to automatically turn itself on AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS ALARM MENU LANGUAGE 7:30 TO SET ALARM 1 2 3 4 With the Alarm Menu option highlighted in the Setup menu, press the Left/Right arrow to go to the menu.

Using the NUMBER keypad, set the time you want the TV to turn on. For example, to set 7:30 AM, press 0, 7, 3, 0. Use TIMER to choose AM or PM, as shown on the menu. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL Press ENTER to remove menu from screen. VOLUME VOLUME CHANNEL The alarm will only work if the TV is turned off.

Be sure the TV's internal clock is set to the current time, so that the wake up alarm will work properly. 1 2 5 8 ENTER 3 6 9 2 4 7 0 4 QUIT MENU A 1 B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY 3 REWIND FFWD STOP PAGE 32 206-3602 Language Choose the language for the on-screen menus AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS ALARM MENU LANGUAGE ENGLISH 1 2 3 4 Press MENU on the remote repeatedly until the Setup menu appears. Use the Up/Down arrow on the remote control to highlight Language on your screen. Use the Left/Right arrow to choose one of the following options: English, Spanish or French. Press ENTER to return to TV viewing. VOLUME PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME CHANNEL @@See page 22 for menu operation instructions. If you need to key-in numbers, use the remote control. 1 4 7 0 2 5 8 ENTER 3 6 9 2 MENU QUIT 4 3 1 2 A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD 206-3602 PAGE 33 Audio Menu Customize the sound coming from the TV 1 2 Press MENU repeatedly on the remote control until the Audio menu appears. Using the Up/Down arrow on the remote control, highlight the audio option you want to change.

Choose from: BASS TREBLE BALANCE AUDIO MODE SOUNDRITE FRONT SURR SPEAKERS AUDIO PREF STEREO ON ON ON CUSTOM PRG POWER · Bass: Increases/decreases lower-end sounds. CABLE VCR AUX TV MUTE · Treble: Increases/decreases higher-end sounds. SURF FLASHBK · Balance: Allows you to put the sound more to the left or right channel. @@ · SoundRite: Turns the uniform volume feature on or off. · Speakers: Turns the TV speakers on or off. · Front Surround: Turns front surround on or off. @@@@ @See page 22 for menu operation instructions. @@Mono (monaural) sound is one channel of sound. On more than one speaker, all the speakers play the same audio. Your own audio menu settings. @@@@The more contrast, the brighter the picture appears. @@ · Color: Adjusts levels of all colors in the TV picture. @@ · Sharpness: Raise or lower the definition of the picture. The lower the level, the softer the image will appear.

· Picture Preference: Choose either Custom or Preset. Custom allows you to set the picture the way you want. @@@@ @Use the Up/Down arrow to choose Picture Preference onscreen. @@@@ @See page 22 for menu operation instructions. @@Note: Parental Control is not available in Computer Mode. @@@@ @The number of hours blocked are specified. @@@@ @See the Parental Control menu, and submenus example on the next page. Things to Consider before Setting Up Parental Control Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as a VCR, connected to the TV Audio/Video input jacks; in the Aux. Block option.) Or leave unblocked, then choose allowable ratings. Block program "Content" based on individual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence Scenes, or Fantasy Violence Scenes; in the Content Blk option. How many hours do you want Parental Control to be active? You can set the Hours option for up to 99 hours. Select a secret password; in the Set Password option.

Use the number keys on the remote. Don't forget the password, it is the only way you can access the Parental Control menu and change rating selections, or turn Parental Control off. Do you want Parental Control to be active all the time? If not, you can turn it on or off; with the Lock On/Off option. You can set different Parental Control viewing restrictions for general audiences and for children -- both can be active at the same time. Simply specifying one content block such as Sex Scenes, will not automatically block another content in the programs from appearing. Mini glossary You cannot disable Parental Control by disconnecting the TV from power.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341131)

[H32E46DT user guide](http://yourpdfguides.com/dref/341131)

<http://yourpdfguides.com/dref/341131>

Block hours remaining will be retained if power is lost or power cord is disconnected. The AUX input source can also be blocked. MOTION PICTURE ASSOCIATION OF AMERICA (MPAA) RATING SYSTEM G PG PG-13 R NC-17 X General Audiences Parental Guidance Suggested Parental Guidance Suggested Restricted viewing Restricted Viewing Hard Core Films Content not offensive to most viewers. Content is such that parents may not want their children to view the program.

Program is inappropriate for preteens, with a greater degree of offensive material than a PG rated program. Not for children under age 17. Strong elements of sex and/or violence. Not for children under age 17 under any circumstances. Strong sexual content.

Same as NC-17 rating. Note: Zenith Electronics Corporation is not liable for any program content that appears when using this rating system; as always, user discretion is advised. PAGE 36 206-3492-O Parental Control Menu After you have read the preceding page, follow instructions below to set up and activate Parental Control AGE BLOCK GENERAL CHILDREN UNBLOCKED PRESS CC TO RETURN RATING TO BLOCK TO BLOCK CONTENT BLOCK DIALOG LANGUAGE SEX SCENES VIOLENCE F VIOLENCE NO RATING TV-14 PRESS CC TO RETURN 1 2 3 Press MENU repeatedly to go to the Parental Control menu. As shown above, with the Parental Control menu on-screen, use the Up/Down arrow to highlight an option like Content Block, then press the Right arrow. Use the Up/Down/Left/Right arrows to select and adjust or set the rating for an option.

For Sex Scenes for example, use the "From TV-PG" setting. (See the Mini Glossary, Ratings Charts on this and the previous page for rating definitions.) After you have selected and adjusted the parental control menu options to your preferences: - Set the hours you want Parental Control active. - Set a 4-number password. - Set the Lock On/Off option to either On or Off. No Rating means the broadcast does not include rating information. You can choose to block broadcasts without rating data. PRG POWER CABLE SURF VCR AUX TV MUTE FLASHBK CHANNEL VOLUME VOLUME CHANNEL 4 1 4 2 5 8 ENTER 3 6 9 3 1 2/3 7 0 MENU QUIT A B PAUSE C CC TV/VCR SOURCE RECORD TIMER Mini glossary TV PARENTAL GUIDELINE RATING SYSTEM TV-G TV-PG TV-14 TV-MA General Audience Parental Guidance Suggested Parents Strongly Cautioned Mature Audience Only Considered suitable for all audiences; children may watch unattended. Unsuitable for younger children, may contain: Suggestive Dialog, Bad Language, Sex, and Violence Scenes. Unsuitable for children under 14, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes.

Adults only, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes. CHILDREN'S CLASSIFICATIONS TV-Y TV-Y7 Children Children 7 and over Considered suitable for all children under 7 years old. Considered suitable for children over 7, may contain Fantasy Violence Scenes. 206-4543 PAGE 37 Source Menu SOURCE MENU ANTENNA/CABLE CAMPORT AUX VIDEO S-VIDEO FRONT COMPUTER SVGA REAR COMPUTER SVGA PRESS ENTER SOURCE ANTENNA/CABLE PRESS: SOURCE TO CHANGE ENTER TO ACTIVATE Selecting Viewing Sources Pressing TV/VCR Source Key on Remote Choose the source of the picture and sound PRESS OR <> TO CHANGE KEYS TO ACTIVATE Selecting Viewing Sources Using Onscreen Menus A Source Selection Press TV/VCR SOURCE on the remote repeatedly to cycle through the available sources. Note: See page 24 for source connection priorities. Source Selection using Source Menu Press MENU on the remote repeatedly until the Source menu appears. Use the Up/Down arrow on the remote control, to select a new source for the picture and sound that you want to appear on your screen. Press ENTER on the remote, to change to the new source, press ENTER again to remove menu and return to TV viewing. PRG POWER CABLE VCR AUX TV MUTE 1 2 3 SURF FLASHBK CHANNEL VOLUME VOLUME CHANNEL 1 4 7 0 2 5 8 ENTER 3 6 9 @@See page 22 for menu operation instructions. If you need to key-in numbers, use the remote control.

If the source you want to select does not appear as an option on the Source menu, it may be set up as a Auto Sense input. Sources that are specified as Auto Sense inputs will not appear on the Source menu. 2 MENU QUIT 3 2 A 1 A B PAUSE C CC TV/VCR SOURCE RECORD TIMER PLAY REWIND STOP FFWD PAGE 38 206-4543 Other Menus & On-Screen Displays Press the remote keys indicated below to access these menus and displays SOURCE ANTENNA/CABLE PRESS: SOURCE TO CHANGE ENTER TO ACTIVATE Source Menu Press TV/VCR SOURCE. Gives access to available picture and sound sources. Alarm Menu In the Setup Menu, select the ALARM MENU option.

Sets a time that the TV will automatically turn itself on. Sleep Timer Menu Press TIMER. Shows remaining time before TV shutoff. Press TIMER repeatedly to set a preset turn-off time from 10 minutes to 4 hours. 21 CH 9 3:12 PM STEREO 5 9 20 32 44 AUX CH CC CHANNEL PREVIEW -----TO SELECT, ENTER TO QUIT FOR PARENTAL CONTROL Ghost Channel Display Channel number appears on the right side of the picture and slowly scrolls downward.

To disable Ghost Channel, see Installation guide. Channel/Time/Audio Display Press ENTER. Shows currently selected channel or source, current time if the clock has been set, and incoming audio signal. Ch Preview Menu Press SURF. Displays list of the available TV Channels, sources, and provides Parental Control menu access. VOLUME·CC CAPTIONS 1 IS ON Volume Display Press VOLUME. Shows currently selected sound setting. 206-3492-O Closed Captions Menu Press CC. Depending on Captions setup, turns selected Caption/Text option on and off. PAGE 39 Installer Menus Use the Installer Menus to change operational settings Accessing the Installer's Menu Installer's menus can be accessed by using the installer's remote control.

Just press and hold MENU (about 8 seconds) until the display changes, then press 9, 8, 7, 6, then ENTER. To exit the Installer's Menu, press ENTER again. Any changes you make will be stored in nonvolatile memory. The Installer's Menu opens with item 04, VERT POS. Press the SELECT key to sequence through the various items. Or, access an item directly by entering the line number, then pressing MENU. For example, to access the Start Channel option which is on line 11, press 11, then MENU. To change a setting use the Left/Right ADJ keys. 1391-P07 01.47 02 4 VERT POS 13 XX/XX/XX TE = 10110000 Installer should leave item 00 FACT MENU set to 0 (default).

Items 31-219 are service-type adjustments and only qualified technicians having specialized test equipment should access them. Using the Installer's Menu Items 00-30 are immediately accessible only upon entering the Installer's Menu.



[You're reading an excerpt. Click here to read official ZENITH](#)

[H32E46DT user guide](#)

<http://yourpdfguides.com/dref/341131>