



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH H32F36DT. You'll find the answers to all your questions on the ZENITH H32F36DT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH H32F36DT
User guide ZENITH H32F36DT
Operating instructions ZENITH H32F36DT
Instructions for use ZENITH H32F36DT
Instruction manual ZENITH H32F36DT

Installation / Operating Guide | Warranty

**Model Numbers | H25F36DT | H27F36DT | H27F36S | H32F36DT |
Concierge TVs**



© Copyright 2003, Zenith Electronics Corporation



[You're reading an excerpt. Click here to read official ZENITH H32F36DT user guide](http://yourpdfguides.com/dref/341133)
<http://yourpdfguides.com/dref/341133>

Manual abstract:

REFER TO QUALIFIED SERVICE PERSONNEL. @@@@POWER CORD POLARIZATION: CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND. NOTE TO CABLE/TV INSTALLER:

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for help. CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. COMPLIANCE: The responsible party for this product's compliance is: Zenith Electronics Corporation, 2000 Millbrook Drive, Lincolnshire, IL 60069, USA. Phone: 1-847-941-8000.

2-WIRE COMM-WARN Concierge™ is a trademark of Zenith Electronics Corporation © Copyright 2003 Zenith Electronics Corporation IMPORTANT SAFETY INSTRUCTIONS Important safeguards for you and your new product This product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into the new product, please read and observe the following safety points when installing and using the new product, and save them for future reference. Observing the simple precautions discussed in this operating guide can help the user get many years of enjoyment and safe operation that are built into the new product. This product complies with all applicable U.S. Federal safety requirements, and those of the Canadian Standards Association. 1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9.

Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 2. Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4.

Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6.

Water and Moisture Do not use this product near water for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool. 12. Power Cord Polarization This product is equipped with a polarized alternating-current power plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 7.

Accessories, Carts, and Stands Do not place this product on a slippery or tilted surface, or on an unstable cart, stand, tripod, bracket, or table.

The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 13. Power Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8. Transporting Product A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) 206-3489-O PORTABLE CART WARNING PAGE 3 IMPORTANT SAFETY INSTRUCTIONS (Continued from previous page) 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges.

Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. Example of Grounding According to National Electrical Code Instructions short-out parts that could result in a fire or electric shock.



[You're reading an excerpt. Click here to read official ZENITH H32F36DT user guide](http://yourpdfguides.com/dref/341133)
<http://yourpdfguides.com/dref/341133>

Never spill liquid of any kind on the product. 19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20.

Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c. If the product has been exposed to rain or water. d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. e.

If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance. Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 15. Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. 21. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 16.

Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 22. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition. 23.

Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. 24.

Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 18. Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or PAGE 4 206-3489-O Table of Contents Use the steps outlined below as a setup guide and to determine the TV features that will require adjustment for the needs of the user Safety Warnings

.
.
. 2 Important Safety Instructions .
.

. 3 - 4 Table of Contents
.
.

. 5 Clock Set
. 6 Timer (On/Off Timers) . Captions (Caption/Text) Language

. 19 20 21 22 Step 1. Hook Up TV to Signal Source(s) etc. TV and other Equipment Hookups Antenna .
.
.

. 6 Cable service .
.
.

. 7 Antenna with VCR
.
.

8 Cable service with VCR

.
.

. 9 S-Video device

.
.

. 10 External Speaker

.
.

11 Audio Menu

.
.

. 23 Bass, Treble, Balance, Audio Mode, Front Surround Up Cable (CATV) to the TV Connect cable service to the TV Cable TV Wall Jack TV Back 1 2
3 Locate the Antenna/Cable jack on the back of the TV. Connect the wire that runs from the wall directly to this jack, according to one of the diagrams to the right.

Remove the back of the remote and put in two AA batteries. Antenna Cable Matrix Out Round Wire (75ohm) Video In M.P.I. R- Audio - L In S-Video In R- Audio - L In Back of Remote Cable TV Wall Jack 4 Plug in the TV.

The TV is designed to operate on normal current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC power. 120 V AC 60 Hz In Cable Box output switch 3 4 TV Back 5 Go to page 12 to Auto Program the TV. Out If you're using a cable box, leave the TV on channel 3 or 4 and use your cable box to change channels. If you're using a cable box, Auto Program might only find the channel your cable service is on (usually channel 3 or 4).

Don't worry, that's all you need! RF Coaxial Wire (75ohm) Antenna Cable Matrix Out Video In M.P.I. R- Audio - L In S-Video In R- Audio - L In 206-3854 PAGE 7 Hook Up Antenna and VCR to the TV Antenna VCR Back Connect an off-air antenna and VCR to the TV Flat Wire (300 ohm) VCR Back AV Panel output In switch 3 4 Out Video Audio TV Back 1 2 300/75 ohm Adapter Locate the Antenna/Cable In jack on the back of the VCR. Connect the wire that runs from the antenna, according to one of the diagrams to the right. As required, make the other connections as shown to the right. Remove the back of the remote, put in two AA batteries. Antenna Cable Matrix Out Video In M.P.I.

R- Audio - L In A/V cables not included with TV 3 S-Video In R- Audio - L In Back of Remote 4 Plug in the TV. The TV is designed to operate on standard current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC power. Antenna VCR Back 120 V AC 60 Hz VCR Back AV Panel output In switch 3 4 5 Go to page 12 to Auto Program the TV. TV Back RF Coaxial Wire (75 ohm) Out Video Audio No A/V cables are included with the Zenith TV. Without A/V cables, most VCRs will not play videocassettes in stereo sound. Antenna Cable Matrix Out Video In M.P.I. R- Audio - L In A/V cables not included with TV S-Video In R- Audio - L In PAGE 8 206-3854 Hook Up Cable Service (CATV) and VCR Cable TV Wall Jack Connect a VCR and Cable service to the TV VCR Back VCR Back AV Panel output In switch 3 4 RF Coaxial Wire (75 ohm) Out Video Audio 1 2 Locate the Antenna/Cable In jack on the back of the VCR. TV Back Connect the wire that runs from the wall, according to one of the diagrams to the right. As required, make the other connections as shown to the right. Antenna Cable Matrix Out 3 Remove the back of the remote, put in two AA batteries.



[You're reading an excerpt. Click here to read official ZENITH H32F36DT user guide](http://yourpdfguides.com/dref/341133)
<http://yourpdfguides.com/dref/341133>

M.P.

I. Video In R- Audio - L In A/V cables not included with TV S-Video In R- Audio - L In Back of Remote 4 Plug in the TV. The TV is designed to operate on standard current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC power. In Out 120 V AC 60 Hz Cable Box output switch 3 4 VCR Back 5 Go to page 12 to Auto Program the TV.

RF Coaxial Wire (75 ohm) VCR Back AV Panel output In switch 3 4 Out Video Audio Leave the VCR and the television tuned to channel three and use the cable box to change channels. No A/V cables are included with your TV. Without A/V cables, most VCRs will not play videocassettes in stereo sound. Antenna Cable TV Back Matrix Out Video In M.P.I. R- Audio - L In A/V cables not included with TV S-Video In R- Audio - L In 206-3854 PAGE 9 S-Video Hook Up Connect an external S-Video device to the TV S-Video Device 1 2 Locate the S-Video out jack on the back of the VCR or other S-Video device. Connect the S-Video cable from the device to the TV S-Video In jack, according to the diagram to the right. As required, make the other audio connections as shown to the right. Remove the back of the remote, put in two AA batteries.

Audio Out S-Video Out RL S-Video Device Connections Panel S-Video cable not included with TV 3 TV Back Back of Remote Antenna Cable Matrix Out 4 Plug in the TV. The TV is designed to operate on standard current, 120-volt 60 Hertz AC. Do not attempt to operate it on DC power. Video In M.P.I. R- Audio - L In S-Video In R- Audio - L In 120 V AC 60 Hz 5 Go to page 12 to Auto Program the TV. No S-Video cable or audio cables are provided with the TV. Since S-Video is for Video only, you must connect audio cables or there will be no sound for the S-Video source. PAGE 10 206-3854 External Speaker Hook Up Connect an external speaker to the TV Speaker Back 1 2 Locate the Audio In jack on the back of the speaker.

Connect a standard audio cable from the Matrix Out jack on the TV, to the Audio In jack on the external speaker. Audio In TV Back Antenna Cable Matrix Out Video In M.P.I. R- Audio - L In S-Video In R- Audio - L In A/V cables not included with TV 206-3854 PAGE 11 Auto Program (Channel Search) SETUP MENU Use Auto Program to specify Antenna or cable service incoming signal source and automatically store all of the channels that are found by channel search AUTO PROGRAM ADD/DEL/BLNK CH.

LABELS CLOCK SET TIMER CAPTIONS LANGUAGE TO PROGRAM 1 2 3 4 5 6 7 With the optional Installer remote control in hand, press the POWER key to turn on the TV. POWER Press MENU repeatedly until the Setup menu appears. Using SELECT on the remote control, highlight Auto Program on the screen. Press the Right or Left ADJ (Adjust) arrow to go to the Auto Program menu. Using SELECT, choose either Cable TV or Off-Air Antenna on your screen.

(The flashing option is selected.) Press the Right or Left ADJ arrow to begin the Channel Search. Press ENTER when finished. 1 CC FLSH TV/FM BK MUTE VO LUM E CHAN NEL 1 4 7 0 2 5 8 3 6 9 ENTER TIMER MENU ALARM 7 2 3/5 ADJ SELECT CH PREVIEW Auto Program finds channels being received by the TV tuner. ADJ 4/6 Cable will not work unless a cable service is present. Mini glossary OFF-AIR-ANTENNA CABLE If the guest can only view over-the-air broadcasts, select Antenna. If you provide cable service to your guests, select Cable. PAGE 12 206-3751 Front Panel Controls Use the front control panel to access the menus or just operate the TV Note: Item 10 Key Defeat, in the installer's menu allows the installer to: Set Menu Option 10, Key defeat to "0" - Front panel controls give access to menus. Set Menu Option 10, Key defeat to "1" - Menus not available with front panel controls. A 1 2 3 D Press POWER to turn the TV on.

To access the menus, press the MENU button on the control panel. Cycle through the various menus by pressing MENU repeatedly. Use the SELECT button to highlight the option you want to modify. Use either the Right or Left ADJUST button to modify the option you have chosen. Press CAPTIONS to turn captions on and off. The menu will disappear after a few seconds. A B C D E F TV Operation Power turns the TV on and off. Channel Up/Down tunes to next channel. Volume Up/Down adjusts sound level. Captions turns selected Caption/Text option on and off.

captions Typical Front Panel Controls volume channel power D C B A Campport: Front Audio/Video Inputs Video Input L-Audio-R Inputs Used for stereo sound from various types of equipment. You can use Channel to tune to available channels and Volume to set the sound level, regardless of the key defeat setting. adjust select menu video in L audio R 1 3 206-3751 F E 2 PAGE 13 Guest Remote Key Functions A quick list of the keys on the guest remote and what they do CC (CLOSED CAPTIONING) Direct access to closed captions. Press ENTER to exit. POWER Turns TV On or Off.

FLASHBK (FLASHBACK) Returns to the last channel viewed. MUTE Turns sound Off and On, while the picture remains. POWER FLSH BK MUTE CC VO LUM E CHAN NEL VOLUME (LEFT/RIGHT) Adjusts the sound level. 1 4 2 5 8 3 6 9 ENTER CHANNEL (UP/DOWN) Scrolls through available channels, and the Video Channel (Audio/Video source). NUMBER KEYPAD Used to key-in numbers and select channels directly: key-in channel numbers and press ENTER to go to new channel.

ENTER Press to view the Channel/Time/Audio display or to remove any on-screen display or menu. 7 0 TIMER ALARM TIMER Press repeatedly to set the TV turn-off time from 10 minutes up to 4-hours. Sets AM or PM in Clock/Alarm menus. CH PREVIEW ALARM Press to go to the Alarm menu. Set a time for the TV to turn itself on. CHANNEL PREVIEW Displays the available TV channels, including access to guest's Parental Control menu (if Active). Allows guest to select the Video source. (Use the Audio/Video jacks on the back of the TV as the source of the picture and sound.) remote control part number SC652Z 124-213-18 6710V00108A NOTE: The channel and volume keys can be used by the guest to select and adjust the Parental Control settings, if the installer activates the Parental Control (V-CHIP) option in the Installer menu. PAGE 14 206-3854 Installer Remote Key Functions A quick list of the keys on the optional LP702 installer's remote and what they do CC (CLOSED CAPTIONING) Direct access to closed captions.

Press ENTER to exit. POWER Turns TV On or Off. FLASHBK (FLASHBACK) Returns to the last channel viewed. MUTE Turns sound Off and On, while the picture remains. POWER FLSH CC BK MUTE TV/FM Selects TV or Radio mode on TVs equipped with FM radio. VOLUME (LEFT/RIGHT) Adjusts the sound level. TV/FM VO LUM E CHAN NEL CHANNEL (UP/DOWN) Chooses next available channel.



[You're reading an excerpt. Click here to read official ZENITH H32F36DT user guide](http://yourpdfguides.com/dref/341133)
<http://yourpdfguides.com/dref/341133>

NUMBER KEYPAD Used to key-in numbers and select channels directly: key-in channel numbers and press ENTER to go to new channel. ALARM Press to go to the Alarm menu. Set a time for the TV to turn itself on.

CHANNEL PREVIEW Gives installer access to the guest's menus. Displays the available TV channels and hotel guest's Parental Control menu (if active). Selects the Video source. (Use the Audio/Video jacks on the back of the TV as the source of the picture and sound.) 1 4 7 0 2 5 8 3 6 9 ENTER ENTER Press to view the Channel/Time display or to remove any on-screen display or menu.

TIMER MENU ALARM TIMER Press repeatedly to adjust TV turn-off time from 10 minutes up to 4-hours. Sets AM or PM in Clock/Alarm menus. **MENU/SELECT/ADJ (ADJUST)** Adjusts on-screen menus and options. Press MENU repeatedly to scroll through menus. Use SELECT to choose an option and ADJ (adjust) Left/Right to change the selected option.

SELECT CH PREVIEW ADJ ADJ remote control part number LP702 124-213-04 206-3751 PAGE 15 On-Screen Menus Overview Descriptions of the menus and on-screen displays available to the installer Menu Name Page Description ON-SCREEN MENUS SETUP MENU Auto Program Add/Del/Blnk Channel Labels Clock Set Timer Caption/Text Language Adjusts the basic operational features of the TV 12 17 18 19 20 21 22 Automatically finds and stores active channels to scroll through using Channel Up/Down. Manually picks and chooses which active channels will appear when using Channel Up/Down Labels the channels with their network names (ABC, CBS, HBO, etc.). Sets the time. Sets times for the TV to turn itself on and off each day. Chooses a captioning or text option. Picks the language the on-screen menus will appear in. Customizes the sound. Options are: Bass, Treble, Balance, Audio Mode, Front Surround, SoundRite, Speakers. Adjusts the picture appearance.

The options are: Contrast, Brightness, Color, Tint, Sharpness, Picture Pref. Allows installer/user to block program content for up to 12 hours, with the use of a password. A U D I O M E N U 23 VIDEO MENU PARENTAL CONTROL MENU 27 Channel/Time Alarm Sleep Timer Volume Captions Ch Preview Channel Bank 24 25/41 OTHER MENUS AND ON-SCREEN DISPLAYS Shows the current time, channel, (or video source), type of incoming audio signal, and XDS* info if provided. Sets a time the TV will turn itself on. Sets a time the TV will turn off. Shows current sound level. Used to select Caption/Text options. Displays the available channels and menus list. Shows currently selected channel bank. INSTALLER MENUS Installer Menus 31 Makes adjustments to the TV's operational features.

*XDS (Extended Data Service) Additional program information provided at the discretion of the broadcaster. May include: title of broadcast, elapsed time, and time remaining on program. PAGE 16 206-3751 Setting Add/Delete/Blank SETUP MENU Fine-tune the guest's channel selection list AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CH 44 ADDED 1 2 3 Press the MENU key on the Installer's remote so the Setup menu appears. POWER Press SELECT repeatedly to highlight the Add/Del/Blnk option.

TV FLSH CC BK MUTE /FM Using either the NUMBER keypad and ENTER or the Channel Up/Down arrow on the remote, select a channel. (If adding a deleted channel, you will need to use the NUMBER keypad and ENTER.) Using the Right/Left ADJ arrow, specify whether that channel is Added, Deleted, or Blank. To continue, select another channel and repeat Step 4. When you are finished, press ENTER to remove menu.

VO LUM E CHAN NEL 3 1 2 5 8 3 6 9 ENTER 4 5 3 4 7 0 Adding Aux, VCR 3, VCR 4, to the Channel Preview List Go to the Setup menu, select the Add/Del/Blnk option. Use Channel Up/Down to select the option and choose Added. Note: If the option was turned off in the Service menu, you will have to reinstate it before it can appear as an option in the Channel Preview list. Note: You can specify Add, Delete or Blank for VCR3, VCR4, and Aux. Caution: If you delete CH3, VCR3 is also deleted, if you delete CH4, VCR4 is also deleted and vice versa. If you delete a channel, it isn't gone for good. Just select it using the NUMBER keypad on the remote, or add it later. Mini glossary ADD DELETE BLANK Adds new channels to the list that the guest can scroll through when using the remote. Removes channels for one reason or another from the list that the guest can scroll through. Removes the video signal from a channel so the guest will only receive the audio signal.

TIMER MENU ALARM 3/5 1 2 ADJ SELECT CH PREVIEW ADJ 4 206-3751 PAGE 17 Setting Up Channel Labels SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CH 32 ABC Overview Channel Labels help the user identify the channel or network being viewed. In the Setup menu with the CH LABELS option highlighted, use the Adjust Left/Right arrow to scroll through the available channel labels, such as, A&E, AMC, ESPN, HBO, etc. These are a series of alphabetically organized preset labels from which you can choose the more common networks. Use any of these or create custom labels. - - - -, The 4 dashes will allow a channel label to appear; if one is provided by XDS. (Extended data service) NONE, prevents any channel label from appearing. LAB 1, thru LAB 20, are the 20 programmable labels. The 20 programmable labels can be customized for your needs. Each programmable label has 5 characters spaces available.

POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL To Program a Channel Label First select a channel using the NUMBER keypad and ENTER or the Channel Up/Down arrow, on the optional Installer's remote control. (To select a deleted channel, use the NUMBER keypad and ENTER.) To program a channel label, go to the Setup menu and select CH LABELS. Use the Right/Left ADJ adjust arrow to scroll the available preset labels. Scroll past - - - -, scroll past NONE, to go to the first programmable label slot, LAB 1.

Notice that the label appears with the title LAB 1. 1 4 7 0 2 5 8 3 6 9 ENTER TIMER MENU ALARM SELECT CH PREVIEW Creating a Custom Channel Label Use Volume Up/Down to select the first letter. Use Channel Up/Down to change the character to one of the 255 characters available. (A blank letter space is available if required, after the "!" symbol.) In Channel Labels Mode, use the following keys to: Adjust Left/Right Move to the next label. - - move to the next or previous label. Volume Up/Down Select character spaces - - move to the next or previous character space. Channel Up/Down Scroll through the available characters. ENTER Accept the custom channel label and remove the menu. MUTE Remove any custom label, insert 'NONE'; - - if any custom label character space is selected. ADJ ADJ PAGE 18 206-3751 Set the Clock SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341133)

[H32F36DT user guide](http://yourpdfguides.com/dref/341133)

<http://yourpdfguides.com/dref/341133>

LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CLOCK MENU TO SET CLOCK CLOCK SET TIME ZONE DAY. SAVING AUTO USE SELECT TO CHOOSE USE ADJ TO CHANGE AUTO OFF ON AUTO EASTERN CENTRAL MOUNTAIN PACIFIC SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CLOCK MENU CLOCK SET TIME SET TO SET CLOCK 10:43 AM MANUAL TIMER USE SELECT TO CHOOSE USE ADJ TO CHANGE Clock Auto/Manual Operating Modes Setup Use MENU, SELECT, and ADJ Left/Right to choose the Clock menu and to set up the clock menu options, with the optional Installer's remote. Clock Mode Auto: TV automatically sets the time.

Time Zone: User can choose the time zone or have the TV set it automatically. Day. Savings: User can choose to have daylight savings adjust the clock time one hour, or have the TV adjust it automatically. Manual: User sets the time on the clock. Press ENTER repeatedly to remove menus. The clock can also be set using 24 hour "military time." For p.m. settings add 1200. For example, to set 6:30 p.m., add 1200 to 630, = enter 1830. For Auto Clock Set to work, TV must be tuned to a channel that has XDS data available. Auto Clock Set, sets the time only once while the TV is on. To set the clock with XDS data, turn TV off, then back on again, or set the clock time manually.

Mini glossary TIME HOURS A four-digit figure broken down into hours and minutes, used to enter the current time when setting the clock or wake-up alarm. First two digits that are entered when setting the clock or the wake-up alarm. 1 2 5 8 3 6 9 ENTER 3 1 4 2 4 7 0 5 TIMER MENU ALARM SELECT CH PREVIEW ADJ ADJ MINUTES The last two digits that are entered when setting the clock, or the wake-up alarm. TIMER Chooses AM or PM when setting the clock. 206-3751 PAGE 19 Timer SETUP MENU TIMER ON TIME OFF TIME 9:00 AM 7:00 PM ON Set up On/Off Timers Note: On/Off Timers operate independently of each other.

AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE TO SET TIMER ON/OFF TIMER 1 2 3 4 On the optional Installer's remote, press MENU repeatedly until the Setup menu appears. Press SELECT repeatedly to highlight the Timer option, press the Right arrow. Use SELECT to choose an option. Use the number keypad and/or the Left/Right ADJ arrows to enter the times. Use the TIMER key to set AM/PM. Press ENTER to remove menu and return to TV viewing. POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 1 4 7 2 5 8 3 6 9 ENTER Your options are: · On Time Sets a time that the TV will turn itself On each day. · Off Time Sets a time that the TV will turn itself Off each day. · On/Off Timer Enables or disables the On/Off Timer functions.

(The On/Off Timer can be disabled but the settings will be retained.) 0 1 TIMER MENU ALARM SELECT CH PREVIEW 4 2 ADJ ADJ The clock must be set before the Timers will function. The Off Timer can be used to turn the TV off at the preset time. Note: No On Timer setting is required to use the Off Timer feature. 3 Mini glossary TIME HOURS A four-digit figure broken down into hours and minutes, used to enter the time when setting the clock or programming timers. First two digits that are entered when setting the clock or programming timers. MINUTES The last two digits that are entered when setting the clock, or programming timers. TIMER Choose AM or PM with the TIMER button when setting the clock. PAGE 20 206-3584 Captions (Caption/Text) Set up Closed Caption/Text options for the user SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CAPTIONS SETUP OPER.

MODE SEL. CC TYPE CC CAPTION CC ON MUTE CAPTION LOCK PRESS SELECT TO CHOOSE PRESS ADJ TO CHANGE ON, OFF ON, OFF ON, OFF QUICK/MUTE TO SET CAPTIONS CAPTION 1 CAPTION 2 CAPTION 3 CAPTION 4 TEXT 1 TEXT 2 TEXT 3 TEXT 4 SETUP MENU AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE CAPTIONS SETUP OPER. MODE SEL. CC TYPE CAPTION LOCK STANDARD CAPTION 1 CAPTION 2 CAPTION 3 CAPTION 4 TEXT 1 TEXT 2 TEXT 3 TEXT 4 OFF TO SET CAPTIONS PRESS SELECT TO CHOOSE PRESS ADJ TO CHANGE ON, OFF Closed Captions/Text Operating Modes Setup Use MENU, SELECT, and ADJ Left/Right to choose the Closed Captions/Text mode and to set up the other menu options for the user.

Quick/Mute When CC is pressed: User can only turn Captions on/off. (If CC on Mute is on, shows captions option on mute.) (If locked, type is retained with Power on/off.) When CC is pressed: User can choose a captions type. (If locked, type is retained with Power on/off.)

) POWER FLSH CC BK MUTE TV /FM 1 CHAN NEL V ME OLU 1 4 7 2 5 8 3 6 9 ENTER Standard Press ENTER repeatedly to remove menus. Standard closed captioning is available using the Caption 1 option. Caption/Text are features which allow the Concierge TV to receive the closed caption and/or text options if made available by the broadcaster. Availability and functionality of Caption/Text options are determined only by each broadcaster and may not be available in your area. 0 2 TIMER MENU ALARM SELECT CH PREVIEW ADJ ADJ Mini glossary CAPTIONS TEXT The term for the words that scroll across the bottom of your TV screen; usually the audio portion of the program provided for the hearing impaired. The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster. 206-3489-O PAGE 21 Language SETUP MENU Choose the language for the on-screen menus AUTO PROGRAM ADD/DEL/BLNK CH. LABELS CLOCK SET TIMER CAPTIONS LANGUAGE ENGLISH 1 2 3 4 Press the MENU key repeatedly on the installer's remote control until the Setup menu appears. Use SELECT on the remote control to highlight the Language option on the menu. Use the Right/Left ADJ arrow to choose one of the following options: English, Spanish or French.

Press ENTER to return to TV viewing. POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 1 4 7 0 2 5 8 3 6 9 ENTER 1 TIMER MENU ALARM SELECT CH PREVIEW 4 2 ADJ ADJ 3 PAGE 22 206-3489-O Audio Menu Adjust the audio options for the guest AUDIO PREF CUSTOM 1 2 Press MENU repeatedly on the installer's remote control until the Audio menu appears. Using SELECT on the remote control, highlight the setting you want to change. Choose from: · Bass: Increases/decreases lower-end sounds. · Treble: Increases/decreases higher-end sounds. · Balance: Allows you to put the sound more to the left or right channel. · Audio Mode: Chooses from Stereo sound, Mono, or 2nd Audio/SAP. · Front Surround: Turns Front Surround sound on or off. · Soundrite: Turns the uniform volume feature on or off. · Audio Preference: Chooses Custom or Preset audio settings. (Preset returns settings to default values.)



[You're reading an excerpt. Click here to read official ZENITH H32F36DT user guide](http://yourpdfguides.com/dref/341133)
<http://yourpdfguides.com/dref/341133>

) 1 4 7 0 POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 2 5 8 3 6 9 ENTER 1 TIMER MENU ALARM 4 3 4 Use the Right/Left ADJ arrow to adjust or change the option you have selected. Press ENTER to return to TV viewing, or press SELECT and return to the Audio Menu to adjust another option. 2/4 ADJ SELECT CH PREVIEW ADJ 3 Not all programming is broadcast in stereo sound or has 2nd Audio SAP. Mini glossary STEREO SOUND MONO SOUND SOUNDRITE Stereo (stereophonic) sound refers to audio that's divided into right and left sides. Mono (monaural) sound is one channel of sound. On more than one speaker, all the speakers play the same audio. Maintains a constant volume level when commercials or channel changing increases or decreases the sound level. 206-3489-O PAGE 23 Video Menu VIDEO MENU Use the Video menu to customize the picture appearance CONTRAST BRIGHTNESS COLOR TINT SHARPNESS PICTURE PREF PRESET 1 Press MENU repeatedly until the Video menu appears. Your options are: · Contrast: Adjusts the level of difference between white and black in the TV picture. The more contrast, the brighter the picture appears. · Brightness: Increases or decreases amount of white in the TV picture. · Color: Adjusts levels of all colors in the TV picture. · Tint: Balances between amounts of red and green in the TV picture. · Sharpness: Raises or lowers the definition of the TV picture. The lower the level, the softer the images will appear. · Picture Preference: Choose either Custom or Preset. Custom allows you to set the picture the way you want. Preset moves all the above options back to their original, factory-set levels. 1 4 7 0 POWER FLSH CC BK MUTE TV /FM VO LUM E CHAN NEL 2 5 8 3 6 9 ENTER 4 1 2/A TIMER MENU ALARM 2 3 4 A B Use SELECT on the installer's remote control to choose Contrast on your screen.

Use the Right/Left ADJ arrow to change the contrast level to custom settings. Press ENTER, or MENU one more time to return to TV viewing, or repeat from step two to set the other menu options. Use SELECT to choose Picture Preference on your screen. Use the Right/Left ADJ arrow, to choose either the original settings with Preset, or use your own settings with Custom. Choose the Preset option in Picture Preference to quickly reset the levels to their original values.

SELECT CH PREVIEW ADJ ADJ 3/B PAGE 24 206-3240-O Installer Parental Control Menu If used, this optional feature can "block" undesirable programming from appearing on the TV Parental Control offers the user a wide variety of options and settings that restrict or "block" the programming that can appear on the TV. Parental control allows the user the capability of defining which program rating they consider acceptable, to the younger or more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password. The number of hours blocked are specified. General audience and children viewer blocks should both be programmed into the TV's memory.

Viewer ratings are specified for both TV and the motion picture industry; both rating systems can be used. The ratings are based mainly on the ages of children. Overview To insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections below AND choose ratings from the TV Parental Guidelines Rating System on pages 41 and 42, using the Age Block option for General Audiences, and for Children. In addition to those, you may wish to add additional restrictions from the Content Block menu. See the Parental Control menu, and submenus example on the next page.

Things to Consider before Setting Up Parental Control Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) Do you want the auxiliary video source signal blocked? (Block the picture and sound of the equipment, such as a VCR, connected to the TV Audio/Video input jacks; in the Aux. Block option.) Or leave unblocked, and Parental Control will restrict the video input based on the restrictions you have specified.

Block program "Content" based on individual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence Scenes, or Fantasy Violence Scenes; in the Content Blk option. How many hours do you want Parental Control to be active? You can set the option for up to 12 hours. (See next page.) Select a secret password; in the Set Password option. Use the number keys on the remote. If you forget the password, see note below. Do you want Parental Control to be active all the time? If not, you can turn it on or off; with the Lock On/Off option. You should set different Parental Control viewing restrictions for general audiences and for children - - both should be active at the same time. Simply specifying one content block such as Sex Scenes, will not automatically block another content in the programs from appearing. You cannot disable Parental Control by disconnecting the TV from power.

Block hours remaining will be retained if power is lost or power cord is disconnected. The AUX input source can also be blocked. Reset Parental Control Block Hours to Zero and Cancel Password This provides the lodge staff and the installer a means to reset the TV to normal operation, if a guest has either forgotten the password or has left Parental Control Block active after checking out. On the installer's remote control, press and hold down MENU until the menu disappears (about 6 seconds). Immediately press 9, 8, 7, 6 and then CC. (Based on 0-I INST. SEQ. 0' setting.) This will reset the Block Hours to Zero and cancel the current 4-number password. 206-3489-A PAGE 25 Installer Parental Control Menu After you have read the preceding page, follow instructions below to set up and activate Parental Control SETUP MENU AGE BLOCK AUDIO MENU VIDEO MENU PARENTAL CONTROL AUX SOURCES MPAA RATING AGE BLOCK CONTENT BLK SET HOURS SET PASSWORD LOCK ON OFF TO BLOCK TO BLOCK GENERAL CHILDREN UNBLOCKED PRESS CC TO RETURN CONTENT BLOCK DIALOG LANGUAGE SEX SCENES VIOLENCE F VIOLENCE NO RATING UNBLOCKED PRESS CC TO RETURN Note: Use the installer's remote control to specify Parental Control settings.

1 2 3 Press MENU repeatedly until the Parental Control Menu appears. As shown above, with the Parental Control menu on-screen, use SELECT to choose an option, like Content Block. Use the Left/Right ADJ arrow to show the Content Block menu, to adjust or set the rating for an option. For Sex Scenes for example, use the "From TV-PG" setting. (See the Mini Glossary, Ratings Charts on pages 40 and 41 for rating meanings.



[You're reading an excerpt. Click here to read official ZENITH H32F36DT user guide](http://yourpdfguides.com/dref/341133)
<http://yourpdfguides.com/dref/341133>

) After you have selected and adjusted the parental control menu options to your preferences: - Set the number of hours Parental Control will be on. - Set a 4-number password. - Set the Lock On/Off option to either on or off. Note: Some broadcasts and videotapes do not include rating information. 7 0 8 9 ENTER 1 TIMER MENU ALARM 2 ADJ SELECT CH PREVIEW ADJ 4 3 Make Parental Control restrictions permanent, with no preset or fixed hours time limit In the Installer's Menu, Item 84: PERMANENT BLK, 0 or 1.

0 Blocking restrictions always active, no time limit. 1 Restrictions limited to specified hours, 12 - 99. use the ADJ Left/Right adjust arrow to set a different default number of hours. To Turn the Parental Control Feature Off/On In the Installer's Menu, Items: 21-I V-CHIP, 0 or 1, 51-I DIS. VCHIP M., 0 or 1 Options Setups for V-Chip Menu and Block Functions 21-I V-CHIP 51-I DIS. VCHIP M. 0 0 No menu, no blocking. 0 1 No menu, no blocking. 1 0 Shows menu, Block functions.

1 1 No menu, Block functions. 206-3751 Reset the Maximum Number of Parental Control Default Block Hours You can change the Block hours from the 12-hour default setting to up to 99 hours. In the Installer's Menu, item: 22-I MAX BLK HRS 12, PAGE 26 Other Menus & On-Screen Displays Press the remote keys indicated below to access these menus and displays ALARM MENU TIME NOW 6:10 AM VOLUME 3:11 PM TIMER PRESS DIGITS TO SET TIME TIMER TO SELECT AM/PM Volume Display Press VOLUME. Shows currently selected sound setting. Alarm Menu Press ALARM. Sets a time the TV will turn itself on. Sleep Timer Menu Press TIMER. Sets a time to automatically turn the TV off and shows remaining time before TV shutoff. Rating: TV-14 Ch 25 - PBS 7:15 PM 5 9 20 32 44 AUX CC CHANNEL PREVIEW -----TO SELECT, ENTER TO QUIT FOR PARENTAL CONTROL OLD TIME MOVIES LENGTH 01:00 TIME LEFT 00:36 CAPTION 1 IS ON CH CC Channel/Time Display Press ENTER. Shows currently selected channel or source, current time if the clock has been set, incoming audio signal, and XDS data if provided by broadcaster.

Closed Captions Menu Press CC. Turns selected option on or off. See Caption/Text page to select options. Ch Preview Menu Press CH PREVIEW. Displays list of the available TV Channels, Guest Parental Control menu (if active) and Video Channel access.

Press CHANNEL Up/Down to select a channel, or menu, then ENTER to go to channel or menu. CHANNEL BANK BANK 3 Channel Banks Menu Press SOURCE/BANK on an Installer remote equipped with those keys. Accesses the Channel Banks menus: Bank 1, Bank 2, Bank 3, Bank 4. 206-3489-O PAGE 27 Managing the Channel Banks The TV has four channel banks, where the administrator or installer can store groups of TV channels Note: Channel banks set up requires an installer's remote with "Source" or "Bank" keys like the optional Zenith MBR3447, or a similar remote. PLANNING THE CHANNEL BANKS Generally, TV channels are grouped into "program packages" with terms that are proposed to the end user.

The user then opts for a package. Below is an example of how TV channels may be grouped. You may plan your package by using a chart like the one after the following page. Remember, you can "blank" a channel for accommodating audio-only, such as an FM radio station or in-house communication. Sometimes, only one or two channel banks may be needed. You may leave any unused bank with the channels entered during Auto Program; or, you may delete the channels. However, you may want to leave at least one channel in any unused bank. Then, if someone selects an "unused" bank, that channel will assure them that the TV is functional. Note: Some channels from factory testing may be in the channel banks if you have not yet run Auto Program. ADDING / DELETING CHANNELS A previously prepared programming chart is helpful.

1. Run Auto Program (in the Setup menu). All channels found on your cable/antenna will be entered in Channel Banks 1, 2, 3, and 4. Note: Be advised that running Auto Program overwrites any custom channel setups; removes Blanked, Deleted. 2. Select a channel bank with an installer remote - -press SOURCE/BANK (and repeat). CHANNEL BANK and BANK number will be displayed. 3. @@You may delete channels or add some that have not been entered. @@See the "ADD/DEL/BLNK" menu page for more details.

Note: The Blank Channel feature is global. A channel will be blanked in all channel banks. 4. @@@@To exit the Installer's Menu, press ENTER again.

Any changes you make will be stored in nonvolatile memory. The Installer's menu opens with item 0-I, INST. SEQ. Use the SELECT key to sequence through the available menu items. @@@@Sets number of hours of no activity before auto shutoff.

Set to 1 to enable auto turn on at power up. Tuning band, see detailed descriptions. Channel at turn-on (255 last Channel viewed at turn off). When set to 1, cannot tune from current channel. Set to 1 to enable Ghost Channel display. Volume level at TV turn-on (Set 255 to retain last volume level). Minimum volume setting. Maximum volume setting. Set to 1 to disable mute function. Set to 1 to disable Menu, Select, and Adj keys on front panel.

@@Puts On-Off in Ch Up/Down sequence. Set to 1 to put TV On/Off below start channel number. Set to 1 to enable Sleep Timer. Set to 1 to enable Timer. @@Set to 1 to retain Caption setting at turn off. Set to 1 to add Text option to closed caption menu. @@OVER RIDE OLD OCV ACK MASK POLL RATE TIMING PULSE NOT USED CAMPORT EN. NOT USED NOT USED REAR Y/C EN. NOT USED NOT USED AUTO CAMPORT NOT USED NOT USED AUTO REAR Y/C NOT USED NOT USED STRT AUX SRCE AUX STATUS DIS. SETUP M.

DIS. AUDIO M. DIS. VIDEO M. DIS.

VCHIP M. DIS. SOURCE M. DIS. CH-TIME M.

EN. SET. COL. FOR. SETUP M. BCK. SETUP M. EN. AUDIO COL. FOR.

AUDIO M. BCK AUDIO M. EN. VIDEO COL. FOR. VIDEO M. BCK VIDEO M. EN. PTL. COL.

Value Range Default Value Brief Description of Function and Comments 0/1 0/1 0/1 20 - 169 186 - 227 1 0 0 94 207 When set to 0. limits direct access to favorite channels. OCV should set to 1. M.P.

I. communication parameter. M.P.I.

communication parameter. M.P.I. communication parameter. 0/1 1 Set to 1 to enable the front AUX (Campport) input. 0/1 1 Set to 1 to enable the rear S-Video input. 0/1 1 Set to 1 to automatically switch to Campport. 0/1 0 Set to 1 to automatically switch to rear S-Video input. 0 - 2, 255 0/1 0/1 0/1 0/1 0/1 0/1 0/1 0-7 0-7 0/1 0-7 0-7 0/1 0-7 0-7 0/1 255 0 0 0 0 0 0 0 6 4 0 1 7 0 4 7 0 Set the starting AUX source Set to 1 for M.

P.I. AUX source reported as Channel number instead of Channel 0. Set to 1 to disable Setup menu. Set to 1 to disable Audio menu. Set to 1 to disable Video menu. Set to 1 to disable V-Chip (Parental Control) menu. Set to 1 to disable Source menu. Set to 1 to disable Channel-Time display.



[You're reading an excerpt. Click here to read official ZENITH](#)

[H32F36DT user guide](#)

<http://yourpdfguides.com/dref/341133>

Set to 1 to enable custom color for Setup menu.

Custom foreground color for the Setup menu. Custom background color for the Setup menu. Set to 1 to enable custom color for the Audio menu. Custom foreground color for the Audio menu. Custom background color for the Audio menu.

Set to 1 to enable custom color for the Video menu. Custom foreground color for the Video menu. Custom background color for the Video menu. Set to 1 to enable custom color for the V-Chip (Parental Control) menu. PAGE 32 206-3854 Installer menus Installer Menu Items 64-I through 86-I Menu Item 64-I 65-I 66-I 67-I 68-I 69-I 70-I 71-I 72-I 73-I 74-I Function FOR. PTL. M. BCK. PTL. M. EN. SRC. COL. FOR. SRC.

M. BCK. SRC. M. EN. CH-T COL. FOR. CH-T COL BCK. CH-T COL NOT USED CH NOT AVBLE CH-TIME SIZE Value Range 0-7 0-7 0/1 0-7 0-7 0/1 0-7 0-7 Default Value 6 4 0 3 4 1 1 1 Brief Description of Function and Comments Custom foreground color for the V-Chip (Parental Control) menu. Custom background color for the V-Chip (Parental Control) menu.

Set to 1 to enable custom color for the Source menu. Custom foreground color for the Source menu. Custom background color for the Source menu. Set to 1 to enable custom color for the Channel-Time display. Custom foreground color for the Channel-Time display.

Custom background color for the Channel-Time display. 0/1 0/1 0 0 When set to 1 and channel override is 0, "NOT AVAILABLE" message is displayed when direct accessing a channel not in the favorite channel list. When set to 1 and transparent background is selected for Channel-Time display, (foreground color = background color and custom color enabled) a large channel number is displayed instead of the normal Channel-Time display. 75-I 76-I 77-I 78-I 79-I 80-I 81-I 82-I 83-I 84-I 85-I. 86-I.

NOT USED DEFEAT XDS NOT USED UPN MSB UPN MSB-1 UPN MSB-2 UPN LSB CHKSM ERROR HANDSHK TIME PERMANENT BLK A. MUTE TIME V. MUTE TIME 0 - 255 0 - 255 0 - 255 0 - 255 0/1 0-5 0/1 0 - 254 0 - 254 255 255 255 255 1 0 0 50 50 User programmable number, most significant byte. (Line-Day) User programmable number, most significant byte - 1. (Week) User programmable number, most significant byte - 2. (SN-HIGH) User programmable number, least significant byte. (SN-LOW) Enforces rigid M.P.I.* checksum.

Relaxes M.P.I. timing to be compatible with PC based Windows controlled systems. Remove block hours setting for Parental Control and make blocks permanent. Controls muting audio delay time when switching between AUX sources. Controls muting video delay time when switching between AUX sources. 0/1 0 When set to 1, XDS display program information will not appear. Detailed Descriptions of Installer Menu Items 0-I. INSTALLER SEQUENCE Gives access to Installer Menu depending on the code selected.

0 = 9876 2 = 1478 1 = 4321 3 = 3698 setting the hours that the TV will remain on, unless there has been activity from either the control panel or remote control. 2-I. AC ON (AC Power Switchable) Allows the TV to turn ON just by applying AC power. Pressing the ON button is not necessary. This is desirable when the TV is plugged into a cable box or a power outlet controlled by a wall switch.

Use ADJUST to select 0 or 1, where 0 is the default is OFF, and 1 is ON. NOTE: When set to 1 (ON), the TV does not respond to ON/OFF commands from either the remote or the control panel, and the SLEEP TIMER is also nonfunctional. 1-I. POWER MANAGE (Power Management) Determines hours of no activity before automatic shutdown. The POWER MANAGE function is for saving energy.

When set to 0, Power Manage is OFF. Settings range from 0 - 7, with 1 - 7 repre- *M.P.I. Multiple Protocol Input: Zenith protocol for remote control of TV through RJ11 (M.P.I.) jack on TV connections panel. 206-3854 PAGE 33 Installer menus Installer Menu Items 3-I through 13-I: Detailed Descriptions 3-I. BAND/AFC (Band/Automatic Frequency Control) There are 8 possible settings for this option: 0 5 6 7 = = = Broadcast Fixed CATV Fixed HRC Fixed ICC Fixed 4 1 2 3 = = = Broadcast AFC CATV AFC HRC AFC ICC AFC Channels are accessed faster when fixed modes are used.

The AFC (search modes) should only be used when some channels are not on nominal frequencies. NOTE: BAND is automatically set by AUTO PROGRAM. If some channels were not found by AUTO PROGRAM, select the appropriate AFC setting here and add the channels using the ADD/DEL option in the Setup Menu. 4-I. STRT CHANNEL When active, this function allows you to determine the initial channel number when the TV is turned ON. This feature is useful for an in-house information channel, since the TV would always select that channel when it is turned on. Setting this to 255 causes the last channel viewed when TV was turned off to be the tuned to channel when the TV is turned on again. The range of values is 0 - 255. Use (adjust) keys to choose numbers that determine the start channel. 5-I.

CHAN LOCK (Channel Lock) CHAN LOCK is ideal if a cable box (or similar) is the sole source for programming--and the TV must always be on the same channel. Changing channels with Channel Up/Down or keypad numbers is impossible. Channel Lock is inactive when set to 0 (default). Generally, this feature is used in conjunction with START CHANNEL (item 4-I.) where the start channel may, for example, be set to 3 or 4.

If the start channel is 3 then the TV will remain on channel 3. NOTE: When CHANNEL LOCK is active and CHANNEL OVERRIDE is disabled, AUTO PROGRAM is not active. 6-I. GHOST CH (Ghost Channel) When set to 1, the current channel number is displayed in the upper right corner of the CRT. The number moves slightly to prevent damage to the screen.

The default is "0" or OFF. NOTE: When captions are on, the "Ghost Channel" is not displayed. 7-I. START VOLUME This function allows the Installer to determine the initial volume level setting when the TV is turned ON. This feature is useful for an in-house information channel, since the TV would always select that volume level when it is turned on. The range of values are 0 - 63, 255. If 255 is selected, the current volume level will be retained in memory when the TV is turned off; at TV turn on, volume level is automatically set to the previous or last level. 8-I. MIN VOLUME (Minimum Volume) This function determines the minimum volume level allowable with the VOLUME (VOL) Up/Down control. In this way, for example, someone cannot set the volume too low to hear.

The range is from 0 to 63--change values with ADJUST. The factory default is 0, which provides full range of volume control. It may be best to set the same value on every TV. NOTE: The minimum volume level cannot have a value setting higher than in the MAX VOLUME level (described below). 9-I. MAX VOLUME (Maximum Volume) This function determines the maximum volume level allowable with the VOLUME VOL Up/Down control. In this way, for example, someone cannot set the volume level high enough to disturb others. The range is 0 to 63, with 63 as the default which gives the user the full range of volume control.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341133)

[H32F36DT user guide](http://yourpdfguides.com/dref/341133)

<http://yourpdfguides.com/dref/341133>

Change values with ADJUST keys. It may be best to set the same value on every TV.

NOTE: The maximum volume level cannot have a value setting lower than the MIN VOLUME level (described above). 10-I. MUTE DISABLE Enables or disables sound mute function. Set to 1, sound cannot be muted. Set to 0, sound can be muted.

11-I. KEY DEFEAT (Keyboard Defeat) When set to 1, it prevents the end user from accessing screen menus on the front panel--MENU, SELECT, and ADJUST do not function. When set to 0, those keys are functional. The menus can always be accessed with MENU on the remote. 12-I. IR BANKS EN. For direct access to a particular Channel Bank. When enabled, installer can access a channel bank by inputting the IR code for the bank. 13-I. SCAN MODE Allows variation in setting the On/Off with Channel UP/DOWN. PAGE 34 206-3854 Installer menus Installer Menu Items 14-I through 30-I: Detailed Descriptions You may opt for TV channels only; TV channels + Off/ON with these settings for Scan Mode: Scan mode 0 1 Characteristics Channel up/down keys change channels only. Channel down below the lowest channel (or channel up higher than the highest) and TV turns off. 21-I V-CHIP Set to 1 to activate V-Chip (Parental Control); have it available to user to filter or control or restrict programming content. Set to 0 to turn V-Chip feature off, not available to user; no programming restrictions can be set. 22-I.

MAX BLK HRS Set to 0 to 99 for the maximum V-Chip (Parental Control) block hours. Default is 12 blocking hours. 23-I. CAPTION LOCK Set to 1 to restore previous caption On/Off state after TV turns off. When set to 0, captions are always off, when TV is initially turned on. 24-I. TEXT MODE Determines whether TEXT 1, TEXT 2, TEXT 3, or TEXT 4 decoding is enabled when TEXT is turned on (either from the Setup Menu or directly with CC on the remote).

TIP: Set Text Mode to 1 only if text is offered in your video system. 25-I. FUNCTION PRE.

Set to 0 to suppress CHANNEL PREVIEW from the FUNCTION menu with some Pay-Per-View systems. 26-I. NOT USED 27-I. NOT USED 14-I. STRT CH IN SM When set to 1, installs TV on/off event below the start channel at TV turn on.

15-I. SLEEP TIMER When set to 1, the SLEEP TIMER feature may be used (but no message is displayed prior to turn-off). When set to 0, the sleep timer is not available. 16-I. EN.

TIMER Set to 1, timer function is available to user. Set to 0 to disable Timer functions. (Clock must be set in order to use Timers.) 17-I. ALARM Gives you the option of making the alarm function available to the user. Set to 1, alarm function is available to user. Set to 0 to disable the Alarm function. Note: Clock must be set in order to set the Alarm. 18-I. NOT USED 19-I.

NOT USED 20-I. FEATURE LEVEL Default set to ZEN 1 for Zenith IR remote control operation. Set 0, P LBL for Zenith Private Label IR remote control operation. Warning: Do not set to "0" or remote will not control TV. 28-I. CH. OVERRIDE (Channel Override) When set to 1, the user can select channels with either Channel Up/Down or by direct keypad entry. When set to 0, only those channels that are entered for scanning may be selected by direct keypad entry. Note: If set to 0, Auto Program is locked; (as shown on Setup menu) you cannot do a channel search. 29-I.

OLD OCV (On Command VideoTM) Set to 1 for operation with systems from On Command Corporation. 30-I. ACK MASK M.P.I. Communication Parameter. Leave at default setting unless changed by Pay-Per-View provider. Installer should leave item 20-I. FEATURE LEVEL set to 1 (default). 206-3854 PAGE 35 Installer menus Installer Menu Items 31-I through 57-I: Detailed Descriptions 31-I.

POLL RATE M.P.I. Communication Parameter. Leave at default setting unless changed by Pay-Per-View provider. 32-I. TIMING PULSE M.P.I. Communication Parameter.

Leave at default setting unless changed by Pay-Per-View provider. 33-I. NOT USED 34-I. FRONT AUX ENABLE Set to 1 to enable the front AUX (Campport) input. Set to 0 to disable front AUX input. 35-I. NOT USED 36-I. NOT USED 37-I. REAR Y/C EN. Set to 1 to enable the rear S-Video input.

Set to 0 to disable the rear S-Video input. 38-I. NOT USED 39-I. NOT USED 40-I. AUTO CAMPORT Set to 1 to automatically switch to campport when equipment is connected to front Video input.

Set to 0 to disable front Video automatic source selection. 41-I. NOT USED 42-I. NOT USED 43-I. AUTO REAR Y/C Set to 1 to automatically switch viewing source to rear S-Video input when equipment is connected.

Set to 0 to disable rear S-Video automatic source selection. 44-I. NOT USED 45-I. NOT USED 46-I. STRT AUX SRCE Sets the starting AUX source. 47-I. AUX STATUS Set to 1 for M.P.I. AUX source to be reported as a channel number instead of channel 0.

Set to 0 to disable AUX identification change. 48-I. DIS. SETUP M. Set to 1 to disable the Setup menu. Setup menu will not appear. Set to 0 to enable the Setup menu. 49-I. DIS. AUDIO M.

Set to 1 to disable the Audio menu. Audio menu will not appear. Set to 0 to enable the Audio menu. 50-I. DIS.

VIDEO M. Set to 1 to disable the Video menu. Video menu will not appear. Set to 0 to enable the Video menu. 51-I.

DIS. VCHIP M. Set to 1 to disable the Parental Control menu. Parental Control menu will not appear. Set to 0 to enable the Parental Control menu. 52-I. DIS. SOURCE M. Set to 1 to disable the Source menu. Source menu will not appear.

Set to 0 to enable the Source menu. 53-I. DIS. CH-TIME M. Set to 1 to disable the Channel-Time display. Channel-Time display will not appear. Set to 0 to enable the Channel-Time display. 54-I. EN. SET.

COL. Set to 1 to enable custom color settings for the Setup menu. Set to 0 to disable custom color settings for the Setup menu. 55-I. FOR.

SETUP M. (Setup Menu Foreground Color) Set according to Color Chart. 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 56-I. BCK. SETUP M.

(Setup Menu Background Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 57-I. EN. AUDIO. COL. Set to 1 to enable custom color settings for the Audio menu. Set to 0 to disable custom color settings for the Audio menu. PAGE 36 206-3854 Installer menus Installer Menu Items 58-I through 78-I: Detailed Descriptions 58-I. FOR. AUDIO. COL.

(Audio Menu Foreground Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 59-I BCK. AUDIO. COL. (Audio Menu Background Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 60-I. EN. VIDEO. COL. Set to 1 to enable custom color settings for the Video menu. Set to 0 to disable custom color settings for the Video menu. 61-I.

FOR. VIDEO M. (Video Menu Foreground Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 62-I. BCK. VIDEO.

COL. (Video Menu Background Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 63-I. EN. PTL. COL.

Set to 1 to enable custom color settings for the V-Chip menu. Set to 0 to disable custom color settings for the V-Chip menu. 64-I. FOR. PTL. M. (V-Chip Menu Foreground Color) 0 = Black 3 = Yellow 6 = Cyan 1 = Red 4 = Blue 7 = White 2 = Green 5 = Violet 65-I.



[You're reading an excerpt. Click here to read official ZENITH
H32F36DT user guide
http://yourpdfguides.com/dref/341133](http://yourpdfguides.com/dref/341133)