



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH IQB27FW. You'll find the answers to all your questions on the ZENITH IQB27FW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH IQB27FW
User guide ZENITH IQB27FW
Operating instructions ZENITH IQB27FW
Instructions for use ZENITH IQB27FW
Instruction manual ZENITH IQB27FW



[You're reading an excerpt. Click here to read official ZENITH IQB27FW user guide](http://yourpdfguides.com/dref/341158)
<http://yourpdfguides.com/dref/341158>

Manual abstract:

Record model number and serial number of the set. @@@@NO USER-SERVICEABLE PARTS IN SIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. Do not use attachments not recommended by the television receiver manufacturer as they may cause hazards. Power Supply This television receiver should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your television dealer or local power company. Installation Do not use this television receiver near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Do not place this television receiver on an unstable cart, stand, or table.

The television receiver may fall, causing serious injury to a child or an adult, and serious damage to the appliance. Use only with a cart or stand recommended by the manufacturer, or sold with the television receiver. Wall or shelf mounting should follow the manufacturer's instructions and should use a mounting kit approved by the manufacturer. Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to insure reliable operation of the television receiver, and to protect it from overheating. These openings must not be blocked or covered.

The openings should never be blocked by placing the television receiver on a bed, sofa, rug, or other similar surface. This television receiver should not be placed in a builtin installation such as a bookcase unless proper ventilation is provided. It is recommended not to operate this unit near speakers or big metallic furnitures in order to keep their magnetism from disturbing colors purity (uniformity) on the screen. Use Do not allow anything to rest on the power cord. Do not locate this television receiver where the cord will be abused by persons walking on it.

Do not overload wall outlets and extension cords as this can result in fire or electric shock. Never push objects of any kind into this television receiver through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television receiver. Service Do not attempt to service this television yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified personnel. Writing Model And Serial Numbers The serial number and model number are found on the back of this unit. The serial number is unique to this unit. You should record requested information here and retain this guide as a permanent record of your purchase. Please retain your purchase receipt as your proof of purchase. Date of Purchase Dealer Purchased from Dealer Address Dealer Phone No.

Model No. Serial No. 2 CONTENTS Description of controls

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....4 ~6 Basic TV operation .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....7 Turning on/off the TV ..

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....7 *Selecting the on screen language .*

.....
.....
.....

.....
.....
.....

.....
.....
.....

7 Memorizing Channels

.....
.....
.....

.....
.....
.....

.....
.....
.....

8 Memorizing the Channels by AUTO PROGRAM

.....
.....
.....

.....
.....
.....

.....8 Memorizing the Channels by MANUAL PROGRAM ..

.....
.....
.....

.....
.....
.....

.9 Selecting the Channel

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....

.....
9 Adjusting the Volume

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.9 Various function

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

..10 Setting the Clock ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....10 Setting the OFF TIMER ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

..10 Setting the ON TIMER

.....
.....

.....
.....
.....

.....
.....
.....

.....10 Setting the Sleep Time .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

11 Auto Off

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

....11 Key Lock .

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..11 Auto Demonstration ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...12 Operating the degauss

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....12 Adjusting the Fine Tuning .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.12 Favorite channel memory

.....
.....
.....

.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

.14 YNR (Luminance Noise Reduction)

.....
.....
.....
.....
.....
.....
.....
.....

...14 Adjusting the Picture ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....14 Sound control ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...15 Enjoying the Stereo/SAP Broadcast

.....
.....
.....
.....
.....

.....
.....
.....

.....15 AVL (Auto Volume Leveler) .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....15 Auto Sound Control ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

....16 Adjusting the equalizer (USER mode in ASC) .

.....

.....
.....
.....

.....
.....
.....

16 Adjusting the balance

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....16 Closed caption function ..

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

.....17 Using Closed Captions ...

.....
.....
.....
.....
.....
.....
.....
.....

...17 Operating the Caption and Text ..

.....
.....
.....
.....
.....
.....
.....
.....

.....18 PIP function

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....19 Watching the PIP (Picture in Picture)

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....20 Adjusting the Volume (in PIP and Double window mode) ...

.....
.....
.....
.....
.....
.....

21 Antenna Connections

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...22 Connecting an Outdoor Antenna

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...22 Connecting a CATV Cable

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...22 Connection of external equipment

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.23 Connecting AUDIO/VIDEO IN Jacks

.....
.....
.....
.....

.....
.....
.....
.....

.23 Connecting the S-VHS VCR

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....24 Recording Onto VCR .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....24 Recording a program from connected other equipment ..

.....
.....
.....
.....

.....
.....
.....

....25 Connecting the COMPONENT INPUT jacks

.....

.....
.....
.....
.....
.....
.....

.....25 Troubleshooting check list ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..26 3 Description of controls This is a simplified representation of front panel. STAND BY ON/OFF TV/VIDEO MENU VOL VOL CH CH 1 2 13 6 7 3 22 1.
POWER BUTTON Refer to "Turning on/off the TV". 1 POWER EYE 2. STAND BY INDICATOR Illuminates green when the TV is in standby mode.
TV/VIDEO 4 MUTE 3. REMOTE CONTROL SENSOR 4. EYE BUTTON To switch on or off eye picture.
5 MENU 6 ENTER VOL CH VOL CH 5. MUTE BUTTON To mute the sound. Again to restore the muted sound. 6. MENU BUTTON To display on screen
menus one by one.
7. CHANNEL UP/DOWN (D/E) BUTTONS · To select the desired channel. · To select the desired menu item when menu is displayed on the screen. VOLUME
UP/DOWN (G/F) BUTTONS · To increase or decrease volume level. · To enter or adjust the selected menu when menu is displayed on the screen.
ENTER (n) BUTTON · To exit from the displayed menu. · To memorize the adjusted menu. · To recall the current TV mode (by remote control only). 8. DASP
BUTTON To select the sound appropriate to your viewing program character ; NEWS, CINEMA, MUSIC or USER. 9. APC (Auto Picture Control) BUTTON
To adjust the factory preset pictures corresponding to the lighting around. 10. MTS BUTTON To listen to the MTS sound ; MONO, STEREO or SAP. 11.
REVIEW BUTTON To return to the previous channel. 12. ZOOM IN/OUT BUTTON To select the desired picture format (NORMAL, ZOOM IN or ZOOM
OUT). 7 8 9 10 11 APC MTS DASP REVIEW AVL FCR CAPTION SLEEP AUTO MEMORY PROGRAM /ERASE 1 6 ZOOM IN 2 7 PIP/DW 3 8 SWAP 4 9
POSITION 5 0 CH+ 12 ZOOM OUT PIP MENU STILL CH.SEARCH CH- POWER REW PLAY FF STILL STOP REC 4 Description of controls 13.
TV/VIDEO BUTTON To select TV or VIDEO mode. 14. AVL (Auto Volume Leveler) BUTTON To keep on equal volume level of each channels. 15. CAPTION
BUTTON To select the CAPTION mode.
Refer to "Closed caption function". 16. SLEEP BUTTON To set the desired sleep time. TV/VIDEO MUTE POWER EYE 13 17. MEMORY/ERASE BUTTON
To memorize or erase the desired channel.
18. AUTO PROGRAM BUTTON To memorize channels by AUTO PROGRAM. MENU CH ENTER VOL CH VOL 19. FCR (Favorite Channel Review)
BUTTON To select the favorite channel. Refer to "Favorite channel memory".
14 15 16 17 18 19 20 20. NUMBER BUTTONS To select the desired channel directly. 21. VCR BUTTONS To control LG video cassette recorder. 22. EYE
SENSOR APC MTS DASP REVIEW AVL FCR CAPTION SLEEP AUTO MEMORY PROGRAM /ERASE 1 6 ZOOM IN 2 7 PIP/DW 3 8 SWAP 4 9 POSITION
5 0 CH+ ZOOM OUT PIP MENU STILL CH.



[You're reading an excerpt. Click here to read official ZENITH IQB27FW user guide](http://yourpdfguides.com/dref/341158)
<http://yourpdfguides.com/dref/341158>

SEARCH CH- POWER REW PLAY FF STILL STOP REC 21 5 Description of controls 23. PIP (Picture in Picture) BUTTONS PIP/DW BUTTON To select the PIP mode or double window mode. SWAP BUTTON To exchange the main picture and sub picture. POSITION BUTTON To move the sub picture to another corner of the main picture.

POWER EYE TV/VIDEO MOG.{ NORMAL+++++{ FINE+++++++{ FAVORITE+CH.{ +MOVE+{+NEXT+}BACK 8 Basic TV operation Memorizing the Channels by MANUAL PROGRAM Using the MEMORY/ERASE button You can conveniently perform MANUAL PROGRAM using the MEMORY / ERASE button on the remote control. 1. Press the D / E or NUMBER buttons to select the channel number you want to memorize or erase. 2. Press the MEMORY/ERASE button. The on screen display appears as shown right. 3. Press the VOL F / G or MEMORY/ERASE button to select MEMORY or ERASE. 4. Press the ENTER (n) button to exit. ++MANUAL CH MANU TV2122ERASE2}{ Using the MENU button 1. Press the MENU button until the menu is displayed as shown right. 2.

Press the G and then D / E button to select the MANUAL PROG.. CHANNEL CH. 3. Press the G button to enter the MANUAL PROG. mode. 4. Press the D / E or NUMBER buttons to select the channel number you want to memorize or erase. 5. Press the D / E button to select MEMORY or ERASE. 6. Repeat process 3 to 4 to memorize or erase another channels. 7. Press the ENTER (n) button to exit. INPUT+++++++{ AUTO+PROGRAM{ MANUAL+PROG.

{ FINE+++++++{ FAVORITE+CH.{ +MOVE+{+NEXT CHANNEL CH. Selecting the Channel Press the D / E button to conveniently select the upper or lower channel than the channel being viewed, or NUMBER buttons to directly select the desired channel. INPUT+++++++{ AUTO+PROGRAM{ MANUAL+PROG.{ 222TV213+ FINE+++++++{ MEMORY FAVORITE+CH.{ +MOVE+}{+ADJUST+ÅBACK Adjusting the Volume Press the G button to increase the volume level or F button to decrease the volume level. To mute the sound, press the MUTE button. The word MUTE is displayed (It's not displayed in the Caption mode). It's convenient when you get the telephone calls. To restore the muted sound, press the MUTE button again or VOL F / G button.

VOLUME 5 EEEMUTE 9 Various function Setting the Clock Before setting the on/off timer, first you should set the current time. 1. Press the MENU button until the menu is displayed as shown right. 2. Press the G and then D / E button to select CLOCK. 3. Press the G button to enter the CLOCK mode. 4. Press the D / E button to adjust the hour. 5.

Press the F / G button to select the minute position and then press the D / E button to adjust the minute. 6. Press the ENTER (n) button to exit. CH. TIMER CLOCK+++++++{ OFF+TIMER+++{ ON+TIMER++++{ +MOVE+{+NEXT TIMER CH. Setting the OFF TIMER This is the function to automatically switch the TV off at a preset time. 1. Press the MENU button until the TIMER menu is displayed. 2. Press the G and then D / E button to select OFF-TIMER.

3. Press the G button to enter the OFF-TIMER mode. 4. Press the D / E button to adjust the hour. 5. Press the F / G button to select the minute position and then press the D / E button to adjust the minute. 6. RUN/HOLD is used to activate or deactivate preset on/off times. Press the F / G button to select HOLD or RUN position and then press the D / E button to select HOLD or RUN. 7.

Press the ENTER (n) button to exit. Note: If the same time is set for the on time and off time, only the off time operates. CLOCK+++++++{ __: __+AM __ AM OFF+TIMER+++{ ON+TIMER++++{ }{+MOVE+++ADJUST++Å TIMER CH. +BACK CLOCK+++++++{ OFF+TIMER+++{ __: __+AM 11 40 PM ON+TIMER++++{ 0RUN }{+MOVE+++ADJUST++Å +BACK Setting the ON TIMER This is the function to automatically turn the TV on at a preset time and channel. 1.

Press the MENU button until the TIMER menu is displayed. 2. Press the G and then D / E button to select ON-TIMER. 3. Press the G button to enter the ON-TIMER mode.

4. Repeat OFF TIMER process 4 to 5. 5. Press the F / G button to select the channel position and then press the D / E button to adjust the desired channel. 6. Press the F / G button to select HOLD or RUN position and then press the D / E button to select HOLD or RUN. 7. Press the ENTER (n) button to exit. Note: Two hours after the set is switched on by the on timer function, it will automatically switched off unless a button has been pressed. TIMER CH.

CLOCK+++++++{ OFF+TIMER+++{ __: __+ PM + + + + ON+TIMER++++{ 11 40 + + + + TV06 RUN }{+MOVE+++ADJUST++Å +BACK 10 Various function Setting the Sleep Time You don't have to remember to switch the TV off before you go to sleep. The sleep timer automatically turns the TV off after the preset time elapses. Press the SLEEP button to select the desired sleep time. Each time you press this button, the sleep time is displayed one by one on the top right-hand corner of the screen as shown below. The timer begins to count down from the number of minutes selected. --- `10 `20 `30 `60 `90 `120 `180 `240 Notes: · After 3 seconds, the desired sleep time will disappear and be operated automatically. · To view the remaining sleep time, press the SLEEP button once and the remaining sleep time will be displayed. · To cancel the sleep time, select the SLEEP --- mode by using the SLEEP button. z SSSSLEEP SS1301}{ z Auto Off If there is no input signal, the TV is switched off automatically in 10 minutes. 1.

Press the MENU button until the SPECIAL menu is displayed. 2. Press the G and then D / E button to select AUTO OFF. 3. Press the G button to enter the AUTO OFF mode.

4. Press the D / E button to select ON or OFF. SPECIAL CH. LANGUAGE+++++{ CAPTION+++++{ KEY+LOCK+++++{ AUTO+OFF+++++{ ON+DEGAUSS+++++{ OFF PIP@DW+++++{ AUTODEMO+++++{ +MOVE+}{+BACK Key Lock The TV can be set so that the remote control is needed to control it. This feature can be used to prevent unauthorized viewing.

1. Press the MENU button until the SPECIAL menu is displayed. 2. Press the G and then D / E button to select KEY LOCK. 3. Press the G button to enter the KEY LOCK mode. 4. Press the D / E button to select ON or OFF. 5. Press the ENTER (n) button to exit.

With the key lock on, the display KEY LOCK appears on the screen if any button on the front panel is pressed while viewing the TV. This function won't work anymore after plugging-in the TV again. SSSKEYOLOCK SPECIAL CH. LANGUAGE+++++{ CAPTION+++++{ KEY+LOCK+++++{ ON+AUTO+OFF+++++{ OFF DEGAUSS+++++{ PIP@DW+++++{ AUTODEMO+++++{ +MOVE+}{+BACK 11 Various function Auto Demonstration Auto demonstration allows you to review all the menus programmed in the TV set. 1. Press the MENU button until the SPECIAL menu is displayed. 2. Press the G and then D / E button to select AUTODEMO. 3. Press the G button to enter the AUTODEMO mode.

4. Press the G button, and the demonstration starts. When the demonstration reaches the last display, it starts again from the beginning. To stop auto demonstration, press any button. SPECIAL CH.

[You're reading an excerpt. Click here to read official ZENITH IQB27FW user guide](#)



<http://yourpdfguides.com/dref/341158>

LANGUAGE+++++{ CAPTION+++++{ KEY+LOCK+++++{ AUTO+OFF+++++{ DEGAUSS+++++{ PIP@DW+++++{ AUTODEMO+++{ TO+START++++ AUTODEMO+++++{ +++AUTODEMO +MOVE+{+NEXT+}+BACK Operating the degauss In this TV set the magnetic field of the earth may influence on the color purity of picture by neighbor magnetic substance or installation direction of the TV set. The stripes may appear on the screen or the color may not be equal in the corner. You can enjoy the program in high color quality by operating the Degauss. 1. Press the MENU button until the SPECIAL menu is displayed.

2. Press the G and then D / E button to select DEGAUSS. 3. Press the G button to enter the DEGAUSS mode. 4. Press the D / E button to select ON or OFF. After the degaussing function works, ON mode switches to OFF mode. 5. Press the ENTER (n) button to exit. Note: Do not operate this function often because the lifetime of CPT may be shorten.

SPECIAL CH. LANGUAGE+++++{ CAPTION+++++{ KEY+LOCK+++++{ AUTO+OFF+++++{ DEGAUSS+++++{ ON PIP@DW+++++{ OFF AUTODEMO+++++{ +MOVE+}+BACK Adjusting the Fine Tuning This function is to adjust the picture to stable condition when it is poor, for example, a horizontal stripe, twisted picture or no color in broadcasting. 1. Press the MENU button until the CHANNEL menu is displayed. 2. Press the G and then D / E button to select FINE. 3. Press the G button to enter the FINE mode. 4. Press the D / E button to tune the desired picture condition.

5. Press the ENTER (n) button to memorize. Notes : · To release the memorized fine tuning, program again the fine-tuned channel by AUTO PROGRAM or MANUAL PROGRAM. · If the finely tuned channel is memorized, the color of the channel number changes to yellow. CHANNEL CH.

INPUT+++++{ AUTO+PROGRAM{ MANUAL+PROG.{ FINE+++++{ 00000=010+++ FAVORITE+CH.{ +ADJUST+}BACK+ÅMEMORY 12 Various function Favorite channel memory Favorite channel memory is a convenient feature that lets you quickly scan up to five channels of your choice without having to wait for the TV to scan through all the in-between channels. Using the MENU button 1. Press the MENU button until the menu is displayed as shown right.

2. Press the G and then the D / E button to select FAVORITE CH.. 3. Press the G button to enter the FAVORITE CH. mode. 4. Press the D / E button to memorize a favorite channel. 5. Press the G and then D / E button to select the input signal ; TV or CATV.

CHANNEL CH. INPUT+++++{ AUTO+PROGRAM{ MANUAL+PROG.{ FINE+++++{ FAVORITE+CH.{ 6. Press the G button to select channel position and then D / E button to select the desired channel number. 7. Press the ENTER (n) button. 8. Repeat steps 4 to 7. 9.

Press the ENTER (n) button to exit. To select the favorite channel, repeatedly press the FCR (Favorite Channel Review) button. Five channels programmed appear on the screen one by one. +MOVE+{+NEXT CHANNEL CH. INPUT+++++{ AUTO+PROGRAM{ MANUAL+PROG.

{ FINE+++++{ FAVORITE+CH.{ +TV + 69+ TVVVVV03VVVV TVVVVV10VVVV CATVV111VVVV CATVV125VV }{+MOVE+++ADJUST+++Å +BACK Zoom Picture You can select the desired picture format (NORMAL, ZOOM IN or ZOOM OUT). @@@@The bottom and top of the picture may be lost. · ZOOM OUT : This works in the opposite way of ZOOM IN. 1.

Press the ZOOM IN/OUT button. 2. @@1. Press the EYE button on the remote control. 2. @@2. Press the APC button. 2. @@3. @@Press the MENU button until the PICTURE menu is displayed. 2.

Press the G and then D / E button to select AUTO PICTURE. 3. Press the G button to enter the AUTO PICTURE mode. 4. @@5. @@1. Press the MENU button until the PICTURE menu is displayed. 2. Press the G and then D / E button to select YNR. 3.

Press the G button to enter the YNR mode. 4. Press the D / E button to select ON or OFF. 5. Press the ENTER (n) button to exit.

@@@@@1. Press the MENU button until the PICTURE menu is displayed. 2. Press the G and then D / E button to select USER CONTROL. 3. Press the G button to enter the USER CONTROL mode. 4. Press the D / E button to select the desired picture mode. 5. Press the G button to enter the desired picture mode. 6. Press the F / G button to adjust the level. The level of displayed picture mode is adjusted. 7. @@@@Press the MTS button to select your desired MTS mode.

@@2. @@Press the MENU button until the menu is displayed as shown right. 2. Press the G and then D / E button to select MTS. 3. Press the G button to enter the MTS mode. 4. Press the D / E button to select MONO, STEREO or SAP. 5. Press the ENTER (n) button to exit.

@@@@@Press the AVL button. 2. Press the D / E button to select ON or OFF. 3. @@Press the MENU button until the SOUND menu is displayed.

2. Press the G and then D / E button to select AUTO VOLUME. 3. Press the G button to enter the AUTO VOLUME mode. 4.

Press the D / E button to select ON or OFF. 5. @@Press the DASP button. 2. @@Press the ENTER (n) button to exit. Using the MENU Button 1. Press the MENU button until the SOUND menu is displayed. 2. Press the G and then the D / E button to select DASP. 3.

Press the G button to enter the DASP mode. 4. Press the D / E button to select NEWS, CINEMA, MUSIC or USER. CH. SOUND MTS+++++{ DASP+++++{ NEWS AUTO+VOLUME+++{ CINEMA USER+CONTROL+{ MUSIC USER 5. Press the ENTER (n) button to exit. +MOVE+}BACK Adjusting the equalizer (OFF mode in ASC) 1. Press the MENU button until the SOUND menu is displayed. 2. Press the G and then the D / E button to select USER CONTROL.

3. Press the G button to enter the USER CONTROL menu. 4. Press the D / E button to select EQUALIZER. 5.

Press the G button to enter the EQUALIZER mode. 6. Press the F / G button to select the sound band and then press the D / E button to adjust the desired level. 7. Press the ENTER (n) button to exit.

CH. SOUND MTS+++++{ DASP+++++{ AUTO+VOLUME+++{ USER+CONTROL+{ +BALANCE+++++{ VOLUME+++++{ +EQUALIZER+++{ +MOVE+{NEXT+}BACK EQUALIZER 0.1 0.4 1 4 10kHz }{MOVE+++ADJUST+ÅBACK Adjusting the balance 1. Repeat 'Adjusting the equalizer' steps 1 to 3. 2. Press the D / E button to select BALANCE. 3. Press the G button to enter the BALANCE mode. 4.

Press the F / G button to adjust the balance level. 5. Press the ENTER (n) button to exit. 0BALANCE000000000000 }{ADJUST+++ÅBACK 16 Closed caption function Closed captioning is a process which converts the audio portion of a television program into written words, which then appear on the television screen in a form similar to subtitles. Closed captions allow viewers to read the dialogue and narration of television programs. Using Closed Captions Captions are the subtitles of the dialogue and narration of television programs. For prerecorded programs, program dialogue can be arranged into captions in advance. It's possible to caption a live program by using a process called "real-time captioning", which creates captions instantly. Real-time captioning is normally done by professional reporters using a machine shorthand system and computer for translation into English. Captioning is an effective system for the hearing-impaired, and it can also aid in teaching language skills.



[You're reading an excerpt. Click here to read official ZENITH IQB27FW user guide](http://yourpdfguides.com/dref/341158)
<http://yourpdfguides.com/dref/341158>

· The picture at left shows a typical caption. FOLLOW ME Caption Tips · Not all TV broadcasts include closed caption signals. · Sometimes TV stations broadcast two different caption signals on the same channel. By selecting MODE 1 or MODE 2, you can choose which signal you view. MODE 1 is usually the signal with the captions, while MODE 2 might show demonstration or programming information.

· Your TV might not receive caption signals normally in the following situations. 1 Poor reception conditions are encountered: n Some pictures IGNITION: Picture may flutter, drift, suffer from black spots or horizontal streaking. Usually caused by interference from automobile ignition systems, neon lamps, electrical drills and other electrical appliances. GHOSTS: Ghosts are caused when the TV signal splits and follows two paths. One is the direct path and the other is reflected off tall buildings, hills or other objects.

Changing the direction or position of the antenna may improve reception. SNOW: If your receiver is located at the weak, fringe area of a TV signal, your picture may be marred by small dots. It may be necessary to install a special antenna to improve the picture. n n 2 An old, bad or illegally recorded tape is played. 3 Strong, random signals from a car or airplane interfere with the TV signal. 4 The signal from the antenna is weak. 5 The program wasn't captioned when it was produced, transmitted or taped. 17 Closed caption function Using the Text Function Text services give a wide variety of information on all kind of subjects (ex. captioned program lists, weather forecasts, stock exchange topics, news for hearing-impaired---) through the full TV screen. But not all stations offer text services, even though they might offer captioning.

Note: In the event you receive a poor signal, an empty black box may appear and disappear, even when the text mode is selected. This is normal function in such an event. Operating the Caption and Text Using the CAPTION button 1. Press the CAPTION button. 2. Press the D/E or CAPTION button to select MODE 1, MODE 2, TEXT 1, TEXT 2 or OFF. 3. Press the ENTER (n) button to exit. SSSOCAPTION SSOFF Using the MENU button 1. Press the MENU button until the menu appears as shown right.

2. Press the G and then D/E button to select CAPTION. 3. Press the G button to enter the CAPTION mode. 4.

Press the D/E button to select MODE 1, MODE 2, TEXT 1, TEXT 2 or OFF. 5. Press the ENTER (n) button to exit. Note: This TV is programmed to remember which mode it was last set to, even if you switch the set off. SPECIAL CH.

LANGUAGE+++++{ CAPTION+++++{ KEY+LOCK+++++{ AUTO+OFF+++++{ DEGAUSS+++++{ PIP@DW+++++{ AUTODEMO+++++{
+MOVE+{NEXT SPECIAL CH. LANGUAGE+++++{ CAPTION+++++{ KEY+LOCK+++++{ AUTO+OFF+++++{ DEGAUSS+++++{

PIP@DW+++++{ AUTODEMO+++++{ OFF MODE1 MODE2 TEXT1 TEXT2 +MOVE+}BACK 18 PIP function Watching the PIP (Picture in Picture) This is the function to call up a little picture (PIP : picture in picture) within the main picture. Thus at the same time you can watch two different programs. 1. Press the PIP/DW button to select PIP mode or double window mode. 2. Press the CH +/- button of the PIP buttons to select the desired channel in the sub picture. Note: In the Double window mode, press the D/E button to select the upper or lower channel in main picture and press the CH +/-button of the PIP buttons to select the upper or lower channel in sub picture. +24 11 Main Picture 11 Sub Picture 24 < PIP mode > Selecting the input signal (in PIP and Double window mode) Using the PIP MENU Button 1. Press the PIP MENU button.

2. Press the D/E button to select INPUT. 3. Press the G and then D/E button to select TV, CATV, VIDEO 1, VIDEO 2, VIDEO 3 or VIDEO 4. 4. Press the ENTER (n) button to exit. Main Picture Sub Picture < Double window mode > PIP@DW+++++{ VOLUME+++++{ INPUT+++++{ CHANNEL+++++{ POSITION+++++{ PIP@DW+++++{ TV+ CATV VIDEO1 VIDEO2 VIDEO3 VIDEO4 Using the MENU Button 1. Press the MENU button until the SPECIAL menu is displayed. 2. Press the G and then the D/E button to select PIP/DW.

3. Press the G button to enter the PIP/DW mode. 4. Press the D/E button to select INPUT. 5.

Press the G and then D/E button to select TV, CATV, VIDEO 1, VIDEO 2, VIDEO 3 or VIDEO 4. 6. Press the ENTER (n) button to exit. +MOVE+}BACK SPECIAL CH. LANGUAGE+++++{ CAPTION+++++{ KEY+LOCK+++++{ AUTO+OFF+++++{ DEGAUSS+++++{ PIP@DW+++++{
TO+SET+PIP@DW PIP@DW+++++{ AUTODEMO+++++{ +MOVE+{NEXT+}BACK SPECIAL CH.

PIP@DW+++++{ VOLUME+++++{ INPUT+++++{ TV+ CHANNEL+++++{ CATV POSITION+++++{ VIDEO1 VIDEO2 VIDEO3 VIDEO4
+MOVE+}BACK 19 PIP function Moving the Sub Picture (in PIP mode) Press the POSITION button to select the desired position of sub picture. The sub picture moves clockwise. `` `Swapping Screens Press the SWAP button. Each time you press this button, the main picture and sub picture exchange places. Still Picture Press the STILL button. The still picture is displayed in the sub picture. To cancel the still picture, press the STILL button again. Still picture Still picture < Double window mode > < PIP mode > Channel Search This is the function to search one by one the pictures of all the programmed channels through the PIP screen while the main screen remains as a current channel. Press the CH. SEARCH button.

The pictures of all the programmed channels are searched through one PIP screen, as shown right. 24 ÅSTOP Watching Channel SWAP By pressing the SWAP button, you can see the channel being searched on the PIP screen through the main screen. To release the channel search, press the CH. SEARCH or ENTER (n) button. 20 `PIP function Adjusting the Volume (in PIP and Double window mode) Using the PIP MENU Button 1. Press the PIP MENU button. 2. Press the D/E button to select VOLUME. 3. Press the G and then D/E button to adjust volume level.

4. Press the ENTER (n) button to exit. PIP@DW+++++{ VOLUME+++++{ INPUT+++++{ CHANNEL+++++{ POSITION+++++{
PIP@DW+++++{ }{+ADJUST++Å +BACK Using the MENU Button 1. Press the MENU button until the menu is displayed as shown right. 2.

Press the G and then the D/E button to select PIP/DW. 3. Press the G button to enter the PIP/DW mode. 4. Press the D/E button to select VOLUME.

5. Press the G and then D/E button to adjust volume level. 6. Press the ENTER (n) button to exit. SPECIAL CH. LANGUAGE+++++{ CAPTION+++++{
KEY+LOCK+++++{ AUTO+OFF+++++{ DEGAUSS+++++{ PIP@DW+++++{ AUTODEMO+++++{ +MOVE+{NEXT SPECIAL CH.

LANGUAGE+++++{ CAPTION+++++{ KEY+LOCK+++++{ AUTO+OFF+++++{ DEGAUSS+++++{ PIP@DW+++++{ PIP@DW+++++{
TO+SET+PIP@DW AUTODEMO+++++{ +MOVE+{NEXT+}BACK SPECIAL CH. PIP@DW+++++{ VOLUME+++++{ INPUT+++++{
CHANNEL+++++{ POSITION+++++{ }{+ADJUST++Å +BACK 21 Antenna Connections Combination VHF/UHF Antennas 300 ohm Flat Wire 300 ohm Flat Wire TV rear 75 ohm Antenna Jack 300 to 75 ohm Adapter 75 ohm Coaxial Cable 75 ohm CATV Cable 300 to 75 ohm Adapter Connecting an Outdoor Antenna For the best reception, we recommend you use an outdoor antenna.



[You're reading an excerpt. Click here to read official ZENITH](#)

[IQB27FW user guide](#)

<http://yourpdfguides.com/dref/341158>

Severely weathered antennas and antenna cables can reduce the signal quality. Before connecting it, necessarily inspect them.

Any service center can explain the various outdoor antennas available to you. 300 Ohm Flat Wire 1. Connect the 300 ohm flat wire to screws on the 300 ohm to 75 ohm adapter. 2. Push the end of 300 ohm to 75 ohm adapter into 75 ohm antenna jack. 75 Ohm Coaxial Cable 1. Connect the 75 ohm coaxial cable directly to the 75 ohm antenna jack. Connecting a CATV Cable If you subscribe to a CATV system, change the antenna connection as described below. 1. 75 ohm Antenna Jack 300 to 75 ohm Adapter 2.

75 ohm CATV Cable from cable TV source 1. @ @ 2. @ @ @ @ Press the TV/VIDEO button to select VIDEO-1. 2. @ @ Press the TV/VIDEO button to select VIDEO-2.

3. IN 3 JACKS : Connect external equipment outputs (VCR, LASER DISC, CAMCORDER) to these inputs. Press the TV/VIDEO button to select VIDEO-3. 4. IN 4 JACKS : Connect component output jacks to these outputs.

Press the TV/VIDEO button to select VIDEO-4. 5. OUT JACKS: Connect external equipment inputs (VCR, Audio amplifier) to these outputs for recording or monitoring the selected program. 6. EARPHONE JACK : This jack is located on the side of TV. You can hear the mono sound from the TV. Connecting AUDIO/VIDEO IN Jacks 1. Connect the audio/video output jacks of the VCR to IN 1 (A/V) jacks on the back. 2. Press the TV/VIDEO button to select VIDEO-1.

Note: If you connect the audio/video output jacks of the VCR to the IN 3 (A/V) jacks on the side of TV, select VIDEO-3. 3. Press the PLAY button on the VCR. The video playback is on the TV screen. OUT (R)-AUDIO-(L) VIDEO IN 2 IN 1 (MONO) Note: In case of MONO VCR, connect the output jack of VCR to the AUDIO-(L)/(MONO) IN jack of TV so that the sound can be heard from both speakers. If you connect it to the AUDIO-(R) IN jack of TV the sound is heard only from right speaker. 23 Connection of external equipment Connecting the S-VHS VCR Connecting the S-INPUT jacks 1. Connect the S-VHS output jacks of the VCR to the S-INPUT jacks on the back. Remember to connect the audio cables from the VCR to the IN1 audio jacks on the TV. 2.

Press the TV/VIDEO button to select VIDEO-1. 3. Press the PLAY button on the VCR. The video playback is on the TV screen. S-INPUT (R)-AUDIO-(L) OUT VIDEO IN 2 IN 1 (MONO) Connecting the S-OUT jacks 1.

Connect the S-VHS inputs jacks of the VCR to the S-OUT jacks on the back. 2. Select the program number on the TV. 3. Set the recording VCR to record. (R)-AUDIO-(L) OUT VIDEO IN 2 IN 1 (MONO) S-OUT Recording Onto VCR 1. Connect the audio/video input jacks of the recording VCR to the OUT (A/V) jacks on the back. 2. Select the program number on the TV. 3. Set the recording VCR to record. OUT (R)-AUDIO-(L) VIDEO IN 2 IN 1 (MONO) 24 Connection of external equipment Recording a program from connected other equipment 1. Connect the output jacks of the playback VCR to the IN 1 (A/V) jacks on the back of TV (or IN 3 jacks on the side of TV). 2. Connect the input jacks of the recording VCR to the OUT (A/V) jacks on the back of TV.

3. Press the TV/VIDEO button to select VIDEO-1. If you connect it to the IN 3 (A/V) jacks on the side of TV, you should select VIDEO-3. 4. Press the PLAY button on the playback VCR and set the recording VCR to record. < Recording VCR > (R)-AUDIO-(L) OUT VIDEO < Playback VCR > IN 2 IN 1 (MONO) < TV > Connecting the COMPONENT INPUT jacks 1. Connect the component video/audio output jacks of the component. 2. Connect the COMPONENT VIDEO/AUDIO INPUT jacks on the back. 3.

Press the TV/VIDEO button to select VIDEO-4. 4. Press the PLAY button on the component. The component playback is on the TV screen. COMPONENT INPUT VIDEO Y AUDIO Cb (L) Cr (R) IN 4 < TV > DIGITAL AUDIO < Playback component > 25 Troubleshooting check list SYMPTOMS No power No picture or sound Poor picture but good sound Poor reception Lines in picture Ghosts (multiple images) Remote control does not work.

Cannot tune desired channel. CHECK THESE THINGS Is power cord plugged in? Is television turned on? Check batteries in remote control. Try another channel (station trouble). Check antenna connectings. Check for local interference.

Adjust the antenna. Adjust the picture control. Program channel using AUTO PROGRAM. 26 .



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341158)

[IQB27FW user guide](http://yourpdfguides.com/dref/341158)

<http://yourpdfguides.com/dref/341158>