




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH IQC60H95W. You'll find the answers to all your questions on the ZENITH IQC60H95W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH IQC60H95W
User guide ZENITH IQC60H95W
Operating instructions ZENITH IQC60H95W
Instructions for use ZENITH IQC60H95W
Instruction manual ZENITH IQC60H95W

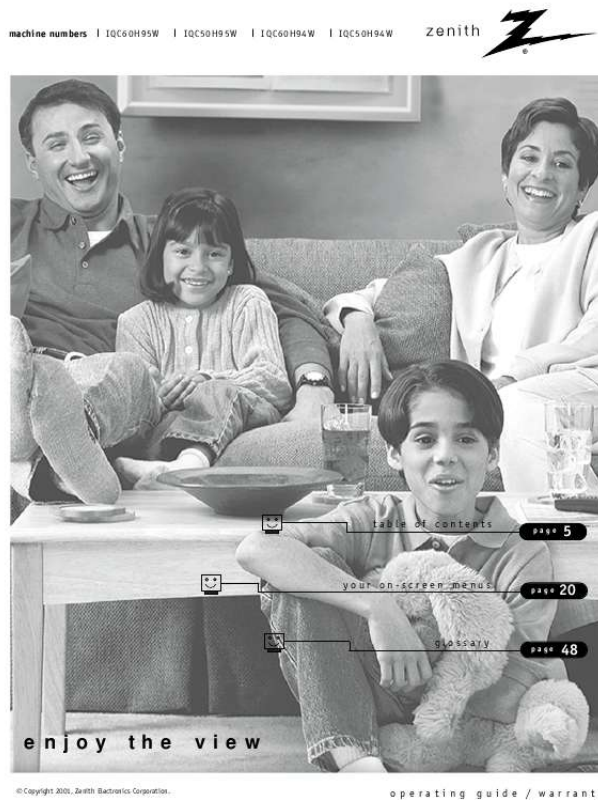

[You're reading an excerpt. Click here to read official ZENITH IQC60H95W user guide](http://yourpdfguides.com/dref/341176)
<http://yourpdfguides.com/dref/341176>

Manual abstract:

REFER TO QUALIFIED SERVICE PERSONNEL. @@@@POWER CORD POLARIZATION: CAUTION: To Prevent Electric Shock, match wide blade of plug to wide slot, fully insert. ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for help. CAUTION: Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. Entertainment Machine™ is a registered trademark of Zenith Electronics Corporation. IMPORTANT SAFETY INSTRUCTIONS Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind.

However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference. Observing the simple precautions discussed in this booklet can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.S. Federal safety requirements, and those of the Canadian Standards Association. 1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards.

2. Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to.

5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6. Water and Moisture Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

12. Power-Cord Polarization This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 7. Accessories, Carts, and Stands Do not place this product on a slippery or tilted surface, or on an unstable cart, stand, tripod, bracket, or table. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product.

Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 13. Power-Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8. Transporting Product A product and cart combination should be moved with care.

Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) PORTABLE CART WARNING 206-3597-O PAGE 3 IMPORTANT SAFETY INSTRUCTIONS (Continued from previous page) 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.

S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. Example of Grounding According to National Electrical Code Instructions openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

19.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341176)

[IQC60H95W user guide](http://yourpdfguides.com/dref/341176)

<http://yourpdfguides.com/dref/341176>

Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. **20. Damage Requiring Service** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a.

If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c. If the product has been exposed to rain or water. d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. e. If the product has been dropped or the cabinet has been damaged.

f. If the product exhibits a distinct change in performance. Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 21. Replacement Parts 15. Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 22. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

16. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. **23. Wall or Ceiling Mounting** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. **17. Overloading** Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. **24. Heat** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

18. Object and Liquid Entry Never push objects of any kind into this product through PAGE 4 206-3597-O Table of Contents Turn to the next page to begin the TV setup. Safety Warnings

.

.

.

. . . 2 Important Safety Information

.

. . . 3 Hookup Directory . .

.

.

. . . 6 Step 1. Hook Up TV Rear Jack Panel . .

.

.

. . . 7 Antenna and Cable Service Hookup . .

.

.

8 Antenna Loop Out with Cable Box Hookup

. . . 9 VCR Hookup

.

.

. . . 10 VCR and Cable Service Hookup . .

.

.

. . . 11 DVD, S-VHS VCR and HD Set Top Box Hookup

. . . 12 External Stereo Hookup

.

.

. 13 Monitor Out Hookup

.

.

.

. . . 14 Step 2. Channel Search and Reception Setup Signal Source Selection

.....
.....
.....15 Auto Program ...

.....
.....
.....
.....16 (Select Antenna, or cable service and perform channel search) Remote Button Functions ...

.....
.....
.....
17 On-Screen Displays

.....
.....
.....
..18 Front Panel Controls ...

.....
.....
.....
...19 On-Screen Menus Overview ..

.....
.....
.....
.... 20 Clock Set

... tput may be used for recording only when the input is of S-Video type. Y, Cb, Cr Component Video Some top-of-the-line DVD players use what is called "component video," for extremely accurate picture reproduction. Refer to your DVD manual for further information. Monitor Out These jacks provide fixed audio and video signals which are used for recording. Use the S-Video Output for high quality video output.

Mini glossary JACK A connection on the back of a TV, VCR, or any other A/V device. This includes the RF jack and the Audio/Video jacks that are color-coded. Picture and sound traveling through cable, or on the air, to your television. SIGNAL PAGE 7 206-3597-A Hook Up Direct Cable TV or Antenna Antenna OR Cable TV Wall Jack 1 2 3 Locate the Antenna/Cable 1 jack on the back of your Entertainment Machine. Connect the cable that runs from the wall directly to this jack.

Turn to page 15 to continue setting up your Entertainment Machine. Over-the-Air Antenna RF Coaxial Wire (75ohm) Cable Service RF Coaxial Wire (75ohm) ANTENNA/ CABLE 1 INPUT 1 S-VIDEO 1 COMP VIDEO IN Y INPUT 2 S-VIDEO 2 COMP VIDEO IN Y MONITOR OUT S-VIDEO TO CABLE BOX VIDEO 1 VIDEO 2 VIDEO ANTENNA/ CABLE 2 (MONO) L Pb (MONO) L Pb L Pr Pr If you receive your RF signal through an antenna that is several years old and connects with two small prongs, you will need to purchase a 300 to 75 Ohm adapter. It should be available from your local electronics dealer. Zenith recommends using a 75 Ohm cable for your antenna connections in order to prevent interference. VARIABLE AUDIO OUT R L R AUDIO AUDIO R AUDIO R PAGE 8 206-3597-A Hook Up Cable Box Some cable services require the use of a cable box to decode premium channels and pay-per-view.

Using the "To Cable Box" to Decoder option, and programming your remote, you can connect your cable box so that you only need your MBR remote to control all the channels. By connecting cable directly to your Entertainment Machine, then running it out to the cable box and back, you make the cable box another source to choose from in the Source selection on your remote. 1 Locate the Antenna/Cable 1 jack on the back of your TV. Connect the cable that runs from the wall directly to the jack. Now find the To Cable Box jack. Connect the cable from this jack to the Input jack on the back of your cable box. Locate the Output jack on the back of your cable box. Connect this to the Antenna/Cable 2 jack on the back of your TV. To view the premium stations, set the channel number on your cable box to HBO, CINEMAX, SHOWTIME, etc. Then press the Source button on your remote and select the other Cable source (Ant 2).

To view the non-premium channels press the Source button and select Ant 1. Then run Auto Program to check for all available channels and store them in memory. In Out Cable Box 2 3 Cable TV Wall Jack Rf Coaxial Wire (75 ohm) ANTENNA/ CABLE 1 TO CABLE BOX INPUT 1 INPUT 2 S-VIDEO 2 COMP VIDEO IN Y COMP VIDEO IN Y MONITOR OUT S-VIDEO 4 S-VIDEO 1 VIDEO 1 VIDEO 2 VIDEO ANTENNA/ CABLE 2 (MONO) L Pb (MONO) L Pr R AUDIO AUDIO R AUDIO Pr R Pb L VARIABLE AUDIO OUT R L 5 Turn to page 15 to continue setting up your Entertainment Machine.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341176)

[IQC60H95W user guide](http://yourpdfguides.com/dref/341176)

<http://yourpdfguides.com/dref/341176>

To receive premium channels, run Auto Program on the second source that is set to receive channels. PAGE 9 206-3597-O Hook Up VCR 1 2 Locate the RF or VHF/UHF/CATV In jack on the back of your VCR. Connect the cable line coming from your wall directly to this jack. Locate the Antenna/Cable 1 jack on the back of your Entertainment Machine. Connect the cable coming from the RF or VHF/UHF/CATV Out jack on the back of your VCR directly to this jack.

Find the composite video and audio jacks on the back of your VCR, and connect them following the instructions provided with your equipment. You may connect either the composite video or the S-video cables to your Entertainment Machine.

(Do not connect BOTH the composite and the S-Video cables. In the event that you connect both composite and S-Video cables, only the S-video will work.) 3

Turn to page 15 to continue setting up your Entertainment Machine. Antenna Cable TV wall jack OR RF coaxial wire (75ohm) Round wire (75ohm)

ANTENNA/ CABLE 1 VCR TO CABLE BOX INPUT 1 S-VIDEO 1 COMP VIDEO IN Y INPUT 2 S-VIDEO 2 COMP VIDEO IN Y MONITOR OUT S-VIDEO

Back AV panel In Out Audio Video S-Video 34 Or ANTENNA/ CABLE 2 VIDEO 1 VIDEO 2 VIDEO (MONO) L Pb (MONO) L Pb L Pr Pr VARIABLE AUDIO OUT R L R AUDIO AUDIO R AUDIO R Or A/V cables not included with TV If you want to receive your signals on Channel 3 or 4, locate the Out to TV jack on your VCR. Connect a cable from the Out to TV jack to the Antenna/Cable 1 jack on the back of your Entertainment Machine.

For several pieces of equipment, edit the names under Source ID so you don't forget which is which. See page 29. PAGE 10 206-3597-O Hook Up Cable Box with VCR 1 2 3 4 Locate the RF or VHF/UHF/CATV In jack on the back of your VCR. Connect the cable line coming from your wall directly to this jack.

Locate the Antenna/Cable 1 jack on the back of your TV.

Connect the cable that runs from the RF or VHF/UHF/CATV Out jack on the back of your VCR directly to this jack. Now find the To Cable Box jack of your Entertainment Machine. Connect a cable from this jack to the Input jack on the back of your cable box. Locate the Output jack on the back of your cable box.

Connect this to the Antenna/Cable 2 jack on the back of your TV. To view the premium stations, set the channel number on your cable box to HBO, CINEMAX, SHOWTIME, etc. Then press the Source button on your remote and select the other Cable source (Ant 2). To view the non-premium channels, press the Source button and select Ant 1. Then run Auto Program to check for all available channels and store them in memory. 5 Find the composite video and audio jacks on the back of your VCR, and connect them as shown below, following the instructions provided with your equipment.

You may connect either the composite video or the S-video cables to your Entertainment Machine. (Do not connect BOTH the composite and the S-Video cables. In the event that you connect both composite and SVideo cables, only the S-video will work.) 6 Turn to page 15 to continue setting up your Entertainment Machine. Out In Cable Box Cable TV Wall Jack Round Wire (75ohm) ANTENNA/ CABLE 1 INPUT 1 S-VIDEO 1 COMP VIDEO IN Y INPUT 2 S-VIDEO 2 COMP VIDEO IN Y MONITOR OUT S-VIDEO VCR TO CABLE BOX VIDEO 1 VIDEO 2 VIDEO Back AV Panel In Out Audio Video S-Video

34 ANTENNA/ CABLE 2 (MONO) L Pr R AUDIO AUDIO R AUDIO Pb (MONO) L Pr R Pb L VARIABLE AUDIO OUT R L Or A/V cables not included with TV PAGE 11 206-3597-O Hook Up DVD Player and HD Set Top Box 1 2 Find the audio and composite or S-Video jacks on the back of your DVD Player and connect them as shown below, following the instructions provided with your equipment. You may connect either the composite video or the S-Video cables to your Entertainment Machine. (Do not connect both the composite and the SVideo. In the event that you connect both composite and the S-video cable, only the S-video will work.) Use the SOURCE button on your remote to select the DVD or Set Top box source. DVD Player ANTENNA/ CABLE 1 TO CABLE BOX

INPUT 1 S-VIDEO 1 3 INPUT 2 S-VIDEO 2 MONITOR OUT S-VIDEO COMP VIDEO IN Y Back AV Panel VIDEO 1 (MONO) COMP VIDEO IN Y VIDEO 2 VIDEO Pb (MONO) L Pb L Pr Audio LR S-Video VARIABLE AUDIO OUT R L ANTENNA/ CABLE 2 L Pr R AUDIO R AUDIO AUDIO R A/V cables not included with TV Some high-end DVD players and High-Definition Set Top Boxes use a picture reproduction system called "component video."

If your DVD player or High-Definition Set Top Box has component output, use these connections. Then go to the section on Component Input on page 27 to select the color system for your DVD or High-Definition Set Top Box. DVD Player ANTENNA/ CABLE 1 TO CABLE BOX MONITOR OUT S-VIDEO COMP VIDEO IN Y INPUT 1 S-VIDEO 1 COMP VIDEO IN Y INPUT 2 S-VIDEO 2 Back A/V Panel Component Video Out Y Pb Pr VIDEO 1 VIDEO 2 VIDEO Audio L R If you have a DVD Player with Component Video, use these jacks marked Y, Pb, and Pr. VARIABLE AUDIO OUT R L (MONO) Pb (MONO) L Pb L Pr ANTENNA/ CABLE 2 L Pr R AUDIO R AUDIO AUDIO R A/V cables not included with TV For several pieces of equipment, edit the names under Source ID so you don't forget which is which. See page 29.

PAGE 12 206-3597-O Hook Up External Stereo Hook up Left/Right Front Speaker to Amplifier System. 1 2 3 4 Locate the Variable Out jacks on the back of your Entertainment Machine and the Input jacks on the back of your stereo's amplifier. Connect the two jacks, making sure that the right and left channels are placed correctly. Set up your speakers through your stereo, according to those directions. Turn off the internal speakers through the Audio Menu.

See page 36. External stereo amplifier ANTENNA/ CABLE 1 TO CABLE BOX INPUT 1 S-VIDEO 1 COMP VIDEO IN Y INPUT 2 S-VIDEO 2 COMP VIDEO IN Y MONITOR OUT S-VIDEO VIDEO 1 VIDEO 2 VIDEO ANTENNA/ CABLE 2 (MONO) L Pb (MONO) L Pb L Pr VARIABLE AUDIO OUT R L Audio cables not included with TV Pr R AUDIO AUDIO R R AUDIO PAGE 13 206-3597-O Hook Up Monitor Out The Monitor Out jacks on your Entertainment Machine allow you to record to a second VCR! 1 2 Locate the Monitor Out jacks on the back of your Entertainment Machine and the Input jacks on the back of your VCR. Connect the Input jacks from your VCR to the Monitor Out jacks on the back of your Entertainment Machine as shown in the diagram to the right. You may connect either the composite video or the S-video cables to your Entertainment Machine. (Do not connect BOTH the composite and the S-Video cables. In the event that you connect both composite and the S-Video cables, only the S-video will work.) 3 Set your VCR to record from the Video (or S-Video) input.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341176)

[IQC60H95W user guide](http://yourpdfguides.com/dref/341176)

<http://yourpdfguides.com/dref/341176>

See your VCR operating manual for details. NOTE: S-VIDEO out only works when recording an S-VIDEO input. (You cannot use S-VIDEO out to record an ANT 1/2 input.

) VCR ANTENNA/ CABLE 1 TO CABLE BOX INPUT 1 S-VIDEO 1 COMP VIDEO IN Y INPUT 2 S-VIDEO 2 COMP VIDEO IN Y MONITOR OUT S-VIDEO Back AV panel Or ANTENNA/ CABLE 2 VIDEO 1 VIDEO 2 VIDEO (MONO) L Pb (MONO) L Pb L Pr Audio Video S-Video VARIABLE AUDIO OUT R L Pr R AUDIO AUDIO R R AUDIO Or A/V cables not included with TV PAGE 14 206-3597-O Signal Source Selection Setup Special Video Audio Theater Setup Special Video Audio Theater Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar To Exit Quit Antenna CATV 1 CATV 2 Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar To Exit Quit Antenna CATV 1 CATV 2 Setup Special Video Audio Theater 1 Use pages 7-14 to hook up your Entertainment Machine. Plug your Entertainment Machine into a standard 120V 60Hz outlet. Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar To Exit Quit Antenna CATV 1 CATV 2 2 Remove the back of the remote and put in two AAA batteries. Make sure batteries are properly installed (check the +/- signs). ? tv source vcr cable flashbk power 3 aux mute back of remote channel volume volume channel 3 4 5 6 7 Turn on your Entertainment Machine by pressing the POWER button on your remote. Press the MENU button on your remote. Select Signal using the DOWN arrow button. Activate the Signal Menu item by pressing the RIGHT arrow button on your remote. Select the signal source of your Entertainment Machine. If your signal comes from an outdoor antenna, select ANTENNA by pressing the DOWN arrow button.

If your signal comes from a cable TV service, select CATV 1 by pressing the DOWN arrow button. When you have made your selection, press the MENU button to return to the Setup Menu. 1 4 7 0 2 5 8 surf 3 6 9 display 4/7 menu quit fav ch c.skip sel pip pip ch swap timer play freez 5/6/7 record pause tv/vcr rewind stop f. fwd.

Continue to the next page to run Auto Programming. PAGE 15 206-3597-O Auto Programming Continued from previous page. Setup Special Video Audio Theater Setup Special Video Audio Theater Setup Special Video Audio Theater Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar To Exit Quit Begin Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar To Exit Quit Menu To Menu Bar To Exit Quit 50% COMPLETE sel Begin INSTALLING CHANNEL 110 1 2 3 4 Press the MENU button on your remote to display the Setup Menu. (If the Menu is already on-screen, skip this step.) Select Auto Program by pressing the DOWN arrow button on your remote.

Press the RIGHT arrow button to select Auto Program. ? tv source vcr cable flashbk power aux mute channel volume volume channel Press the SELECT button on your remote to begin Auto Programming. 1 4 2 5 8 surf 3 6 9 display If certain CATV channels are not received clearly in CATV1 mode, set signal to CATV2 mode. 7 0 1 4 menu quit fav ch c.skip sel pip pip ch swap timer play freez 3 2 record pause tv/vcr rewind stop f. fwd. PAGE 16 206-3597-O Button Functions on Your Remote All the buttons on your remote, and what they do HELP Activates the on-screen Help feature. POWER Turn your Entertainment Machine and all other programmed equipment on or off. MODE BUTTONS Adjust which mode your remote is working in, TV, Cable Box, or VCR. MUTE ? tv source vcr cable flashbk power Press once for Soft Mute, and again for full Mute.

SOURCE Cycles through the available audio/video sources on your Entertainment Machine. aux mute CHANNEL (Up/Down) Goes to next higher/lower available channel. NUMBER KEYPAD FLASHBK Return immediately to the last channel viewed. volume channel channel volume VOLUME (Left/Right) Decreases/increases the sound level For direct channel selection and programming functions. To add a 3 digit channel number, press the number wait until 2 dashes show up to the right of that number then add the other two numbers. ARROW BUTTONS Allows you to move through on-screen menu choices. When Menus inactive, arrow buttons activate Favorite Channels feature. (Must set Favorite Channels first) 1 4 7 0 menu 2 5 8 surf 3 6 9 display SURF Used in entering program numbers for multiple program channels such as 2--1. Used for HDTV or SDTV broadcasts only.* Additionally, the button toggles the PIP display between single mode and surf mode.

MENU Displays on-screen menus. DISPLAY Shows current on-screen settings. quit fav ch c.skip SEL Press to select TV menu features. sel pip pip ch QUIT Leaves programming menus and clears screen of displays.

swap freez PIP Activates the PIP feature. record pause play C. SKIP Channel Skip. Tunes Entertainment Machine to last channel viewed. Tunes back to original channel after 30, 60, 90, 120, 150, or 180 seconds.

timer tv/vcr PIP CH. Select between Main Picture and PIP display tuning control. rewind stop f. fwd. FREEZ Freezes and strobe PIP display. SWAP Swaps between your Main Picture and the PIP Display. TV/VCR Selects TV or VCR as your signal source. RECORD, PAUSE, REWIND, PLAY, STOP, F. FWD These buttons are used to control your VCR (even if your remote is in TV mode!). Remote Control Part Number FAVORITE CHANNEL (RIGHT/LEFT ARROWS) MBR 3476Z 924-10092 Select among 6 different channel groupings.

TIMER Activates Sleep Timer. *Note: A digital broadcaster can transmit multiple programs on a single channel. These programs are distinguished by a unique "sub-channel" number, separated when entering digits by the "--" button on your remote. 206-3597-A PAGE 17 On-Screen Display This page describes your on-screen display options RATING BROADCAST Displays the rating currently being broadcast. MAIN PICTURE SOURCE Displays Main Picture Source (Active source highlighted). AUDIO SELECTED Displays signal's audio setting. CHANNEL LABEL STEREO ST / SAP TV - PG DLSV ANT 1 110 ABC 10 : 00 AM PIP ANT 1 14 Displays channel label you have chosen. AUDIO BROADCAST Displays signal's audio broadcast. TIME Displays clock setting. PIP SOURCE DISPLAY Displays PIP source.

STEREO ST / SAP TV - PG DLSV CHANNEL SKIP Shows that Channel Skip is active. SKIP (C. S.) SKIP (C. S.) ANT 1 110 ABC 10 : 00 AM PIP ANT 1 14 SECURITY TIMER Displays time that TV is set to turn off.



[You're reading an excerpt. Click here to read official ZENITH](#)

[IQC60H95W user guide](#)

<http://yourpdfguides.com/dref/341176>

OFF 10:05 AM OFF 10:05 AM SLEEP 0:01 SLEEP 0:01 SLEEP TIMER SET Displays time left on Sleep Timer before TV shut off. PAGE 18 206-3597-O Front Panel Header 1 2 3 4 5 To access the menus, press the MENU button on the panel. Use the VOLUME Left/Right buttons as the LEFT/RIGHT arrow buttons on your remote. Use the CHANNEL Up/Down buttons as the UP/DOWN arrow buttons on your remote.

Push the EXIT button to return to normal TV viewing. Press the SOURCE button to cycle through all sources. 4/5 Refer to the menu pages for using the on-screen menus. The CHANNEL and VOLUME buttons work just as they do on your remote control. Auto Demo is activated by pressing the POWER button on the front panel and holding down on the button. To turn Auto Demo off, press the POWER button once. 1 2 3 There are four jacks on the front of your Entertainment Machine that make connecting Audio/Video equipment like video games and camcorders very simple. The jacks are located behind a small door to the right of the buttons on the front panel. The jacks are identical to those found on the back of your Entertainment Machine. Which means that any equipment that connects to those types of jacks in the rear jack pack, can also be connected in front.

To use the front jacks as the signal source, use the SOURCE button on your remote. To change the name of the Front Video source, see page 29. S-Video Video L/Mono R 206-3597-O PAGE 19 On-Screen Menus Overview Using the Menu button on your remote, you can access all the menus below Menu Name Page Menu Description SETUP MENU Adjust the basic characteristics of your Entertainment Machine. Language Signal Selection Auto Program Channel Add/Del 22 15 16 23 Pick the language for the on-screen menus to appear in. Adjust the Signal Source for your Antenna/Cable 1 jack. Automatically finds and stores active channels to flip through using Channel Up/Down. Manually pick and choose which active channels will appear when flipping through using Channel Up/Down Review the labels and Parental Controls you have placed on your channels. Set the Clock on your Entertainment Machine. Allows you to adjust the color convergence of your TV. Select the Color System for your DVD player or High Definition Set Top Box.

Channel Review 24 Clock Set Digital Setup Component Input 25 26 27 SPECIAL MENU Go beyond basics and customize your Entertainment Machine's functions. Channel Labels Source ID Favorite Channels 28 29 30 Label your channels with their network names (ABC, CBS, HBO, etc.). Customize the names of your sources by either selecting a label or making your own. Choose your Favorite Channels according to their category Movies, Sports, Sitcoms, News, Music, or Custom.

Allows parents to block any channel with the use of a password. Program up to four separate events for your Entertainment Machine to turn itself on or off, or to turn itself off after a certain amount of time. Choose a captioning or text option for your TV. Changes the background for on-screen menus transparent or opaque. Parental Control Security Timer 31 32 Captions/Text Background 33 34 PAGE 20 206-3597-O On-Screen Menus Overview, cont'd Using the Menu button on your remote, you can access all the menus below Menu Name Page Menu Description VIDEO MENU 35 Adjust your picture for any viewing situation.

Your options are: Contrast, Brightness, Color, Tint, Sharpness, Reset and Advanced Settings: Viewrite, Auto Flesh, Video Filter, Color Temperature, Aspect Ratio, and V. Position. AUDIO MENU 36 Customize the sound to suit your room and your taste. Your options are: Bass, Treble, Balance, Reset and Advanced Settings: Stereo, Mono, Second Audio Program, Internal Speakers, Auto Noise Cancel, Loudness, and Soundrite. T H E A T E R M E N U 37 Select the right audio and video automatic settings that optimize TV's performance for TV, Movies, Music, or Sporting Events PIP OVERVIEW 38 Set the Picture-In-Picture settings for your Entertainment Machine. PAGE 21 206-3597-O Language Menu Setup Special Video Audio Theater Setup Special Video Audio Theater Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar English French Spanish Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input To Exit Quit Menu To Menu Bar English French Spanish To Exit Quit Setup Special Video Audio Theater Language English French Spanish Choose the language you want the on-screen menus to appear in. Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input 1 2 3 4 5 Press Menu to access the Setup menu. Use the UP/DOWN arrow to select Language. Press the RIGHT/LEFT arrow button to activate the Language menu option. Use the UP/DOWN arrow button to select your language preference for the onscreen menus.

Press QUIT to exit and save your choice. Menu To Menu Bar To Exit Quit ? tv source vcr cable flashbk power aux mute channel volume channel volume 1 4 7 0 2 5 8 surf 3 6 9 display 1 3 menu quit fav ch c.skip 5 2/4 sel pip pip ch swap timer play freez record pause tv/vcr rewind stop f. fwd. PAGE 22 206-3597-O Channel Add/Delete Setup Special Video Audio Theater Setup Special Video Audio Theater Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar To Exit Quit Channel 03 Add Delete Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar To Exit Quit Channel 03 Add Delete Nest Channel Ch Or Ch # Keys Setup Special Video Audio Theater Choose Add or Delete to customize your channel selection list Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Channel 03 Add Delete Nest Channel Ch Or Ch # Keys 1 2 3 4 5 Press the Menu button on your remote to access the Setup menu. Use the UP/DOWN arrow to select Channel Add/Del. Press the RIGHT arrow button to activate the Channel Add/Del menu option. Use the UP/DOWN arrow button to Add or Delete the currently selected channel. Press QUIT to exit and save your choice or use the Channel UP/DOWN buttons to select another channel to Add or Delete and repeat steps four and five. Menu To Menu Bar To Exit Quit ? tv source vcr cable flashbk power aux mute channel volume channel volume 1 4 7 0 2 5 8 surf 3 6 9 display 1 3 menu quit fav ch c.

skip 5 2/4 sel pip pip ch swap timer play freez record pause tv/vcr rewind stop f. fwd. PAGE 23 206-3597-A Channel Review Review the channel settings on your Entertainment Machine SMTWT F S SMTWT F S Setup Special Video Audio Theater Calendr Setup Special Video Audio Theater Calendr Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar To Exit Quit CHANNEL REVIEW ANT A CH 1 2 3 4 5 6 7 8 Menu To Menu Bar I.



[You're reading an excerpt. Click here to read official ZENITH](#)

[IQC60H95W user guide](#)

<http://yourpdfguides.com/dref/341176>

D. **** * SCAN ON -----LOCK ON -----To Exit Quit 1 2 3 4 5 Press Menu to access the Setup menu.

Use the UP/DOWN arrow to select the Channel Review option. Use the RIGHT arrow button to activate the Channel Review menu option. Use the UP/DOWN arrow button to cycle through your channel list. Press QUIT to exit. ? tv source vcr cable flashbk power aux mute channel volume channel volume 1 4 7 0 2 5 8 surf 3 6 9 display 1 3 menu quit fav ch c.

skip 5 2/4 sel pip pip ch swap timer play freez record pause tv/vcr rewind stop f. fwd. PAGE 24 206-3597-A Clock Set Set the clock on your Entertainment Machine TO SET TIME Setup Special Video Audio Theater Setup Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar To Exit Quit Menu To Menu Bar To Exit Quit 12 : 00 AM JAN 01 1999 1 2 3 4 5 Press the Menu button on your remote to access the Setup menu. Use the UP/DOWN arrow to select Clock Set. Use the RIGHT arrow button to set the clock on your Entertainment Machine. Use the RIGHT/LEFT arrow button to select time and date options. Use the UP/DOWN arrow buttons to adjust time and and date options. Press QUIT to save and exit. ? tv source vcr cable flashbk power aux mute channel volume channel volume 1 4 7 0 2 5 8 surf 3 6 9 display 1 3/4 menu quit fav ch c.skip 5 2/4 sel pip pip ch swap timer play freez record pause tv/vcr rewind stop f.

fwd. 206-3597-A PAGE 25 Digital Setup Your Zenith Projection TV has three color projection tubes: one for red, one for green, one for blue. When mixed together in the proper proportion, the output of these three color tubes can produce any color. To produce these colors, however, the beams must be precisely aligned over each other so that the colors can be mixed. The process of aligning these picture beams is called "convergence". Over a period of time, the picture tubes can drift out of alignment due to normal bumps and vibrations or moving the TV. If you move your TV, or if, after a time, you notice color rings or halos around objects in the picture, you may want to converge (align) the colors. Properly converged, the lines appear white, which is actually a combination of the outputs of the three color tubes. The output of the green tube is stationary. The outputs of the red and blue tubes can be adjusted.

When properly aligned, the outputs of all three tubes should be directly over each other to produce the white lines. To simplify convergence, Zenith incorporates a feature to allow you to display a test pattern of horizontal and vertical lines at one location on the screen. Simply use the remote control to adjust the red and blue colors to match the green. When properly aligned, the outputs of all three tubes should be directly over each other to produce the white lines. To enter this adjustment mode, press the front panel DIGITAL SETUP button.

Flashes Red DIGITAL SETUP menu Flashes Blue menu Press the ARROW buttons on the remote control to move the displayed color up, down, left, or right. (Press the QUIT button to toggle between red and blue.) Press MENU on the remote control to change the color you want to adjust. Press the front panel DIGITAL SETUP button or the remote control MENU button when adjustment is done. This will save your adjustment into memory.

NOTES: Only a momentary press of the DIGITAL SETUP button is necessary to enter DIGITAL SETUP convergence adjustment mode. Do not press the DIGITAL SETUP button for more than three seconds. To save your adjustment data into memory, press the front panel DIGITAL SETUP button or the remote control MENU Button. If you do NOT wish to save your adjustment data into memory, turn the TV OFF. When the TV is turned ON again, your old convergence data will be restored. To exit this function, press DIGITAL SETUP on the front panel of your Entertainment Machine. PAGE 26 206-3597-O Component Input Select Component Input as the picture and sound source on your Entertainment Machine PRESS SELECT TO ACTIVATE/DEACTIVATE Setup Special Video Audio Theater Setup Language Signal Auto Program Channel Add/Del Channel Review Clock Set Digital Setup Component Input Menu To Menu Bar To Exit Quit Component Input Color System HDTV SDTV/DVD Menu To Menu Bar To Exit Quit 1 2 3 4 Press the Menu button on your remote to access the Setup menu. Use the UP/DOWN arrow to select Component Input. Use the RIGHT arrow button to access the Color System Menu. Use the UP/DOWN arrow buttons to select HDTV or SDTV/DVD (depending on whether you have an HDready Set Top Box or a DVD player connected to your component video jacks).

Use SELECT to pick your choice. Press QUIT to save and exit. ? tv source vcr cable flashbk power aux mute channel volume channel volume 1 4 7 0 2 5 8 surf 3 6 9 display 5 6 1 5 3 menu quit fav ch c.skip 6 2/4 sel pip pip ch swap timer play freez record pause tv/vcr rewind stop f. fwd. NOTES: To access this menu, you must be tuned to the VIDEO: 1 or 2 input and have a component hooked up to the Y-PbPr input jacks. Setting this feature will affect only the input you are currently viewing. If you are using both sets of component input jacks, be sure to set the COMPONENT INPUT for BOTH inputs. 206-3597-A PAGE 27 Channel Labels: Preset/Custom To Change Letter Setup Special Video Audio Theater Setup Special Video Audio Theater Special Channel Labels Ch 03 XXXX ABC CBS ESPN HBO NBC Ch SHOW Channel Labels Source I D Favorite Channels Parental Control Security Timer Caption/Text Background Channel Labels Ch 03 XXXX Ch Labels Custom Ch. Delete Next Ch Ch Ch Ch Labels Custom Ch.

Delete Next Ch Ch Or #Keys Menu To Menu Bar To Menu Quit Menu Bar Exit To Or #Keys To To Menu Quit Menu Bar Exit Use the preset labels to name the channels or create your own channel labels on your Entertainment Machine To Change Letter Setup Special Channel Labels 1 2 3 4 Press MENU button on your remote and then press the RIGHT/LEFT arrow button to access the Special Menu. Press an UP/DOWN arrow to select Channel Labels. Press the RIGHT arrow button to activate the Channel Labels option. Menu Ch 03 XXXX Ch Labels Custom Ch. Delete Next Ch Ch Ch X X X X (CUSTOM) Or #Keys To Menu Bar To Exit Quit At this point you have three options: Select a pre-set channel label by selecting Channel Labels.

Or Customize your channel label by selecting Custom Channel, or delete a channel label entirely by selecting Delete. Use the UP/DOWN arrows to select an option. If you select Channel Labels, press the RIGHT arrow button to access the preset channel label list and scroll through this list using the UP/DOWN arrow buttons. When you find the right label for the channel, press the SELECT button.



[You're reading an excerpt. Click here to read official ZENITH IQC60H95W user guide](http://yourpdfguides.com/dref/341176)
<http://yourpdfguides.com/dref/341176>

If you select Custom Channel, press the RIGHT arrow button once and then use the UP/DOWN arrow buttons to select individual letters and LEFT/RIGHT arrow buttons to select placement of letters.

@@@ Repeat steps 4-9 for all channels you wish to label. @@@@ Use the RIGHT arrow button to select VID1, VID2 or Frt. Vid (for front video jacks). @@@@ Press SELECT to save your choice. @@@@ Press QUIT to save your choice and exit. @@@@ Press the RIGHT arrow button to activate Favorite Channels option. @@@@ Use the UP/DOWN arrow buttons to select the next channel entry. Repeat these steps for all categories. @@@@ fwd. PAGE 30 206-3597-A Parental Control Use Number Buttons To enter Secret Code Setup Special Video Audio Theater Channel Labels **** Source I D Favorite Channels Parental Control Security Timer Caption/Text Background Enter Secret Code Channel 03 Video Lock Quick Lock Front Panel Lock Movie Ratings TV Ratings Canadian Ratings (Eng) Canadian Ratings (Fra) Menu To Menu Bar To Exit Quit Menu To Menu Bar To Exit Quit 1 2 3 Press MENU and then the RIGHT/LEFT arrow button to access the Special Menu.

PRESS SELECT TO Press an UP/DOWN arrow to select Parental Control and press the RIGHT arrow button to activate Parental Control. When prompted, enter the default code 7777 from the number keypad. If you wish to change the code, select "Change Secret Code" and enter the new code through the number keypad. If you forget your code, just re-enter "7777" to reset to factory preset code. Use the UP/DOWN arrow buttons to select the Signal block, press SELECT to confirm your choice: · Channel: Selects the channel you wish to restrict. (This option only works if TV is tuned to Antenna 1 or Antenna 2) · Video Lock: Selects the Video Inputs to be blocked. (This option only works if TV is tuned to VID 1, VID 2, or FRT VID) · Quick Lock: Blocks CH3 and CH4 on ANT 1 and 2, as well as all 3 video input jacks. · Front Panel Lock: Blocks front panel controls from being used. Only Power button will work when this feature is on. Menu ACTIVATE/DEACTIVATE SPECIAL **** Enter Secret Code Channel 03 Video Lock Quick Lock Front Panel Lock Movie Ratings TV Ratings Canadian Ratings (Eng) Canadian Ratings (Fra) 4 To Menu Bar To Exit Quit ? tv source vcr cable flashbk power aux mute 5 Now you will set the Ratings for the channel you wish to block.

Press the UP/DOWN arrows to select the following rating formats and press the RIGHT arrow button to activate each rating menu: · Movie Ratings: Sets ratings based on MPAA ratings system. · TV Ratings: Sets ratings based on the age of viewer and content of programming. · Canadian Ratings (Eng): Sets age ratings for Canadian broadcasting (Eng). · Canadian Ratings (Fra): Sets age ratings for Canadian broadcasting (Fra). channel volume channel volume 1 4 7 0 2 5 8 surf 3 6 9 display 3 8 2/4/5/6 6 7 8 For each rating menu, press the UP/DOWN arrow buttons to select the level of rating you wish to block. Press the SELECT button to lock or unlock the rating selection. Press QUIT to save and exit. 1 4/7 1/5 menu quit fav ch c.skip sel pip pip ch swap timer play freez record pause tv/vcr rewind stop f. fwd.

In order to use Video lock, you must press the source button on the remote until you select VID 1, VID 2 or Frt. Vid. in order to lock these source. The same applies to unlocking the Video Lock. 206-3597-A PAGE 31 Security Timer Use the Security Timer to turn your TV on and off automatically Setup Special Video Audio Theater Setup Security Timer Special Video Audio Theater Channel Labels Source I D Favorite Channels Parental Control Security Timer Caption/Text Background 1 2 3 4 - - - - AM TV ON - - - - AM TV OFF MON (Day 1 of Week) - - CHANNEL ONCE DAILY WEEKLY OFF Menu To Menu Bar To Exit Quit Menu To Menu Bar To Exit Quit 1 2 3 4 5 6 7 8 9 10 11 Press MENU and the RIGHT/LEFT arrow button to access the Special Menu. ? power Use the UP/DOWN arrow to select Security Timer. Press the RIGHT arrow button to activate the Security Timer option. You may select up to four ON/OFF time settings for your TV. Use the RIGHT arrow button to select 1-4, then press the DOWN arrow button to select the TV On time. tv source vcr cable flashbk aux mute channel volume volume channel Press RIGHT arrow to Set On time.

Set time using the LEFT/RIGHT and UP/DOWN arrow buttons (the same way you set the TV's clock). Press the LEFT arrow button repeatedly until the cursor appears to the left of the current line item. Use the DOWN arrow button to select Day. Press LEFT/RIGHT button to select which day of the week (if necessary). Press the LEFT arrow button repeatedly until the cursor appears to the left of the current line item. Use the DOWN arrow button to select Channel. Set the channel for the TV to tune to by entering the channel through the number keypad. Press the LEFT arrow button repeatedly until the cursor appears to the left of the current line item. Use the UP/DOWN arrow buttons to select Once, Daily, Weekly or Off. Use the SELECT arrow button to set your selection.

Repeat steps 3-8 for three more "events" or press QUIT to save and exit. 1 4 7 0 2 5 8 surf 3 6 9 display 1 menu quit fav ch c.skip 11 sel pip pip ch swap timer play freez record pause tv/vcr 2/3/4/6/8/10 f. fwd. rewind stop 1/2/3/4/5/6/7/9 PAGE 32 206-3597-A Caption/Text Set the Caption/Text options for your Entertainment Machine Setup Special Video Audio Theater Setup Special Video Audio Theater Channel Labels Source I D Favorite Channels Parental Control Security Timer Caption/Text Background Caption/Text Display Off Mode C.

C. Channel 1 2 Press Quit To Exit Quit Text On Menu To Menu Bar To Exit Quit Menu To Menu Bar 1 2 3 4 5 6 Press MENU and the RIGHT/LEFT arrow button to access the Special Menu. Press an UP/DOWN arrow to select Caption/Text. Press the RIGHT arrow button to activate Caption/Text option. Select Display Off or On to turn on your caption or text selection.

Press the RIGHT arrow button to turn Display On or Off. Press a DOWN arrow button to select the mode, C. C. for Closed Captions or Text for Text. Use the RIGHT arrow button to select. Press a DOWN arrow button to select which channel Closed Captions or Text shall be set to. Usually this should be set to 1. Use the RIGHT arrow to select. Press QUIT to save and exit. ? tv source vcr cable flashbk power aux mute channel volume channel volume 1 4 7 0 2 5 8 surf 3 6 9 display 1 1/2/3/4/5 menu quit fav ch c.

skip 6 2/4/5 sel pip pip ch swap timer play freez record pause tv/vcr rewind stop f. fwd. PAGE 33 206-3597-O Background Select Gray or Shaded for the menu backgrounds Setup Special Video Audio Theater Setup Special Video Audio Theater Channel Labels Source I D Favorite Channels Parental Control Security Timer Caption/Text Background Menu Channel Labels Source I D Favorite Channels Parental Control Security Timer Caption/Text Background Gray Shaded Menu To Menu Bar To Exit Quit To Menu Bar To Exit Quit 1 2 3 4 Press MENU and the RIGHT/LEFT arrow button to access the Special Menu.



[You're reading an excerpt. Click here to read official ZENITH](#)

[IQC60H95W user guide](#)

<http://yourpdfguides.com/dref/341176>

Use the UP/DOWN arrow to select Background. Press the RIGHT arrow button to activate Background option. Use the UP/DOWN arrow buttons to select Gray or Shaded. ? tv source vcr cable flashbk power aux mute channel volume channel Press QUIT to save and exit. 1 4 7 0 2 5 8 surf 3 6 9 display 1 1/2 menu quit fav ch c.skip 4 2/3 sel pip pip ch swap timer play freez record pause tv/vcr rewind stop f. fwd.

PAGE 34 206-3597-A Video Menu Customize the picture appearance Setup Special Video Audio Theater Setup Special Video Audio Theater Contrast Brightness Color Tint Sharpness Reset Advanced Settings Menu To Menu Bar 75 % 50% 50% Advanced Settings ViewRite Auto Flesh Video Filter Color Temperature 50% Cool Aspect Ratio 4:3 V. Position Warm 16:9 +10 To Exit Quit To Exit Quit Menu To Menu Bar 1 2 Press MENU and the RIGHT/LEFT arrow button to access the Video Menu. Use the UP/DOWN arrow to select one of the following options. Press the RIGHT/LEFT arrow button to activate that option (For these items only, the adjustment bar will drop to the bottom of the screen, continue with normal operation.): ? · Contrast: Changes the amount of difference between black levels and white power levels in your picture.

· Brightness: Increases or decreases the amount of white in your picture. · Color: Adjust levels of all colors. · Tint: Adjust the relative amounts of the color red and green in your pic- tv source vcr cable flashbk aux mute ture. · Sharpness: Raise or lower the definition of the picture. The lower the level, volume channel volume channel the softer the image will appear.

3 4 5 Use the UP/DOWN arrow to select Reset (Reset restores the levels to their original settings). Press SELECT to confirm your choice. Use the UP/DOWN arrow to select Advanced Settings. Press the RIGHT arrow button to activate the Advanced Settings menu. Use the UP/DOWN arrow to select from the following options. Press SELECT to confirm your choice: · Viewrite: Automatically monitors and adjusts contrast depending on room lighting to produce a more natural picture. Also adjusts Auto Flesh Tone and Video Filter depending on signal. · Auto Flesh: Automatically monitors and adjusts the color to maintain constant color levels even after a program or channel changes. · Video Filter: Automatically reduces conspicuous noise in the picture without degrading picture quality. 1 4 7 0 2 5 8 surf 3 6 9 display 1 3/5 menu quit fav ch c.

skip 7 sel pip pip ch swap timer play freez record pause tv/vcr 2/3/4/5/6 f. fwd. rewind stop 6 Use the UP/DOWN arrow to select the following options. Press the RIGHT arrow button to select the setting for these options: · Color Temperature: Set this to Warm for hotter colors such as red, or set to cool for less intense colors with more blue. · Aspect Ratio: Select between 4:3 ratio, a traditional TV format or 16:9 the widescreen "letterbox" format. (Only available if component video source is active). · Vertical Position: Adjusts the vertical position of a widescreen picture format, 16:9. (Only available if component video source is active). 1/2/4/5/6 7 206-3597-A Press QUIT to save and exit. PAGE 35 Audio Menu Customize the sound to your preference Setup Special Video Audio Theater Setup Special Video Audio Theater Bass Treble Balance Reset Advanced Settings 75 % 50% 50% Advanced Settings Stereo Mono Second Audio Programming Internal Speakers Auto Noise Cancel Loudness SoundRite Menu To Menu Bar To Exit Quit Menu To Menu Bar To Exit Quit 1 2 Press MENU and the RIGHT/LEFT arrow button to access the Audio Menu.

Use the UP/DOWN arrow to select one of the following options. Press the RIGHT/LEFT arrow buttons to adjust that option. ? · Bass: Increase/decrease lower-end sounds. · Treble: Increase/decrease higher-end sounds. · Balance: Allows you to put the sound more to the left or right channel. tv source vcr cable flashbk aux mute power 3 4 5 Use the UP/DOWN arrow to select Reset (Reset restores the levels to their original settings). Press SELECT to confirm your choice. Use the UP/DOWN arrow to select Advanced Settings. Press the RIGHT arrow button to activate the Advanced Settings menu. Use the UP/DOWN arrow to select from the following options.

Press SELECT to confirm your choice: · Stereo: Activate stereo sound. · Mono: Activate mono sound. · Second Audio Programming: Activates separate audio channel available with some programming. · Internal Speakers: This function is useful when first setting up external speakers, or if you prefer to use only speakers from a separate stereo system. · Auto Noise Cancel: Use to eliminate the noise between stations. · Loudness: This function will improve the quality of both low and high frequency sounds when listening at low volume levels. · SoundRite: This function will automatically adjust volume so each channel has the same average volume level volume channel volume channel 1 4 7 0 2 5 8 surf 3 6 9 display 1 3/5 1/2/4 menu quit fav ch c.skip 6 2/3/4/5 sel pip pip ch swap timer play freez record pause tv/vcr rewind stop f. fwd. 6 Press QUIT to save and exit.

Not all programming is broadcast in stereo sound, or has Second Audio Programming/SAP. Programming that doesn't broadcast SAP may be silent when you set your Entertainment Machine on this setting. 206-3597-A PAGE 36 Theater Modes Set the Theater Modes to your preference Setup Special Video Audio Theater Setup Special Video Audio Theater Theater Modes SRS TV Movies Music Sports Reset Theater Modes SRS TV Movies Music Sports Reset Menu To Menu Bar To Exit Quit Menu To Menu Bar To Exit Quit 1 2 3 4 5 6 7 8 9 Press MENU and then the RIGHT/LEFT arrow button to access the Theater menu. ? power Press DOWN arrow button to access the Theater Modes or SRS®. To change Theater Modes, press RIGHT/LEFT arrow buttons to select the Theater Modes. Use the UP/DOWN arrow buttons to choose which mode you prefer. Each is a preset Audio-Video configuration which enhances your viewing pleasure. Use the UP/DOWN arrow to select Reset (Reset restores the levels to their original settings). Press SELECT to confirm your choice. To activate SRS®, use the LEFT/RIGHT arrow buttons to activate On/Off switch.

Use the UP/DOWN arrow buttons to select On or Off. Press SELECT to confirm your choice. Press QUIT to save and exit. tv source vcr cable flashbk aux mute channel volume channel volume 1 4 7 0 2 5 8 surf 3 6 9 display 1 5/8 1/3/6 menu quit fav ch c.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341176)

[IQC60H95W user guide](http://yourpdfguides.com/dref/341176)

<http://yourpdfguides.com/dref/341176>

skip 9 2/4/5/7 sel pip pip ch swap timer play freez record pause tv/vcr rewind stop f.

fwd. SRS retrieves the spatial information from any stereo recording and restores the original three-dimensional sound field. As a result, the reproduced sound is much closer to that of a live performance. SRS and the symbol are trademarks of SRS labs, Inc. SRS technology is incorporated under license from SRS Labs, Inc.

© 206-3597-A PAGE 37 Picture-In-Picture Overview Picture-in-Picture is like having two TVs in one YOUR PICTURE-IN-PICTURE FEATURE The Picture-In-Picture (PIP) function allows you to put a smaller picture, called the "inset," on the bigger screen, or the "main" picture. Don't want to miss any of the big game, but hate commercials? Just put the game in the inset, and surf with the main picture. 2-TUNER PIP FEATURE Normally, you would need some other piece of equipment, like a VCR, to act as a tuner to receive and display a second channel at the same time. Your Entertainment Machine eliminates that need by giving you two tuners in one TV. PIP is always available, no matter what equipment you have. WORKING WITH PIP This is where your MBR remote is put to the most use. All of the functions PIP has are accessible through the menus that pop up on-screen when you use your remote. There's more about that on the following page. Just like your Entertainment Machine's main screen, PIP will need a source to take its image from. When you set the main screen source to Antenna/Cable 1 or 2, the PIP source will automatically set to that as well.

You can adjust and/or request a different source through the Source selection on your remote. Main Picture Picture-in-Picture POSSIBLE REASONS FOR ADJUSTING PIP SOURCE 1. You use a cable box to receive premium channels, and have it "looped out" on the back of the TV. Set the PIP source to the cable box source, and the Inset will display the premium channels, which can then be swapped with the main picture. 2. You want to watch a video tape, but keep scanning for another movie or game. Set the PIP source to VIDEO 1, or 2 and you can watch the VCR and TV, swapping between the two. PAGE 38

206-3597-A Picture-In-Picture Overview SINGLE MODE PIP 1 Press the PIP button on your remote to activate the PIP display. This display appears in one corner of the screen. Press PIP again to remove the display from the screen.

Use the PIP Ch button on your remote to switch between main picture and PIP inset display channel tuning control. · Main Picture channel tuning: Channels are tuned for the main screen. · PIP Inset Display channel tuning: Channels are tuned for the PIP inset. Note: Available for Antenna 1-2 sources. Press the SOURCE button on your remote when PIP display is active to change PIP source from VID1, VID2, FRT.

VID, and ANT 1 antenna source. 2 3 SURF MODE PIP 1 Press the PIP button on your remote. Press the "Surf" button to see three PIP insets. Surf will scan all active channel numbers and display them as PIP displays. Press PIP again to remove PIP displays from screen.

2 NOTES: If Parental Control Ratings are locked, it will disable multiple PIP insets (SURF mode PIP). 206-3597-A PAGE 39 PIP Functions swap swap PIP SWAP 1 Press the SWAP button on your remote to switch between the PIP display and the main picture. PIP MOVE 1 If you wish to move the PIP display to another part of your screen other than the corners, simply activate the PIP display, wait about eight seconds and then move the PIP display with the UP/DOWN and LEFT/RIGHT arrow buttons on your remote. PIP FREEZE 1 2 With PIP displayed, press the FREEZ button on your remote to freeze the PIP display. Pressing FREEZ with PIP off will automatically bring up a PIP display with the Main Picture screen frozen at that point. PIP STROBE 1 2 To activate the "Strobe" feature of your PIP display, Press FREEZ to bring the PIP window on the screen. Press the "Surf" button on your remote control. You will see three PIP displays of a single scene separated by 1/10 of a second in time. This feature is useful for viewing a moving picture that has many details. For example, a close play in a sport event or a golf swing.

surf PAGE 40 206-3597-A Programming the Remote Program your remote to operate other products such as a VCR or Cable Box 1 2 The device you want to program should be ON. On the following pages go the brand code chart in this manual, find the type of device you're programming and then find the brand name. Write down the two-digit code(s); for programming the remote to operate other devices. Press and release the mode button (VCR, Cable, Aux) for the device you wish to program. This will switch the remote to that mode. Press and hold the mode button for the device you want to program until the Indicator Light turns on. While holding down the mode button, enter the two digit programming code through the number keypad. The indicator light will flash three times and turn off if the code was accepted. Aim the remote at the device and push the POWER button. It should turn off.

If not, try the other codes listed and continue from step three. Indicator Light ? tv source vcr cable flashbk power 6 3/4 aux mute channel volume channel volume 3 4 5 1 2 5 8 surf 3 6 9 display 5 4 7 0 menu 6 quit fav ch c.skip sel pip pip ch swap freez record pause play timer tv/vcr Not all devices will work with your Zenith remote control. rewind stop f. fwd.

206-3597-A PAGE 41 Product Brand Programming Codes VCRs Adventura

. 00 Aiko

. 08 Aiwa

00 Akai

.

01 American High . . . 22 Asha

. . . 45 Audiovox

23 Beaumark

. 45 Bell & Howell

32 Brandt 43 Broksonic

. 33 Calix

. 23 Canon

.

. . . 22 Capehart 06 Carver

. 31 CCE

.

. . . 08 Citizen

. 08 Colt

. 30 Craig

.

18 Curtis Mathes . . . 01 Cybernex . .
 45 Daewoo

 . . 06 Daytron 06 Dynatech .

 . 00 Electrohome
 . 23 Electrophonic 23 Emerx

 07 Emerson
 . 00 27 42 Fisher

 18 Fuji

 09 Funai 00 08 12 15 23 28 33 34 37 48 51 52 20 32 46 22 08 16 38 23 30 45 22 47 30 23 34 42 51 52 48 49 Garrard .

 . . 00 General Electric . . 03 Goldstar .
 23 Gradiente

 . . . 00 Harley Davidson . . 00 Harman/Kardon . . 24 Harwood . .

 30 Headquarter
 17 Hi-Q

 18 Hitachi 00 Jensen . . .

 . 01 JVC
 01 KEC

 08 Kenwood
 . . . 01 KLH

 . . . 30 Kodak

 . . 22 Lloyd
 . 00 Lloyd's
 27 Logik
 30 LXI

 23 Magnavox

 14 Magin
 45 Marantz

 . . 22 Marta
 . 23 Matsushita
 . . 22 MEI
 22 Memorex

 00 22 MGA
 15 MGN Tech

 45 Minolta



You're reading an excerpt. [Click here to read official ZENITH IQC60H95W user guide](http://yourpdfguides.com/dref/341176)
<http://yourpdfguides.com/dref/341176>