



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH L20V26C. You'll find the answers to all your questions on the ZENITH L20V26C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH L20V26C
User guide ZENITH L20V26C
Operating instructions ZENITH L20V26C
Instructions for use ZENITH L20V26C
Instruction manual ZENITH L20V26C

Installation, Setup & Operating Guide | Warranty
Model Number | L20V26C | LCD TV



© Copyright 2010, Zenith Electronics Corporation



[You're reading an excerpt. Click here to read official ZENITH L20V26C user guide](http://yourpdfguides.com/dref/341192)
<http://yourpdfguides.com/dref/341192>

Manual abstract:

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@@@NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. **REGULATORY INFORMATION:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment **CAUTION:** Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation.

Unauthorized modification could void the user's authority to operate this product. The responsible party for this product's compliance is : Zenith Electronics Corporation, 2000 Millbrook Dr., Lincolnshire, IL 60069, USA 1-847-941-8000 206-3921 2 **IMPORTANT SAFETY INSTRUCTIONS** Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference.

Observing the simple precautions discussed in this booklet can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.S. Federal safety requirements, and those of the Canadian Standards Association. 1. Read Instructions All the safety and operating instructions should be read before the product is operated. 2. Follow Instructions All operating and use instructions should be followed. 3. Retain Instructions The safety and operating instructions should be retained for future reference.

4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 6. Water and Moisture Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool. 7. Accessories, Carts, and Stands Do not place this product on an unstable cart, stand, tripod, bracket, or table.

The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 8. Transporting Product A product and cart combination should be moved with care.

Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered.

The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 12. Power-Cord Polarization This product is equipped with a three-wire grounding type alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature.

If you are unable to insert the plug fully into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 13. Power-Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. (Continued on next page) **PORTABLE CART WARNING 206-3921 3 IMPORTANT SAFETY INSTRUCTIONS (Continued from previous page)** 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20. Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a.

If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341192)

[L20V26C user guide](http://yourpdfguides.com/dref/341192)

<http://yourpdfguides.com/dref/341192>

c. If the product has been exposed to rain or water.

d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. e. If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance. 21.

Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

22. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine if the product is in proper operating condition. 23. Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. 24. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Example of Grounding According to National Electrical Code Instructions Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 15. Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

16. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18. Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. 206-3921 4 1 Safety Warnings Important Safety Instructions Controls Remote Control: Installing Batteries/ Operation TV Overview 2 3 6 10 11 2 CONTENTS BASIC FEATURES 5 MISC. SPECIAL FEATURES VIDEO / AUDIO CLOCK/ TIMERS INDEX 3 Turning the TV On TV Mode Menus Menu Language Selection Auto Programming: Finding/Erasing Channels Favorite Channel Memory 20 21 22 23 25 4 Clock Setup Off Timer Setup On Timer Setup Sleep Timer Setup 26 27 28 29 5 Video/Picture Setup Audio/Sound Setup 30 33 Before operating the TV, please read this manual carefully.

6 Closed Captions Parental Control Auto Off Key Lock 39 42 45 46 7 Maintenance Product Specifications Troubleshooting Checklist Your Zenith Limited Warranty 47 48 49 Back cover 206-3921 INSTALLATION Antenna/Cable Connections VCR Connection and Viewing Setup External Equipment Connections DVD Player Connections DTV (Set-top Box) Connections 14 16 17 18 19 INTRODUCTION Controls Front of the TV Side Control Panel Channel Buttons ch vol Volume Buttons enter Enter Button Menu Button TV/Video Button menu tv/video Remote Control Sensor Power/Standby indicator Glows red in Standby mode, Glows green when the TV is turned on. on/off Power Button 206-3921 6 Back of the TV These 4 threaded holes are available for attaching the bracket provided with the accessory wall-mount installation kit. DC (15V) Y PB (480i/480p) PR S ANT IN 75 LL DVD / DTV Connection Panel DC IN (15V) Y PB PR L AUDIO R H/P S-VIDEO VIDEO MONO L AUDIO R VIDEO L AUDIO R COMPONENT(480i/480p) DVD / DTV IN IN MONITOR OUT ANT IN 75 LL Power Input Headphone Jack DVD/DTV Input S-Video Input Monitor Output Antenna Input Audio/Video Input 206-3921 7 INTRODUCTION Controls Remote Control Buttons power jack.) Turn clockwise to tighten. VIDEO L AUDIO R MONITOR OUT ANT IN 75 LL 75 Round Cable Bronze Wire 300 Flat Wire Antenna Converter Apartment Buildings Wall Connection Jack Antenna jack - If you have a 75 round cable, insert the bronze wire and then tighten the connection nut. If you have a 300 flat wire, connect the twisted wire to the antenna converter and then connect the converter to the antenna jack on the TV. - When using 75 round cable, do not bend the bronze wire. It may cause poor picture quality. Connecting to an Outdoor Antenna Setup q This type of antenna is commonly used in single family dwellings. Turn clockwise to tighten.

VIDEO VHF Antenna L AUDIO R MONITOR OUT ANT IN 75 LL UHF Antenna 75 Round Cable Bronze Wire 300 Flat Wire Single Family Home Antenna Converter Antenna jack UHF MONITOR OUT signal Amplifier 206-3921 14 LL - In poor signal areas, to get better picture quality, install the signal amplifier as shown to the right. - If antenna is split for two TVs, use a signal splitter for connection. VIDEO L AUDIO R VHF ANT IN 75 - After subscribing to a local cable TV service and installing a converter, you can watch cable TV programming. Cable TV Connections INSTALLATION PB PR L AUDIO R 1 Connections DC IN (15V) Y H/P S-VIDEO VIDEO MONO L AUDIO R VIDEO L AUDIO R COMPONENT(480i/480p) DVD / DTV IN IN MONITOR OUT ANT IN 75 LL 2 1 (R) AUDIO (L) TV VCR VIDEO RF Cable Cable Box Connection Panel 2 Viewing Setup a. Use the tv/video button on the remote control to select TV (Ant In.) or Video source, depending on connection setup: 1 or 2. - Connection 1: Set cable box switch to 3 or 4 and then tune TV to the same channel number. - Connection 2: Select VIDEO source input to use Audio/Video In connections. b. Select channels with the cable box. - For further cable TV information, contact a local cable service provider. 206-3921 15 VCR Connection and Viewing Setup - In Video mode, TV automatically reverts to TV mode if the fcr button or flashbk buttons are pressed. - See following pages to connect other A/V external equipment to input jacks on the TV.



[You're reading an excerpt. Click here to read official ZENITH L20V26C user guide](http://yourpdfguides.com/dref/341192)
<http://yourpdfguides.com/dref/341192>

CC 1 is usually the signal with the captions, while Another mode might show demonstration or programming information. Your TV might not receive caption signals normally in the following situations.

1 Poor reception conditions are encountered: · IGNITION: Picture may flutter, drift, suffer from black spots, or horizontal streaking. Usually caused by interference from automobile ignition systems, neon lamps, electrical drills, and other electrical appliances. · GHOSTS: Ghosts are caused when the TV signal splits and follows two paths. One is the direct path and the other is reflected off tall buildings, hills or other objects. Changing the direction or position of the antenna may improve reception. · SNOW: If your receiver is located at the weak, fringe area of a TV signal, your picture may be marred by small dots. It may be necessary to install a special antenna to improve the picture. 2 3 4 5 An old, bad or illegally recorded tape is playing. Strong, random signals from a car or airplane interfere with the TV signal. The signal from the antenna is weak.

The program wasn't captioned when it was produced, transmitted, or taped. (Continued on next page) 206-3921 39 SPECIAL FEATURES Closed Captions Captions Setup Text Setup Text services give a wide variety of information on all kind of subjects (ex. captioned program lists, weather forecasts, stock exchange topics, news for hearingimpaired---) on up to half of the TV screen. But not all stations offer text services, even though they might offer captioning. q

1 Press the cc button on the remote control to select Captions.

Captions Off FG In the event you are receiving a poor signal, an empty black box may appear and disappear, even when the text mode is selected. This is normal when receiving a poor signal. 2 Use the cc button or the volume (F, G) buttons to select On and press the enter (A) button. q 1 2 Repeat steps 1-3 on the next page. Each press of volume (F, G) buttons changes the caption option as shown below.

Use the volume (F, G) buttons to select: Text 1, Text 2, Text 3, or Text 4. Off On EZ Mute Language Captions Caption/Text Key lock Parental ctl English Off CC 1 Off To complete Captions Setup, see next page. q EZ Mute shows the selected captions option (if available on program) when the TV sound is muted. q DE Move FG Adjust Menu 3 40 Press the menu button to save. 206-3921 Operating the Captions 1 Use the menu button to select the menu shown below. q With each press of the volume (F, G) buttons, the caption mode changes CC 1 Language Captions Caption/Text Key lock Parental ctl English Off CC 1 Off CC 2 DE Move FG Adjust Menu CC 3 CC 4 2 Use the channel (D,E) buttons to select the Caption/Text option. Text 1 Language Captions Caption/Text Key lock Parental ctl English Off CC 1 Off Text 2 Text 3 DE Move FG Adjust Menu Text 4 3 Press the volume (G). 4 q Press the menu button to save. This TV is programmed to remember the caption/text mode it was last set to, when you turn the POWER off. 206-3921 41 SPECIAL FEATURES Parental Control The Parental Control Function (V-Chip) is used to block program viewing based on the ratings sent by the broadcast station.

The default setting is to allow all programs to be viewed. Viewing can be blocked by the type of program and by the categories chosen to be blocked. It is also possible to block all program viewing for a time period. To use the Parental Control Function, the following must be set. 1. 2. 3. 4. Ratings and categories to be blocked. Set a password Enable the lock Block Aux source.

V-Chip rating and categories Rating guidelines are provided by broadcast stations. Most television programs and television movies can be blocked by TV Rating and/or Individual Categories. Movies that have been shown at the theaters or direct-to-video movies use the Movie Rating System (MPAA) only. For Movies previously shown in theaters: Movie Ratings: - Unblocked - G and Above - PG and Above - PG-13 and Above - R and Above - NC-17 and Above -X (general audience) (parental guidance suggested) (13 years and up) (restricted) (18 years and up) (adult) If you set PG-13 and Above, G and PG movies will be available; PG-13, R, NC-17, and X will be blocked. For Television programs including made-for-TV movies: General TV Ratings: - Unblocked - TV-G and Above - TV-PG and Above - TV-14 and Above - TV-MA Children TV Ratings: - Unblocked - TV-Y and Above - TV-Y7 (general audience) (individual categories do not apply) (parental guidance suggested) (14 years and up) (mature audience) (youth) (individual content categories do not apply) (youth, 7 years and up) Content Categories: - Dialog - sexual dialogue - Language - adult language - Sex scenes - sexual situations - Violence - F Violence - fantasy violence - No Rating (applies to TV-PG and Above, TV-14) (applies to TV-PG and Above, TV-14 and Above, TV-MA) (applies to TV-PG and Above, TV-14 and Above, TV-MA) (applies only to TV-Y7) (blocks all viewing) (See next page to set blocking.

) 206-3921 42 For Canadian English/French language rating system: Canadian English language rating system: * C and Above (Children) * C8+ and Above (8 years and up) * G and Above (General programming. Suitable for all audiences.) * PG and Above (Parental guidance suggested) * 14+ and Above (Viewer 14 years and up) * 18+ (Adult programming) Canadian French language rating system: * G and Above (General) * 8 ans+ and Above (8 years and up) * 13 ans+ and Above (13 years and up) * 16 ans+ and Above (16 years and up) * 18 ans+ (Adults only) 1 Use the menu button to select the menu shown. 2 Use the channel (D,E) buttons to select the the Parental ctl option. Language Captions Caption/Text Key lock Parental ctl English Off CC 1 Off Language Captions Caption/Text Key lock Parental Ctl English Off CC 1 Off DE Move FG Adjust Menu DE Move G Next Menu 206-3921 43 SPECIAL FEATURES Parental Control 3 Press the volume (G) button.

Lock on/off Set password Aux. block MPAA Age block Content block Canadian DE 5 Set password F G To set Unblocked Unblocked Use the channel (D,E) buttons to select the Lock on/off option. Then, press the volume (F, G) buttons to select on or off. Move FG Adjust Menu 6 4 Use the channel (D,E) buttons to select the Set Password option. Then, press the volume (F, G) buttons. Enter a four digit password. Enter it again when requested. If Parental is already set then enter the password when requested. q The TV is set the initial password with "0-00-0". q Use the channel (D,E) buttons to select the blocking option.

Use the volume (F, G) buttons to set the ratings that will be blocked. q Age block, Content block, and Canadian options, also have sub menus.



[You're reading an excerpt. Click here to read official ZENITH L20V26C user guide](http://yourpdfguides.com/dref/341192)
<http://yourpdfguides.com/dref/341192>

In those sub menus, repeat steps above to select and set types of blocking and rating. Press the menu button to return from Age block or Content block options. 206-3921 44 Auto Off - With Auto Off active, if there is no input signal, the TV switches to standby mode automatically after 10 minutes. 1 Use the menu button to select the menu shown. 3 Use the volume (F,G) buttons to select On or Off. Clock Off timer On timer Auto off -- : -- AM Off Clock Off timer On timer Auto off Off DE Move G Next Menu DE Move FG Adjust Menu q Each press of volume (F, G) buttons toggles between On and Off. On Off 2 Use the channel (D,E) buttons to select the the Auto off option. 4 Press the menu button to save.

SPECIAL FEATURES 206-3921 45 Key Lock - The TV can be set up so that it can only be used with the remote control. - This feature can prevent unauthorized viewing. 1 Use the menu button to select the menu shown. 3 Use the volume (F,G) buttons to select On or Off. Language Captions Caption/Text Key lock Parental ctl English Off CC 1 Off Language Captions Caption/Text Key lock Parental ctl English Off CC 1 Off DE Move FG Adjust Menu DE Move FG Adjust Menu q Each press of volume (F, G) buttons toggles between On and Off.

On Off 2 Use the channel (D,E) buttons to select the the Key lock option. 4 Press the menu button to save. - This TV is programmed to remember which option it was last set to even if you turn the TV off. 206-3921 46 Maintenance Caring for your TV Early malfunctions can be prevented. @@@@Here's a great way to keep the dust off your screen for a while.

@@@@2. Make sure not to put an excessive amount of water on the screen, let it air-dry before you turn on your TV. Cabinet Cleaning 1. Use a soft cloth with a mild soap solution to wipe the cabinet. 2. Rinse the cloth and wipe the cabinet again. 3. Let the cabinet air-dry before turning your TV on. Extended Absence If you intend to leave your TV unused for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges. If you use an antenna, you may also want to disconnect it from the back of your TV before leaving.

206-3921 47 MISC. Product Specifications Model Horizontal size (inch) Height (inch) Thickness (inch) Weight (pound) Power requirements AC to DC power adapter L20V26C 22.68 18.64 3.33 22.05 DC 15V/4.5A In from AC power outlet: AC 100-240V ~ 1.6A-0.7A 50/60Hz Out to TV: DC 15V/4.5A NTSC VHF : 2 ~ 13, UHF : 14 ~ 69 Cable : 01 ~ 125 LCD Panel 70 W 75 3.

0W + 3.0W VIDEO input port set 1 VIDEO output port set 1 Component (480i/480p) input set 1 S-VIDEO input 1 Headphone jack 1 Power DC 15V input 1 Antenna input 1 In Out : AC 100-240V ~ 1.6A-0.7A 50/60Hz : DC 15V, 4.5A Television system Television channels Tube Power consumption External antenna impedance Audio output External input ports Adapter (DC power) * CAUTION : For use only with Model No.

SAD7015SE AC Adapter, manufactured by H & E CO., LTD. Power supply cordset Standard North America three wire earth-grounding with flexible cord SJT type or higher type. * CAUTION : If replacement becomes necessary, replace it with an exact duplicate. Contact any Zenith authorized service center.

206-3921 48 Troubleshooting Checklist SYMPTOMS No power No picture or sound Poor picture but good sound Poor reception Lines in picture Ghosts (multiple images) Remote control does not work. Cannot tune desired channel. CHECK THESE THINGS Is power cord plugged in? Is television turned on? Check batteries in remote control. Try another channel (station trouble). Check antenna connections. Check for local interference. Adjust the antenna. Adjust the picture control. Program channels using AUTO PROGRAM. 206-3921 49 MISC.

Notes 206-3921 50 Notes 206-3921 51 MISC. ZENITH ELECTRONICS CORPORATION LCD-TV L20V26C LIMITED WARRANTY USA Zenith will repair or replace your product, at Zenith's option, if it proves to be defective in material or workmanship under normal use, during the warranty period ("Warranty Period") listed below, effective from the date ("Date of Purchase") of original purchase of the product. This limited warranty is good only to the original purchaser of the product and effective only when used in the United States, excluding U.S. Territories. WARRANTY PERIOD: LABOR: 1 Year from the Date of Purchase. PARTS: 1 Year from the Date of Purchase. * Repaired or replaced products are warranted for the remaining portion of the original warranty period. HOW SERVICE IS HANDLED: Factory Service. Call 1-877-9Zenith (1-877-9936484) (24 hours a day, 365 days per year) for instructions on getting the defective unit repaired or replaced.

Please retain dated sales receipt and your box to return the unit to Zenith for replacement. Shipping charges both ways will be paid by Zenith during the Warranty Period. Visit our website at <http://www.zenithservice.com> THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. ZENITH WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, LOST OR CORRUPTED PROGRAMMING OR DATA, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state. THIS LIMITED WARRANTY DOES NOT APPLY TO: · Damages or operating problems that result from shipping, installation, adjustment of user controls, calibration, maintenance or failure to maintain, or separate system components; and · Damages or operating problems that result from normal wear and tear misuse, abuse, operation out, side environmental specifications or contrary to the requirements or precautions in the Operating Guide, accident, lightning strikes or other natural causes, unauthorized modification or alteration, incorrect electrical current or voltage, signal reception or input, operating and software protocols adopted after date of manufacture or for outside the US, institutional or commercial use, or other causes not arising out of defect in material or workmanship.

The cost of repair or replacement under these excluded circumstances shall be borne by the consumer. CUSTOMER INTERACTIVE CENTER NUMBERS: For Where to buy, Product Assistance, or Customer Assistance Call 1-877-9Zenith (1-877-993-6484) (24 hours a day, 365 days per year) and select appropriate options from the menu.



[You're reading an excerpt. Click here to read official ZENITH L20V26C user guide](http://yourpdfguides.com/dref/341192)
<http://yourpdfguides.com/dref/341192>