



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH L20V36. You'll find the answers to all your questions on the ZENITH L20V36 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH L20V36
User guide ZENITH L20V36
Operating instructions ZENITH L20V36
Instructions for use ZENITH L20V36
Instruction manual ZENITH L20V36

Operating Guide | Warranty

Model Numbers | L15V36, L20V36 | LCD TV



© Copyright 2003, Zenith Electronics Corporation.



[You're reading an excerpt. Click here to read official ZENITH L20V36 user guide](http://yourpdfguides.com/dref/340751)
<http://yourpdfguides.com/dref/340751>

Manual abstract:

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@@@NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. **REGULATORY INFORMATION:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

@@@@· Increase the separation between the equipment and receiver. @@· Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **CAUTION:** Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. The responsible party for this product's compliance is : Zenith Electronics Corporation, 2000 Millbrook Dr. Lincolnshire, IL 60069, USA 1-847-941-8000 206-3922 2 Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards.

To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference. Observing the simple precautions discussed in this booklet can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.S. Federal safety requirements, and those of the Canadian Standards Association.

1. Read Instructions All the safety and operating instructions should be read before the product is operated. 2. Follow Instructions All operating and use instructions should be followed. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to. 5. Cleaning Unplug this product from the wall outlet before cleaning.

Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 6. Water and Moisture Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool. 7. Accessories, Carts, and Stands Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 8.

Transporting Product A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 10.

Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label.

If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 12. Power-Cord Polarization This product is equipped with a three-wire grounding type alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 13. Power-Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

(Continued on next page) PORTABLE CART WARNING 206-3922 3 INTRODUCTION IMPORTANT SAFETY INSTRUCTIONS IMPORTANT SAFETY INSTRUCTIONS (Continued from previous page) 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. 19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20.

Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c.

If the product has been exposed to rain or water. d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. e.

If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance. 21. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340751)

[L20V36 user guide](http://yourpdfguides.com/dref/340751)

<http://yourpdfguides.com/dref/340751>

The current channel number is displayed. 5 Press the exit button to save and return to TV viewing. q Channel CH.

The current channel is added to Memory or Erased from the channel list. EZ Scan Ch.edit Favorite ch. G G G TV 7 Memory 0 FG Move F G Adjust A Back 206-3922 34 Favorite Channel Memory - Favorite Channel lets you quickly tune in up to 8 channels of your choice without having to wait for the TV to scan through all the in-between channels. 1 Press the menu button and then use the channel (D,E) buttons to select the Channel menu.

Channel CH. 3 EZ Scan Ch.edit Favorite ch. G G G Press the volume (G) and then use the channel (D,E) buttons to select the first favorite channel position. Use the volume (F, G) buttons to set the desired channel number for first favorite channel.

i.e.,) To change Channel 2 to Channel 30 Channel FG Move G Next CH. G Move F G Adjust A Back Press the volume (F, q G) buttons. Repeat this step to memorize 7 other channels. 2 Press the volume (G) and then use the channel (D,E) buttons to select the Favorite ch. option. 4 Press the exit button to save and return to TV viewing. - To tune to a favorite channel, press the fcr (Favorite Channel Review) button repeatedly. The 8 favorite channels appear on the screen one-by-one.

206-3922 35 BASIC FUNCTIONS EZ Scan Ch.edit Favorite ch. G G TV 2 TV 30 ----- FG Auto Clock Setup - Sets the time automatically through the PBS channel signal. - The PBS channel signal includes information for the correct time. 1 Press the menu button and then use the channel (D,E) buttons to select the Timer menu. Timer CH. 4 Clock Off timer On timer Auto off G G G G Press the volume (G) and use the channel (D,E) buttons to select the time zone of your viewing area. Your choices are: Auto, E.S.T.

(Eastern Standard Time), C.S.T. (Central Standard Time), M.S.

T. (Mountain Standard Time), P.S.T. (Pacific Standard Time), Alaska and Hawaii.

FG Move G Next 5 2 3 Press the volume (G) and then use the channel (D,E) buttons to select the Clock option. Press the volume (G) and use the channel (D,E) buttons to set PBS Channel. Press the volume (G) and then use the channel (D,E) buttons to select Auto option. 6 Press the volume (G) and use the channel (D,E) buttons to set D.S.T. (Daylight Saving Time) Auto, Off, or On depending on whether or not your viewing area observes Daylight Saving Time. Timer CH. Clock Off timer On timer Auto off G G G G Auto Manual G G G Time zone Auto PBS ch. TV 2 D.

S.T. Auto F Back FG Move G Next 7 Press the exit button to save and return to TV viewing. 206-3922 36 Manual Clock Setup - If current time setting is erased by a power failure or if TV is unplugged, reset the clock. 1 Press the menu button and then use the channel (D,E) buttons to select the Timer menu. 4 Press the volume (G) and use the channel (D,E) buttons to set the current hours. Timer CH. Timer G G G G Clock Off timer On timer Auto off CH. Clock Off timer On timer Auto off G G G G Auto Manual -10 : 00 AM FG Move G Next F G Move FG Adjust A Back 2 3 Press the volume (G) and then use the channel (D,E) buttons to select the Clock option. 5 Press the volume (G) and use the channel (D,E) buttons to set the current minute.

CLOCK SETTING q Press the volume (G) and then use the channel (D,E) buttons to select Manual option. If you hold the channel (D) button down, the minute display is changed in the following sequence 00 01 02 ...58 59, and changed in the reverse sequence for channel (E) button.

Timer CH. Clock Off timer On timer Auto off G G G G Auto Manual Manual G G -- : -- AM FG 6 Press the exit button to save and return to TV viewing. q Move G Next F Back The clock starts when you press the enter (A) button. 206-3922 37 Off Timer Setup - Timer function operates only if current time has been already set. - Off-timer function overrides on-timer function if they are set to the same time.

1 Press the menu button and then use the channel (D,E) buttons to select the Timer menu. 4 Press the volume (G) and use the channel (D,E) buttons to set the minutes. q Timer CH. Clock Off timer On timer Auto off G G G G If you hold the channel (D) button down, the minute display is changed in the following sequence 00 01 02 ...58 59, and changed in the reverse sequence for channel (E) button. Timer FG Move G Next CH. Clock Off timer On timer Auto off G G G G 10 : 30 PM Run -- F G Move FG Adjust A Back 2 3 Press the volume (G) and then use the channel (D,E) buttons to select the Off timer option. 5 Press the volume (G) and then use the channel (D,E) buttons to set the turn-off hour.

Press the volume (G) button and then use the channel (D,E) buttons to select Hold or Run. Hold, Off Timer will not work. Run, Off Timer will work. q Each press of channel (D,E) button changes the menu option as shown below. q Timer CH. Run G G G G Hold Clock Off timer On timer Auto off 10 : 00 PM Run -- 6 Press the exit button to save and return to TV viewing. F G Move FG Adjust A Back 206-3922 38 On Timer Setup - Timer function operates only if current time has been already set. 1 Press the menu button and then use the channel (D,E) buttons to select the Timer menu. Timer CH. 4 Press the volume (G) and then use the channel (D,E) buttons to set the minutes.

q Clock Off timer On timer Auto off G G G G If you hold the channel (D) button down, the minute display is changed in the following sequence 00 01 02 ...58 59, and changed in the reverse sequence for channel (E) button. FG Move G Next 5 6 7 Press the volume (G) button and then use the channel (D,E) buttons to select the channel at turn-on.

2 3 Press the volume (G) and then use the channel (D,E) buttons to select the On timer option. Press the volume (G) button and then use the channel (D,E) buttons to select the turn on sound level. Press the volume (G) and then use the channel (D,E) buttons to set the turn-on hour. Timer CH. Press the volume (G) button and then use the channel (D,E) buttons to select Hold or Run.

q Each press of channel (D,E) button toggles between Run and Hold. Clock Off timer On timer Auto off G G G G Run 8 -- :00 AM TV 3 Vol 30 Run Hold F G Move Adjust A Back 8 FG Press the exit button to save and return to TV viewing. q On Timer setup is complete. - Unless a button is pressed within two hours after the TV is turned on by the On Timer function, the TV will automatically turn off. - TV must be in standby mode for the On Timer to work. 206-3922 39 CLOCK SETTING Auto off - If Auto Off is active and there is no input signal, the TV switches to Standby mode automatically after 10 minutes.



[You're reading an excerpt. Click here to read official ZENITH](#)

[L20V36 user guide](#)

<http://yourpdfguides.com/dref/340751>

Auto Off 1 Press the menu button and then use the channel (D,E) buttons to select the Timer menu. 3 Press the volume (G) and then use the channel (D,E) buttons to select On or Off. Timer CH. Timer CH.

G G G Clock Off timer On timer Auto off Clock Off timer On timer Auto off G G G G On Off FG FG Move G Next Move F Back q Each press of channel (D,E) buttons toggles between On and Off. On Off 2 Press the volume (G) and then use the channel (D,E) buttons to select the Auto off option. 4 Press the exit button to save and return to TV viewing. 206-3922 40 Sleep Timer Setup - Sleep Timer turns the TV off at the preset time. 1 Use the sleep button to set the Sleep Timer. q Each press of sleep changes the setting as shown below. Sleep --- --- 10 240 20 120 90 60 q To cancel sleep time setting, press the sleep button repeatedly to select Sleep ---. - When the sleep time you want is displayed on the screen, don't press the sleep button again. - To check the remaining sleep time, press the sleep button once. - To change sleep time setting, press the sleep button repeatedly to select the time setting you want.

- If you turn the TV off after setting the sleep timer, the setting will be erased. 206-3922 41 CLOCK SETTING 180 30 Video/Picture Setup - This function adjusts the TV for the best picture appearance. @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ [SAP]: The secondary language is heard from both left and right speakers in mono sound. 1 2 Press the mts button on the remote control. Use the mts button to change the audio mode.

q Each press of mts button changes the audio mode as shown below. Mono Stereo SAP 3 Press the exit button to save. - Select sound mono mode if the signal is not clear or in poor signal reception areas. - Stereo and Mono modes are available only if included on the broadcast signal. 206-3922 49 AUDIO / VIDEO Closed Captions Closed captioning is a process which converts the audio portion of a television program into written words which then appear as subtitles on the television screen.

Closed captions allow viewers to read the dialogue and narration of television programs. Using Closed Captions Captions are the subtitles of the dialogue and narration of television programs. For prerecorded programs, program dialogue can be arranged into captions in advance. Its possible to caption a live program by using a process called real-time captioning, which creates captions instantly. Real-time captioning is normally done by professional reporters using a machine shorthand system and computer for translation into English. Captioning is an effective system for the hearing-impaired, and it can also aid in teaching language skills. · The picture at left shows a typical caption. FOLLOW ME Caption Tips · · Not all TV broadcasts include closed caption signals. Sometimes TV stations broadcast four different caption signals on the same channel. By selecting From CC 1 to CC 4, you can choose which signal you view.

CC 1 is usually the signal with the captions, while Another mode might show demonstration or programming information. Your TV might not receive caption signals normally in the following situations. · 1 Poor reception conditions are encountered: · IGNITION: Picture may flutter, drift, suffer from black spots, or horizontal streaking. Usually caused by interference from automobile ignition systems, neon lamps, electrical drills, and other electrical appliances. · GHOSTS: Ghosts are caused when the TV signal splits and follows two paths. One is the direct path and the other is reflected off tall buildings, hills or other objects. Changing the direction or position of the antenna may improve reception. · SNOW: If your receiver is located at the weak, fringe area of a TV signal, your picture may be marred by small dots. It may be necessary to install a special antenna to improve the picture. 2 3 4 5 An old, bad, or illegally recorded tape is being played.

Strong, random signals from a car or airplane interfere with the TV signal. The signal from the antenna is weak. The program wasn't captioned when it was produced, transmitted, or taped. 206-3922 50 Operating Captions 1 Press the menu button and then use the channel (D,E) buttons to select the Special menu. q Each time you press the channel (D,E) buttons, the caption mode is changed one by one as shown below.

CC 1 Special CH. Language Caption/Text Captions Key lock Parental G G G G G CC 2 CC 3 FG Move G Next CC 4 2 3 Press the volume (G) and then use the channel (D,E) buttons to select the Caption/Text option. Text 1 Text 2 Text 3 Press the volume (G). Text 4 Special CH. Move F Back q This TV is programmed to remember the caption/text mode it was last set to, when you turn the POWER off.

206-3922 FG 51 SPECIAL FUNCTION Language G Caption/Text G Captions G Key lock G Parental G CC1 CC2 CC3 CC4 Text1 Text2 Text3 Text4 4 Press the exit button to save and return TV viewing. Closed captions Closed Captions Text Setup 1 Press the cc button to select Captions. Text services give a wide variety of information on all kind of subjects (ex. captioned program lists, weather forecasts, stock exchange topics, news for hearingimpaired---) on up to half of the TV screen. But not all stations offer text services, even though they might offer captioning. q In the event you are receiving a poor signal, an empty black box may appear and disappear, even when the text mode is selected. This is normal function in such an event. Captions Off 2 Use the cc button to select On and press the enter (A) button. q Each press of cc buttons changes the caption option as shown below. 1 2 Repeat steps 1-3 on previous page.

On EZ Mute Off Use the channel (D,E) buttons to select: Text 1, Text 2, Text 3, or Text 4. q Captions setup is complete. Special CH. Language G Caption/Text G Captions G Key lock G Parental G CC1 CC1 CC2 CC3 CC4 Text1 Text2 Text3 Text4 FG Move F Back 3 52 Press the exit button to save and return to TV viewing. 206-3922 Key Lock - The TV can be set up so that it can only be used with the remote control. This feature can prevent unauthorized viewing. Key Lock 1 Press the menu button and then use the channel (D,E) buttons to select the Special menu. 3 Press the volume (G) and then use the channel (D,E) buttons to select On or Off. Special CH. Special CH.

Language Caption/Text Captions Key lock Parental G G G G G Language Caption/Text Captions Key lock Parental G G G G G On Off FG FG Move G Next Move F Back q Each press of channel (D,E) buttons toggles between On and Off. On Off 2 Press the volume (G) and then use the channel (D,E) buttons to select the Key lock option.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/340751)

[L20V36 user guide](http://yourpdfguides.com/dref/340751)

<http://yourpdfguides.com/dref/340751>

4 Press the exit button to save and return to TV viewing. * This TV programmed to remember which option it was last set to even if you turn the TV off. 206-3922 53 SPECIAL FUNCTION Parental Control The Parental Control Function (V-Chip) is used to block program viewing based on the ratings sent by the broadcast station.

The default setting is to allow all programs to be viewed. Viewing can be blocked by the type of program and by the categories chosen to be blocked. It is also possible to block all program viewing for a time period. To use the Parental Control Function, the following must be set : 1. 2.

3. 4. Ratings and categories to be blocked. Number of hours to lock the television viewing control Set a password Enable the lock V-Chip rating and categories Rating guidelines are provided by broadcast stations. Most television programs and television movies can be blocked by TV Rating and/or Individual Categories. Movies that have been shown at the theaters or direct-to-video movies use the Movie Rating System(MPAA) only. For Movies previously shown in theaters: Movie Ratings: * Unblocked * G and Above * PG and Above * PG-13 and Above * R and Above * NC-17 and Above *X (general audience) (parental guidance suggested) (13 years and up) (restricted) (18 years and up) (adult) If you set PG-13 and Above ; G and PG movies will be available, PG-13, R, NC-17 and X will be blocked. @@@@ Use the channel (D,E) buttons to select On or Off. @ @q The TV is set the initial password with "0-00-0". q 6 Press the volume (G) and then use the channel (D,E) buttons to select the types of rating to block and then press the volume (F) button 4 Setting Password Use the channel (D,E) buttons to select Set password and then press the volume (G) button.

Enter a four number password. Enter it again when requested. q New password may be chosen each time blocking is set up. Parental Lock on/off Set password MPAA Age block Content block Aux.block Canadian FG G G G G G G G G Unblocked Blocked Move F Back Press the enter (A) button. Parental Lock on/off Set password MPAA Age block Content block Aux.block Canadian G G G G G G G q Age block, Content block and Canadian opt. also have sub menus. So repeat steps 5 and 6 in the sub menu to set the type of blocking and rating. Enter code : ---- 0~9 : Enter password 206-3922 56 Maintenance Caring for your TV Early malfunctions can be prevented.

Careful and regular cleaning can extend the amount of time you will have with your new TV. @ @ Here's a great way to keep the dust off your screen for a while. @ @ @ @ 2. @ @ Use a soft cloth with a mild soap solution to wipe the cabinet. 2. Rinse the cloth and wipe the cabinet again. 3. Let the cabinet air-dry before turning your TV on. Extended Absence If you expect to leave your TV unused for a long time (such as a vacation), unplug the power cord from the wall power outlet to protect against possible damage from lightning or power surges. If you use an antenna, you may also want to disconnect it from the back of your TV before leaving.

206-3922 57 INFORMATION Product Specifications Model L15V36 L20V36 Horizontal size (Inches) Height (Inches) Thickness (Inches) Weight (pounds) 18.3 14.8 6.7 13.9 22.8 18.3 8 21.6 Power requirements Television system Television channels DC 12V/4.5A NTSC VHF : 2 ~ 13, UHF : 14 ~ 69 Cable : 01 ~ 125 LCD Panel 75 50 W 3W+3W DC 15V/4.5A Television Screen External antenna impedance Power consumption Audio output Adapter (DC power) 70 W 5W+5W In : AC 100-240V ~ 1.

5A-0.6A In: AC 100-240V ~ 1.5A-0.6A In: AC 100-240V ~ 1.6A-0.7A 50/60Hz, 115~180VA 50/60Hz 50/60Hz Out : DC 12V, 5A Out: DC 12V, 5A Out: DC 15V, 4.5A For use only with Model No. For use only with Model No. * CAUTION : For use only with Model No. SAD6012SE AC Adapter, manufactured by H & E co.

, Ltd. SAD6012SE AC Adapter, manSAD7015SE AC Adapter, ufactured by H & E co., Ltd. manufactured by H & E co., Ltd.

Power supply cordset : Standard North America three wire earth-grounding with flexible cord SJT type or higher type. * CAUTION : If replacement becomes necessary, replace with an exact duplicate. Contact any Zenith authorized service center. 206-3922 58 Troubleshooting Checklist SYMPTOMS No power No picture or sound Poor picture but good sound Poor reception Lines in picture Ghosts (multiple images) Remote control does not work. Cannot tune desired channel.

CHECK THESE THINGS Is power cord plugged in ? Is television turned on ? Check batteries in remote control. Try another channel (station trouble). Check antenna connectings. Check for local interference. Adjust the antenna. Adjust the picture control. Program channel using AUTO PROGRAM. 206-3922 59 INFORMATION ZENITH ELECTRONICS CORPORATION LCD-TV L15V36, L20V36 LIMITED WARRANTY USA Zenith will repair or replace your product, at Zenith's option, if it proves to be defective in material or workmanship under normal use, during the warranty period ("Warranty Period") listed below, effective from the date ("Date of Purchase") of original purchase of the product. This limited warranty is good only to the original purchaser of the product and effective only when used in the United States, excluding U.S.

Territories. WARRANTY PERIOD: LABOR: 1 Year from the Date of Purchase. PARTS: 1 Year from the Date of Purchase. * Repaired or replaced products are warranted for the remaining portion of the original warranty period. HOW SERVICE IS HANDLED: Factory Service. Call 1-877-9Zenith (1-877-9936484) (Monday - Friday, 7 AM - 8 PM CT; and Saturday, 8 AM - 5 PM CT) for instructions on getting the defective unit repaired or replaced. Please retain dated sales receipt and your box to return the unit to Zenith for replacement. Shipping charges both ways will be paid by Zenith during the Warranty Period. Visit our website at <http://www.zenithservice.com>

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. ZENITH WILL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, LOST OR CORRUPTED PROGRAMMING OR DATA, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

THIS LIMITED WARRANTY DOES NOT APPLY TO: · Damages or operating problems that result from shipping, installation, adjustment of user controls, calibration, maintenance or failure to maintain, or separate system components; and · Damages or operating problems that result from normal wear and tear misuse, abuse, operation out, side environmental specifications or contrary to the requirements or precautions in the Operating Guide, accident, lightning strikes or other natural causes, unauthorized modification or alteration, incorrect electrical current or voltage, signal reception or input, operating and software protocols adopted after date of manufacture or for outside the US, institutional or commercial use, or other causes not arising out of defect in material or workmanship.



[You're reading an excerpt. Click here to read official ZENITH L20V36 user guide](#)

The cost of repair or replacement under these excluded circumstances shall be borne by the consumer. CUSTOMER INTERACTIVE CENTER NUMBERS: For Where to buy, Product Assistance, or Customer Assistance Call 1-877-9Zenith (1-877-993-6484) (Monday - Friday, 7 AM - 8 PM CT; and Saturday, 8 AM - 5 PM CT) and select appropriate options from the menu. Or visit our website at <http://www.zenithservice.com> ZENITH ELECTRONICS CORPORATION 2000 MILLBROOK DRIVE LINCOLNSHIRE, IL 60069 Zenith Part No. 206-3922 P/NO : 3828VA0308T b (ML012B) .



[You're reading an excerpt. Click here to read official ZENITH L20V36 user guide](http://yourpdfguides.com/dref/340751)
<http://yourpdfguides.com/dref/340751>