



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH M52W56LCD. You'll find the answers to all your questions on the ZENITH M52W56LCD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH M52W56LCD
User guide ZENITH M52W56LCD
Operating instructions ZENITH M52W56LCD
Instructions for use ZENITH M52W56LCD
Instruction manual ZENITH M52W56LCD

Operating Guide | Warranty

Model Numbers | E44W46LCD, E44W48LCD, M52W56LCD | LCD TV



© Copying#2004, LG Electronics USA, Inc.



[You're reading an excerpt. Click here to read official ZENITH M52W56LCD user guide](http://yourpdfguides.com/dref/341194)
<http://yourpdfguides.com/dref/341194>

Manual abstract:

REFER TO QUALIFIED SERVICE PERSONNEL. @@@@ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. REGULATORY INFORMATION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: Do not attempt to modify this product in any way without written authorization from LG Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. COMPLIANCE: The responsible party for this product's compliance is: Zenith Electronics Corporation 1-201-816-2000 Marked and Distributed in the United States by LG Electronics U.S.

A., Inc. 1000 Sylvan Avenue, Englewood Cliffs, NJ 07632 <http://www.zenith.com> PAGE 2 206-04006 IMPORTANT SAFETY INSTRUCTIONS Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference. Observing the simple precautions discussed in this manual can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.S.

Federal safety requirements, and those of the Canadian Standards Association. 1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards. 2. Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface.

This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to.

5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6. Water and Moisture Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool. 12. Power-Cord Polarization This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug.

If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 7. Accessories, Carts, and Stands Do not place this product on a slippery or tilted surface, or on an unstable cart, stand, tripod, bracket, or table. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 13. Power-Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8. Transporting Product A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) 206-04006 PORTABLE CART WARNING PAGE 3 IMPORTANT SAFETY INSTRUCTIONS (Continued from previous page) 14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded to provide protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antennadischarge unit, connection to grounding electrodes, and requirements for the grounding electrode. Example of Grounding According to National Electrical Code Instructions openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341194)

[M52W56LCD user guide](http://yourpdfguides.com/dref/341194)

<http://yourpdfguides.com/dref/341194>

Never spill liquid of any kind on the product.

19. Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20. Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c. If the product has been exposed to rain or water.

d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. e. If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance. Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment Fig. 1 NEC - National Electrical Code 21. Replacement Parts 15.

Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 22.

Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition. 16. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 23.

Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. 24. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 18. Object and Liquid Entry Never push objects of any kind into this product through PAGE 4 206-04006

Table of Contents Safety Warnings . . .

.....

.....

.....

.2 Important Safety Instructions

.....

. . .3-4 Function Status Indicators . . .

.....

.....

. . .6 AUDIO Menu Options

.....

.....

. . . .31-32 TIME Menu Options Auto Clock Setup

.....

.....

. . . .33 Manual Clock Setup .

.....

.....

. . .34 TV Turn Off Time Setup . .

.....

.....

. . . .35 TV Turn On Time Setup

.....

.....

.36 Sleep Timer Setup

.....

.....

.....

.37 Auto Off

.....

.....

.....

. . .38 SPECIAL Menu Options Aspect Ratio

.....

.....

.....	39 On-Screen Menu Languages
..... 40 Captions Setup ..
.....
.....
..... 41 Caption/Text Mode Selection
.....
.....	... 42 Key Lock
.....
.....
.....	... 43 Cinema Mode Setup
.....
.....	... 44 EZ Demo ..
.....
.....
.....	... 45 LOCK Menu Options Parental Lock Setup .
.....
.....	... 46 Parental Lock (Ratings Overview) ..
.....
..... 47 Step 1. Hook Up TV Rear Connections Panel .
.....
.....
.....	.. 7 Side Connections Panel
.....
.....
.....	8 ANT/Cable Service Hookup
.....

.....9 Cable Box ConT PC/DTV (XGA/ 480p/ 720p/ 1080i) COMPONENT INPUT2 INPUT1 S-VIDEO RGB/DVI Input Connect the TV output connector from a PC/DTV to the appropriate input port. UPGRADE PORT RGB/DVI INPUT MONITOR OUT VIDEO INPUT 2 VIDEO INPUT 1 VIDEO (480i/ 480p/ 720p/ 1080i) (480i/ 480p/ 720p/ 1080i) (L) AUDIO (R) Y PB PR PC/DTV (XGA/ 480p/ 720p/ 1080i) VARIABLE AUDIO OUT (L) AUDIO (R) DVI INPUT (L) MONO AUDIO (R) AUDIO CENTER MODE IN (L) AUDIO (R) DVI /DVD Monitor Out Connects to a second TV or Monitor. Component Input 1-2 Connect a component video/audio device to these jacks. Refer to your DVD manual for further information.

RGB/DVI Input Used for audio connections from a PC source or HD-STB Satellite system. Variable Audio Out Used to connect either an external amplifier, or add a sub-woofer to your surround sound system. Audio Center Mode In Connect to external Dolby Digital Center "preamp output." Mini glossary JACK A connection on the back of a TV, VCR, or any other A/V device. This includes the RF jack and the Audio/Video jacks that are colorcoded.

Picture and sound traveling through cable, or over the air, to your television screen. SIGNAL 206-04006 PAGE 7 Side Connection Panel There are four jacks on the left side on your projection TV that make connecting Audio/Video devices like video games and camcorders very simple. The jacks are like those found on the back jack connection panel. This means that most equipment that connects to those types of jacks on the rear jackpack, may be connected to the side connection panel. To use the side jacks as the signal source, select them using Main Input menu as described on page 25.

They will be named "Side Video" in the Main Input menu. If you input both Side Video and SVideo, only the S-Video will work. Side A/V Panel If you're connecting a video game device, make sure to change the picture settings with the EZ Picture option in the Video menu (see page 29). Left/Right Audio Used for stereo sound from various types of equipment. Video Connects the video signals from any piece of equipment. (R) AUDIO (L)/ MONO VIDEO S-VIDEO SIDE VIDEO S-Video A connection available on some very high-end equipment that provides better picture quality than video input. Mini glossary A/V CABLES Audio/Video cables. Three cable connector--Right audio (red), Left audio (white), and Video (yellow). A/V cables are used for stereo playback of videocassettes and for higher quality picture and sound from other A/V devices. Any device that produces video or sound (VCR, DVD, cable box, or television).

A/V DEVICE PAGE 8 206-04006 ANT / Cable Service Hookup Cable TV Wall Jack Panel Antenna 1 2 Connect an antenna or cable service to your TV as shown.

[You're reading an excerpt. Click here to read official ZENITH](#)



[M52W56LCD user guide](#)
<http://yourpdfguides.com/dref/341194>

Turn to page 22 to do a channel search with EZ Scan for Ant/Cable connection(s). RF Coaxial Wire (75 ohm) RF Coaxial Wire (75 ohm) ANT IN +75 S-VIDEO MONITOR OUT VIDEO INPUT 2 VIDEO INPUT 1 VIDEO (L) MONO AUDIO (R) If you receive your RF signal through an antenna that is several years old and connects with two small prongs, you will need to purchase a 300 to 75 ohm adapter. It should be available from your local electronics dealer. We recommend using a 75 ohm cable for your antenna connections in order to prevent interference. For best signal reception, it is recommended to have your

Antenna professionally adjusted. PAGE 9 206-04006 Cable Box Connections 1 Locate the output jack on the back of your cable box. Connect this to the Antenna jack on the back of your TV. Or find the composite video and audio jacks on the back of your cable box, and connect them following the instructions provided with your equipment. This can be combined with any other equipment you may want to hook up.

Cable TV Wall Jack Panel Out In Output Switch 3 4 RF Coaxial Wire (75 ohm) ANT IN +75 Cable Box S-VIDEO MONITOR OUT VIDEO INPUT 2 VIDEO INPUT 1 VIDEO Audio L R Video (L) MONO AUDIO (R) TV VCR If you're using a cable box, leave the TV on channel 3 or 4 and use your cable box to change channels. PAGE 10 206-04006 VCR Connections 1 Locate the Antenna jack on the back of your TV. Connect this to RF out jack on the back of your VCR. Or, find the composite video and audio jacks on the back of your VCR, and connect them following the instructions provided with your equipment. You may connect either the composite video or the S-Video cables to your TV.

(Do not connect both the composite and the S-Video cables. In the event that you connect both composite and the S-Video cables, only the S-Video will work.)

Cable TV Wall Jack Panel Antenna ANT IN +75 RF Coaxial Wire (75 ohm) Round Wire (75 ohm) S-VIDEO MONITOR OUT VIDEO INPUT 2 VIDEO INPUT 1 VIDEO Back AV Panel Output 3 4 Switch In Out Audio Video S-Video L R (L) MONO AUDIO (R) A/V cables not included with TV VCR To hear stereo sound from cable or your VCR, you will need to connect A/V cables as well as the wire that runs from the VCR to your TV. If you want to receive your signals on Channel 3 or 4, locate the Out to TV jack on your VCR. Connect a cable from the Out to TV jack to the Antenna In jack on the back of your TV. After connecting external equipment to the TV, don't display a still picture for a long time on the screen. Doing so may damage the TV screen. 206-04006

PAGE 11 DVD Player 1 Find the audio and component or S-Video jacks on the back of your DVD Player and connect them following the instructions provided with your equipment. You may connect either the composite video or the S-Video cables to your TV. Do not connect both the composite and the S-Video. DVD Player Some high-end DVD players use a picture reproduction system called "component video." If your DVD player has component output, use

the connectors marked "Component 1/2" on the jack panel. Please refer to your DVD manual for proper installation. ANT IN +75 Back AV Panel RGB INPUT Audio L R Dolby Digital Component Video Out S-Video PC/DTV (XGA/ 480p/ 720p/ 1080i) COMPONENT INPUT2 INPUT1 UPGRADE PORT RGB/DVI INPUT S-VIDEO MONITOR OUT VIDEO INPUT 2 VIDEO INPUT 1 VIDEO (480i/ 480p/ 720p/ 1080i) (480i/ 480p/ 720p/ 1080i) (L) AUDIO (R) Y PB PR PC/DTV (XGA/ 480p/ 720p/ 1080i) VARIABLE AUDIO OUT (L) AUDIO (R) DVI INPUT (L) MONO AUDIO (R) AUDIO CENTER MODE IN (L) AUDIO (R) DVI/DVD A/V Cables Not included with TV Component 1 (or 2) Input Y PB PR · Component Input ports Connect DVD player jacks to Monitor Component input jacks as indicated below. Component input jacks on the Monitor Video output jacks on DVD player Y Y Y Y Y PB Pb B-Y Cb PB PR Pr R-Y Cr PR 1920X1080i 1280X720p 720X480p 720X480i Mini glossary COMPONENT VIDEO Some video equipment uses three separate lines (Y, PB, PR) to more precisely reproduce images.

Your video equipment manual will explain how this relates to your equipment. PAGE 12 206-04006 RGB-DTV/DVI-DTV Input 1 Find the audio and Y, PB, PR/RGB/DVI jacks on the back of your DBS receiver and connect them following the instructions provided with your equipment. Connect these cables to your

TV as shown. DBS Receiver Component Out Dolby Digital Y Pb Pr Out Audio LR UPGRADE PORT COMPONENT INPUT2 INPUT1 (480i/ 480p/ 720p/ 1080i) (480i/ 480p/ 720p/ 1080i) 2 Y PB PR PC/DTV (XGA/ 480p/ 720p/ 1080i) (L) AUDIO (R) A/V Cables Not included with TV DVI INPUT DVI /DVD DBS Receiver Audio LR Dolby Digital Out RGB INPUT PC/DTV (XGA/ 480p/ 720p/ 1080i) COMPONENT INPUT2 INPUT1 or A/V Cables Not included with TV UPGRADE PORT RGB/DVI INPUT (480i/ 480p/ 720p/ 1080i) (480i/ 480p/ 720p/ 1080i) (L) AUDIO (R) Y PB PR PC/DTV (XGA/ 480p/ 720p/ 1080i) VARIABLE AUDIO OUT (L) AUDIO (R) DVI INPUT AUDIO CENTER MODE IN (L) AUDIO (R) DVI /DVD The DTV shows the sharpest picture in 720p mode. This TV supports HDCP (High-bandwidth Digital Content Protection) protocol for DVI-DTV (480p, 720p, 1080i) mode. Select RGB-DTV Source

and press ENTER. Use UP/DOWN arrows to select the desired options (H-Position/ V-Position/Phase) and then use LEFT/RIGHT arrows to make appropriate adjustments. In RGB-DTV mode, H-Position/ V-Position/Phase are not adjustable if you choose either the POP or Twin picture modes. RGB-DTV/DVI-DTV Input HD-SET TOP 1920x1080i 1280x720P 720x480P Signal 480i 480p 720p 1080i Component1 Yes Yes Yes Yes Component2 Yes Yes Yes Yes RGB/DVI-DTV No Yes Yes Yes PAGE 13 206-04006 RGB-PC/DVI-PC Input 1 Find the audio and RGB or DVI jacks on the back of your PC and then connect them following the instructions provided with your equipment. Connect these cables to your TV as shown.

2 Computer RGB INPUT PC/DTV (XGA/ 480p/ 720p/ 1080i) COMPONENT INPUT2 INPUT1 UPGRADE PORT RGB/DVI INPUT (480i/ 480p/ 720p/ 1080i) (480i/ 480p/ 720p/ 1080i) (L) AUDIO (R) Y PB PR PC/DTV (XGA/ 480p/ 720p/ 1080i) VARIABLE AUDIO OUT (L) AUDIO (R) DVI INPUT AUDIO CENTER MODE IN (L) AUDIO (R) DVI /DVD Select RGB-PC Source and press ENTER. Use UP/DOWN arrows to select the desired options (H-Position/V-Position/H-Size/VSize/Phase) and then use LEFT/RIGHT arrow to make appropriate adjustments. - Horizontal position, Vertical position, Horizontal size, and Vertical size: Based on the input mode (resolution), the adjustment ranges may change. - PHASE: Removes any horizontal noise and clears up or sharpens the character images. Adjustment range is -15 ~ + 15.

In DVI-PC mode, adjustments are only Vertical size, and Horizontal size. In RGB-PC/DVI-PC modes, for POP or Twin screen, HPosition/V-Position/H-Size/V-Size/Phase are not adjustable.



[You're reading an excerpt. Click here to read official ZENITH M52W56LCD user guide](http://yourpdfguides.com/dref/341194)
<http://yourpdfguides.com/dref/341194>

RGB-PC/DVI-PC Input MODE Resolution Horizontal 640x350 640x480 640x480 640x480 800x600 800x600 800x600 800x600 1024x768 31.5KHz 31.5KHz 37.5KHz 37.5KHz 35.2KHz 37.9KHz 48.1KHz 46.9KHz 48.4KHz 56.5KHz 60.0KHz Vertical 70Hz 60Hz 72Hz 75Hz 56Hz 60Hz 72Hz 75Hz 60Hz 70Hz 75Hz

Text VGA SVGA Synchronization input form: Signals are separate. XGA 1024x768 1024x768 PAGE 14 206-04006 External Stereo Connections Connect Left/Right Variable Audio Output to an external Audio Amplifier System.

1 Locate both Variable Audio Out jacks on the back of your TV and the Left/Right audio input jacks on the back of your stereo's amplifier. Connect these jacks, making sure that they are connected correctly. (red=Right, white=Left.) Adjust the sound on your stereo, according to directions provided with the amplifier. 2 3 ANT IN +75 RGB INPUT PC/DTV (XGA/ 480p/ 720p/ 1080i) COMPONENT INPUT2 INPUT1 UPGRADE PORT RGB/DVI INPUT S-VIDEO MONITOR OUT VIDEO INPUT 2 VIDEO INPUT 1 VIDEO (480i/ 480p/ 720p/ 1080i) (480i/ 480p/ 720p/ 1080i) (L) AUDIO (R) Y PB AUDIO CENTER MODE IN VARIABLE AUDIO OUT (L) AUDIO (R) DVI INPUT (L) MONO AUDIO (R) Analog stereo amplifier PR PC/DTV (XGA/ 480p/ 720p/ 1080i) (L) AUDIO (R) DVI /DVD A/V cables not included with TV 206-04006 PAGE 15 Home Theater: Speaker Layout This is a typical speaker layout. Any number of other speaker setups are possible, and some changes may be needed to maximize your sound. However, a Dolby Digital Receiver is required to hear 5.1 channel audio. Left and right speakers on each side of the TV enhance separation. The TV's sound optional hookup "center mode in," makes the dialog sound as though it's coming directly from the TV.

The rear surround sound speakers provide the majority of other sounds, like those from special effects in movies. Your sub-woofer generates ultra-low frequency sound, for rumbling low-end audio. left speaker right speaker sub-woofer surround sound speaker surround sound speaker Sound is affected by speaker placement, so make sure nothing is in front of the speakers, and that they are aimed in appropriate directions. You have the option of turning the TV speakers on or off. PAGE 16 206-04006 Monitor Out Setup 1 2 Your TV has a special signal output capability which allows you to hook up a second TV or monitor.

Just connect the second TV or monitor to the MONITOR OUT Audio/Video jacks located on the back of your TV. See the Operating Manual of the second TV or monitor for further details regarding that device's input settings. ANT IN +75 RGB INPUT PC/DTV (XGA/ 480p/ 720p/ 1080i) COMPONENT INPUT2 INPUT1 UPGRADE PORT RGB/DVI INPUT Second TV S-VIDEO MONITOR OUT VIDEO INPUT 2 VIDEO INPUT 1 VIDEO (480i/ 480p/ 720p/ 1080i) (480i/ 480p/ 720p/ 1080i) (L) AUDIO (R) PB Y PB PR PC/DTV (XGA/ 480p/ 720p/ 1080i) VARIABLE AUDIO OUT (L) AUDIO (R) DVI INPUT (L) AUDIO (R) S-Video Audio MONO AUDIO CENTER MODE IN (L) AUDIO (R) DVI /DVD A/V Cables Not included with TV Component 1 - 2, RGB-DTV/PC, and DVI-DTV/PC input sources for main picture cannot be used for Monitor Out. 206-04006 PAGE 17 Remote Control Functions in TV Mode MODE Selects the remote operating mode: TV, VCR, Cable, DVD and Satellite. Select other operating modes, for the remote to control external devices.

INDICATOR LIGHTS TV MODE VCR CABLE DVD SAT LIGHT POWER TV/VIDEO Selects: Analog, Video1, Video2, Side video, Component1-2, RGB, and DVI input sources. Show active remote mode every time any button is pressed. LIGHT Illuminates the remote control keys. SIDE Selects the side video signal if a device, such as a camcorder or game player, is connected to the side video input jack. TV/VIDEO COMP1 SIDE COMP2 DVI DVI RGB Selects: DVI-DTV and DVI-PC input sources. MUTE Switches the sound on or off 1 4 7 ENTER MUTE 2 5 8 0 3 6 9 FLASHBK SURF SURF Scrolls the Surf channel list. SAP Selects: Mono, Stereo, and SAP. VIDEO Adjusts the factory preset picture according to the room. PIP Toggles between PIP, POP (Picture-out-of-Picture) and Twin picture mode. SAP VOL CH VIDEO SWAP Switches the picture from PIP, POP, or twin picture to the main screen.

PIP PIPCH- PIPCH+ SWAP PIPCHChanges to next lower PIP channel RATIO CC FREEZE PIP INPUT PIPCH+ Changes to next higher PIP channel.

THUMBSTICK Allows you to navigate the on-screen menus and to adjust the system settings and preferences, by moving to D an option with F E G and selecting the highlighted option with . MENU EXIT FREEZE Captures and freezes the currentlyviewed main picture in PIP mode. MENU Brings up the main menu to the screen. PLAY PAUSE STOP RECORD EXIT Clears all on-screen displays and returns to TV viewing from any menu. REW FF SKIP PAGE 18 206-04006 Remote Control Functions in TV Mode TV MODE VCR CABLE DVD SAT LIGHT POWER POWER TV/VIDEO COMP1 SIDE COMP2 DVI RGB Turns your TV or any other programmed equipment on or off, depending on mode. COMPONENT 1, 2 Selects component signal sources, such as DVD or HD receiver. RGB 1 4 7 ENTER MUTE 2 5 8 0 3 6 9 FLASHBK SURF Selects: RGB-DTV and RGB-PC input sources. NUMBER KEYPAD For direct channel selection and programming functions. ENTER When in the menu system and other on-screen displays, selects highlighted options.

FLASHBK Tunes to the last channel viewed. SAP VIDEO VOL CH VOLUME UP/DOWN Increases/decreases the sound level. PIP CHANNEL UP/DOWN Scrolls through available channels in EZ Scan memory. PIPCH- PIPCH+ SWAP RATIO Changes the screen format or aspect ratio. RATIO CC FREEZE PIP INPUT PIP INPUT Selects the input source for the sub picture.

CC Selects a closed caption mode for displaying captioning information if available on program. MENU EXIT ENTER When in the menu system and other on-screen displays, selects highlighted options. PLAY PAUSE STOP RECORD RECORD, PAUSE, REW, FFWD, PLAY, STOP Control the functions on your VCR. REW FF SKIP SKIP Playing CDs: Selects songs. Playing DVDs: Selects movie chapters.

206-04006 PAGE 19 On-Screen Displays This page describes your on-screen display and information banner options. Main Channel Display Displays current channel number. Channel Label If a channel label has been set, then it will appear here. TV 13 MONO ABC PIP Display This display appears when PIP is active. TV 6 AM 3:00 10 Mute Appears when sound is muted. Volume Volume level is displayed while adjusting the sound. Time Appears when pressing the enter button. PAGE 20 206-04006 Front Panel Controls POWER MENU ENTER VOL CH 1 2 1 2 3 4 5 6 7 8 POWER MENU 3 4 5 6 7 8 ENTER

(Same as ENTER button on your remote control) VOLUME UP / DOWN CHANNEL UP / DOWN Operation indicator.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341194)

[M52W56LCD user guide](http://yourpdfguides.com/dref/341194)

<http://yourpdfguides.com/dref/341194>

(See page 6). Lamp indicator.

(See page 6). Temperature indicator. (See page 6). See menu pages for instructions on using the onscreen menus. The POWER, MENU, ENTER, VOLUME, and CHANNEL buttons work just as they do on your remote control. If TV is moved from cold to normal room temperature, condensation may form inside TV, wait 3 hours the TV to adjust to room temperature before turning it on. 206-04006 PAGE 21 EZ Scan (Channel Search) Automatically finds analog channels available through ANT IN input, and stores all active over-the-air and cable channels in memory on the channel list. SETUP EZ Scan Ch. Edit G Processing EZ scan. VIDEO AUDIO TIME SPECIAL Ch.

Label Main Input Sub Input Booster LOCK MENU Prev. 1 Refer to pages 7-15 to connect external equipment to your TV. If you have done so, plug in your TV to a standard (nonswitched) 120V 60Hz power outlet. TV MODE VCR CABLE DVD SAT LIGHT POWER 2 If you have done so, remove the back of the remote and install in two AA batteries. Make sure batteries are properly installed (check the +/- symbols).

TV/VIDEO COMP1 SIDE COMP2 DVI RGB 3 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF back of remote 5/7 ENTER MUTE SAP VIDEO VOL CH 3 4 5 6 7 With the remote control in hand, press the POWER button to turn your TV on. Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu. Press ENTER or the RIGHT arrow button to access the Setup menu. Use the UP/DOWN arrow to select EZ Scan. Press ENTER or the Right arrow button to start the EZ Scan channel search.

PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 4/6 5/7 4 4/6 MENU EXIT PLAY PAUSE STOP RECORD REW FF SKIP PAGE 22 206-04006 Channel Add / Delete / Surf Setup SETUP EZ Scan Ch. Edit G ESPN TV 11 TV 2 6 11 7 12 17 22 27 32 37 42 CATV 3 8 13 18 23 28 33 38 43 4 9 14 19 24 29 34 39 44 5 10 15 20 25 30 35 40 45 VIDEO AUDIO TIME SPECIAL Ch. Label Main Input Sub Input Booster Following Screen will let you edit channels and Surf List. Shown Surf List 16 21 26 31 36 41 TV 11 TV 20 LOCK Create two different types of channel lists in memory: "Custom list" and "Surf list". A custom list can be created by toggling each channel on or off with (Enter). Once a channel is highlighted, you will be able to see whether the channel is currently added or deleted by referring to the small window at the top-left corner of the screen. You can create your own Surf list with up to 16 channels. It appears at the bottom-left corner of the screen. Press the Surf button on the remote control when a channel is highlighted to add or delete the channel in the Surf list. TV MODE VCR CABLE DVD SAT LIGHT POWER TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 2 5 8 0 3 6 9 FLASHBK SURF 1 2 3 4 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu.

Press ENTER or the RIGHT arrow button to access the Setup menu. Use the UP/DOWN arrow to select Ch.Edit and then press ENTER or right arrow. You will now see a screen filled with channel numbers and a preview picture. Use the UP/DOWN and LEFT/RIGHT arrow to select a channel, then use ENTER to Delete (remove the channel from the channel scan) or Add (include the channel in the channel scan). Press SURF to add the channel to the Surf List. Press EXIT to save and return to TV viewing or press MENU to save and return to the previous menu. 4 7 2/3/4 ENTER MUTE 4 SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 4 1/5 1/3/4 MENU EXIT PLAY PAUSE STOP RECORD 1/3/4 2/3/4 5 5 REW FF SKIP 206-04006 PAGE 23 (MENU Prev. MENU Previous Add/Delete Surf () Move (Channel Labels Setup SETUP EZ Scan Ch. Edit ESPN TV 25 A&E TBN CMTV VC PBS ET ADC TMC JCN CSP2 WB ESPN ABC TELE IC COM VISN QVC FNN BET HSE CNBC VCR PLAY EWTN AMC TNN LIFE CTN NOS ESP2 ACTS TLC INSP CSPN VJN RDS FOX VIDEO AUDIO TIME SPECIAL Ch.

Label Main Input Sub Input Booster G Following Screen will let you put the logos in channels. HSN CNN VH-1 PTL FAM BCC TNT LOCK MENU Prev. Choose preset labels for your channels. 1 2 3 4 5 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu. Press ENTER or the RIGHT arrow button to access the Setup menu.

Use the UP/DOWN arrow to select the Ch. Label option. Use Channel +/- on your remote control in the Ch. Label menu to select a channel for labeling, then choose a suitable label for the channel by pressing to attach the label to the selected channel. TV VCR CABLE DVD SAT LIGHT POWER Press ENTER or the RIGHT arrow to access the Ch.

Label menu. You will now see a screen filled with Labels and a preview screen. Use channel UP/DOWN button on your remote to select the a channel to Label. Use the UP/DOWN and LEFT/RIGHT arrow to select the appropriate label for the channel or to select a blank label section for making a channel name. Use the UP/DOWN/LEFT/RIGHT arrow and press ENTER to set the Label to the selected channel. Use the UP/DOWN/ LEFT/RIGHT arrow and press SURF to edit channel name. Eight blank channel sections are available. Use the LEFT/RIGHT arrow to select a word position and use the UP/DOWN arrow to change the letter. Press SURF to save. MODE TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 2 5 8 0 3 6 9 FLASHBK SURF 6 7 2/4/6 ENTER MUTE (MENU Previous Add/Delete () Move CH Change Channel SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP (6 5 RATIO CC FREEZE PIP INPUT 6 1 1/3/6 MENU EXIT PLAY PAUSE STOP RECORD 1/3/6 2/4/6 8 REW FF SKIP 7 8 Repeat 5 and 6 steps until all channels are Labeled.

Press EXIT to save and return to TV viewing. PAGE 24 206-04006 Main Picture Source Selection Changes the picture source for the main screen so you can watch your TV, cable TV, VCR, DVD, or any other devices that are connected to your TV. SETUP VIDEO AUDIO TIME SPECIAL EZ Scan Ch. Edit Ch.

Label Main Input Sub Input Booster G Anti/Cable Video1 Video2 Side Video Component 1 Component 2 RGB-DTV DVI-DTV G G LOCK MENU Prev. 1 2 3 4 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu. TV VCR CABLE DVD SAT LIGHT POWER Press ENTER or the RIGHT arrow button to access the Setup menu. Use the UP/DOWN arrow to select Main Input. Press ENTER or the RIGHT arrow to access the Main Input menu, then use the UP/DOWN arrow button to select a source. Your Main picture source options are : Ant/Cable, Video 1, Video 2, Side Video, Component 1, Component 2, RGBDTV, RGB-PC, DVI-DTV, or DVI-PC.

Press EXIT to save and return to TV viewing or press the LEFT arrow to save and return to the previous Menu.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341194)

[M52W56LCD user guide](http://yourpdfguides.com/dref/341194)

<http://yourpdfguides.com/dref/341194>

MODE TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF 2/4 ENTER MUTE SAP VOL CH VIDEO 5 PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 1/3/4 5 1 1/3/4 MENU EXIT PLAY PAUSE STOP RECORD 2/4 5 REW FF SKIP 206-04006 PAGE 25 PIP (Picture-in-Picture) / Twin Picture Operation PIP lets you view 2 different inputs (sources) on your monitor screen at the same time. One source will be large, and the other source (PIP) will show a smaller inset image. Twin Picture splits the screen into 2, allowing 2 pictures to be shown on the TV screen at the same time.

Each source is given half the screen.

Watching PIP Press the PIP button to show the sub picture. Each press of PIP changes the PIP options as shown below. PIP Mode POP Mode Twin Picture Mode PIP / Twin Picture Source Selection Changes the picture source for the Sub Picture image so you can watch your TV, cable TV, VCR, or any other devices that are connected to your TV. Using the menu 1 2 3 4 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu. Press ENTER or the RIGHT arrow button to access the Setup menu.

Use the UP/DOWN arrows to select the Sub Input option. Press ENTER or the RIGHT arrow to access the Sub Input menu, then use the UP/DOWN arrow button to select the source. Your choices are: Ant/Cable, Video 1, Video 2, Side Video. Press EXIT to save and return to TV viewing or press the LEFT arrow to save and return to the previous Menu. SETUP EZ Scan Ch. Edit VIDEO AUDIO TIME SPECIAL Ch. Label Main Input Sub Input Booster G Ant/Cable Video 1 Video 2 Side Video LOCK MENU Prev. 5 Do not display a fixed image on the screen for long periods of time. Doing so may cause image burn-in. Not all sources are available for PIP.

Using the PIP INPUT button on the remote control 1 Use the PIP INPUT button to select the input source for the sub picture. Each time you press PIP INPUT button, you toggle between Ant/Cable, Video 1, Video 2, and Side Video. PAGE 26 206-04006 PIP (Picture-in-Picture) / Twin Picture Operation Selecting PIP / Twin Picture Channels 1 2 Press the PIP button on the remote control to select PIP or Twin picture mode. Select the Ant/Cable source with the PIP INPUT button. Use the PIPCH-/PIPCH+ button to select a channel for the sub picture. Swapping Pictures Press the SWAP button. Each time you press the SWAP button, you switch the Main and Sub pictures. It's available to SWAP the Main and Sub picture in Ant/Cable, video 1-2, and side video input sources for Main picture. Main Picture Sub Picture Main Picture Sub Picture Moving the Sub Picture (PIP mode only) In the PIP mode, each press of the UP/DOWN/LEFT/RIGHT arrow buttons will move the sub picture to a different position on the screen. POP (Picture-outside-Picture) Use POP to search the pictures of all the programmed channels one-by-one on the 3 POP screen display, while the main screen remains the current channel.

1 Press PIP button on the remote control with the POP image on the screen to activate POP (Picture-outside-Picture) mode. The pictures of all the programmed channels are searched with the 3 POP screen, as shown to the right. · Press SWAP, to enlarge the selected channel being searched on the POP screen to view it on the Main screen. (It's available to use this function in Ant/Cable input source for Main and Sub picture.) 2 Press the EXIT button to exit POP mode.

Run EZ Scan channel search before using POP mode. 206-04006 PAGE 27 Booster If TV signal reception is poor because you are in a fringe area, set Booster to On. If the picture condition is good, set Booster to Off. Adjustments for one channel don't affect the adjustment for other channels. Set booster to on or off for each channel separately.

SETUP EZ Scan Ch. Edit VIDEO AUDIO TIME SPECIAL Ch. Label Main Input Sub Input Booster G Off On LOCK MENU Prev. 1 2 3 4 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Setup menu. Press ENTER or the RIGHT arrow button to access the Setup menu. Use the UP/DOWN arrow to select Booster. Press ENTER or the RIGHT arrow to access the Booster menu, then use the UP/DOWN arrow button to select On or Off. Press EXIT to save and return to TV viewing or press the ENTER arrow to save and return to the previous Menu. TV MODE VCR CABLE DVD SAT LIGHT POWER TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF 2/4/5 ENTER MUTE 5 SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 1/3/4 1 1/3/4 MENU EXIT 2/4 5 PLAY PAUSE STOP RECORD REW FF SKIP PAGE 28 206-04006 Video Menu Options Adjust the picture appearance to suit your preference and viewing situations. SETUP EZ Picture Contrast G Off Daylight Normal Night Time Movie Video Game Sports VIDEO AUDIO TIME SPECIAL Brightness Color Sharpness Tint Color Temperature IIP LOCK MENU Prev.

You can manually adjust the levels for the picture quality settings, such as Contrast, Brightness, Color, etc. You can also select a preset value from the EZ Picture menu based on the category of the program. 1 2 3 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Video menu. Press ENTER or the RIGHT arrow button to access the Video menu. Use the UP/DOWN arrows to select one of the following options: EZ Picture (Off, Daylight, Normal, Night Time, Movie, Video Game, or Sports), Contrast, Brightness, Color, Sharpness, Tint, Color Temperature (Warm, Medium, Cool), and IIP. Then press ENTER or the Right arrow button. Use the LEFT/RIGHT arrows to adjust the option to your preference (Contrast, Brightness, Color, Sharpness, Tint). Use the UP/DOWN arrows to set the option to your preference (EZ Picture, Color Temperature, IIP). Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu. TV MODE VCR CABLE DVD SAT LIGHT POWER TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF 2/3/5 ENTER MUTE SAP VOL CH VIDEO 4 PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 1/3/4 4 1 1/3/4 MENU EXIT PLAY PAUSE STOP RECORD 5 2/3/4 5 REW FF SKIP 206-04006 PAGE 29 Video Menu Options SETUP Contrast 90 F G VIDEO AUDIO TIME SPECIAL E LOCK · EZ Picture Lets you choose a preset value for the picture settings.

Off Lets you adjust the picture manually to your preferences. Daylight Increases the levels of all picture settings to fit daylight conditions. Normal Restores the picture levels to their original settings. Night Time Increases the levels of all picture settings to fit daylight conditions. Movie Adjusts Video settings to enhance Movie viewing.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341194)

[M52W56LCD user guide](http://yourpdfguides.com/dref/341194)

<http://yourpdfguides.com/dref/341194>

SETUP Auto Clock Manual Clock VIDEO AUDIO TIME SPECIAL Off Timer On Timer Sleep Timer Auto Off G Off On LOCK MENU Prev.

1 2 3 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Time menu. TV VCR CABLE DVD SAT LIGHT POWER Press the RIGHT arrow button to activate the Time menu. Use the UP/DOWN arrow button to choose Auto Off then press the RIGHT arrow button to access the Auto Off menu. Use the UP/DOWN arrow to choose On or Off. Press EXIT button to save and return to TV viewing, or press the MENU button to save and return to the previous menu. MODE TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 2 5 8 0 3 6 9 FLASHBK SURF 4 5 7 2/5 ENTER MUTE SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 1/3/4 1 1/3/4 MENU EXIT 2/3 5 PLAY PAUSE STOP RECORD REW FF SKIP PAGE 38 206-04006 Aspect Ratio 1 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu. Or press RATIO button to instantly access the Aspect Ratio . Press ENTER or the RIGHT arrow button to activate the Special menu. Use the UP/DOWN arrows to choose Aspect Ratio. Press ENTER or the RIGHT arrow button to move into the Aspect Ratio selection menu.

Use the UP/DOWN arrow buttons to select the right ratio for your viewing environment: · 4:3 - Choose when you want to view a picture with an original 4:3 aspect ratio, with black bars appearing at both the left and right sides. · 16:9 - Choose when you want to adjust the picture horizontally, in a linear proportion to fill the entire screen. (Useful for viewing 4:3 formatted DVDs.) · Horizon - Choose when you want to adjust the picture in a non-linear proportion. The picture is more enlarged at both sides, to create a spectacular view. · Zoom1 - Choose when you want to view the picture without any alteration. However, the top and bottom portions of the picture will be cropped. · Zoom2 - Choose when you want the picture to be altered, both vertically extended and vertically cropped. The picture taking a halfway trade off between alteration and screen coverage. SETUP Aspect Ratio Language G 4:3 16:9 Horizon Zoom1 Zoom2 VIDEO AUDIO TIME SPECIAL Captions Caption/Text Key Lock Cinema EZ Demo 2 3 4 LOCK MENU Prev.

Lets you choose the way that an analog picture with a 4:3 aspect ratio is displayed on your TV 16:9 aspect ratio TV screen. When you receive an analog picture with a 4:3 aspect ratio on your 16:9 TV, you need to specify how the picture is to be displayed according to your preference. TV MODE VCR CABLE DVD SAT LIGHT POWER TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF 2/4/5 ENTER MUTE SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP 5 Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu. For RGB-PC source, you can select either 4:3 or 16:9 aspect ratios. For RGB-DTV (720p, 1080i) or Component 1-2 (720p, 1080i) sources,, you can select either 4:3, 16:9 or Zoom1-2 aspect ratios.

Aspect ratio is changed to 16:9 automatically for 720p or 1080i formats from component input1/2, RGB, or DVI sources. After connecting external equipment to the TV, don't display a still picture for a long time on the screen. Doing so may damage the TV screen. 1 RATIO CC FREEZE PIP INPUT 1/3/4 1 1/3/4 MENU EXIT 2/4 5 PLAY PAUSE STOP RECORD REW FF SKIP 206-04006 PAGE 39 On-Screen Menu Languages Select your preferred language for the menus: English, Spanish, or French. SETUP Aspect Ratio Language G English Español Français VIDEO AUDIO TIME SPECIAL Captions Caption/Text Key Lock Cinema EZ Demo LOCK MENU Prev.

1 2 3 4 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu. TV VCR CABLE DVD SAT LIGHT POWER Press ENTER or the RIGHT arrow button to activate the Special menu. Use the UP/DOWN arrow to choose Language. Press ENTER or the RIGHT arrow button to move into the Language selection menu. Use the UP/DOWN arrow button to select the language you wish to use for your on-screen menus. Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu. MODE TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF 2/4/5 ENTER MUTE 5 SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 1/3/4 1 1/3/4 MENU EXIT 2/4 5 PLAY PAUSE STOP RECORD REW FF SKIP PAGE 40 206-04006 Captions Setup SETUP Aspect Ratio Language VIDEO AUDIO TIME SPECIAL Captions Caption/Text Key Lock Cinema EZ Demo G Off EZ Mute On Using the menu LOCK MENU Prev. 1 2 3 4 5 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu. Press ENTER or the RIGHT arrow button to activate the Special menu. Use the UP/DOWN arrow to choose Captions, then press ENTER or the Right arrow button.

Use the UP/DOWN arrow to make your caption selection. Your choices are: Off, EZ Mute, and On. Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu. TV MODE VCR CABLE DVD SAT LIGHT POWER TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF 2/3/5 Using the CC button Use the CC button on the remote control to select captions. Each press of the CC button changes the caption option; Off, EZ Mute, and On. Captions Setup is complete. EZ Mute shows the selected captions option (if available on program) when the TV sound is muted. ENTER MUTE SAP VOL CH VIDEO 1 PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 1/3/4 1 MENU EXIT 2 Press EXIT to save and return to TV viewing. 1/3/4 2/3 5 PLAY PAUSE STOP RECORD REW FF SKIP 206-04006 PAGE 41 Caption/Text Mode Selection Select a closed caption mode for displaying captioning information when provided on the program. Captions displays information at any position on the screen usually the program's dialog.

Text displays information, usually at the bottom position and is used for a data service, generally not program related. SETUP Aspect Ratio Language CC 1 CC 2 G VIDEO AUDIO TIME SPECIAL Captions Caption/Text Key Lock Cinema EZ Demo CC 3 CC 4 Text 1 Text 2 Text 3 Text 4 LOCK MENU Prev. 1 2 3 4 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu. Press ENTER or the RIGHT arrow button to activate the Special menu. Use the UP/DOWN arrow to choose Caption/Text, then press ENTER or the Right arrow button.

Use the UP/DOWN arrow to make your caption selection. Your options are: CC 1, CC 2, CC 3, CC 4, Text 1, Text 2, Text 3, and Text 4.



[You're reading an excerpt. Click here to read official ZENITH M52W56LCD user guide](http://yourpdfguides.com/dref/341194)
<http://yourpdfguides.com/dref/341194>

Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu. TV MODE VCR CABLE DVD SAT LIGHT POWER TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF 2/3/5 ENTER MUTE SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP 5 RATIO CC FREEZE PIP INPUT 1/3/4 1 MENU EXIT 1/3/4 2/3 5 PLAY PAUSE STOP RECORD REW FF SKIP PAGE 42 206-04006 Key Lock The TV can be set up so that it can only be used with the remote control. The feature can be used to prevent unauthorized viewing by disabling the front panel controls.

The TV is programmed to remember which option it was last set to even if you turn the TV off. SETUP Aspect Ratio Language VIDEO AUDIO TIME SPECIAL Captions Caption/Text Key Lock Cinema EZ Demo G Off On LOCK MENU Prev. 1 2 3 4 5 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu. Press ENTER or the RIGHT arrow button to activate the Special menu. Use the UP/DOWN arrow to choose Key Lock, then press ENTER or the Right arrow button. Use the UP/DOWN arrow to choose On or Off. Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu. TV MODE VCR CABLE DVD SAT LIGHT POWER TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF 2/5 ENTER MUTE SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 1/3/4 1 1/3/4 MENU EXIT 2/3 5 PLAY PAUSE STOP RECORD REW FF SKIP 206-04006 PAGE 43 Cinema Mode Setup Set up the TV for the best picture appearance for viewing movies. SETUP Aspect Ratio Language VIDEO AUDIO TIME SPECIAL Captions Caption/Text Key Lock Cinema EZ Demo G Off On LOCK G MENU Prev. 1 2 3 4 5 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu.

Press ENTER or the RIGHT arrow button to activate the Special menu. Use the UP/DOWN arrow to choose Cinema, then press ENTER or the Right arrow button. Use the UP/DOWN arrow to choose On or Off. Press EXIT to save and return to TV viewing or press the ENTER button to save and return to the previous menu. TV MODE VCR CABLE DVD SAT LIGHT POWER TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF 2/5 ENTER MUTE SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 1/3/4 2/3 1 1/3/4 MENU EXIT 5 PLAY PAUSE STOP RECORD REW FF SKIP PAGE 44 206-04006 EZ Demo EZ Demo Use to scan the features and menu options available on your TV. SETUP Aspect Ratio Language VIDEO AUDIO TIME SPECIAL Captions Caption/Text Key Lock Cinema EZ Demo G Selection (G or) leads you to the EZ Demo. LOCK MENU Prev. 1 2 3 4 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Special menu. Press ENTER or the RIGHT arrow to activate the Special menu. Use the UP/DOWN arrow to select EZ Demo.

Press ENTER or the RIGHT arrow button to start the EZ Demo. TV MODE VCR CABLE DVD SAT LIGHT POWER TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF 2/3/4 ENTER MUTE SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT 1/3 2/3/4 1 1/3 MENU EXIT PLAY PAUSE STOP RECORD REW FF SKIP 206-04006 PAGE 45 Parental Lock Setup Lets you set up blocking schemes to block specific channels, ratings and external sources. A password is required to gain access to this menu if the Lock System is active. SETUP Lock System Set Password VIDEO AUDIO TIME SPECIAL Block Ch. Movie Rating TV Rating- Children TV Rating-General Aux.

Block 1 2 3 Press the MENU button on the remote control, then use the UP/DOWN arrow button to select the Lock Menu. Press ENTER or the RIGHT arrow button to access the Lock Menu. The TV is set up with the initial password 0000. Use the UP/DOWN arrow to choose from the following Lock Menu options. Lock System: Activates or disables the blocking scheme you set up previously.

LOCK G - Set Password: Changes the password by keying in a new password twice. TV MODE VCR CABLE DVD SAT LIGHT POWER - Movie Rating: Blocks movies according to the movie ratings limit, so children cannot view certain movies. You can set the ratings limit by blocking out all the movies with the ratings above a specified level. Keep in mind that the movie ratings limit only applies to movie shown on TV, not TV programs, such as soap operas. TV/VIDEO COMP1 SIDE COMP2 DVI RGB 1 4 7 2 5 8 0 3 6 9 FLASHBK SURF - TV Rating-Children: Keeps children from watching certain TV programs among only the programs intended for children, according to the ratings limit. This rating does not apply to other TV programs. Unless you block certain TV programs intended for mature audiences in the TV Rating - General menu, your children may view those programs. 2 ENTER MUTE SAP VOL CH VIDEO PIP PIPCH- PIPCH+ SWAP RATIO CC FREEZE PIP INPUT - TV Rating-General: Blocks certain TV programs that you and your family do not want to watch, based on the ratings. 1/3 2 1 1/3 MENU EXIT PLAY PAUSE STOP RECORD - Block Ch.: Blocks any channels that you do not want to watch or that you do not want your children to watch.

Aux. Block: Enables you to select a source for blocking among the source devices you have hooked up. REW FF SKIP If you forget your password, enter the number, 7777 to release the lock mode. PAGE 46 206-04006 Parental Lock (Ratings Overview) Parental Lock Rating Descriptions SETUP Lock System Set Password G Unlocks for channel and rating. VIDEO AUDIO TIME SPECIAL Block Ch. Movie Rating TV Rating- Children TV Rating-General Aux. Block Off On LOCK MENU Prev. TV-Y7 (Children 7 Years & Older): Program is designed for children age 7 and above. TV-G (General Audience): Most parents would find this program suitable for all ages. TV-PG (Parental Guidance Suggested): Program contains material that parents may find unsuitable for younger children.

TV-14 (Parents Strongly Cautioned): Program contains some material that many parents would find unsuitable for children under 14 years of age. TV-MA (Mature Audiences Only): Program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17. G (General Audiences): All ages can view. PG (Parental Guidance Suggested): Some program content may not be suitable for children. PG-13 (Parents strongly cautioned): Some program content may not be appropriate for children under 13.

R (Restricted): Children under 17 requires parent or adult guardian be present. NC-17: No one 17 or younger should view. TV-Y (All Children): Program is determined to be appropriate for all children.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341194)

[M52W56LCD user guide](http://yourpdfguides.com/dref/341194)

<http://yourpdfguides.com/dref/341194>