




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH TVBR1922Z. You'll find the answers to all your questions on the ZENITH TVBR1922Z in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH TVBR1922Z
User guide ZENITH TVBR1922Z
Operating instructions ZENITH TVBR1922Z
Instructions for use ZENITH TVBR1922Z
Instruction manual ZENITH TVBR1922Z

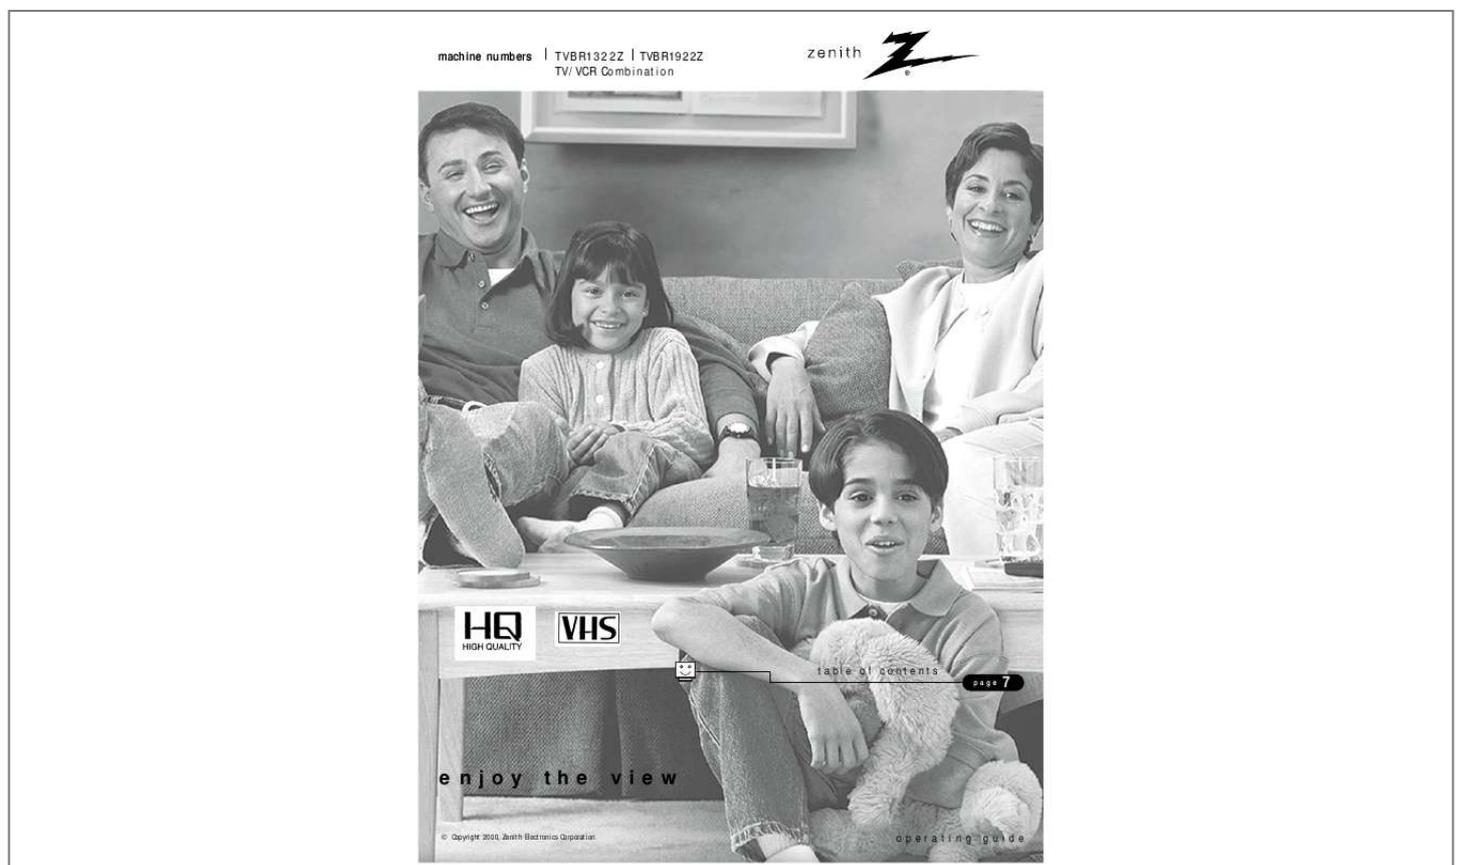

[You're reading an excerpt. Click here to read official ZENITH TVBR1922Z user guide](http://yourpdfguides.com/dref/341272)
<http://yourpdfguides.com/dref/341272>

Manual abstract:

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@@@POWER CORD POLARIZATION: CAUTION: To Prevent Electric Shock, Match wide blade of plug to wide slot, fully insert. **ATTENTION:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond. **NOTE TO CABLE/TV INSTALLER:** This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. **REGULATORY INFORMATION:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

· Consult the dealer or an experienced radio/TV technician for help. **CAUTION:** Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product. Entertainment Machine™ is a trademark of Zenith Electronics Corporation. © Copyright 1999 Zenith Electronics Corporation PAGE 2 TV/VCR-WARN-7/99 **IMPORTANT SAFETY INSTRUCTIONS** Important safeguards for you and your new product Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference. Observing the simple precautions discussed in this guide can help you get many years of enjoyment and safe operation that are built into your new product. This product complies with all applicable U.S. Federal safety requirements, and those of the Canadian Standards Association. 1. Read Instructions All the safety and operating instructions should be read before the product is operated. 9. Attachments Do not use attachments not recommended by the product manufacturer as they may cause hazards.

2. Follow Instructions All operating and use instructions should be followed. 10. Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. 3. Retain Instructions The safety and operating instructions should be retained for future reference. 4. Heed Warnings All warnings on the product and in the operating instructions should be adhered to.

5. Cleaning Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. 11. Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions. 6. Water and Moisture Do not use this product near water for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

12. Line-Cord Polarization This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. 7. Accessories Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.

Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. 13. Power-Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8. Transporting Product A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. (Continued on next page) 206-3481 PAGE 3

IMPORTANT SAFETY INSTRUCTIONS (Continued from previous page) 18. Object and Liquid Entry Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

14. Outdoor Antenna Grounding If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. Example of Grounding According to National Electrical Code Instructions 19.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341272)

[TVBR1922Z user guide](http://yourpdfguides.com/dref/341272)

<http://yourpdfguides.com/dref/341272>

Servicing Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 20.

Damage Requiring Service Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. If the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the product. c. If the product has been exposed to rain or water. d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation. e.

If the product has been dropped or the cabinet has been damaged. f. If the product exhibits a distinct change in performance. Ground Clamp Antenna Lead in Wire Antenna Discharge Unit (NEC Section 810-20) Grounding Conductor (NEC Section 810-21) Ground Clamps Power Service Grounding Electrode System (NEC Art 250, Part H) Electric Service Equipment NEC - National Electrical Code 15. Lightning For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges. 21. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. 16.

Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal. 22. Safety Check Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition. 23.

Wall or Ceiling Mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer. 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock. 24. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

206-3481 PAGE 4 Additional TV/VCR Precautions Follow these simple precautions to avoid problems with your TV/VCR Moisture Condensation Do not operate any functions on this unit for at least two hours or three hours when moisture in the air condenses on it. Let the unit stand with power on (see below). What is moisture Condensation? When a cold liquid is poured into a glass, for example, water vapor in the air will condense on the surface of the glass. This is called moisture condensation. Moisture will condense on the unit under the following conditions: · When you move the unit from a cold to a warm place. · After heating a cold room or under extreme humidity conditions. When the unit has been exposed to the above conditions - plug the power cord into an AC outlet, press the POWER button to turn the TV/VCR on and leave it at room temperature until the moisture condensation disappears. Depending on the surrounding conditions, this may take two or three hours. operated for a long time, unplug the AC power cord. sult a qualified service person before attempting to use the TV/VCR.

Static Discharge If you cause a static discharge when touching the unit and the unit fails to function, simply unplug the unit from the wall outlet, wait a few minutes and then plug it back in. The unit should return to normal operation. Extreme Heat Avoid using or exposing the unit to extreme heat; at or above 104oF (40oC). For example, in direct sunlight. Extreme Cold Avoid using the unit in extreme cold; at or below 41oF (5oC). For example, outdoors in freezing weather. Moisture and Dust Avoid exposing the unit to condurned on, the TV/VCR will automatically play back the same cassette tape repeatedly. One-Touch

Timer Recording - Simply by pressing the REC/OTR button, the TV/VCR can be programmed for up to 5 hours of recording with an immediate start. Audio/Video Input/Output Jacks - A VCR or other video device may be hooked up to this TV/VCR for dubbing or playback purposes. Auto Turn-on with Tape Insertion - When a tape is inserted into the tape loading compartment, the TV/VCR automatically turns itself on.

Commercial Advance - Automatically or manually advances from the start to the end of commercials during playback. 2-Speed Picture Search - 3 or 5 times normal speed in SP mode (7 or 9 times in LP mode and 9 or 15 times in SLP mode). 3-Speed Record/Playback - Records and plays three tape speeds (SP, LP, and SLP). Real-Time Tape Counter with Zero Return - The counter displays the real tape time and the zero return can be used to return the tape to a preselected position (00:00:00) while the counter can be used to locate programs. Digital Auto Tracking - Automatically adjusts tracking during playback for the best possible picture.

Manual Tracking Control - Manually adjusts tracking during playback. On-Screen 3-Language Display - You can select one of 3 languages, English, Spanish, or French for on-screen programming. TV/Monitor - When "TV MONI." on the remote is pressed during playback, the TV channel selected with the TV/VCR tuner appears. Pause/Still Playback - Freezes tape playback.

Tape to Zero Position Return - Tape can be rewound to the 00:00:00 position by pressing "Zero Counter". Note: Design and specifications are subject to change without prior notice. PAGE 6 206-3375 Table of Contents Turn to the next page to begin your TV/VCR combination setup Safety Warnings

. 2 Important Safety Instructions . . 3 - 4 Special TV/VCR Precautions . .
. 5 Features on this TV/VCR .
.
. 6 Table of Contents
. 7 Basic VCR Operation Playing Tapes/Instant, One-Time Recording
.
. 19 On-Screen Menus and displays .
. 20 Selecting Viewing Sources (Input Sel.)
. 21 Setting Up V-Chip
.
. 31 V-Chip Menu Overview
. 32 VCR Operations: Playing Tapes Playback: Standard Play Mode Commercial Advance Playback Options
. Commercial Marking
. Real-Time Tape Counter
. Tape Counter Zero Return

.....
33 34 35 35 35 35 Step 1. Hook Up your TV/VCR Equipment Hookup Directory 8 Off Air Antenna
.....
. . 9 Cable service .



[You're reading an excerpt. Click here to read official ZENITH
TVBR1922Z user guide
http://yourpdfguides.com/dref/341272](http://yourpdfguides.com/dref/341272)

.....
.....
.....
.....

... page 12 R -AUDI AUDIO/ O-L VIDEO VIDEO OUT R -AUDI AUDIO/ O-L VIDEO VIDEO OUT Headphones If you want to connect headphones, go to .

... page 12 Phones PAGE 8 206-3375 Hook Up an Off Air Antenna Connect an off air antenna to your Entertainment Machine 1 2 Hook up your Entertainment Machine, see diagrams at right. Remove the back of the remote and put in two AA batteries. Antenna (Indoor or Outdoor) back of remote Flat wire (300 ohm) 3 Plug in your TV. Do not plug it into a switched outlet. VHF UHF 120 V AC 60 Hz 300/75 ohm Adapter 4 Go to page 17 to set up Auto Ch Memory on your Entertainment Machine. Typical TV/VCR back If you have a 75 ohm RF cable, then you don't need any adapters! Antenna Remember, when screwing RF cables onto jacks, clockwise tightens, and counterclockwise loosens. A 300 to 75 ohm adapter is not included with your Zenith Entertainment Machine.

RF coaxial wire (75ohm) VHF UHF Mini glossary 75 OHM RF CABLE 300-75 OHM ADAPTER The wire that comes from an off air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle, and it screws onto the threaded jack on the back of your TV. A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end. 206-3481 PAGE 9 Hook Up Cable Service (CATV) Connect Cable service to your Entertainment Machine 1 2 Hook up your Entertainment Machine, see diagrams at right.

Remove the back of the remote and put in two AA batteries. Cable TV wall jack back of remote Without Cable Box RF coaxial wire (75ohm) 3 Plug in your TV. Do not plug it into a switched outlet. VHF UHF 120 V AC 60 Hz Cable TV wall jack 4 Go to page 17 to set up Auto Ch Memory on your Entertainment Machine. With Cable Box Typical TV/VCR back If you're using a cable box, leave your TV/VCR on channel 3 or 4 and use your cable box to change channels. Remember to set the cable box output switch to channel 3 or 4. If you're using a cable box, Auto Ch Memory (page 17) might only find the channel your cable service is on (usually channel 3 or 4). Don't worry, that's all you need! In Out Cable box output switch 3 4 RF coaxial wire (75ohm) VHF UHF Mini glossary CABLE SERVICE The wire that supplies all your cable TV (CATV) stations. PAGE 10 206-3481 Hook Up Cable (CATV) alternate Connect Cable service with a cable box, scrambled, and unscrambled channels to your Entertainment Machine 1 2 Hook up your Entertainment Machine, see diagrams at right. Remove the back of the remote and put in two AA batteries. Cable TV wall jack Typical 2-Way Signal Splitter In back of remote Out 1 Out 2 3 Plug in your TV. Do not plug it into a switched outlet. For Scrambled Channels 120 V AC 60 Hz For Un-Scrambled Channels Typical A-B Switch A B 4 Go to page 17 to set up Auto Ch Memory on your Entertainment Machine. In Out Cable box output switch 3 4 Leave your TV/VCR tuned to channel 3 or 4 and use the cable box to change channels. Remember to set the cable box output switch to channel 3 or 4.

Typical TV/VCR back VHF UHF 206-3481 PAGE 11 Audio/Video, Headphone Connections Make temporary or permanent Audio/Video connections to your Entertainment Machine - - in from or out to accessory audio/video equipment; using the Audio/Video In/Out Jacks on the front and/or back connection panels.

Connect your monaural audio headphones for private listening... Headphones 1 2 Locate the "Phones" jack on the front of your TV/VCR. Connect the cord coming from your headphones to this jack. Unplug the headphones when finished with private listening. Phones Audio / Video Typical TV/VCR back 1 2 Hook up your audio/video equipment to your Entertainment Machine, see diagrams. Go to page 21 to select an audio/video accessory as the source for your picture and sound. VHF UHF Video Audio Out In R -AU DIO AUDI O/VI -L VID EO DEO OUT Typical Video TV/VCR Front A/V Jackpack Audio In In R -AU DIO AUDI O/VI -L VID EO DEO OUT R -AU DIO AUDI O/VI -L VID EO DEO OUT R -AU DIO -L AUDI O IN PAGE 12 206-3481 Front Panel Controls TVB1322Z hq 4 head tv/vcr combination volume power channel power rec/otr t.



[You're reading an excerpt. Click here to read official ZENITH TVBR1922Z user guide](http://yourpdfguides.com/dref/341272)
<http://yourpdfguides.com/dref/341272>

rec stop/ play eject ffwrd rwd rec/otr video in audio in phones 1 Front Panel Controls 2 3 4 5 6 6. 7 8 9 Note: Your front controls may differ from those shown above. 1. 2. 3.

4. ly 5. Cassette Loading Compartment Loads and unloads VHS video cassettes. Power Switch Turns TV/VCR on and off. Volume Controls Increases or decreases the audio sound level.

Channel Selectors Chooses channel numbers below or above the currentselected channel number, found by Auto Ch Memory. LED Function Indicators When lit, shows current TV/VCR operating mode. Power = TV/VCR is on. REC/OTR = VCR is recording in one-time record mode. T. Rec = VCR is in timer recording mode and is scheduled to, or is recording a program. 7. 8. 9. VCR Function Controls Stop / Eject.

= One press stops tape, second press ejects the tape. Play = Press to begin playing a tape (playback). F.Fwd, Rew = press to fast forward or rewind tape. Instant Record Button Press to record the image currently appearing on the screen. One press records until end of tape or stop. Second press records for 30 minutes and each press thereafter adds an additional 30 minutes to the recording time. Front Audio/Video In Jacks Used for connecting audio/video equipment. Headphones Input jack Connect your headphones to this jack for monaural sound audio private listening. 206-3481 PAGE 13 Remote Control Key Functions A quick list of the keys on your remote and what they do POWER Turns TV/VCR On or Off.

POWER SETMENU SET+ CA CANCEL Deletes programs from scheduled Timer Recording and goes back to previous menu option on some onscreen menus CALL Turns current status display on and off. Shows: Current time, VCR tape counter, Day, Channel number, and Tape recording or playback speed.

VOLUME LEFT/RIGHT Increase/decreases sound level. MUTE Turns sound Off and On while the picture remains. MENU/ENTER/SET-/SET+ Use to enter and exit, select and adjust, on-screen menu options.

TV/MONITOR Switches between tape playback and currently tuned TV channel. CHANNEL (UP/DOWN) Flip through available channels. ENTER CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F REC/OTR STOP PAUSE/STILL VCR CONTROLS (See descriptions on next page.) Used for recording or playing VHS video cassette tapes.

SLOW AU TO TRACKING ZERO COU . NTER TIMER REC PROG RETURN RES ET INPUT SEL. INPUT SEL. (Select) Picks Line 1, Line 2, or the currently selected channel or tape playing. (Line 1 = Front Audio/Video In jacks. Line 2 = Back Audio/Video In jacks.) TV/CAP/TEXT Switches between Caption, Text, and TV modes for Closed-Captioned programs. CAPTION CH1, CAPTION CH 2, TEXT CH1, TEXT CH2, or off. 1 NUMBER KEYPAD Selects channels directly and enters numbers for some on-screen menu options. 2 5 8 0 3 TVCAP/TEXT 4 7 SPEED 6 SLEEP 9 Q.

VIEW SLEEP (SLEEP TIMER) Press repeatedly to pick a preset time to automatically turn the TV/VCR off. Q. VIEW (QUICK VIEW) Returns to previously viewed channel. If you've lost your remote, you can get a new one by calling 1-800-255-6790 to purchase a replacement. remote control part number SC1322 (924-10063) PAGE 14 206-3481 Remote Control VCR Functions A quick list of the VCR function keys on your remote and what they do Note: Your remote control keys may differ from the ones shown here. POWER SETMENU SET+ CA CA Commercial Advance. Use to skip over commercial breaks on tapes recorded with this TV/VCR. ENTER CANCEL TV/MONITOR EJECT Unloads videocassette from tape loading compartment. EJECT CH VOL CALL PLAY Starts tape playback. VOL CH REW PLAY MUTE REW (Rewind) Rewinds videocassette.

F.F (Fast Forward) F.F Advances tape forward rapidly. Begins recording currently shown picture and sound. REC/OTR (One-Time Record) PAUSE/STILL REC/OTR STOP PAUSE/STILL Temporarily halts tape movement in playback or record modes.

AUTO (TRACKING) Press to resume automatic tracking from manual tracking mode during tape playback. SLOW AU TO TRACKING STOP Halts tape movement in playback or record modes. ZERO COU . NTER TIMER REC PROG TRACKING ZERO RETURN Rewinds or advances tape to the 00:00:00 position. RETURN RES ET INPUT SEL.

(Manually Adjust Digital Tracking Controls) Used to adjust tracking manually during tape playback. 1 4 7 SPEED 2 5 8 0 3 TVCAP/TEXT PROG. (Program Review) Press to confirm the programs scheduled for timer recording, press a second time to check the On/Off Timer settings, press again to exit menu. COUNTER RESET (Counter Reset Control) Resets the real-time tape counter to 00:00:00. 6 SLEEP 9 Q. VIEW TIMER REC (Record) Used to turn Timer Recording feature on and off. On = VCR will make scheduled timer recordings. Off = VCR will not begin any scheduled timer recordings. SPEED Adjusts tape recording speed: SP (Short play), LP (Long play), SLP (Super long play). 206-3481 PAGE 15 Basic Menu Operation Use the remote control to operate the on-screen menus; first selecting a menu option, then adjust it to your preference 1.

MENU MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+ / - ENTER / MENU) 1 2 Pressing MENU repeatedly turns on the menu system and shows the menus on the screen. Pressing the "Set+" or "Set-" keys on the remote control repeatedly, moves the menu highlighter to the next menu option line. (SETmoves the highlight down with each press, SET+ moves the highlight up with each press.) Once the menu option is highlighted (flashing rectangle is on the same line as the option), pressing "ENTER" will go to the option or make a change. In this case to move the arrow next to "TV" or "CATV". On some menus, CANCEL clears the selected program in Timer recording setup or moves the cursor backwards. When you have finished setting the menu options to your preference, press "MENU" repeatedly to remove all menus and return to TV viewing. 2.

SET- SET+ MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+ / - ENTER / MENU) 3 3. ENTER CH SET-UP TV CATV AUTO CH MEMORY ADD/DELETE 4 5 (+ / - ENTER / MENU) 4.

CANCEL If you need to enter numbers on the menus use the number keypad on the remote control. The front panel cannot be used to operate the TV/VCR menus. 4 TH 10:30 AM 11:30 AM 20 SP ----- :-: -:-: --- 4 TH 2:30 PM 3:00 PM 44 SP 5 FR 8:30 AM 10:00 AM 60 SLP ----- :-: -:-: ----- :-: -:-: ----- :-: -:-: --- (+ / - ENTER / CANCEL / MENU) 5. MENU PAGE 16 206-3481 Auto Ch Memory (Channel Search) Auto Ch Memory automatically finds and stores in the TV/VCR's memory all the channels in your area. Select: TV: if you receive offthe-air signal reception.

or CATV: if you subscribe to a cable service. MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+/- ENTER/MENU) CH SET-UP TV CATV AUTO CH MEMORY ADD/DELETE (+/- ENTER/MENU) 1 2 3 4 5 Press MENU repeatedly to select the menu with "CH SET-UP".



[You're reading an excerpt. Click here to read official ZENITH TVBR1922Z user guide](http://yourpdfguides.com/dref/341272)
<http://yourpdfguides.com/dref/341272>

Use the "Set+" or "Set-" key on the remote control, to move the highlight to select "CH SET-UP" on your screen, then press ENTER to go to the "CH SET-UP" menu. Use the "Set+" or "Set-" key on the remote control, to move the highlight to the line with "TV" "CATV", then press "ENTER" to move the arrow next to "TV" or "CATV". Use the "Set+" or "Set-" key on the remote control, to move the highlight to "AUTO CH MEMORY".

Press "ENTER" to begin the channel search. When the channel search is complete, press "MENU" repeatedly to remove menus or use (Channel) ADD/DELETE. POWER SETMENU SET+ CA 1/5 2/3/4 2/3/4 ENTER CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F REC/OTR STOP PAUSE/STILL Add/Delete SLOW AUTO TRACKING Press MENU repeatedly to go to the Main Menu. Use SET- or SET+ to highlight CH SET-UP, press ENTER. Use SET- or SET+ to highlight ADD/DELETE, press ENTER. Press CH up/down to go through the channels one number at-a-time. Or, using the number keypad, enter the channel number directly. If the words on the selected channel's on-screen display appear in green, the channel is added. If the words appear in red, the channel is deleted.

Press ENTER to change the display to green if you want the channel added or to red if you want the channel deleted. Select another channel to add or delete or press MENU repeatedly to remove all menus from the screen and return to TV viewing. ZERO COUN . @@VIEW Note: Auto Ch Memory finds channels being received by the TV/VCR tuner. CATV will not work unless you subscribe to a cable service. 206-3481 PAGE 17 Basic TV Operation All features can only be accessed with the remote control but only some of the play and one-time record features with the front panel controls 1 2 3 (After connections have been made and the channel search completed.) Use the front panel controls or the remote control to select a channel to view and adjust the sound to your preference. Select channels by entering the channel number directly on the remote number keypad or by using CH up/down. Adjust the sound level by decreasing or increasing the level using VOL (Volume) left/right. Press POWER to turn TV/VCR off when finished viewing.

Additional Options: Select Viewing Source - If you have other equipment connected to the front or rear audio/video jacks, press "INPUT SEL." repeatedly to switch between available picture and sound sources. Line 1, Line 2, or TV/CATV. Mute Sound - Press "MUTE" to remove sound, press MUTE again to restore sound. Channel Flashback - Press "Q.

VIEW" to return to the previous channel. Sleep Timer - Press "SLEEP" repeatedly to set the number of preset minutes that the TV/VCR will turn itself off in. Closed Captions/Text (If available) - Press TV/CAP/TEXT repeatedly to select mode of operation: TV (no caption or text on screen). Caption = Caption Ch1 or Caption Ch2. Text = Text Ch1 or Text Ch2.

Notes: See the Table of Contents on page 7 and the on-screen menus overview and selecting viewing sources on pages 20-21 for additional features available. See pages 14-15 for TV/VCR operating features available with the remote control. See page 19 for basic VCR operation: to play and record tapes. Cable Box Users: If you are using a cable box to tune channels, be sure the TV/VCR is tuned to the cable box output channel; usually 3 or 4. POWER SETMENU SET+ CA ENTER CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F REC/OTR STOP PAUSE/STILL SLOW AUTO TRACKING ZERO COUN . @@VIEW PAGE 18 206-3481 Basic VCR Operation Playback/Record Playing/One-time recording VHS videocassette tapes Playing Tapes 1 2 3 4 1 After connections have been made and the channel search completed, press POWER to turn TV/VCR on. Insert a VHS video cassette tape into the tape loading compartment. Press PLAY. (If the tape security tab has been removed, the tape will begin to play automatically.

) Press STOP to halt playback. Press EJECT to unload tape. Recording Tapes (One-Time Recording) Insert a tape into the tape loading compartment. Rewind or advance the tape to the position you want the recording to begin at. (You can only record on tapes which have the erasure prevention tab intact. If the VHS cassette does not have the erasure tab intact, eject the tape and paste a piece of clear mylar tape over the security tab hole to be able to record on the tape.) Tune to the channel or the input source you want to record so that its image appears on the screen. Press: REC/OTR to record the image on the screen. Press PAUSE to momentarily halt recording, press PAUSE again to resume recording. Press STOP to halt recording, press EJECT to remove tape when finished. Press EJECT to unload tape and POWER to turn TV/VCR off when finished viewing. Erasure Tab Removed POWER SETMENU SET+ CA ENTER CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F Play REC/OTR STOP PAUSE/STILL Record SLOW AUTO TRACKING ZERO COUN . TER TIMER REC PROG RETURN RESE T INPUT SEL. You can press REC/OTR repeatedly to choose Instant Timer Recording.

Each press will increase recording time by 30 minutes up to a maximum of 5 hours. Additional recording options are available such as Timer recording; used to record tapes while you are away. Recording speed and other options are available, see the table of contents on page 7 for additional recording options.

Some features can only be accessed with the remote control. 1 4 7 SPEED 2 5 8 0 3 TVCAP/TEXT 6 SLEEP 9 Q.

VIEW 206-3375 PAGE 19 On-Screen Menus / Displays Overview Descriptions of the menus and displays on your Entertainment Machine MENU Timer Rec Set TV Set-Up Menu V-Chip Set On/Off Timer Sleep Timer Caption/Text Picture Ch Set-Up Menu TV/CATV Auto Ch Memory Add/Delete Auto Repeat Adjusts the features of your Entertainment Machine 23 Timer recording set up programs the VCR to record while you are away. Sets your V-Chip viewing restrictions, Sets On/Off Timer, and Picture adjustments 30 27 28 28 29 Sets your viewing restriction preferences. On=Turns the TV/VCR on and tunes to the preset channel. Off=Turns the TV/VCR off automatically. Sets a time for your Entertainment Machine to turn itself off automatically. Chooses a captioning or text option for your Entertainment Machine. Adjusts your picture controls, options are: Contrast, Brightness, Color, Tint, Sharpness. Specifies your signal reception and preforms channel search 17 17 17 21 Selects the incoming signal source. (TV =off-the-air antenna, CATV =pay cable service.) Automatically finds and stores active channels to flip through using Channel Up/Down.

Manually picks and chooses which active channels will appear when using Channel Up/Down.



[You're reading an excerpt. Click here to read official ZENITH TVBR1922Z user guide](http://yourpdfguides.com/dref/341272)
<http://yourpdfguides.com/dref/341272>

Feature can be turned On or Off. If on, will automatically repeat playing a tape. Playback Commercial Advance, (if on recorded tape) can advance tape past commercial interruptions. Sets up the operational features User manually sets the Month, Day, Year, and Current Time. Picks the language (English/Spanish/French) you want your on-screen menus to appear in. TV/VCR automatically sets the internal clock. Pick your time zone: Atlantic, Pacific, Central, Eastern, Mountain, Alaska, Hawaii, or Auto. Adjusts the clock for Daylight Savings Time. Chooses the picture and sound for the TV screen from the available sources.

Commercial Adv. 21 System Set-Up Menu Clock Set Language Auto Clock Standard Time 24 22 23 26 Daylight Sav. Time 25 Input Select 21 ON-SCREEN DISPLAYS Call Channel Volume Display 20 20 20 Shows the current: time, channel number, video/audio source, playback speed setting, tape counter position if a tape is loaded, and the tape status; play, stop, record etc. Shows the number of the newly tuned channel. Shows the current sound level. MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+/- ENTER/MENU) STOP EJECT PLAY FAST FORWARD REWIND 1:19 PM FRI OTR 0:16 CH20 VOLUME 00:19:46 SLP 5 Typical Menu VCR Status Displays OTR/Call Display Volume Display PAGE 20 206-3375 Selecting Viewing Sources Choose the picture and sound source: Line 1, Line 2, or UHF/VHF (CATV - TV) Line 1 Back A/V VHF UHF Video Audio Out In Line 2 Front A/V R-AUDI O-L VIDEO POWER CA MENU SET+ 1 Press INPUT SEL. (Select). Each press accesses a different source if you have connected Audio/Video equipment to the front and/or rear Audio/Video input jacks. Your choices for input sources are: UHF/VHF, Line 1, and Line 2. ENTER SET- CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F. F REC/OTR STOP PAUSE/STILL SLOW AUTO TRACKING ZERO COUN. TER TIMER REC PROG RETURN RESE T Input Sel. Some audio equipment is equipped with Right and Left Audio Out jacks. In this case, connect the TV/VCR Audio in jack with a wire to the "Left" Audio Out Jack on the external Audio/Video equipment. INPUT SEL. 1 4 7 SPEED 2 5 8 0 3 TVCAP/TEXT 6 SLEEP 9 Q. VIEW Mini glossary UHF/VHF SOURCE The television tuner, or tape playing in the VCR. Connection on the TV's back or front jack connection panels providing picture and sound to the TV. 206-3375 PAGE 21 Language for On-Screen Menus Choose the language you want the on-screen menus to appear in MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+/- ENTER/MENU) SYSTEM SET-UP CLOCK SET LANGUAGE/IDIOMA/LANGUE AUTO CLOCK ON OFF STANDARD TIME DAYLIGHT SAVINGS TIME (+/- ENTER/MENU) LANGUAGE/IDIOMA/LANGUE ENGLISH ESPANOL FRANCAIS (+/- ENTER/MENU) POWER CA MENU SET+ 1 2 3 4 5 Press "MENU" on the remote control to display the main menu. Use the "Set+" or "Set-" key on the remote control, to move the highlight to select "SYSTEM SET-UP" on your screen, then press ENTER to go to the "SYSTEM SET-UP menu.

Use the "Set+" or "Set-" key on the remote control to move the highlight to the line with "LANGUAGE/IDIOMA/LANGUE", then press "ENTER". Use the "Set+" or "Set-" key on the remote control, to move the highlight next to ENGLISH, ESPANOL (Spanish) or FRANCAIS (French). Press "ENTER" to change the language. Press "MENU" repeatedly to remove all menus and return to TV viewing. 2/3/4 2/3/4 ENTER SET- 1/5 CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F REC/OTR STOP PAUSE/STILL SLOW AUTO TRACKING ZERO COUN. @VIEW PAGE 22 206-3375 Auto Clock Menu (TV Sets Clock) As shipped, the Auto Clock option is set to On, turn Auto Clock off to set the clock by yourself MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+/- ENTER/MENU) SYSTEM SET-UP CLOCK SET LANGUAGE/IDIOMA/LANGUE AUTO CLOCK ON OFF STANDARD TIME DAYLIGHT SAVINGS TIME (+/- ENTER/MENU) 1 2 3 4 Press MENU to show the on-screen menu. Use "Set+" or "Set-" on the remote control, to move the highlight to the "SYSTEM SETUP" line, then press ENTER. Use "Set+" or "Set-" on the remote control, to move the highlight to the "AUTO CLOCK" line on your screen. Press "ENTER" to move the arrow next to On or OFF. After you make your selection, press "MENU" repeatedly to remove all menus and return to TV viewing. POWER SETMENU SET+ CA 1/4 1/3 1/2/3 ENTER CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F REC/OTR STOP PAUSE/STILL Setting the TV/VCR internal clock automatically requires that all connections be made and that a signal is being received, the power cord connected and that the TV/VCR be turned off for approximately five minutes. If the clock is not set accurately by the Auto Clock feature, then you will have to set the clock manually see the next page. (Auto Clock Set depends on receiving an XDS signal.

) The TV's clock time is adjusted about 12:00 p.m. each day if the clock has been set automatically. Unplugging the power cord for 5 minutes resets the clock to 12:00 a.m.

, Jan. 1, 2000. SLOW AUTO TRACKING ZERO COUN. @VIEW Mini glossary PBS XDS Public broadcasting system. Extended Data Service, provided by some broadcasters. 206-3481 PAGE 23 Clock Set Menu (Set Clock Manually) As shipped, Auto Clock is set to On. If the clock is set incorrectly, you can set the Month, Day, Year, and current time on the clock by yourself MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+/- ENTER/MENU) SYSTEM SET-UP CLOCK SET LANGUAGE/IDIOMA/LANGUE AUTO CLOCK ON OFF STANDARD TIME DAYLIGHT SAVINGS TIME (+/- ENTER/MENU) CLOCK SET MONTH DAY YEAR TIME (+/- ENTER/MENU) 10 22 (Fri) 1999 12:00 AM 1 2 3 Press MENU to show the on-screen menu. Use the "Set+" or "Set-" key on the remote control, to move the highlight to the "SYSTEM SETUP" line, then press ENTER. Use the "Set+" or "Set-" key on the remote control, to move the highlight to the "CLOCK SET" line on your screen, then press ENTER to go to the "CLOCK SET" menu. Use the "Set+" or "Set-" key on the remote control, to pick the current month, 1 is Jan.

, 2 is Feb., etc.. Press "ENTER" to move the flashing cursor to the next feature "DAY". Use the "Set+" or "Set-" key to set the day-1, 2, 3 etc., press ENTER to go to the year line. Follow the method described above to set the Year and current time. Note: to set a time that is p.



[You're reading an excerpt. Click here to read official ZENITH TVBR1922Z user guide](http://yourpdfguides.com/dref/341272)
<http://yourpdfguides.com/dref/341272>

m., keep pressing the "Set+" or "Set-" key repeatedly to scroll through the p.

m. hours. When the clock is set, press "MENU" repeatedly to remove all menus and return to TV viewing. POWER SETMENU SET+ CA 1/4 1/2/3 1/2/3 ENTER CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F REC/OTR STOP PAUSE/STILL 4 SLOW AUTO TRACKING ZERO COUN.

TER TIMER REC PROG RETURN RESE T INPUT SEL. 1 2 5 8 0 3 TVCAP/TEXT Time Zone adjustments - - see page 25. Daylight Savings Times adjustments - -see page 26. 4 7 SPEED 6 SLEEP 9 Q. VIEW Mini glossary DAY TIME Sets the current date and day of the month e.

g. 24 (Tues). Current Hours, Minutes and A.M. or P.M. PAGE 24 206-3481 Standard Time (Time Zones) Adjust the clock for your Time Zone by your self or have the TV adjust it for you automatically MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+/- ENTER/MENU) SYSTEM SET-UP CLOCK SET LANGUAGE/IDIOMA/LANGUE AUTO CLOCK ON OFF STANDARD TIME DAYLIGHT SAVINGS TIME (+/- ENTER/MENU) STANDARD TIME ATLANTIC CENTRAL PACIFIC HAWAII AUTO EASTERN MOUNTAIN ALASKA (+/- ENTER/MENU) 1 2 3 4 Press MENU to show the on-screen menu. Use the "Set+" or "Set-" key on the remote control, to move the highlight to the "SYSTEM SET-UP" line, then press ENTER. Use the "Set+" or "Set-" key on the remote control, to move the highlight to the "STANDARD TIME" line on your screen, then press ENTER to go to the "STANDARD TIME" menu. Use the "Set+" or "Set-" key on the remote control, to move the highlight to your time zone or AUTO, then press ENTER.

When the Standard Time (Time Zone) option is set, press "MENU" repeatedly to remove menus and return to TV viewing. POWER SETMENU SET+ CA 1/4 1/2/3 1/2/3 ENTER CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F REC/OTR STOP PAUSE/STILL SLOW AUTO TRACKING TV/VCRs are set with Standard Time on Auto. Auto sets the time zone for your area automatically. If the clock is set incorrectly for your time zone, set the clock manually, see page 24. Atlantic GMT - 4 hours Eastern GMT - 5 hours Central GMT - 6 hours Mountain GMT - 7 hours Pacific GMT - 8 hours Alaska GMT - 9 hours Hawaii GMT - 10 hours Auto Time Zone is automatically set ZERO COUN . @@VIEW Mini glossary AUTO GMT The clock time will be adjusted automatically for your time zone. @@@@Mon-Fri, or one of the other options available. @@Set your TV turn Off time using the method described above. Off time can be set to turn the TV off any time of the day. @@@@Preset time when your TV will automatically turn itself off each day. Feature will be active. @>> IT COST SO LITTLE TODAY. >> DID YOU BUY? THIS IS A STORY ABOUT JACK AND THE BEAN STALK. ONCE UPON A TIME THERE LIVED A BOY NAMED JACK. JACK WAS Typical Text Captions/Text Typical Closed Captions 1 2 3 To choose a Captions or Text setting, press "TV/CAP/TEXT". Each press brings up a different setting. Your Closed-Caption / Text options are: CAPTION CH1, CAPTION CH 2, TEXT CH1, and TEXT CH2. Note: Not all programs carry closed captions or text. If captions are available, they will probably appear on "CAPTION CH1". POWER SETMENU SET+ CA ENTER CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F Sleep Timer REC/OTR STOP PAUSE/STILL Press "SLEEP" repeatedly to select from the preset times a time for the TV/VCR to turn itself off. Options are in minutes: 120, 110, 100, 90, 80, 70, 60, 50, 40, 30, 20, 10, , or 0 (Sleep Timer is off). SLOW AUTO TRACKING ZERO COUN . TER TIMER REC PROG RETURN RESE T INPUT SEL. 1 2 5 8 0 3 TVCAP/TEXT Captions Closed captions or text is usually provided for the hearing impaired. Not all programming has closed captions or text available. Check your local TV listings. 4 7 SPEED 6 SLEEP 9 Q. VIEW Sleep Mini glossary CAPTIONS TEXT SLEEP TIMER Words that appear line-by-line on a black background as a program is being viewed.

Words that appear in a black box covering a good portion of the screen as a program is being viewed. Feature that automatically turns the TV/VCR off after a preset time has expired. PAGE 28 206-3481 Picture Menu Adjust the Picture on your Entertainment Machine to your personal preference MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+/- ENTER/MENU) TV SET-UP V-CHIP SET ON/OFF TIMER PICTURE CONTRAST (+/- ENTER/MENU) 1 COLOR 5 (+/- ENTER/CANCEL/MENU) (+/- ENTER/CANCEL/MENU) 1 2 3 4 Press MENU repeatedly to show the menu with the TV-SETUP option. @@Use the "Set+" or "Set-" key on the remote control, to move the highlight to the "PICTURE" line on your screen, then press ENTER to go to the "PICTURE" menu. Press ENTER repeatedly to select one of the Picture menu options: Brightness, Contrast, Color, Tint, Sharpness. Once the option is selected use the "Set+" or "Set-" key on the remote control, to change the setting. When you are finished adjusting the picture menu options to your preference, press "MENU" repeatedly to remove all menus and return to TV viewing. · Brightness: Increases or decreases amount of white in the TV picture. · Contrast: Adjusts the level of difference between white and black in the TV picture. The more contrast, the brighter the picture appears. · Color: Adjusts levels of all colors in the TV picture. · Tint: Adjusts the relative amounts of the color red and green in your picture. · Sharpness: Raises or lowers the definition of the picture. The lower the level, the softer the image will appear. POWER SETMENU SET+ CA 1/5 2/3/4 2/3/4 ENTER CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F REC/OTR STOP PAUSE/STILL 5 SLOW AUTO TRACKING ZERO COUN . @@VIEW Pressing "CANCEL" while making Picture menu adjustments will reset all setting to the original (default) values as set by the factory. Picture menu options disappear after 6 seconds if no keys are pressed on the remote control. 206-3481 PAGE 29 V-Chip (Parental Control) This optional feature can be used to "block" undesirable programming from appearing on your TV "V-CHIP" offers the user a wide variety of options and settings that restrict or "block" the programming that can appear on the TV. V-Chip allows the user the capability of defining which program rating they consider acceptable, to the younger or more sensitive viewer. It can be preset and turned either on or off by the user who specifies a secret 4-number code, the password.



[You're reading an excerpt. Click here to read official ZENITH](#)

[TVBR1922Z user guide](#)

<http://yourpdfguides.com/dref/341272>

For complete programming coverage, General Audience and Children viewer blocks should both be programmed into the TV's memory. Viewer ratings are specified for both TV programming and the motion picture industry; both rating systems can be used. The ratings are based mainly on the ages of children. (V-Chip cannot control TV programming or tapes which do not contain restriction ratings.) Overview To insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections below AND choose ratings from the TV Parental Guidelines Rating System on the next page, using the Age Block option for General Audiences, and for Children. In addition to those, you may wish to include additional restrictions from the Content Block menu. See the V-CHIP menu, and submenus example on the next two pages. Things to Consider before Setting Up V-CHIP (Parental Control) Most important is to remember your 4-number Password! Without the password, you cannot change V-Chip! Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.

) V-CHIP can restrict the TV Audio/Video input jacks; have the restrictions you specified filter the content from the audio/video input sources (Line 1 and Line 2). You can also block program "Content" based on individual parameters such as: Violence, Sexual Situations, Adult Language, Sexual Dialog; in the Contents option. Select a secret password; in the Set Password option. Use the number keys on the remote. Don't forget the password, it is the only way you can access the V-CHIP menu and change rating selections, or turn V-CHIP off. Do you want restrictions to be active all the time? If not, you can turn them on or off; with the V-CHIP On/Off option. You should set V-CHIP viewing restrictions for General Audiences and for Children - - both should be active at the same time. Simply specifying one content block such as Sexual Situations, will not automatically block another content in the programs from appearing. Mini glossary V-CHIP restricts the programming content that appears from the audio/video sources (Line 1 and Line 2). You cannot disable V-CHIP by disconnecting the TV from power.

V-CHIP restrictions reset if power is disconnected. REMEMBER YOUR PASSWORD!!! OFF G PG PG-13 R NC-17 X MOTION PICTURE ASSOCIATION OF AMERICA (MPAA) RATING SYSTEM Movie Rating restrictions are not active General Audiences Parental Guidance Suggested Parental Guidance Suggested Restricted viewing Restricted Viewing Hard Core Films Content not offensive to most viewers. Content is such that parents may not want their children to view the program. Program is inappropriate for preteens, with a greater degree of offensive material than a PG rated program. Not for children under age 17.

Strong elements of sex and/or violence. Not for children under age 17 under any circumstances. Strong sexual content. Same as NC-17 rating. Note: Zenith Electronics Corporation is not liable for any program content that appears when using this rating system; as always, user discretion is advised.

PAGE 30 TV/VCR Setting Up V-Chip (Parental Control) After you have read the preceding page, follow instructions below to set up and activate V-Chip 1 MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+/- ENTER/MENU) TV SET-UP V-CHIP SET ON/OFF TIMER PICTURE V-CHIP SET NEW PASSWORD: _ _ _ _ V-CHIP SET V-CHIP :OFF TV RATING :OFF MOVIE RATING :OFF CHANGE PASSWORD (+/- ENTER/MENU) (+/- ENTER/MENU) (0 - 9 / ENTER / CANCEL / MENU) Follow These Instructions As shown above in the "TV SET-UP" menu, highlight the "VCHIP SET" option, press "ENTER" to go to the "V-CHIP" menu. Key in a 4-number password using the number keypad, then press ENTER. (To access the V-CHIP SET menu once your restrictions are set, you must key-in the 4-number password again and press ENTER.) Use "Set+" or "Set-" to select an option, like "TV RATING" for example, press "ENTER" to go to the TV-Rating menu. Press "CALL" to set CONTENTS (in the Call menu you will find individual restrictions like Violence, Adult Language, etc. which you can turn on or off). Use "Set+" or "Set-" to select a Contents Block classification like "Violence". Use "Set+" or "Set-" to choose an acceptable rating for that option, TV-14 and Above, for POWER CA MENU example. (See the Mini Glossary, Ratings Charts on this and the previous page for rating meanings.) Use "Set+" or "Set-" to select another Contents Block classification like "Adult Language" for example and then choose an acceptable rating.

Or, press "MENU" to return to the V-Chip menu to select and adjust other classifications. After you have selected and adjusted the V-Chip menu options to your preferences, set the V-Chip option to either on or off. On=V-Chip will filter programming. Off=V-Chip will not restrict programming content from appearing. Press MENU repeatedly to remove all menus from screen. MENU ENTER SETSET+ CANCEL See the next page for examples of the V-Chip menus. SET + ENTER TV/MONITOR SET Mini glossary OFF TV-G TV-PG TV-14 TV-MA CH VOL CALL Some broadcasts and tapes do not contain any rating information. CALL VOL TV PARENTAL GUIDELINE RATING SYSTEM TV Rating restrictions are not active General Audience Considered suitable for all audiences; children may watch unattended. Parental Guidance Suggested Parents Strongly Cautioned Mature Audience Only Unsuitable for younger children, may contain: Suggestive Dialog, Bad Language, Sex, and Violence Scenes. Unsuitable for children under 14, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes.

Adults only, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes. CHILDREN'S CLASSIFICATIONS TV-Y TV-Y7 Children Children 7 and over Considered suitable for all children under 7 years old. Considered suitable for children over 7, may contain Fantasy Violence Scenes. TV/VCR PAGE 31 V-Chip Menus Use the V-Chip menus to restrict programming to that you deem suitable TV Setup and V-Chip Menus MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+ / - ENTER / MENU) TV SET-UP V-CHIP SET ON/OFF TIMER PICTURE V-CHIP SET NEW PASSWORD: _ _ _ _ V-CHIP SET V-CHIP :OFF TV RATING :OFF MOVIE RATING :OFF CHANGE PASSWORD (+/- ENTER/MENU) (+ / - ENTER / MENU) (0 - 9 / ENTER / CANCEL / MENU) TV Rating Menus- see the Mini Glossary descriptions on page 31 V-CHIP SET V-CHIP :ON TV RATING :TV-PG MOVIE RATING :OFF CHANGE PASSWORD (+ / - ENTER / MENU) V-CHIP SET V-CHIP :ON TV RATING :TV-PG MOVIE RATING :ON CHANGE PASSWORD CALL TO SET CONTENTS (+ / - ENTER / MENU) RATING SET: TV-PG VIOLENCE SEXUAL SITUATIONS ADULT LANGUAGE SEXUALLY DIALOG (+ / - ENTER / MENU) :ON :ON :ON :ON Movie Rating Menus- see the Mini Glossary descriptions on page 30 V-CHIP SET V-CHIP :ON TV RATING :OFF MOVIE RATING :PG-13 CHANGE PASSWORD (+ / - ENTER / MENU) V-CHIP SET V-CHIP :ON TV RATING :OFF MOVIE RATING :PG-13 CHANGE PASSWORD (+ / - ENTER / MENU) Password Menus V-CHIP SET V-CHIP :ON TV RATING :OFF MOVIE RATING :PG-13 CHANGE PASSWORD (+ / - ENTER / MENU) V-CHIP SET V-CHIP :ON TV RATING :OFF MOVIE RATING :PG-13 CHANGE PASSWORD NEW PASSWORD: - - - (+ / - ENTER / MENU) V-CHIP SET V-CHIP :ON TV RATING :OFF MOVIE RATING :PG-13 CHANGE PASSWORD CONFIRM PASSWORD: - - - (+ / - ENTER / MENU) Turn Off V-Chip Restrictions Temporarily (PROTECTED BY V-CHIP) IF YOU CANCEL PROTECT, INPUT PASSWORD.



[You're reading an excerpt. Click here to read official ZENITH TVBR1922Z user guide](http://yourpdfguides.com/dref/341272)
<http://yourpdfguides.com/dref/341272>

PASSWORD : - - - (0 - 9 / ENTER / CANCEL / MENU) Note: You can momentarily turn off V-Chip to watch a V-Chip content restricted program or tape by keying-in your 4-number password when the "PROTECTED BY V-CHIP" message is displayed.

Each time you play a tape or tune to a channel which has V-Chip restricted content, the "Protected" message is displayed. To leave Content restrictions in place but turn off V-Chip, select Off for the V-Chip Set On/Off option in the V-Chip Set menu. When you want to restrict content again, choose On in the menu. PAGE 32 206-3481 Playback: Standard Play Mode Options MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF

COMMERCIAL ADVANCE SYSTEM SET-UP (+ / - ENTER / MENU) Play Erasure Tab Removed Loading Videotape Cassettes = Insert a VHS tape into the cassette loading compartment. POWER CA MENU SET+ Start Playback = Press PLAY on the remote or the TV front Controls.

(If the security erasure tab has been removed, the tape will begin to play automatically when it is loaded into the cassette compartment.) Visual Search = In the Playback mode, press Rew (Rewind) once, or twice for increased rewind speed. Or, press F.Fwd (Fast Forward) once for normal speed, or twice for increased fast forward speed. Pause/Still = Press PAUSE/STILL to interrupt or resume playback. Stop Playback = Press STOP on the remote or the TV front controls. Fast Forward = Press F.F on the remote or F.Fwd on the front controls. Rewind = Press REWIND on the remote or Rew on the front controls.

Eject Tape = Press EJECT on the remote or the TV front controls to unload a videotape Cassette. Repeat Playing a Tape = (See menu above) Use "Set+" or "Set-" to select AUTO REPEAT. Press ENTER to move arrow to ON or OFF. ON=tape will rewind, repeat playing, OFF=tape will not repeat playing.

TV/Monitor = Playing a tape and monitoring a TV program. Press TV/MONITOR to switch the picture and sound between the tape playing in the VCR and the program on the currently selected TV channel. Tracking Controls (Eliminates Video Noise) = Tracking is adjusted automatically as a tape is played. To adjust the tracking manually, use the TRACKING up/down keys on the remote. To resume Auto tracking, press the AUTO key on the remote. ENTER SET-CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.

F REC/OTR STOP PAUSE/STILL SLOW AUTO VCR Play/Record Option Keys TRACKING ZERO COUN . @@VIEW Mini glossary VIDEO NOISE VISUAL

SEARCH In playback mode, horizontal lines that appear over the picture as a tape is playing, rewinding, or fast forwarding. Locating a position on a tape while tape is being advanced or rewound in playback mode. 206-3481 PAGE 33 Playback: Commercial Advance Have your Entertainment Machine mark commercial breaks on the tapes you record with this TV/VCR, then fast forward past them during playback for commercial-free viewing MENU TIMER REC

SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF COMMERCIAL ADVANCE SYSTEM SET-UP (+ / - ENTER / MENU) COMMERCIAL ADVANCE MARKING ON PLAYBACK OFF COMMERCIAL ADVANCE MARKING ON PLAYBACK OFF COMMERCIAL ADVANCE MARKING ON PLAYBACK OFF

AUTO MANUAL BLUEBACK ON OFF (+ / - ENTER / CANCEL / MENU) AUTO MANUAL BLUEBACK ON OFF (+ / - ENTER / CANCEL / MENU) AUTO MANUAL BLUEBACK ON OFF (+ / - ENTER / CANCEL / MENU) Commercial Advance finds and marks commercial breaks in the broadcast when you

make tape recordings of at least 15 minutes long of TV programs using this TV/VCR. When the recording is complete, the tape is rewound and the commercials breaks are "marked"; this process takes a few minutes to complete and the "Marking" message is displayed.

When marking is complete, the message disappears. Then, when the tape is played back, commercial breaks are skipped over automatically. (If you want to watch the commercials, when the "Commercials Marking" message is displayed on the screen, press PLAY; commercial breaks will be shown during playback.) Commercial Advance Menu Options Marking: On or Off. On, will mark the recorded tape after recording is over for commercial breaks.

Playback: Auto or Manual. Will rewind and play the tape automatically if "Auto" is selected. Auto/Manual Skip: Allows user to manually skip over commercials as a tape is being played back; if the "Playback" option is on the "Manual" setting prior to tape recording. User presses CA to advance tape and fast forward past commercials manually. Blueback: (Blue background) On or Off. If On, shows a blue background, instead of the picture as the tape is fast forwarded past commercial breaks. Turn Blueback Off to see the picture on the tape as it advances (fast forwards) through commercial breaks. If you pick "Blueback", (when a tape is played back) the screen will appear in a blue color as the commercial breaks are being skipped over. POWER SETMENU SET+ CA ENTER CANCEL TV/MONITOR CH VOL CALL VOL EJECT MUTE CH REW PLAY F.F VCR Play/Record Option Keys REC/OTR STOP PAUSE/STILL SLOW AUTO TRACKING ZERO COUN .

@@VIEW Commercial Advance is a registered trademark of SRT, Inc. A Jerry Iggulden invention licensed in association with Arthur D. Little Enterprises, Inc. PAGE 34 206-3481 Playback Options with this TV/VCR The Real-Time tape counter displays the elapsed time during playback or recording Zero return advances or rewinds the tape to the 00:00:00 position Counter Reset maintains current tape position but resets counter to 00:00:00 Tapes Recorded on this TV/VCR Playback Options POWER CA MENU SET+ Display Current Real-Time Tape Counter Status Press CALL on the remote to view the current tape counter status. Commercials Marking (After a tape is recorded with this TV/VCR, it marks the location of commercial breaks. This procedure usually takes several minutes.) Press STOP to cancel "Marking" or press PLAY to allow commercial breaks to appear normally when the tape is played back. Real-Time Tape Counter When a recording is made, the VCR times the recording in actual hours, minutes, and seconds. Each time a tape is inserted the counter resets to 00:00:00. The Real-Time Tape Counter is based on a 24-hour day.

The first two digits are hours--up to 24, the next two digits are minutes--up to 60 and the last two digits are seconds--up to 60. (24 hours per day, 60 minutes per hour, 60 seconds per minute.) Zero Return (Tape Counter) A convenient way of returning the tape to the start of a recording if the counter was set to 00:00:00 when the recording was started. To return the tape to the 00:00:00 position press ZERO. The tape will advance or rewind until it reaches the 00:00:00 position.

Reset Counter to 00:00:00 To set the current tape position at 00:00:00, press COUNTER RESET on the remote. The counter will read 00:00:00. To use Commercial Advance, see page 32.



[You're reading an excerpt. Click here to read official ZENITH](#)

[TVBR1922Z user guide](#)

<http://yourpdfguides.com/dref/341272>