



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH TVBR2742Z. You'll find the answers to all your questions on the ZENITH TVBR2742Z in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ZENITH TVBR2742Z**  
**User guide ZENITH TVBR2742Z**  
**Operating instructions ZENITH TVBR2742Z**  
**Instructions for use ZENITH TVBR2742Z**  
**Instruction manual ZENITH TVBR2742Z**



[You're reading an excerpt. Click here to read official ZENITH TVBR2742Z user guide](http://yourpdfguides.com/dref/341273)  
<http://yourpdfguides.com/dref/341273>

**Manual abstract:**

**@@POWER CORD POLARIZATION CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. ATTENTION: POUR VITER LES CHOC LECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND. WARNING:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment. **IMPORTANT SAFEGUARDS** 1. **READ INSTRUCTIONS** All the safety and operating instructions should be read before the unit is operated. 2. **RETAIN INSTRUCTIONS** The safety and operating instructions should be retained for future reference.

3. **HEED WARNINGS** All warnings on the unit and in the operating instructions should be adhered to. 4. **FOLLOW INSTRUCTIONS** All operating and use instructions should be followed. 5.

**CLEANING** Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning the exterior cabinet only. 6. **ATTACHMENTS** The manufacturer of this unit does not make any recommendations for attachments, as they may cause hazards. 7. **WATER AND MOISTURE** Do not use this unit near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool. 8. **ACCESSORIES** Do not place this unit on an unstable cart, stand, tripod, bracket, or table.

The unit may fall, causing serious injury, and serious damage to the unit. **PORTABLE CART WARNING** (symbol provided by RETAC) 8A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

S3126A 2 **IMPORTANT SAFEGUARDS** 9. **VENTILATION** Slots and openings in the cabinet back or bottom are provided for ventilation, and to ensure reliable operation of the unit, and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat source. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

10. **POWER SOURCES** This unit should be operated only from the type of power source indicated on the rating plate. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions. 11.

**GROUNDING OR POLARIZATION** This unit is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet.

Do not defeat the safety purpose of the polarized plug, if your unit is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This too, is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug. 12. **POWER-CORD PROTECTION** Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance. 13. **LIGHTNING** To protect your unit from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.

14. **POWER LINES** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal. 15. **OVERLOADING** Do not overload wall outlets and extension cords, as this can result in a risk of fire or electric shock. 16. **OBJECT AND LIQUID ENTRY** Do not push objects through any openings in this unit, as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit. 17. **OUTDOOR ANTENNA GROUNDING** If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges, Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

18. **SERVICING** Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel. 3 **ENGLISH IMPORTANT SAFEGUARDS** 19. **DAMAGE REQUIRING SERVICE** Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions: a.

When the power-supply cord or plug is damaged. b. If liquid has been spilled, or objects have fallen into the unit. c. If the unit has been exposed to rain or water.

d. If the unit does not operate normally by following the operating instructions.



**[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341273)**

**[TVBR2742Z user guide](http://yourpdfguides.com/dref/341273)**

**<http://yourpdfguides.com/dref/341273>**

Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation. e. If the unit has been dropped or the cabinet has been damaged. f . When the unit exhibits a distinct change in performance, this indicates a need for service. 20. REPLACEMENT PARTS When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

21. SAFETY CHECK Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition. 22. HEAT The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. 23. NOTE TO CATV SYSTEM INSTALLER This reminder is provided to call the CATV system installer's attention to

Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical. EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE ANTENNA LEAD IN WIRE GROUND CLAMP ANTENNA DISCHARGE UNIT (NEC SECTION 810-20) ELECTRIC SERVICE EQUIPMENT GROUNDING CONDUCTORS (NEC SECTION 810-21) GROUND CLAMPS NEC-NATIONAL ELECTRICAL CODE S2898A POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250, PART H) 4 SAFETY PRECAUTIONS MOISTURE CONDENSATION DO NOT OPERATE ANY FUNCTIONS ON THIS UNIT FOR AT LEAST TWO OR THREE HOURS WHEN MOISTURE IN THE AIR CONDENSES ON IT. LET THE UNIT STAND WITH POWER ON (SEE BELOW).

s WHAT IS MOISTURE CONDENSATION? When a cold liquid is poured into a glass, for example, water vapor in the air will condense on the surface of the glass. This is called moisture condensation. s MOISTURE WILL CONDENSE ON THE UNIT IN THE FOLLOWING CASES: When you move the unit from a cold to a warm place. After heating a cold room or under extremely humid conditions. s WHEN YOU EXPERIENCE THE ABOVE CONDITIONS, Plug the power cord into an AC outlet, press the POWER button to turn on and leave the unit at room temperature until moisture condensation disappears. Depending on the surrounding conditions, this may take two or three hours. FEATURES Color TV With Video Cassette Recorder - Unique space saving design combines a color TV and a video cassette recorder.

High Quality Picture Technology - This TV/VCR equipped "HQ" incorporates VHS High Quality technology. A built-in detail enhancer is used to boost the recorded signal and provide maximum picture quality during playback. It is compatible with other VHS video cassette recorders. 181 Channel Tuner - Receives standard VHF and UHF broadcast channels and up to 113 cable channels. The actual number of channels received depends upon channel reception in your area or your cable system.

Glow Illuminated Remote Control - The Glow buttons guarantee easy viewing and identification. Closed Caption Decoder With Full Text Mode - Displays text captions or full screen text on the screen for hearing impaired viewers. 8-Programs/1-Month Programmable Timer With Everyday/Every Week Capability - The built-in timer allows automatic absentee recording of up to 8 TV programs within 1 month. It is also possible to record a program which is broadcast at the same time everyday or every week. Automatic Clock Set - Once your TV/VCR is plugged into the AC outlet, it automatically sets the correct date and time.

On-Screen TV Display And VCR Programming - When you select a channel or make other changes, the TV will show an indicator on the screen for a few seconds. Timer recording can be programmed and confirmed on the screen. Picture Adjustments Using The Remote Control - The On-Screen display allows precise remote control adjustment of BRIGHTNESS, CONTRAST, COLOR, TINT and SHARPNESS. Automatic Playback/Rewind-Stop-Eject - When loading a cassette tape without the erase prevention tab, this TV/VCR will automatically play back the cassette tape at the correct speed. When a tape reaches its end during play-back, recording (except during OTR and Timer Record) and fast forward, it will automatically stop, rewind, stop and eject the tape.

Programmable ON/OFF Timer - Allows you to automatically turn on or off the TV/VCR at a set time. Programmable TVation. V-chip will allow you to set a restriction level. TV OPERATION .....

.....  
.....

.....

.....

.....

.....

..... TO MEMORIZE CHANNELS ..

.....

.....

.....

.....

.... SETTING THE V-CHIP .....

.....

.....

.....

.....

.....

.... TO SET THE ON TIMER .

.....

.....

.....

.....

.....

. TO SET THE OFF TIMER .....

.....  
.....  
.....

.. PICTURE CONTROL ADJUSTMENTS ...

.....  
.....

.. 13 15 16 17 18 18 PLAYBACK LOADING AND UNLOADING .....

.....  
.....  
.....

..... 19 PLAYBACK .

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.. 19 SPECIAL PLAYBACK ...

.....  
.....

.....  
.....  
.....

..... 20 RECORDING RECORDING A TV PROGRAM .

.....  
.....  
.....  
.....

. 20 ONE-TOUCH TIMER RECORDING (OTR) .....

.....  
.....

21 TIMER RECORDING .....

.....  
.....  
.....  
.....  
.....

... 21 ADDITIONAL INFORMATION USING THE REAL TIME TAPE COUNTER .....

.....  
.....

.. USING ZERO RETURN ...

.....  
.....  
.....  
.....  
.....

AUTO REPEAT .....

.....  
.....  
.....  
.....  
.....



AUDIO/VIDEO IN (LINE 1) Jacks - Audio and video signal cables from an external source can be connected here. 19. AC Power Cord - Connect to a 120V, 60Hz outlet. 7 ENGLISH REMOTE CONTROL 1 2 POWER SETENTER TV/MONITOR CH. VOL. VOL. MUTE CH. EJECT VOL. MENU SET+ CANCEL ENTER C.S 10 11 16 POWER SETMENU SET+ C.

S 21 22 23 CANCEL CALL CH. VOL. MUTE CH. REW PLAY F.F CALL 17 TV/MONITOR 3 4 5 6 EJECT 12 F.F PAUSE/STILL 24 PAUSE/STILL REW PLAY REC/OTR STOP 13 14 18 REC/OTR STOP 25 AUTO G TRACKIN AUTO G TRACKIN ZERO . COUNTER TIMER REC PROG ZERO . COUNTER TIMER REC PROG 7 RETURN RESET 19 INPUT SEL. 3 TV/CAP/TEXT RETURN RESET 26 INPUT SEL. 3 TV/CAP/TEXT 1 2 1 2 15 4 5 6 7 SPEED 0 8 9

Q.

VIEW 27 28 29 4 5 6 SLEEP 8 7 SPEED 0 8 9 Q.VIEW SLEEP 9 20 DESCRIPTION OF CONTROLS 1. POWER Button - Press to turn the TV/VCR on. Press again to turn the TV/VCR off. 2.

ENTER Button - Press to enter or select information for on-screen operations. 3. EJECT Button - Press to eject the tape. 4. REW (Rewind) Button - In the Stop mode, this button rapidly winds the tape backwards.

In the Play mode, this button activates reverse search. 5. REC/OTR Button - Press once to start normal recording. Additional presses activate One-touch Timer Recording. 6. Digital TRACKING Buttons - Allows automatic or manual adjustment of tracking to minimize picture noise during playback. 7. ZERO RETURN Button - Use to stop the tape when the counter reaches 00:00:00. 8. Direct Channel Selection Buttons (0-9) - Allows direct access to any channel.

9. SPEED Button - Sets the tape speed for recording. 10. MENU Button - Press to display the On-Screen menu function. 11. CALL Button - Displays the present time/day of the week, channel, counter, speed selection (and VCR mode if VCR is playing) on the TV screen. / Buttons - Press the 12. VOL.(Volume) button to increase, or the button to decrease the volume level. 13.

F.F (Fast Forward) Button - In the Stop mode, this button rapidly winds the tape forward. In the Play mode, this button activates forward search. 14.

PAUSE/STILL Button - During recording, this button temporarily stops the tape.

During playback, it stops the tape and displays a still image on the TV screen. 15. TIMER REC Button - Used to set the TV/VCR to start recording at a preset time. 16. SET + / Buttons - Used to set or adjust in the menu mode.

17. TV/MONITOR Button - Used to temporarily view a TV channel selected on the VCR while in the playback mode. 18. STOP Button - Press once to stop the tape. 19. COUNTER RESET Button - Used to reset the counter to "00:00:00". 20. Q.VIEW Button - Switches between the present channel and the last channel selected. 21.

CS Button - Press in the playback mode to search forward in 30 second increments to a maximum of 3 minutes. 22. CANCEL Button - Used to clear the selected program and to move the cursor backward. 23. CH.(Channel) v / w Buttons - Press the v button to change to a higher numbered channel set into memory. Press the w button to change to a lower numbered channel set into memory. 24. MUTE Button - Press to turn off the sound. Press again to turn the sound back on.

25. PLAY Button - Press to play a prerecorded tape. 26. PROG. Button - Press to confirm the programmed timer recording and ON/OFF timer.

27. INPUT SEL. Button - Switches the program for viewing between the VCR and external input sources. 28. TV/CAP/TEXT Button - Switches between Caption, Text and TV modes for Closed-Captioned programs.

29. SLEEP Button - Sets the TV to turn off automatically after up to 120 minutes. 8 POWER SOURCE BATTERY INSTALLATION Slide the battery compartment cover. Install two "AA" batteries (not supplied), paying attention to the polarity diagram in the battery compartment. Use the AC polarized line cord provided for operation on AC. Insert the AC cord plug into a standard 120V 60Hz polarized AC outlet. NOTES: Never connect the AC line cord plug to anything other than the specified voltage (120V 60Hz). Use the attached power cord only. If the polarized AC cord does not fit into a nonpolarized AC outlet, do not attempt to file or cut the blade. It is the user's responsibility to have an electrician replace the obsolete outlet.

If you cause a static discharge when touching the unit, and the unit fails to function, simply unplug the unit from the wall outlet, wait 10 minutes and plug it back in. The unit should return to normal operation. AC Outlet Wider Hole and Blade Replace the compartment cover. BATTERY PRECAUTIONS The precautions below should be followed when using batteries in this device: 1 Use only the size and type of batteries specified. 2 Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device. 3 Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones. 4 If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.

Polarized AC Cord Plug (One blade is wider than the other.) 5 Do not try to recharge batteries not intended to be recharged; they can overheat and rupture (Follow battery manufacturer's directions). EFFECTIVE DISTANCE OF THE REMOTE CONTROL 15 FEET (5m) 30 30 NOTES: When there is an obstacle between the TV/VCR and the remote control, the remote control may not operate. When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the Remote sensor of the TV/VCR, the remote operation may be unstable. 9 ENGLISH ANTENNA CONNECTIONS If you are using an indoor or outdoor antenna, follow the instructions below that correspond to your antenna system.

If you are using a cable TV service (CATV), see page 11 for Cable TV connections. Combination VHF/UHF Antenna (Single 75 ohm cable or 300 ohm twin-lead wire) Connect the 75 ohm cable from the combination VHF/UHF antenna to the Antenna Jack. If your combination VHF/UHF antenna has a 300 ohm twin-lead wire, the use of the 300-75 ohm Matching Transformer may be necessary. Connect the VHF 75 ohm cable and UHF 300 ohm Antenna Jack Antenna Jack 75 ohm Coaxial Cable UHF/ VHF UHF/ VHF 300-75 ohm Matching Transformer Combination VHF/UHF Antenna (Separate VHF and UHF 300 ohm twin-lead wires) Connect the UHF 300 ohm twin-lead wire to the Combiner (not supplied). Connect the VHF 300 ohm twin-lead wire to the 300-75 ohm Matching Transformer.

Attach the Transformer to the Combiner, then attach the Combiner to the Antenna Jack. Antenna Jack 300-75 ohm Matching Transformer UHF/ VHF Combiner UHF 300 ohm VHF 300 ohm Separate VHF/UHF Antennas (75 ohm VHF cable and 300 ohm UHF twin-lead wires) Connect the VHF 75 ohm cable and UHF 300 ohm twin-lead wire to the Combiner (not supplied). Attach the Combiner to the Antenna Jack.



[You're reading an excerpt. Click here to read official ZENITH](#)

[TVBR2742Z user guide](#)

<http://yourpdfguides.com/dref/341273>

Antenna Jack UHF/VHF VHF 75 ohm Combiner UHF 300 ohm 10 CABLE TV CONNECTIONS This TV/VCR has an extended tuning range and can tune most cable channels without using a Cable TV converter box. Some cable companies offer "premium pay channels" in which the signal is scrambled.

Descrambling these signals for normal viewing requires the use of a descrambler device which is generally provided by the cable company. FOR SUBSCRIBERS TO BASIC CABLE TV SERVICE For basic cable service not requiring a Converter/Descrambler box, connect the CATV 75 ohm Coaxial Cable directly to the Antenna Jack on the back of the TV/VCR. Antenna Jack 75 ohm Coaxial Cable UHF/VHF FOR SUBSCRIBERS TO SCRAMBLED CABLE TV SERVICE If you subscribe to a cable TV service which requires the use of a Converter/Descrambler box, connect the incoming 75 ohm Coaxial Cable to the Converter/Descrambler box. Using another 75 ohm Coaxial Cable, connect the output jack of the Converter/Descrambler box to the Antenna Jack on the TV/VCR. Follow the connections shown below.

Set the TV/VCR to the output channel of the Converter/Descrambler box (usually channel 3 or 4) and use the Converter/Descrambler box to select channels. Antenna Jack Incoming 75 ohm CATV cable 75 ohm Cable to TV/VCR Converter/Descrambler UHF/VHF FOR SUBSCRIBERS TO UNSCRAMBLED BASIC

CABLE TV SERVICE WITH SCRAMBLED PREMIUM CHANNELS If you subscribe to a cable TV service in which basic channels are unscrambled and premium channels require the use of a Converter/Descrambler box, you may wish to use a signal splitter and an A/B Switch box (available from the Cable company or an electronics supply store). Follow the connections shown below. With the switch in the "B" position, you can directly tune any unscrambled channels on your TV/VCR. With the switch in the "A" position, tune your TV/VCR to the output of the Converter/Descrambler box (usually channel 3 or 4) and use the Converter/Descrambler box to tune scrambled channels. Incoming 75 ohm CATV cable Converter/Descrambler A/B Switch A 75 ohm cable to TV/VCR B Antenna Jack Splitter UHF/VHF SETTING THE LANGUAGE This TV/VCR can display the on screen language in English, Spanish or French. On-screen language selection (step 3) will automatically appear on the screen when you press the MENU button initially. Select the language you prefer first, then proceed with the other menu options. 2 3 Press the SET + or button to select the LANGUAGE option, then press the ENTER button. Press the SET + or button to select the desired language: English (ENGLISH), Spanish (ESPAOL) or French (FRANCAIS), then press the ENTER button.

Press the MENU button until the MENU screen is cleared. SYSTEM SET-UP CLOCK SET LANGUAGE/IDIOMA/LANGUE AUTO CLOCK ON OFF STANDARD TIME DAYLIGHT SAVING TIME +/-ENTER/MENU 1 Press the MENU button. Press the SET + or button to select the SYSTEM SET-UP option, then press the ENTER button. MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF SYSTEM SET-UP +/-ENTER/MENU LANGUAGE/IDIOMA/LANGUE ENGLISH ESPAOL FRANCAIS +/-ENTER/MENU 4 11 ENGLISH AUTO CLOCK SETTING The Auto Clock function will automatically set the built-in clock (Month, Day, Year and Time) when the TV/VCR is connected to an Antenna or Cable system and it is turned off. As the TV/VCR searches for a receivable station in your area and it receives a broadcast signal for Auto Clock, the Auto Clock needs several minutes to set itself. 4 Press the SET + or button to select your time zone, then press the ENTER button. ATLANTIC : GMT 4 hours (GMT: Greenwich Mean Time) EASTERN : GMT 5 hours CENTRAL : GMT 6 hours MOUNTAIN : GMT 7 hours PACIFIC : GMT 8 hours ALASKA : GMT 9 hours HAWAII : GMT 10 hours AUTO : AUTO SET Press the MENU button repeatedly to return to the normal screen. AUTO CLOCK SETTING 1 Connect the Antenna or Cable system. If you use a cable box, turn it on. 2 Plug the AC Power cord to the AC outlet.

3 Make sure the TV/VCR is turned off. If you press the POWER button, the Auto Clock set is not effective. 5 4 Wait at least three minutes and press the POWER button. NOTE: To be able to select the standard time, the clock must first be set by "AUTO CLOCK" once. 5 Press the CALL button to check the clock on the screen. 6 If the clock is not set, check the Antenna condition. The Auto Clock may not function properly if the reception condition is not good. DAYLIGHT SAVING TIME SETTING You can set the Daylight Saving Time automatically or manually. AUTO CLOCK ADJUSTMENT The Auto Clock Adjustment will be performed at 12:00 PM everyday if you turn off the TV/VCR. If you use a cable box and you want Auto Clock adjustment to be performed, the cable box must be left on.

The Auto Clock Adjustment is not effective when there is a difference of more than 5 minutes exists between the built-in clock time and the actual time. 1 Press the MENU button. Press the SET + or button to select the SYSTEM SET-UP option, then press the ENTER button. Press the SET + or button to select the DAYLIGHT SAVING TIME option, then press the ENTER button. Press the SET + or button to select one of the options, then press the ENTER button. Press the MENU button until the MENU screen is cleared. ON: for manual setting (forward one hour) OFF: for manual setting (back one hour) AUTO: for automatic setting (read XDS in the signal) MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF SYSTEM SET-UP +/-ENTER/MENU 2 TO SET AUTO CLOCK TO OFF When shipped from factory the AUTO CLOCK option is set to ON. But if you do not want Auto Clock set (Adjustment): 1 Turn on the TV/VCR. 2 Press the MENU button. 3 Press the SET + or button to select the SYSTEM SET-UP option, then press the ENTER button.

4 Press the SET + or button to select the AUTO CLOCK option. 5 Press the ENTER button to select OFF. 6 Press the MENU button repeatedly to return to the normal screen. When the AUTO CLOCK is set to OFF, the Auto Clock adjustment does not function. Set the clock manually (see page 13). 3 SYSTEM SET-UP CLOCK SET LANGUAGE/IDIOMA/LANGUE AUTO CLOCK ON OFF STANDARD TIME DAYLIGHT SAVING TIME +/-ENTER/MENU DAYLIGHT SAVING TIME ON OFF AUTO +/-ENTER/MENU When you want to set the Daylight Saving Time manually, on the first Sunday in April you set to "ON", and on the last Sunday in October you set to "OFF". TO SET STANDARD TIME In the rare event that you live within broadcast range of two stations in two different time zones, the TV/VCR may recognize the wrong station for the Auto Clock set. To correct the situation: 1 Press the MENU button. 2 Press the SET + or button to select the SYSTEM SET-UP option, then press the ENTER button. 3 Press the SET + or button to select the STANDARD TIME option, then Press the ENTER button.

NOTES: When shipped from factory, the DAYLIGHT SAVING TIME option is set to AUTO position. When the clock is not set, Daylight Saving Time setting is not available.



[You're reading an excerpt. Click here to read official ZENITH TVBR2742Z user guide](http://yourpdfguides.com/dref/341273)  
<http://yourpdfguides.com/dref/341273>



**AUTOMATIC MEMORY TUNING 1 Press the MENU button.**

2 Press the SET + or button to select the CH SET-UP mode, then press the ENTER button. MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF SYSTEM SET-UP +/-/ENTER/MENU 3 Press the SET + or button to select the AUTO CH MEMORY mode, then press the ENTER button. The TV/VCR will begin memorizing all the channels available in your area. Channel numbers will remain red until auto memorizing is complete. cleared. CH SET-UP TV CATV AUTO CH MEMORY ADD/DELETE +/-/ENTER/MENU 4 Press the MENU button until the MENU screen is 15 ENGLISH TO MEMORIZE CHANNELS TO ADD/DELETE CHANNELS 1 Press the MENU button. 2 Press the SET + or button to select the CH SET-UP mode, then press the ENTER button. MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF SYSTEM SET-UP +/-/ENTER/MENU SETTING THE V-CHIP V-CHIP SET menu appears. V-CHIP SET CONFIRM PASSWORD: 3 Press the SET + or button to select the ADD/DELETE mode, then press the ENTER button. 4 Select the desired channel to be memorized or deleted using SET + or button, or using the Direct Channel.

Selection buttons (10 keys, 0-9), or CH. v or w button. CH SET-UP TV CATV AUTO CH MEMORY ADD/DELETE +/-/ENTER/MENU NOTES: 09/ENTER/CANCEL/MENU If you forget the password, you cannot set the V-Chip. To avoid forgetting the password, write it down and keep in a safe place. If you are changing channels using a cable box, while the TV/VCR remains on channel 3 or 4, the V-Chip operates differently. When you enter your password to temporarily release the block on any channel, you have completely disabled the V-Chip function for all stations. To reset the VChip turn your TV/VCR off and back on. Some cable boxes are built with a delay feature, in some cases it can take up to 10 seconds for a program to appear after the password has been input. ADD CH 003 5 Press the ENTER button to select the ADD or DELETE. 09/+//ENTER/MENU If you select an unmemorized channel, the Channel indication will be red.

If you select the ADD mode, the Channel indication changes from red to green and the channel will be memorized. If you select a memorized channel, the Channel indication will be green. If you select the DELETE mode, the Channel indication changes from green to red and the channel will be deleted from the memory. TO SET THE V-CHIP 1 In the V-CHIP SET menu, press the SET + or button to select the TV RATING, then press the ENTER button. V-CHIP SET V-CHIP : OFF TV RATING : OFF MOVIE RATING : OFF CHANGE PASSWORD +/-/ENTER/MENU 2 Press the SET + or button to display the desired setting, then press the ENTER button. OFF TV-Y TV-Y7 TV-G TV-PG TV-14 TV-MA : : : : : TV RATING is not set All children 7 years old and above General Audience Parental guidance 14 years old and above 17 years old and above V-CHIP SET V-CHIP : OFF TV RATING : TVPG MOVIE RATING : OFF CHANGE PASSWORD +/-/ENTER/MENU 6 Press the MENU button until the MENU screen is cleared. SETTING THE V-CHIP An age limitation can be set to forbid children to see and hear violent scenes or pictures for adults, etc. The TV/VCR responds to "TV RATING" and "MOVIE RATING". To use the V-Chip function, you must register a password. When you select TV- Y7, TV-PG, TV-14 or TV-MA, press the CALL button to explain the rating.

Press the SET + or button to select the desired rating you want. Press the ENTER button to select the setting ON or OFF. 1 Press the MENU button. 2 Press the SET + or button to select the TV SET-UP option, then press the ENTER button. MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF SYSTEM SET-UP +/-/ENTER/MENU 3 Press the SET + or button to select the MOVIE RATING, then press the ENTER button. The V-Chip function is activated only on programs and tapes that have the rating signal. V-CHIP SET V-CHIP : OFF TV RATING : TVPG MOVIE RATING : OFF CHANGE PASSWORD 3 Press the SET + or button to select the V-CHIP SET then press the ENTER button. TV SET-UP V-CHIP SET ON/OFF TIMER PICTURE +/-/ENTER/MENU 4 Enter the password (4 digits) using the Direct Channel Selection buttons (0-9), then press the ENTER button. " " appears instead of the number. +/-/ENTER/MENU 4 Press the SET + or button to select desired rating, then press the ENTER button.

OFF G PG PG-13 R : : : : V-CHIP SET V-CHIP : OFF TV RATING : TVPG MOVIE RATING : PG13 CHANGE PASSWORD +/-/ENTER/MENU V-CHIP SET NEW PASSWORD: 5 Enter the same password again for safety, then press the ENTER button. 09/ENTER/CANCEL/MENU 16 MOVIE RATING is not set All ages Parental guidance Parental guidance less than 13 years old Under 17 years old Parental guidance suggested NC-17 : 17 years old and above X : Adult only TO SET THE ON TIMER 5 Press the SET + or button to select V-CHIP. V-CHIP SET V-CHIP : OFF TV RATING : TVPG MOVIE RATING : PG13 CHANGE PASSWORD +/-/ENTER/MENU 6 Press the ENTER button to display ON. 7 Press the MENU button until the MENU screen is cleared. V-CHIP SET V-CHIP : ON TV RATING : TVPG MOVIE RATING : PG13 CHANGE PASSWORD +/-/ENTER/MENU 1 Press the MENU button. Press the SET + or button to select the TV SET-UP option, then press the ENTER button. MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF SYSTEM SET-UP +/-/ENTER/MENU NOTE : The V-Chip function is activated only on programs and tapes that have the rating signal. To use the TV after the TV is protected. When the program applied to the V-Chip setting is received, enter the password, then press the ENTER button. When the password is entered correctly the protection will be temporarily overridden.

2 Press the SET + or button to select the ON/OFF TIMER option, then press the ENTER button. TV SET-UP V-CHIP SET ON/OFF TIMER PICTURE +/-/ENTER/MENU 3 Press the SET + or button to select the ON TIMER option, then press the ENTER button. TO CHANGE PASSWORD 1 Press the MENU button. 2 Press the SET + or button to select the TV SET-UP, then press the ENTER button. MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF SYSTEM SET-UP +/-/ENTER/MENU ON/OFF TIMER ON TIMER 12:00AM CH001 SUN-SAT CANCEL OFF TIMER 12:00AM CANCEL +/-/ENTER/CANCEL/MENU 4 Press the SET + or button to set the desired hour, then press the ENTER button. ON/OFF TIMER ON TIMER 7:00AM CH001 SUN-SAT CANCEL OFF TIMER 12:00AM CANCEL 3 Press the SET + or button to select the V-CHIP SET, then press the ENTER button. TV SET-UP V-CHIP SET ON/OFF TIMER PICTURE +/-/ENTER/CANCEL/MENU 5 Set the desired minute, channel and daily or weekly timer date as in step 4. +/-/ENTER/MENU ON/OFF TIMER ON TIMER 7:00AM CH012 MON-FRI CANCEL OFF TIMER 12:00AM CANCEL 4 Enter the Password using the Direct Channel Selection button (0-9), then press the ENTER button. V-CHIP SET PASSWORD: +/-/ENTER/CANCEL/MENU 6 Press the SET + or button to select the SET mode, then press the ENTER button.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341273)

[TVBR2742Z user guide](http://yourpdfguides.com/dref/341273)

<http://yourpdfguides.com/dref/341273>

Press the MENU button repeatedly to return to normal screen.

ON/OFF TIMER ON TIMER 7:00AM CH012 MON-FRI SET OFF TIMER 12:00AM CANCEL 09/ENTER/CANCEL/MENU 5 Press the SET + or button to select CHANGE PASSWORD, then press the ENTER button. V-CHIP SET V-CHIP : ON TV RATING : TVPG MOVIE RATING : PG13 CHANGE PASSWORD +/-ENTER/MENU +/-ENTER/CANCEL/MENU 6 Enter the new password using the Direct Channel Selection button (0-9), then press the ENTER button. V-CHIP SET V-CHIP : ON TV RATING : TVPG MOVIE RATING : PG13 CHANGE PASSWORD NEW PASSWORD: 09/ENTER/CANCEL/MENU 7 Enter the same password again to confirm, then press the ENTER button. 8 Press the MENU button repeatedly to return to normal screen. V-CHIP SET V-CHIP : ON TV RATING : TVPG MOVIE RATING : PG13 CHANGE PASSWORD CONFIRM PASSWORD: 09/ENTER/CANCEL/MENU NOTES: The TV/VCR will automatically turn off approximately 1 hour later after the ON TIMER turns on if no OFF TIMER has been set.

To continue watching the TV, press any button to cancel the one hour automatic shut off. To cancel ON TIMER, follow above steps 1-5, then press the SET + or button to select the CANCEL. Press the MENU button repeatedly to return to the normal screen. After setting the ON TIMER, " " of the OFF TIMER will flash on and off. If you wish to set the OFF TIMER, press the ENTER button then follow the steps 4-6 on page 18 " TO SET THE OFF TIMER" .

If you want to correct the digits while setting, press the CANCEL button until the item you want to correct, then press the SET + or button to correct the desired setting. 17 ENGLISH This feature allows you to have the TV/VCR automatically turn "ON" at a predetermined time. If you program the "ON" timer once, the TV/VCR will turn "on" on the programmed day (daily/weekly) at the same time to the same channel. EXAMPLE: Turning on the TV to channel 12 at 7:00 AM, MONDAY-FRIDAY. TO SET THE OFF TIMER This feature allows you to have the TV/VCR turn "OFF" automatically at a predetermined time. If you program the OFF TIMER once, the TV/VCR will automatically turn off at the same time everyday. EXAMPLE: Turning off the TV at 11:30 PM. 4 5 6 Press the SET + or button to set the desired hour, then press the ENTER button. Press the SET + or button to set the desired minute, then press the ENTER button. Press the SET + or button to select the SET mode, then press the MENU button repeatedly to return to the normal screen.

ON/OFF TIMER ON TIMER 7:00AM CH012 MON-FRI SET OFF TIMER 11:00PM CANCEL +/-ENTER/CANCEL/MENU 1 Press the MENU button. Press the SET + or button to select the TV SET-UP option, then press the ENTER button. Press the SET + or button to select the ON/OFF TIMER option, then press the ENTER button. Press the SET + or button to select the OFF TIMER option, then press the ENTER button. MENU TIMER REC SET TV SET-UP CH SET-UP AUTO REPEAT ON OFF SYSTEM SET-UP +/-ENTER/MENU ON/OFF TIMER ON TIMER 7:00AM CH012 MON-FRI SET OFF TIMER 11:30PM CANCEL 2 3 +/-ENTER/CANCEL/MENU TV SET-UP V-CHIP SET ON/OFF TIMER PICTURE +/-ENTER/MENU ON/OFF TIMER ON TIMER 7:00AM CH012 MON-FRI SET OFF TIMER 12:00AM CANCEL +/-ENTER/CANCEL/MENU NOTES: If a station being viewed ON/OFF TIMER ON TIMER stops broadcasting, the 7:00AM CH012 MON-FRI SET TV will automatically shut OFF TIMER itself off after 15 minutes. 11:30PM SET To cancel OFF TIMER, follow +/-ENTER/CANCEL/MENU above steps 1-5, then press the SET + or button to select the CANCEL. Press the MENU button to return to the normal screen. To confirm the ON/OFF TIMER: Press the PROG. button twice to indicate the programs on the screen. PICTURE CONTROL ADJUSTMENTS Picture controls are factory preset but you can adjust them individually as follows: MENU 1 To display the picture adjustment TIMER REC SET TV SET-UP screen, press the MENU button.

CH SET-UP Press the SET + or button to AUTO REPEAT ON OFF SYSTEM SET-UP select the TV SET-UP option, then press the ENTER button. +/-ENTER/MENU COLOR Press the ENTER button until "COLOR" appears on the screen, then press the SET + or button to adjust the color intensity of the picture. The control should be set when colors appear normal in intensity and brilliance. COLOR 0 +/-ENTER/CANCEL/MENU 2 Press the SET + or button to select the PICTURE option, then press the ENTER button. TV SET-UP V-CHIP SET ON/OFF TIMER PICTURE TINT Press the ENTER button until "TINT" appears on the screen, then press the SET + or button to adjust the tint of the picture.

This determines TINT 0 how accurately the colors are +/-ENTER/CANCEL/MENU reproduced by the TV. Adjusting the tint for natural facial tone is the best method of obtaining accurate color reproduction of the entire picture. 0 +/-ENTER/MENU BRIGHTNESS Press the ENTER button until "BRIGHTNESS" appears on the screen, then press the SET + or button to adjust the brightness of the picture. When the SET + button is pressed, the darker portions of the picture become lighter. BRIGHTNESS SHARPNESS Press the ENTER button until "SHARPNESS" appears on the screen, then press the SET + or button to adjust the sharpness of the picture.

+/-ENTER/CANCEL/MENU CONTRAST Press the ENTER button until "CONTRAST" appears on the screen, then press the SET + or button to adjust the contrast of the CONTRAST 32 picture. Pictures look sharpest in +/-ENTER/CANCEL/MENU the daytime (bright light) by increasing the contrast. At night (dim light), the sharpest picture is obtained by reducing the contrast. NOTE: The CONTRAST default setting is set to maximum at the factory. SHARPNESS 0 +/-ENTER/CANCEL/MENU CANCEL Pressing the CANCEL button while making picture adjustments will return all adjustments to the factory preset levels. NOTE: The On-screen display will disappear 6 seconds after finishing an adjustment or by pressing the MENU button three times. The settings can only be adjusted when they are displayed on the TV screen. 18 LOADING AND UNLOADING Use only video cassette tapes marked . PLAYBACK To play a prerecorded tape. LOADING Push the center of the tape until it is automatically retracted into the TV/VCR.

TO START PLAYBACK Load a prerecorded tape (When loading a cassette tape without the erase prevention tab, playback will start automatically). Press the PLAY button to begin playback. " " will appear on the screen. NOTE: This TV/VCR selects the playback tape speed SP, LP or SLP automatically.

AUTOMATIC POWER ON AND PLAY When loading a cassette tape without the erase prevention tab intact, the TV/VCR will turn on automatically and playback will start immediately. Insert the cassette with its labeled side facing you. An inverted video cassette cannot be inserted. UNLOADING To unload a video cassette, press the EJECT button on the remote control, or press the STOP/EJECT button on the TV/VCR twice.



[You're reading an excerpt. Click here to read official ZENITH](http://yourpdfguides.com/dref/341273)

[TVBR2742Z user guide](http://yourpdfguides.com/dref/341273)

<http://yourpdfguides.com/dref/341273>



