



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ZENITH ZEN425. You'll find the answers to all your questions on the ZENITH ZEN425 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZENITH ZEN425
User guide ZENITH ZEN425
Operating instructions ZENITH ZEN425
Instructions for use ZENITH ZEN425
Instruction manual ZENITH ZEN425

The image shows the cover of a Zenith Remote Manual. At the top left is the Zenith logo, which consists of the word "zenith" in a lowercase sans-serif font followed by a stylized lightning bolt symbol. Below the logo, the title "REMOTE MANUAL" is printed in bold, uppercase letters. To the right of the title is a "Models:" section with a list of model numbers: ZEN100, ZEN300, ZEN350, ZEN400, ZEN425, ZEN450, ZEN525, ZEN700, ZEN725, and ZEN7TV. Below the title and models list is a box containing product information: "Product Type: Universal IR Remote", "Model Line: ZEN100-700 (all)", "Product Year: 1999/2000", and "Manual Part #: Electronic Version Only". Below this box is a "NOTE" in a smaller font: "NOTE: This manual was designed to help you program your Zenith Remote Control. If you need the complete Operating Guide for your Zenith Product, please contact Zenith National Parts Sales at 888-3-ZENITH (888-393-6464, Mon-Fri 7-8 CST, Sat 9-5 CST)." At the bottom of the cover is a "CONTENTS" section with a table listing: "Remote Description 2", "Programming Instructions 3", "Programming Codes 6", and "More Information 10". At the very bottom of the cover, it says "Published by Technical Publications, Zenith Electronics Corporation, 201 James Record Road - Huntsville, Alabama 35824-1513" and "Copyright © June 2000 by Zenith Electronics Corporation".



[You're reading an excerpt. Click here to read official ZENITH ZEN425 user guide](http://yourpdfguides.com/dref/341307)
<http://yourpdfguides.com/dref/341307>

Manual abstract:

If you need the complete Operating Guide for your Zenith Product, please contact Zenith National Parts Sales at 888-3-ZENITH (888-3936484, Mon-Fri 7-8 CST, Sat 8-5 CST). CONTENTS Remote Description

.....

.....

.....

.....

2 Programming Instructions

.....

.....

.....

3 Programming Codes

.....

.....

.....

.....

.... 6 More Information .

.....

.....

.....

.....

..... 10 Published by Technical Publications Zenith Electronics Corporation 201 James Record Road - Huntsville, Alabama 35824-1513 Copyright June 2000 by Zenith Electronics Corporation REMOTES ZEN UNIVERSAL REMOTE CONTROL NOTE: Your ZEN model remote may not look exactly like the one below, but all functions for the ZEN models are similar.

The descriptions below refer to using the remote with Zenith products, non-Zenith products may behave differently. INDICATOR LIGHT Lights when buttons are pressed. CODE SEARCH Used to program the remote or to search through codes. MUTE Turns sound off and on while picture remains. CHANNEL (Up/Down) Selects next channel in TV's memory. Press and hold to repeat. NUMBER PAD Selects channels directly. ENTER Shows Channel/Time, enters channel, or removes any on-screen menus. A Multifunction Button. Turns Surf Channel On/Off.

@@MENU Displays menus for TV and other options. LEFT/RIGHT ARROWS Chooses and shows the desired menu option. C Multifunction Button.

@@MODE Sets which audio/video component the remote will control. PREV CHANNEL Returns to previous Channel.

VOLUME (Left/Right) Increases TV's sound level. AUX1 PR CHAN + EV SE AN CH CO DE VOL + VOL - M CHAN - 1 4 7 ENTER 2 5 8 0 3 6 9 TV/VCR TV/VCR SOURCE Steps through source options. B Multifunction Button. Usually PIP Channel. Toggles the channel button operation between PIP screen and full screen.

QUIT Exits from on-screen display, turns the sound enhancement feature on or off, and freezes the PIP Screen. @@CC Displays closed caption options menu. MEDIA CONTROLS Controls VCR, DVD, CD, TAPE, etc. media functions. @@To install the batteries: 1. @@2. Match the batteries to the + and - marks inside the battery case, then insert the batteries. 3. Press the battery cover back into place. BATTERY SAVER Your Zenith remote will automatically "time-out" if the keys are depressed more than two minutes.

This will save your batteries should your remote get stuck in a place where the keys remain depressed (e.g., between the sofa cushions). CODE SAVER You will have no more than 90 seconds to change the batteries in your remote without losing codes you have programmed. @@@@The longer the exposure to light, the longer they will glow. Do not place in Direct Sunlight. @@@@Differences depend on the brand and model of your product. Also, this remote can only operate features that exist on your product. For example, your product must be equipped with "Prev Ch" ability for the "Prev Ch" button to operate this feature. Note: The REC button must be pressed TWICE to record from your VCR.

For Zenith brand VCRs, press the REC button once, then press it again for three seconds. PROGRAMMING TV'S NOTE: If your remote doesn't have a CODE SEARCH button (ZEN300 for example), use the Remotes With No Code Search instructions at the end of this section. 1. Manually turn on the TV. 2.

@@3. Press and release the TV button (the Indicator Light will blink and then remain lit). 4. Find the three digit code for your TV in the code list in this booklet and enter it using the Number Buttons. After your code is entered, the Indicator will turn off.

@@Recheck the code list and try again. 5. Now check to see if the correct code was entered. With your TV on, press some of the buttons. If the TV responds correctly to each of the buttons, no further programming is required. @@6. Write down the code for future reference. PROGRAMMING VCR'S 1. Manually turn on the VCR. 2.

@@3. @@4. @@After your code is entered, the Indicator will turn off. @@Recheck the code list and try again. 5. Now check to see if the correct code was entered. With your TV on, press some of the buttons. @@@@6. Write down the code for future reference. Note: The REC button must be pressed TWICE to record from your VCR.

@@Manually turn on the Cable Box. 2. @@3. @@4. @@After your code is entered, the Indicator will turn off.

@@Recheck the code list and try again. 5. Now check to see if the correct code was entered. With your TV and Cable Box on, press some of the buttons.

@@@@6.

Write down the code for future reference. @@1. Manually turn on the device you wish to program. 2. @@3. Press and release the AUX button (the Indicator Light will blink and then remain lit). 4. Find the three digit code for your device in the code list and enter it using the Number Buttons. After your code is entered, the Indicator will turn off. @@Recheck the code list and try again.

5. Now check to see if the correct code was entered. With your device on, press some of the buttons. If the device responds correctly to each of the buttons, no further programming is required. @@6. Write down the code for future reference. 7. Repeat these steps for the other AUX buttons. @@1. Manually turn on the device you wish to program.

2. @@3. @@The Indicator Light will blink again then remain lit. 4. Cycle through the codes by pressing and releasing the POWER button. @@(If skip over a code, press CHANNEL DOWN to back up) 5. Press MUTE to complete setup. 6. @@CODE IDENTIFICATION 1. Press and hold CODE SEARCH until Indicator Light turns on.

Release CODE SEARCH button. 2. Press and release desired Mode button (TV, VCR, CBL, or AUX). Indicator Light will blink once to indicate key-press acceptance. 3. Press and release the CODE SEARCH button. Indicator Light will blink off to indicate key-press acceptance. 4. To find the first digit, press the numeric keys from 0 to 9. @@Repeat to find the second digit.

5. To find the third digit, repeat step four. This time the Indicator Light will remain off once the key corresponding to the third digit is pressed. 6. Write down the code for future reference. ZENITH REMOTE MANUAL 4 ZEN SERIES ZEN REMOTE PROGRAMMING REMOTES WITH NO CODE SEARCH BUTTON The ZEN300 model remote has no CODE SEARCH button. Follow the instructions below to program it. 1. Manually turn on the device you wish to program. 2.

Press and hold a mode button (TV, VCR, or CBL) until the Indicator Light lights, then release the mode button. 4. Find the three digit code for your Cable box in the code list and enter it using the REW, PLAY, and F.F. buttons.

Examples: If the code is 123, press the REW button once for 1, press PLAY twice for 2, and then press F.F. three times for 3. If the number is 0, then skip that button. If the code is 013, do not press the REW button, press PLAY once for 1, and press F.

F. three times for 3. 5. After your code is entered, the Indicator Light will turn off. Press MUTE to save the code. 6. Write down the code for future reference. @@Manually turn on the device you wish to program. 2. @@3.

Press POWER to initiate the search 4. @@@@If skip over a code, press CHANNEL DOWN to back up. 5. Press MUTE to complete setup. 6. @@To indentify the code assigned to a mode button, follow the procedure below: 1.



[You're reading an excerpt. Click here to read official ZENITH ZEN425 user guide](http://yourpdfguides.com/dref/341307)
<http://yourpdfguides.com/dref/341307>

Press and hold a mode button (TV, VCR, or CBL) until the Indicator Light lights, then release the mode button. 2. Press and release the mode button again. The indicator light should remain on.

3. Press the REW button for the first digit of the code. The Indicator Light will flash on and off a number of times. Count how many times the light flashes. That number is the first digit of the code.

Repeat this process for the second and third digits using the PLAY and F.F. buttons respectively. 4. Write down the code for future reference.

ZENITH REMOTE MANUAL 5 ZEN SERIES ZEN REMOTE CODES TV ADMIRAL ADVENTURA AIKO ALLERON AKAI AMARK AMSTRAD ANAM NATIONAL AOC ARCHER AUDIOVOX 701, 918 019, 117 203 206 801 720 520 104 805 901 902 906 002, 003, 102, 119, 217, 302, 502 603 906 002 506, 601, 701 906 215, 316 002 002, 019, 402, 502 119 801 502 002, 19, 112, 203, 319, 402, 502, 512, 701, 805, 906 003 805 020, 100, 98 002, 502, 602 002, 502 033, 502, 702, 802, 805, 902, 906 805, 906 50, 533, 932 043, 443, 637 042, 642 837 334, 737 033, 133, 233, 333, 334, 532, 533, 932 532 033, 737, 932, 933 034, 143, 233, 532, 631, 637, 831, 932 033, 133, 134, 234, 334, 434, 533, 642 642 532, 632 234, 831 033, 534 033 033, 034, 134, 135, 232, 234, 336, 435, 634, 635, 831, 832, 935 HI-O 933 637 033 637 033, 137, 237, 342, 532, 632, 637, 732, 932, 143, 443, 742 742 532, 545, 632, 645, 732, 742, 833, 943 233, 532, 632, 732, 742, 943 737, 744 033, 637 234, 831 737 033, 831 DUARTER QUARTZ QUASAR INSTANT REPLAY INTEO 732 732 143, 144, 637 040, 237, 540, 743, 137, 140, 143, 144, 240, 340, 342, 440, 631, 637, 640, 643, 839, 931, 932, 939 JCL JC PENNEY RCA JENSEN JVC KENWOOD KLH KODAK BELL & HOWELL BEAUMARK BROKSONIC RADIOSHACK /REALISTIC 033, 139, 143, 234, 245, 345, 445, 534, 536, 542, 631, 636, 637, 731, 732, 831, 842, 932, 933 RICOH 444 RUNCO 042 LLOYD LOGIK LXI SAMSUNG SANSUI SANYO SCOTT SEARS CALIX CANDLE CANON CAPEHART CARVER CCE CITIZEN COLORTYME CRAIG CURTIS-MATHES DAEWOO DAYTRON DBX DYNATECH ELECTROHOME ELECTROPHONIC EMERSON 035, 136, 235, 534, 637, 834, 036, 138, 243, 535, 734, 835, 133, 142, 335, 535, 735, 934, 042, 044, 443, 637, 837, 937 MARANTZ 038, 043, 233, 532, 632, 637, 732, 837 MASUSHITA 637 MEI 637 MEMOREX 033, 042, 234, 637, 731, 732, 831, 842, 932, 933, 935 MGA 138, 534 MGN TECHNOLOGY 932 MIDLAND 936 MINOLTA 137, 237, 342 MITSUBISHI 039, 137, 138, 237, 238, 438, 534, 538, 638, 738, 835, 938, 943 MONTGOMERY WARD 139, 731 MOTOROLA 637, 731 MTC 234, 831, 932 MULTITECH 234, 737, 831, 932, 936 MAGNAVOX SHARP SHINTOM SHOGUN SIGNATURE SINGER SONY STS SYLVANIA SYMPHONIC 045, 132, 133, 842, 932, 934, 936 135, 140, 632, 742, 943 732, 932, 933 133, 134, 138, 243, 435, 832, 834, 940 033, 137, 237, 342, 436, 443, 536, 636, 637, 732, 837, 933 139, 333, 534, 731, 831 032, 237, 44, 737, 844 932 831 637, 737 032, 444, 541, 543 342, 637 044, 138, 143, 234, 637, 831, 837, 937 234, 831 732, 831 033 742 140, 234, 742, 831 542, 637 033, 234, 544, 637, 641, 831 133, 137, 138, 243, 536, 837, 940 033, 932 034, 336, 932 TANDY TASHIKO TATUNG TEAC TECHNICS TEKNIKA TOSHIBA TOTEVSION TMK NEC NIKKO 038, 233, 239, 339, 439, 532, 539, 632, 732, 742, 943 033 637 033, 245, 345, 542, 731 045, 139 143, 144, 244, 344, 542, 637 137, 233, 237, 342, 532, 643 143, 637, 837, 937 044, 139, 637, 837 033 137, 632, 639, 739, 943 033, 233, 533, 642 631 737 042 FISHER FUJI FUNAI 436, 532, 536, 636, 732, 836, 837, 933 032, 637 234, 831 234 143, 631, 637, 643, 932, 936 033, 037, 042, 532, 743 234 234 438, 532 737 732 137, 237, 337, 342, 643, 742, 831, 843 OLYMPUS OPTIMUS OPTONICA PANASONIC PENTAX PHILCO PHILIPS PILOT PIONEER PORTLM STATE 665 MAGNAVOX DSS 568 NORSTAT 765, 865 PANASONIC DSS 267, 567 PRIMESTAR 367 RCA DSS 268, 368, 866 REALISTIC 066, 362, 965 SCIENTIFIC ATLANTA 366 SIERRA I, II, III 761 SONY DSS STAR SIGHT STAR TRAK STS SUPER GUIDE TOSHIBA TOSHIBA DSS UNIDEN UNIDEN DSS VIDEO CIPHER II ZENITH 966 667 466 462, 562, 662, 762 566 862 067, 167, 767 766, 962 967 764 063, 68, 168, 364, 861 DX ANTENNA ECHOSPHERE ECHOSTAR FUJITSU GENERAL INSTRUMENTS 062, 262, 510, 964 Home Control GE HOMEMINDER 200 HOME AUTOMATION 100 X-10 (nec) 000 NOTE: Codes listed below are only for ZEN700 series or higher remotes. Amplifier, Tuner, Tape Players CARVER DENON FISHER GOLDSTAR JVC HARMON/KARDON KENWOOD MAGNAVOX MARANTZ ONKYO 198 397, 995 097, 797 688 579, 694, 996 096, 497 084, 297, 496, 983 097, 295 098, 484 196, 796, 896 OPTIMUS PANASONIC PHILIPS PIONEER RCA REALISTIC SANYO SCOTT SHARP SHERWOOD 091, 382, 390, 490, 590, 690, 790, 890, 994 197, 696, 794 097, 098, 198, 295, 997 091, 790, 890, 994 195, 387, 793 897 186 492 084, 596 286, 288, 296 SONY TEAC TECHNICS VENTURER YAMAHA ZENITH 395, 495, 595 396, 686, 794 197, 696, 794, 997 190 795, 895 094, 097, 192, 283, 591, 688, 989 DVD DENON MAGNAVOX MARANTZ MITSUBISHI PANASONIC PHILIPS PIONEER 376 176 176 576 376, 476 176 776 PROSCAN RCA SONY TOSHIBA ZENITH ZENITH DIVX 676 676 276 176 176 876 Laser Disc DENON PIONEER PROSCAN RCA SANYO SONY ZENITH 639 639 939 939 332 441 332 ZENITH REMOTE MANUAL 9 ZEN SERIES For free programming assistance, call the Zenith Remote Hotline: 1-800-575-6637 For Customer Service on Zenith Products contact: Zenith Response Center 201 James Record Road Huntsville, AL 35824 (256) 772-1515 Mon.-Fri. 7am to 8pm CST Sat. 8am to 5pm CST www.zenithservice.com Published by: Technical Publications Zenith Electronics Corporation 201 James Record Road Huntsville, Alabama 35824-1513 Copyright June 2000 by Zenith Electronics Corporation 10.



[You're reading an excerpt. Click here to read official ZENITH ZEN425 user guide](http://yourpdfguides.com/dref/341307)
<http://yourpdfguides.com/dref/341307>