



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for ZYXEL ZYWALL USG 50. You'll find the answers to all your questions on the ZYXEL ZYWALL USG 50 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ZYXEL ZYWALL USG 50
User guide ZYXEL ZYWALL USG 50
Operating instructions ZYXEL ZYWALL USG 50
Instructions for use ZYXEL ZYWALL USG 50
Instruction manual ZYXEL ZYWALL USG 50

ZyWALL USG 50

Unified Security Gateway

User's Guide

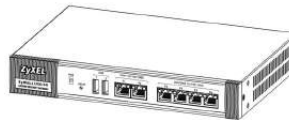

Default Login Details

LAN Port	P3, P4
IP Address	https://192.168.1.1
User Name	admin
Password	1234

Version 2.21
Edition 1, 5/2010

www.zyxel.com

ZyXEL

Copyright © 2010
ZyXEL Communications Corporation



[You're reading an excerpt. Click here to read official ZYXEL ZYWALL USG 50 user guide](http://yourpdfguides.com/dref/3685299)
<http://yourpdfguides.com/dref/3685299>

Manual abstract:

· It is highly recommended you read Chapter 7 on page 109 for ZyWALL application examples. · Subsequent chapters are arranged by menu item as defined in the Web Configurator. Read each chapter carefully for detailed information on that menu item. · To find specific information in this guide, use the Contents Overview, the Table of Contents, the Index, or search the PDF file. E-mail techwriters@zyxel.com.tw if you cannot find the information you require. Related Documentation · Quick Start Guide The Quick Start Guide is designed to show you how to make the ZyWALL hardware connections and access the Web Configurator wizards. (See the wizard real time help for information on configuring each screen.) It also contains a connection diagram and package contents list.

· CLI Reference Guide The CLI Reference Guide explains how to use the Command-Line Interface (CLI) to configure the ZyWALL. Note: It is recommended you use the Web Configurator to configure the ZyWALL. ZyWALL USG 50 User's Guide 3 About This User's Guide · Web Configurator Online Help Click the help icon in any screen for help in configuring that screen and supplementary information. · ZyXEL Web Site Please refer to www.zyxel.com for additional support documentation and product certifications. User Guide Feedback Help us help you. Send all User Guide-related comments, questions or suggestions for improvement to the following address, or use e-mail instead. Thank you! The Technical Writing Team, ZyXEL Communications Corp., 6 Innovation Road II, Science-Based Industrial Park, Hsinchu, 300, Taiwan.

E-mail: techwriters@zyxel.com.tw Need More Help? More help is available at www.zyxel.com. · Download Library Search for the latest product updates and documentation from this link. Read the Tech Doc Overview to find out how to efficiently use the User Guide, Quick Start Guide and Command Line Interface Reference Guide in order to better understand how to use your product. · Knowledge Base If you have a specific question about your product, the answer may be here. This is a collection of answers to previously asked questions about ZyXEL products. 4 ZyWALL USG 50 User's Guide About This User's Guide · Forum This contains discussions on ZyXEL products.

Learn from others who use ZyXEL products and share your experiences as well. Customer Support Should problems arise that cannot be solved by the methods listed above, you should contact your vendor. If you cannot contact your vendor, then contact a ZyXEL office for the region in which you bought the device. See http://www.zyxel.com/web/contact_us.php for contact information. Please have the following information ready when you contact an office. · Product model and serial number. · Warranty Information.

· Date that you received your device. · Brief description of the problem and the steps you took to solve it. Disclaimer Graphics in this book may differ slightly from the product due to differences in operating systems, operating system versions, or if you installed updated firmware/software for your device. Every effort has been made to ensure that the information in this manual is accurate. ZyWALL USG 50 User's Guide 5 Document Conventions Document Conventions Warnings and Notes These are how warnings and notes are shown in this User's Guide.

Warnings tell you about things that could harm you or your device. Note: Notes tell you other important information (for example, other things you may need to configure or helpful tips) or recommendations. Syntax Conventions · The ZyWALL may be referred to as the "ZyWALL", the "device", the "system" or the "product" in this User's Guide. · Product labels, screen names, field labels and field choices are all in bold font. · A key stroke is denoted by square brackets and uppercase text, for example, [ENTER] means the "enter" or "return" key on your keyboard.

· "Enter" means for you to type one or more characters and then press the [ENTER] key. "Select" or "choose" means for you to use one of the predefined choices. · A right angle bracket (>) within a screen name denotes a mouse click. For example, Maintenance > Log > Log Setting means you first click Maintenance in the navigation panel, then the Log sub menu and finally the Log Setting tab to get to that screen. · Units of measurement may denote the "metric" value or the "scientific" value. For example, "k" for kilo may denote "1000" or "1024", "M" for mega may denote "1000000" or "1048576" and so on. · "e.g.," is a shorthand for "for instance", and "i.e."

," means "that is" or "in other words". 6 ZyWALL USG 50 User's Guide Document Conventions Icons Used in Figures Figures in this User's Guide may use the following generic icons. The ZyWALL icon is not an exact representation of your device. ZyWALL Computer Notebook computer Server Firewall Telephone Switch Router ZyWALL USG 50 User's Guide 7 Safety Warnings Safety Warnings · Do NOT use this product near water, for example, in a wet basement or near a swimming pool. · Do NOT expose your device to dampness, dust or corrosive liquids. · Do NOT store things on the device. · Do NOT install, use, or service this device during a thunderstorm. There is a remote risk of electric shock from lightning. · Connect ONLY suitable accessories to the device. · Do NOT open the device or unit.

Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel should service or disassemble this device. Please contact your vendor for further information. · Make sure to connect the cables to the correct ports. · Place connecting cables carefully so that no one will step on them or stumble over them.

· Always disconnect all cables from this device before servicing or disassembling. · Use ONLY an appropriate power adaptor or cord for your device. Connect it to the right supply voltage (for example, 110V AC in North America or 230V AC in Europe). · Do NOT remove the plug and connect it to a power outlet by itself; always attach the plug to the power adaptor first before connecting it to a power outlet. · Do NOT allow anything to rest on the power adaptor or cord and do NOT place the product where anyone can walk on the power adaptor or cord.

· Do NOT use the device if the power adaptor or cord is damaged as it might cause electrocution. · If the power adaptor or cord is damaged, remove it from the device and the power source. · Do NOT attempt to repair the power adaptor or cord.

· Do NOT use the device if the power adaptor or cord is damaged as it might cause electrocution. · If the power adaptor or cord is damaged, remove it from the device and the power source. · Do NOT attempt to repair the power adaptor or cord.

· Do NOT use the device if the power adaptor or cord is damaged as it might cause electrocution. · If the power adaptor or cord is damaged, remove it from the device and the power source. · Do NOT attempt to repair the power adaptor or cord.



[You're reading an excerpt. Click here to read official ZYXEL](http://yourpdfguides.com/dref/3685299)

[ZYWALL USG 50 user guide](http://yourpdfguides.com/dref/3685299)

<http://yourpdfguides.com/dref/3685299>

Contact your local vendor to order a new one. · Do not use the device outside, and make sure all the connections are indoors. There is a remote risk of electric shock from lightning. · CAUTION: RISK OF EXPLOSION IF BATTERY (on the motherboard) IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS. Dispose them at the applicable collection point for the recycling of electrical and electronic equipment. For detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the store where you purchased the product.

· Do NOT obstruct the device ventilation slots, as insufficient airflow may harm your device. Your product is marked with this symbol, which is known as the WEEE mark. WEEE stands for Waste Electronics and Electrical Equipment. It means that used electrical and electronic products should not be mixed with general waste. Used electrical and electronic equipment should be treated separately.

8 ZyWALL USG 50 User's Guide Contents Overview Contents

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 29 Introducing the ZyWALL ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 31 Features and Applications

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 37 Web Configurator

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

43 Installation Setup Wizard

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 59 Quick Setup ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 69 Configuration Basics

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

..... *87 Tutorials ..*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *109 Technical Reference .*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *155 Dashboard ...*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.... 157 Monitor

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.. 169 Registration ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 209 Signature Update

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.... 215 Interfaces .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 221 Trunks ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.. 277 Policy and Static Routes ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 287 Routing Protocols ..

.....
.....
.....
.....

.....

.....
.....

.....
.....
.....

.....
.....
.....

.... *303 Zones*

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *317 DDNS* .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... *321 NAT*

.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 327 HTTP Redirect

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 337 ALG ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 341 IP/MAC Binding .

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

..... 349 *Authentication Policy* ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 355 *Firewall* .

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 763 *Troubleshooting*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....

.. 765 Product Specifications

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 781 10 ZyWALL USG 50 User's Guide Table of Contents Table of Contents About This User's Guide ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 3 Document Conventions...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

6 Safety Warnings.....

.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
8 Contents Overview
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
9 Table of Contents.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *11 Part I: User's Guide...*
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *29 Chapter 1 Introducing the ZyWALL*
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

31 1.1 Overview and Key Default Settings

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 31 1.2 Rack-mounted Installation ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 32 1.2.1 Rack-Mounted Installation Procedure ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

32 1.3 Front Panel

.....
.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

... 33 1.3.1 Front Panel LEDs

.....
.....
.....
.....
.....
.....
.....
.....
.....

... 33 1.4 Management Overview .

.....
.....
.....
.....
.....
.....
.....
.....
.....

... 34 1.5 Starting and Stopping the ZyWALL

.....
.....
.....
.....
.....
.....
.....
.....
.....

35 Chapter 2 Features and Applications

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
. 37 2.1 Features ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... 37 2.2 Applications .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

39 2.2.1 VPN Connectivity

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

..... 40 2.2.2 SSL VPN Network Access ...

.....
.....

.....
.....
.....

.....
.....
.....

..... 40 2.2.3 User-Aware Access Control ..

.....
.....

.....
.....
.....

.....
.....
.....

..... 42 2.2.4 Multiple WAN Interfaces ...

.....
.....

.....
.....
.....

.....
.....
.....

..... 42 Chapter 3 Web Configurator.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

45 3.3.2 Navigation Panel ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 47 ZyWALL USG 50 User's Guide 11 Table of Contents 3.3.3 Main Window ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 52 3.3.

4 Tables and Lists

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 54 Chapter 4 Installation Setup Wizard

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 63 4.

1.5 ISP Parameters

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 64 4.1.6 Internet Access Setup - Second WAN Interface .

.....
.....
.....

.....
.....
.....

..... 65 4.1.7 Internet Access - Finish ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

66 4.2 Device Registration

.....
.....
.....

.....
.....
.....

.....
.....

.....
.....

.....
.....
... 66 Chapter 5 Quick Setup ..
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 69 5.1 Quick Setup Overview

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 69 5.

2 WAN Interface Quick Setup

.....
.....

.....
.....
.....

.....
.....
.....

.. 70 5.2.1 Choose an Ethernet Interface .

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
... 70 5.2.

2 Select WAN Type

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 70 5.2.

3 Configure WAN Settings

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 71 5.2.4 WAN and ISP Connection Settings

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

72 5.2.5 Quick Setup Interface Wizard: Summary

.....
.....
.....
.....

.....
.....
.....

..... 74 5.

3 VPN Quick Setup

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 75 5.4 VPN Setup Wizard: Wizard Type

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 76 5.5 VPN Express Wizard - Scenario

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 77 5.5.1 VPN Express Wizard - Configuration

.....
.....
.....
.....

.....
.....
.....
.....

..... 78 5.5.2 VPN Express Wizard - Summary .

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
..... 79 5.5.3 VPN Express Wizard - Finish .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 80 5.5.4 VPN Advanced Wizard - Scenario

.....
.....
.....
.....

.....
.....
.....
.....

. 81 5.5.5 VPN Advanced Wizard - Phase 1 Settings ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 82 5.5.6 VPN Advanced Wizard - Phase 2 ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 84 5.5.7 VPN Advanced Wizard - Summary ...

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 89 6.2.2 Default Interface and Zone Configuration

.....
.....
.....

.....
.....
.....

.. 89 6.3 Terminology in the ZyWALL

.....
.....
.....

.....
.....
.....

.....
.....
.....

91 12 ZyWALL USG 50 User's Guide Table of Contents 6.4 Packet Flow

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 91 6.4.1 Routing Table Checking Flow .

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

..... 92 6.
4.2 NAT Table Checking Flow

.....
.....
.....
.....
.....
.....
.....
.....

.....
. 94 6.5 Feature Configuration Overview ...

.....
.....
.....
.....
.....
.....
.....
.....

.....
. 95 6.5.1 Feature ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.. 95 6.5.2 Licensing Registration .

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

96 6.5.3 Licensing Update

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 96 6.5.4 Interface ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 96 6.5.5 Trunks

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
..... 97 6.5.6 Policy Routes ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 97 6.5.7 Static Routes .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 98 6.
5.8 Zones

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 98 6.5.9 DDNS

.....
.....
.....

.....
.....

.....
.....
..... 100 6.

5.13 Auth. Policy

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
100 6.5.14 Firewall ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 101 6.5.15 IPSec VPN .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 102 6.5.

16 SSL VPN

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 102 6.5.17 Application Patrol

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 102 6.5.18 Anti-Virus

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 103 6.5.19 IDP .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

103 6.5.20 ADP

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 103 6.5.21 Content Filter

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

104 6.5.22 Anti-Spam

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 104 6.6 Objects .

.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

105 6.6.1 User/Group

.....

.....

.....

.....

.....

.....

.....

.....

... 106 6.7 System .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 106 6.7.1 DNS, WWW, SSH, TELNET, FTP, SNMP, Vantage CNM

.....

.....

.....

.....

... 106 6.7.2 Logs and Reports

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

. 107 6.7.3 File Manager ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 107 6.7.4 Diagnostics ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 108 6.

7.5 Shutdown

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
... 108 Chapter 7 Tutorials

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 109 7.1 How to Configure Interfaces, Port Roles, and Zones

.....
.....

.....
.....
.....

109 7.1.1 Configure a WAN Ethernet Interface

.....
.....

.....
.....
.....

.....
.....

110 7.1.2 Configure Port Roles ...

.....

.....
.....
.....

.....
.....
.....

.....
.....

...111 7.1.3 Configure the DMZ Interface for a Local Network

.....
.....
.....

.....
.....
.....111 7.
1.4 Configure Zones

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....112 7.2 How to Configure a Cellular Interface

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....113 ZyWALL USG 50 User's Guide 13 Table of Contents 7.3 How to Configure Load Balancing ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....115 7.3.1 Set Up Available Bandwidth on Ethernet Interfaces

.....
.....
.....
.....
.....
.....

115 7.3.2 Configure the WAN Trunk ...

.....
.....
.....
.....
.....

.....
.....
.....

.116 7.4 How to Set Up an IPSec VPN Tunnel ...

.....
.....
.....
.....
.....
.....
.....
.....
.....

*.....118 7.4.
1 Set Up the VPN Gateway*

.....
.....
.....
.....
.....
.....
.....
.....

119 7.4.2 Set Up the VPN Connection ...

.....
.....
.....
.....
.....
.....
.....
.....

..... 120 7.4.3 Configure Security Policies for the VPN Tunnel .

.....
.....
.....
.....
.....
.....

.... 121 7.5 How to Configure User-aware Access Control

.....
.....
.....
.....
.....

.....

. 122 7.5.1 Set Up User Accounts ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.. 122 7.5.2 Set Up User Groups .

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 123 7.5.3 Set Up User Authentication Using the RADIUS Server ..

.....
.....
.....

. 124 7.5.4 Web Surfing Policies With Bandwidth Restrictions ..

.....
.....

.....
.....
.....

... 126 7.5.5 Set Up MSN Policies

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.. 129 7.5.6 Set Up Firewall Rules ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
... 130 7.6 How to Use a RADIUS Server to Authenticate User Accounts based on Groups .

.....

.. 131 7.7 How to Use Endpoint Security and Authentication Policies

.....
.....
.....

.....
.....
.....

133 7.7.1 Configure the Endpoint Security Objects

.....
.....
.....

.....
.....
.....

..... 133 7.7.2 Configure the Authentication Policy .

.....
.....
.....

.....
.....
.....

.....
.. 135 7.8 How to Configure Service Control ..

.....
.....

.....
.....
.....

.....
.....
.....

..... 136 7.8.

1 Allow HTTPS Administrator Access Only From the LAN

.....
.....

. 137 7.9 How to Allow Incoming H.323 Peer-to-peer Calls

.....
.....
.....
.....

.....
.....
.....

.... 139 7.9.1 Turn On the ALG

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 140 7.9.
2 Set Up a NAT Policy For H.323

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 140 7.9.3 Set Up a Firewall Rule For H.323

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

142 7.10 How to Allow Public Access to a Web Server

.....
.....
.....
.....

.....
.....
.....
..... 143 7.10.1 Create the Address Objects .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 144 7.10.2 Configure NAT

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 144 7.10.
3 Set Up a Firewall Rule

.....
.....

.....
.....
.....

.....
.....
.....

. 145 7.11 How to Use an IPPBX on the DMZ ...

.....
.....

.....
.....
.....

.....
.....
.....

.... 146 7.11.1 Turn On the ALG

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

. 148 7.11.2 Create the Address Objects ..

.....
.....
.....

.....
.....
.....

. 148 7.11.3 Setup a NAT Policy for the IPPBX ..

.....
.....

.....
.....
.....

.....
.....
.....

..... 149 7.11.4 Set Up a WAN to DMZ Firewall Rule for SIP .

.....
.....
.....

.....
.....
.....

..... 150 7.11.5 Set Up a DMZ to LAN Firewall Rule for SIP .

.....
.....
.....

.....
.....
.....

..... 151 7.12 How to Use Multiple Static Public WAN IP Addresses for LAN to WAN Traffic .

.....
.....

..... 152 7.12.1 Create the Public IP Address Range Object

.....
.....
.....
.....

.....
.... 152 7.

12.2 Configure the Policy Route

.....
.....
.....
.....
.....
.....
.....

153 Part II: Technical Reference

.....
.....
.....
.....
.....

.... 155 Chapter 8 Dashboard .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

*.... 157 14 ZyWALL USG 50 User's Guide Table of Contents 8.
1 Overview*

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.... 157 8.1.1 What You Can Do in this Chapter

.....
.....
.....
.....
.....
.....
.....
.....

.. 157 8.2 The Dashboard Screen ..

.....
.....
.....
.....
.....
.....
.....
.....

.... 157 8.2.1 The CPU Usage Screen

.....
.....
.....
.....
.....
.....
.....
.....

..... 162 8.2.2 The Memory Usage Screen .

.....
.....
.....
.....
.....
.....
.....
.....



[You're reading an excerpt. Click here to read official ZYXEL
ZYWALL USG 50 user guide
http://yourpdfguides.com/dref/3685299](http://yourpdfguides.com/dref/3685299)

...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

164 8.2.4 The VPN Status Screen

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 165 8.2.5 The DHCP Table Screen

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 165 8.2.6 The Number of Login Users Screen ...

.....

.....

.....

.....

.....

.....

.....

.....

166 Chapter 9 Monitor.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 169 9.1 Overview

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 169 9.1.1 What You Can Do in this Chapter ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
..... 169 9.
2 The Port Statistics Screen

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 170 9.2.1 The Port Statistics Graph Screen

.....
.....
.....
.....

.....
.....
.....
.....
.....

..... 172 9.
3 Interface Status Screen

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 173 9.4 The Traffic Statistics Screen

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 175 9.5 The Session Monitor Screen ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 178 9.
6 The DDNS Status Screen

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

..... 181 9.7 IP/MAC Binding Monitor .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..... 181 9.

8 The Login Users Screen

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 182 9.

9 Cellular Status Screen

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..... 183 9.9.

1 More Information

.....

.....
.....
.....
.....

.....

.....
.....
.....

..... 185 9.10 Application Patrol Statistics ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 186 9.10.1 Application Patrol Statistics: General Setup

.....
.....
.....

.....
.....
.....
.....

.. 187 9.10.2 Application Patrol Statistics: Bandwidth Statistics

.....
.....
.....

.....
.....
.....

.... 188 9.10.3 Application Patrol Statistics: Protocol Statistics

.....
.....
.....
.....

.....
.....
.....

.... 189 9.

10.4 Application Patrol Statistics: Individual Protocol Statistics by Rule

.....
.....
.....

11 The IPSec Monitor Screen

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....

.....

.... 191 9.

11.1 Regular Expressions in Searching IPSec SAs

.....

.....

.....

.....

.....

. 192 9.12 The SSL Connection Monitor Screen ...

.....

.....

.....

.....

.....

.....

.....

..... 193 9.13 The Anti-Virus Statistics Screen

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 194 9.14 The IDP Statistics Screen

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 196 9.

15 The Content Filter Statistics Screen

.....

.....

.....

.....

.....

.....
.....
.....
.....

198 9.16 Content Filter Cache Screen

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 200 9.17 The Anti-Spam Statistics Screen

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 203 9.18 The Anti-Spam Status Screen .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 205 9.19 Log Screen .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
..... 206 Chapter 10 Registration ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

209 10.1 Overview

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 209 ZyWALL USG 50 User's Guide 15 Table of Contents 10.1.1 What You Can Do in this Chapter

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 209 10.

1.2 What you Need to Know

.....
.....
.....

.....
.....
.....

.....
.....
.... 209 10.
2 The Registration Screen

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....211 10.

3 The Service Screen

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

213 Chapter 11 Signature Update

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 215 11.

1 Overview

.....
.....

.....
.....
.....

.....

.....
.....
.....

.....
.....
.....
.....

.....
.. 215 11.1.1 What You Can Do in this Chapter .

.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 215 11.

1.2 What you Need to Know

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

215 11.2 The Antivirus Update Screen

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 216 11.3 The IDP/AppPatrol Update Screen

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 217 11.4 The System Protect Update Screen

.....
.....
.....

.....
.....
.....

.....
.....

219 Chapter 12 Interfaces

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 221 12.1 Interface Overview

.....
.....
.....

.....
.....
.....

.....
.....
.....

221 12.1.1 What You Can Do in this Chapter ...

.....
.....

.....
.....
.....

.....
.....
.....

..... 221 12.1.2 What You Need to Know ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 222 12.2 Port Role ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 224 12.3 Ethernet Summary Screen .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 225 12.3.1 Ethernet Edit

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
227 12.3.2 Object References

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 236 12.

4 PPP Interfaces

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 237 12.4.1 PPP Interface Summary

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 238 12.4.2 PPP Interface Add or Edit

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

239 12.5 Cellular Configuration Screen (3G)

.....
.....
.....
.....
.....
.....
.....

.....
.. 243 12.5.1 Cellular Add/Edit Screen .

.....
.....
.....
.....
.....
.....
.....

.....
.. 245 12.6 VLAN Interfaces ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 252 12.6.1 VLAN Summary Screen

.....
.....
.....
.....
.....
.....
.....
.....
.....

... 254 12.6.2 VLAN Add/Edit

.....
.....
.....
.....

.. 255 12.7 Bridge Interfaces ..

..... 262 12.7.1 Bridge Summary ..

*... 264 12.7.
2 Bridge Add/Edit*

. 265 12.7.3 Virtual Interfaces Add/Edit

.....

.....

.....

.....

.....

.....

.....

.....

..... 270 12.

8 Interface Technical Reference

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 272 Chapter 13 Trunks .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
. 277 13.1 Overview ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.... 277 13.

1.1 What You Can Do in this Chapter

.....

.....

....

....

.....

.....

....

....

.....

277 13.1.2 What You Need to Know

....

....

.....

.....

....

....

.....

.....

....

....

.....

278 13.2 The Trunk Summary Screen

....

....

.....

.....

....

....

.....

.....

....

....

.....

... 282 16 ZyWALL USG 50 User's Guide Table of Contents 13.3 Configuring a Trunk

....

....

.....

.....

....

....

.....

.....

....

....

.....

.....

....

... 283 13.4 Trunk Technical Reference .

.....

.....

....

.....
.....

.....
.....
.....
.....

.....
.....
.....

... 285 Chapter 14 Policy and Static Routes

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 287 14.1 Policy and Static Routes Overview

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 287 14.1.

1 What You Can Do in this Chapter

.....
.....
.....

.....
.....
.....

.....
.....
.....

1.2 What You Need to Know

.....
.....

.....
.....

.....
.....
.....

.....
... 288 14.2 Policy Route Screen .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 290 14.2.

1 Policy Route Edit Screen

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 293 14.3 IP Static Route Screen ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 297 14.3.

1 Static Route Add/Edit Screen

.....
.....

.....
.....
.....

.....
.....
.....

. 298 14.4 Policy Routing Technical Reference

.....
.....

.....
.....
.....

.....
.....
.....

.. 299 Chapter 15 Routing Protocols.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

303 15.1 Routing Protocols Overview

.....
.....
.....
.....

.....
.....
.....

.....
.....

... 303 15.1.

1 What You Can Do in this Chapter

.....
.....
.....
.....

.....
.....
.....

.... 303 15.1.2 What You Need to Know

.....
.....

.....
.....
.....

.....
.....
.....
.....

.... 303 15.2 The RIP Screen

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 304 15.3 The OSPF Screen ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....

.... 305 15.

3.1 Configuring the OSPF Screen

.....

.....
.....
.....

.....
.....
.....

..... 309 15.3.2 OSPF Area Add/Edit Screen ..

.....
.....

.....
.....
.....

.....
.....
.....
..... 312 15.

3.3 Virtual Link Add/Edit Screen

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 313 15.4 Routing Protocol Technical Reference

.....
.....
.....
.....

.....
.....
.....
.....

..... 314 Chapter 16 Zones .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 317 16.1 Zones Overview

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.... 317 16.

1.1 What You Can Do in this Chapter

.....
.....
.....
.....
.....
.....
.....
.....
.....

317 16.1.2 What You Need to Know

.....
.....
.....
.....
.....
.....
.....
.....
.....

318 16.2 The Zone Screen

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

319 16.3 Zone Edit

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
. 320 Chapter 17 DDNS.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 321 17.1 DDNS Overview

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 321 17.1.1 What You Can Do in this Chapter ..

.....
.....
.....
.....

.....
.....
.....
.....

.. 321 17.1.2 What You Need to Know .

.....
.....

.....
.....
.....
.....

.....

.....
.....
.....
.....
.....
.....
.. 321 17.2 The DDNS Screen ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

322 17.2.1 The Dynamic DNS Add/Edit Screen

.....
.....
.....
.....
.....
.....
.....

.. 324 Chapter 18 NAT..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 327 ZyWALL USG 50 User's Guide 17 Table of Contents 18.

1 NAT Overview

.....
.....
.....
.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 327 18.1.1 What You Can Do in this Chapter

.....

.....

.....

.....

.....

.....

.....

.....

327 18.1.2 What You Need to Know ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

328 18.2 The NAT Screen

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 328 18.2.1 The NAT Add/Edit Screen

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
..... 330 18.

3 NAT Technical Reference

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 333 Chapter 19 HTTP Redirect

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 337 19.1 Overview

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 337 19.1.

1 What You Can Do in this Chapter

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....
..... 337 19.1.2 What You Need to Know

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 338 19.2 The HTTP Redirect Screen

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 339 19.2.

1 The HTTP Redirect Edit Screen

.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 340 Chapter 20 ALG ...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 341 20.1 ALG Overview

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 341 20.1.1 What You Can Do in this Chapter .

.....
.....
.....
.....

.....
.....
.....

... 341 20.1.

2 What You Need to Know

.....
.....
.....
.....

.....
.....
.....

... 342 20.1.

3 Before You Begin

.....
.....
.....
.....

.....
.....
.....

.....

.....
.....

.... 345 20.2 The ALG Screen

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

345 20.3 ALG Technical Reference

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 347 Chapter 21 IP/MAC Binding

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 349 21.

1 IP/MAC Binding Overview

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 352 21.3 IP/MAC Binding Exempt List ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 353 Chapter 22 Authentication Policy ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 355 22.1 Overview

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
..... 355 22.1.

1 What You Can Do in this Chapter

.....
.....
.....

.....
.....
.....

.....
..... 355 22.

1.2 What You Need to Know

.....
.....
.....
.....

.....
.....
.....

.....
..... 356 22.

2 Authentication Policy Screen

.....
.....
.....
.....

.....
.....
.....

.....
.....

. 356 22.2.1 Creating/Editing an Authentication Policy ..

.....
.....
.....
.....

.....
.....
.....

359 Chapter 23 Firewall.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

. 363 18 ZyWALL USG 50 User's Guide Table of Contents 23.1 Overview

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 363 23.1.1 What You Can Do in this Chapter

.....
.....
.....
.....
.....
.....
.....
.....

363 23.1.2 What You Need to Know

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

364 23.1.3 Firewall Rule Example Applications

.....
.....
.....
.....
.....

.....
.....
.....

... 366 23.1.4 Firewall Rule Configuration Example

.....
.....
.....

.....
.....
.....
.....

.....
..... 369 23.

2 The Firewall Screen

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

371 23.2.1 Configuring the Firewall Screen

.....
.....
.....

.....
.....
.....
.....

.....
..... 372 23.

2.2 The Firewall Add/Edit Screen

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 375 23.3 The Session Limit Screen ..

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 376 23.

3.1 The Session Limit Add/Edit Screen

.....
.....
.....

.....
.....
.....

... 378 Chapter 24 IPSec VPN.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 381 24.

1 IPSec VPN Overview

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 381 24.1.1 What You Can Do in this Chapter

.....
.....
.....

.....
.....
.....
.....

..... 381 24.
1.2 What You Need to Know

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 382 24.
1.3 Before You Begin

.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
384 24.2 The VPN Connection Screen

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
. 384 24.2.1 The VPN Connection Add/Edit (IKE) Screen

.....
.....
.....
.....

.....
.....
.....
386 24.2.2 The VPN Connection Add/Edit Manual Key Screen

.....
.....

.....
.....
..... 393 24.3 The VPN Gateway Screen .

.....
.....

.....
.....
.....

.....
.....
.....

.....
..... 396 24.3.

1 The VPN Gateway Add/Edit Screen

.....
.....

.....
.....

.....
.....

..... 397 24.4 IPSec VPN Background Information

.....
.....
.....

.....
.....
.....

.....

405 Chapter 25 SSL VPN.....

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

..... 417 25.1 Overview

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 417 25.1.1 What You Can Do in this Chapter .

.....
.....
.....

.....
.....
.....

.....
... 417 25.1.

2 What You Need to Know

.....
.....
.....
.....

.....
.....
.....

.....
... 417 25.2 The SSL Access Privilege Screen .

.....
.....

.....
.....
.....

.....
.....
.....

..... 419 25.2.1 The SSL Access Policy Add/Edit Screen .

.....
.....
.....
.....

.....
.....
.....

.....
. 420 25.3 The SSL Global Setting Screen ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 422 25.

3.1 How to Upload a Custom Logo

.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 424 25.

4 Establishing an SSL VPN Connection

.....
.....
.....

.....
.....
.....
.....

.....

.. 425 Chapter 26 SSL User Screens ...

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

427 26.1 Overview

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 427 26.1.

1 What You Need to Know

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 427 26.2 Remote User Login .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

428 26.3 The SSL VPN User Screens

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 433 26.4 Bookmarking the ZyWALL

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 434 26.5 Logging Out of the SSL VPN User Screens .

.....
.....
.....
.....
.....
.....
.....
.....

.. 434 ZyWALL USG 50 User's Guide 19 Table of Contents Chapter 27 SSL User Application Screens ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 437 27.

1 SSL User Application Screens Overview

.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 437 27.2 The Application Screen

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....

.....
.. 437 Chapter 28 ZyWALL SecuExtender...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 439 28.1 The ZyWALL SecuExtender Icon ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 439 28.2 Statistics

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 440 28.3 View Log

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
..... *441 28.4 Suspend and Resume the Connection .*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
441 28.5 Stop the Connection

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

442 28.6 Uninstalling the ZyWALL SecuExtender

.....
.....
.....

.....
.....
.....
.....

.....
.....

442 Chapter 29 Application Patrol

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

..... 443 29.1 Overview .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 443 29.1.1 What You Can Do in this Chapter ..

.....
.....

.....
.....
.....

.....
.....
.....

..... 443 29.1.2 What You Need to Know .

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 444 29.1.3 Application Patrol Bandwidth Management Examples ..

.....
.....
.....

. 449 29.2 Application Patrol General Screen ...

.....
.....

.....
.....
.....

.....
.....
.....
.....

.... 453 29.3 Application Patrol Applications

.....
.....

.....
.....
.....

.....
.....
.....

... 454 29.3.1 The Application Patrol Edit Screen .



[You're reading an excerpt. Click here to read official ZYXEL
ZYWALL USG 50 user guide
http://yourpdfguides.com/dref/3685299](http://yourpdfguides.com/dref/3685299)

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 455 29.3.2 The Application Patrol Policy Edit Screen .

.....
.....
.....
.....

.....
.....
.....

459 29.4 The Other Applications Screen

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 462 29.

4.1 The Other Applications Add/Edit Screen

.....
.....
.....
.....

.....
.....
.....

..... 465 Chapter 30 Anti-Virus.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.. 469 30.1 Overview

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 469 30.1.1 What You Can Do in this Chapter ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 469 30.1.2 What You Need to Know

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 470 30.1.3 Before You Begin

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 471 30.2 Anti-Virus Summary Screen

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 472 30.2.1 Anti-Virus Policy Add or Edit Screen ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 475 30.3 Anti-Virus Black List ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 477 30.4 Anti-Virus Black List or White List Add/Edit

.....
.....
.....
.....
.....
.....
.....
.....

... 478 30.5 Anti-Virus White List .

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....

..... 479 30.6 Signature Searching .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 480 30.7 Anti-Virus Technical Reference .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 483 Chapter 31 IDP ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

485 20 ZyWALL USG 50 User's Guide Table of Contents 31.1 Overview

.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 485 31.1.1 What You Can Do in this Chapter

.....

.....

.....

.....

.....

.....

.....

.....

.... 485 31.

1.2 What You Need To Know

.....

.....

.....

.....

.....

.....

.....

.....

... 485 31.1.

3 Before You Begin

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 486 31.

2 The IDP General Screen

.....

.....

.....

.....
.....
.....
.....
.....
.....
.....
.....

..... 487 31.3 Introducing IDP Profiles ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

489 31.3.1 Base Profiles ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 490 31.4 The Profile Summary Screen

.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 491 31.5 Creating New Profiles

.....
.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....

.. 492 31.5.1 Procedure To Create a New Profile .

.....

.....
.....
.....

.....
.....
.....

. 492 31.6 Profiles: Packet Inspection

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 493 31.6.1 Profile > Group View Screen ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 493 31.

6.2 Policy Types

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
... 496 31.6.
3 IDP Service Groups

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 497 31.6.4 Profile > Query View Screen ...

.....
.....
.....

.....
.....
.....

.....
.....
... 499 31.

6.5 Query Example

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 501 31.7 Introducing IDP Custom Signatures

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 503 31.7.1 IP Packet Header

.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 503 31.8 Configuring Custom Signatures

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 504 31.8.1 Creating or Editing a Custom Signature

.....
.....
.....
.....
.....
.....

..... 506 31.8.

2 Custom Signature Example

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 512 31.8.3 Applying Custom Signatures

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 514 31.8.4 Verifying Custom Signatures .

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 515 31.9 IDP Technical Reference

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 516 Chapter 32 ADP .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

519 32.1 Overview

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
... 519 32.1.
1 ADP and IDP Comparison

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
519 32.1.2 What You Can Do in this Chapter ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
519 32.1.3 What You Need To Know

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 519 32.

1.4 Before You Begin

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
520 32.2 The ADP General Screen

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.. 521 32.3 The Profile Summary Screen ..

.....

.....
.....
.....

.....
.....
.....

.....
.....

... 522 32.3.

1 Base Profiles

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 523 32.3.2 Configuring The ADP Profile Summary Screen ..

.....
.....
.....

.....
.....
.....

. 523 32.3.3 Creating New ADP Profiles

.....
.....
.....

.....
.....
.....

.....
.....
.....
..... 524 32.3.4 Traffic Anomaly Profiles .

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
..... 524 32.3.5 Protocol Anomaly Profiles .

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
..... 527 32.3.6 Protocol Anomaly Configuration

.....
.....
.....
.....
.....
.....
.....

.....
..... 527 32.4 ADP Technical Reference .
.....
.....

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
..... 531 Chapter 33 Content Filtering

.....

.....
.....
.....
.....
.....
.....
.....
.....

541 33.2 Content Filter General Screen

.....
.....
.....
.....
.....
.....
.....
.....

541 33.3 Content Filter Policy Add or Edit Screen

.....
.....
.....
.....
.....
.....
.....
.....

..... 544 33.

4 Content Filter Profile Screen

.....
.....
.....
.....
.....
.....
.....
.....

546 33.5 Content Filter Categories Screen

.....
.....
.....
.....
.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....

..... 563 34.

2 Viewing Content Filter Reports

.....
.....
.....

.....
.....
.....

.....
.....

... 563 Chapter 35 Anti-Spam ..

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 571 35.1 Overview

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 571 35.1.1 What You Can Do in this Chapter .

.....
.....
.....
.....

.....
.....
.....
.....

.....
... 571 35.1.
2 What You Need to Know

.....
.....
.....
.....

.....
.....
.....
.....

.....
... 571 35.2 *Before You Begin* .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 573 35.3 *The Anti-Spam General Screen*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 573 35.3.1 *The Anti-Spam Policy Add or Edit Screen*

.....
.....
.....
.....

.....
.....
.....

..... 575 35.4 The Anti-Spam Black List Screen

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

577 35.4.1 The Anti-Spam Black or White List Add/Edit Screen

.....
.....
.....

.....
.....

... 579 35.4.

2 Regular Expressions in Black or White List Entries

.....
.....
.....
.....

..... 580 35.5 The Anti-Spam White List Screen ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 581 35.6 The DNSBL Screen

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... 582 35.7 Anti-Spam Technical Reference .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

584 Chapter 36 User/Group

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 589 36.

1 Overview

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 589 36.1.1 What You Can Do in this Chapter

.....

.....

.....

.....

.....

.....

.....

.....

..... 589 36.1.
2 What You Need To Know

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 589 36.2 User Summary Screen ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 592 36.2.
1 User Add/Edit Screen

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 592 36.3 User Group Summary Screen

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 595 36.3.1 Group Add/Edit Screen

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

..... 596 36.4 Setting Screen

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 597 36.4.

1 Default User Authentication Timeout Settings Edit Screens

.....
.....
.....

.... 600 22 ZyWALL USG 50 User's Guide Table of Contents 36.4.2 User Aware Login Example

.....
.....
.....

.....
.....
.....

.....
.....
.....

602 36.5 User /Group Technical Reference

.....
.....
.....

.....
.....
.....

.... 603 Chapter 37 Addresses.

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

605 37.1 Overview

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 605 37.1.1 What You Can Do in this Chapter

.....
.....
.....

.....
.....
.....

..... 605 37.

1.2 What You Need To Know

.....
.....

.....
.....
.....

.....
.....
.....

..... 605 37.2 Address Summary Screen .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

..... 605 37.
2.1 Address Add/Edit Screen

.....
.....
.....
.....

.....
.....
.....

.....
... 607 37.3 Address Group Summary Screen .

.....
.....
.....
.....

.....
.....
.....

..... 608 37.3.

1 Address Group Add/Edit Screen

.....
.....
.....
.....

.....
.....
.....

..... 609 Chapter 38 Services

.....
.....
.....

.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

..... 611 38.1 Overview

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....611 38.

1.1 What You Can Do in this Chapter

.....
.....
.....
.....
.....
.....
.....
.....

.....611 38.1.2 What You Need to Know ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....611 38.2 The Service Summary Screen ..

.....
.....
.....
.....

.....
.....
.....
.....

..... 612 38.2.1 The Service Add/Edit Screen .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

614 38.3 The Service Group Summary Screen

.....
.....
.....
.....

.....
.....
.....
.....

..... 614 38.3.

1 The Service Group Add/Edit Screen

.....
.....

.....
.....
.....
.....

.....
.....
.....

616 Chapter 39 Schedules

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
..... 617 39.1 Overview ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 617 39.

1.1 What You Can Do in this Chapter

.....
.....
.....

.....
.....
.....

.....
.....

617 39.1.2 What You Need to Know ...

.....
.....
.....
.....

.....
.....
.....

.....
.....

617 39.2 The Schedule Summary Screen

.....
.....
.....
.....

.....
.....
.....

.. 618 39.2.1 The One-Time Schedule Add/Edit Screen .

.....
.....

.....
.....
.....
.....

619 39.2.2 The Recurring Schedule Add/Edit Screen ...

.....
.....
.....
.....

... 620 Chapter 40 AAA Server ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 623 40.1 Overview

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 623 40.1.1 Directory Service (AD/LDAP) ...

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
... 623 40.1.
2 RADIUS Server

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 624 40.1.3 ASAS

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 624 40.1.4 What You Can Do in this Chapter

.....
.....
.....

.....
.....
.....
.....

.....
.....

... 624 40.1.
5 What You Need To Know

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.. 633 41.1 Overview ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

633 41.1.1 What You Can Do in this Chapter

.....
.....
.....
.....

.....
.....
.....
.....

..... 633 41.1.2 Before You Begin ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 633 41.1.3 Example: Selecting a VPN Authentication Method .

.....
.....
.....

.....
.....
.....

..... 633 41.2 Authentication Method Objects ..

.....

.....
.....
.....
.....
.....
.....
.....
.....

..... 634 41.2.1 Creating an Authentication Method Object ..

.....
.....
.....
.....
.....
.....

..... 635 Chapter 42 Certificates ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 639 42.1 Overview ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

639 42.1.1 What You Can Do in this Chapter ...

.....

.....
.....
.....
.....
.....
.....
.....
.....

. 639 42.1.2 What You Need to Know

.....
.....
.....
.....
.....
.....
.....
.....
.....

. 639 42.1.3 Verifying a Certificate

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 641 42.2 The My Certificates Screen ...

.....
.....
.....
.....
.....
.....
.....
.....
.....

643 42.2.1 The My Certificates Add Screen ...

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
..... 644 42.2.

2 *The My Certificates Edit Screen*

.....
.....
.....

.....
.....
.....
.....

.....
.....

.. 649 42.2.3 *The My Certificates Import Screen* .

.....
.....
.....
.....
.....

.....
.....
.....
.....

. 652 42.3 *The Trusted Certificates Screen*

.....
.....
.....
.....
.....
.....

.....
.....
.....

..... 653 42.3.1 *The Trusted Certificates Edit Screen* .

.....
.....
.....
.....

.....
.....
.....
.....

..... 654 42.3.2 *The Trusted Certificates Import Screen* .

.....
.....
.....
.....
.....
.....

.....
.....
.....

... 658 42.4 *Certificates Technical Reference* .

.....

.....
.....
.....
.....
.....
.....
.....
.....

..... 659 Chapter 43 ISP Accounts.

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
661 43.1 Overview

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
... 661 43.1.

1 What You Can Do in this Chapter

.....
.....
.....
.....
.....
.....
.....

..... 661 43.

2 ISP Account Summary

.....
.....
.....

.....
.....
.....

.....
.....
.....

661 43.2.1 ISP Account Edit ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 662 Chapter 44 SSL Application

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.. 665 44.1 Overview ..

.....

.....
.....
.....

.....
.....
.....

.....
.....

.....
.....
.....
.....
.....
665 44.1.1 What You Can Do in this Chapter

.....
.....
.....
.....
.....
.....
.....
.....

..... 665 44.1.2 What You Need to Know ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 665 44.1.3 Example: Specifying a Web Site for Access ..

.....
.....
.....
.....
.....
.....
.....

..... 666 44.2 The SSL Application Screen ...

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 667 44.

2.1 Creating/Editing a Web-based SSL Application Object

.....
.....
.....
.....
.....

.. 668 Chapter 45 Endpoint Security

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

671 24 ZyWALL USG 50 User's Guide Table of Contents 45.1 Overview

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 671 45.1.

1 What You Can Do in this Chapter

.....
.....
.....
.....

.....
.....
.....
.....

... 672 45.1.2 What You Need to Know

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 672 45.2 Endpoint Security Screen

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 673 45.3 Endpoint Security Add/Edit ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

. 675 Chapter 46 System

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 681 46.1 Overview ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

681 46.1.1 What You Can Do in this Chapter

.....
.....
.....

.....
.....
.....

.....
.....

. 681 46.2 Host Name ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

. 682 46.3 Date and Time ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 682 46.

3.1 Pre-defined NTP Time Servers List

.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 688 46.5.3 Address Record ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 691 46.5.
4 PTR Record

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 691 46.5.5 Adding an Address/PTR Record .

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 691 46.5.6 Domain Zone Forwarder ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 692 46.5.7 Adding a Domain Zone Forwarder

.....
.....
.....
.....

.....
.....
.....
.....

..... 692 46.
5.8 MX Record

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 693 46.

5.9 Adding a MX Record

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 694 46.5.10 Adding a DNS Service Control Rule ...

.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.. 696 46.6.4 Configuring WWW Service Control .



[You're reading an excerpt. Click here to read official ZYXEL
ZYWALL USG 50 user guide
http://yourpdfguides.com/dref/3685299](http://yourpdfguides.com/dref/3685299)

.....
.....

.....
.....
.....

.....
.....
.....

..... 697 46.6.5 Service Control Rules ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

701 46.6.6 Customizing the WWW Login Page

.....
.....
.....

.....
.....
.....

... 701 46.6.

7 HTTPS Example

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 705 46.7 SSH

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

.. 712 46.7.1 How SSH Works

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 713 46.

7.2 SSH Implementation on the ZyWALL

.....
.....
.....
.....
.....
.....
.....
.....

..... 714 46.7.3 Requirements for Using SSH ...

.....
.....
.....
.....
.....
.....
.....
.....

... 714 46.7.

4 Configuring SSH

.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....

714 46.7.5 Secure Telnet Using SSH Examples

.....
.....
.....

.....
.....
.....
.....

.. 716 46.8 Telnet ..

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... 717 46.

8.1 Configuring Telnet

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 718 46.

9 FTP

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....

..... 719 ZyWALL USG 50 User's Guide 25 Table of Contents 46.
9.1 Configuring FTP

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 719 46.10 SNMP

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 721 46.10.1 Supported MIBs ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 723 46.10.2 SNMP Traps .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 723 46.10.3 *Configuring SNMP*

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 723 46.11 *Vantage CNM*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 725 46.11.1 *Configuring Vantage CNM*

.....
.....
.....

.....
.....
.....

.....
.....
.....

726 46.12 *Language Screen*

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 729 47.

3 Log Setting Screens

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 731 47.3.1 Log Setting Summary

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 732 47.3.

2 Edit System Log Settings

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 733 47.3.3 Edit Remote Server Log Settings ..

.....

.....
.....
.....

.....
.....
.....
.....

.....
.. 738 47.3.4 Active Log Summary Screen .

.....
.....

.....
.....
.....

.....
.....
.....
.....

..... 740 Chapter 48 File Manager

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

..... 743 48.1 Overview .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
. 743 48.1.1 What You Can Do in this Chapter ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 743 48.1.2 *What you Need to Know* .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 743 48.2 *The Configuration File Screen* ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 746 48.3 *The Firmware Package Screen* ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 750 48.4 *The Shell Script Screen*

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

... 752 Chapter 49 Diagnostics.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 755 49.1 Overview ..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

755 49.1.1 What You Can Do in this Chapter ...

.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 755 49.2 The Diagnostic Screen ...

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....
.....

..... 755 49.3 The Packet Capture Screen ..

.....
.....

.....
.....
.....

.....
.....
.....

756 49.3.1 The Packet Capture Files Screen ...

.....
.....

.....
.....
.....

.....
.....

..... 758 49.3.2 Example of Viewing a Packet Capture File ..

.....
.....
.....

.....
.....

..... 759 Chapter 50 Reboot..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
761 50.1 Overview

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
... 761 50.1.

1 What You Need To Know

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.. 761 50.2 The Reboot Screen ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *761 26 ZyWALL USG 50 User's Guide Table of Contents Chapter 51 Shutdown..*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....

..... *763 51.1 Overview*

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *763 51.1.
1 What You Need To Know*

.....
.....

.....
.....
.....

.....
.....
.....

..... *763 51.2 The Shutdown Screen* ..

.....
.....

.....
.....
.....

.....
.....
.....

..... *763 Chapter 52 Troubleshooting.*

.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

765 52.1 Resetting the ZyWALL

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 779 52.2 Getting More Troubleshooting Help ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 780 Chapter 53 Product Specifications .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 781 53.1 Power Adaptor Specifications

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 786 *Appendix A Log Descriptions*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 789 *Appendix B Common Services*.....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 847 *Appendix C Displaying Anti-Virus Alert Messages in Windows*..

.....
.....

.....
.....
.....

..... 851 *Appendix D Importing Certificates* ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 857 *Appendix E Open Software Announcements*

.....
.....

(smaller than the rack-mounting screws). Attach the other bracket in a similar fashion. 2 Figure 1 Attaching Mounting Brackets and Screws 32 ZyWALL USG 50 User's Guide Chapter 1 Introducing the ZyWALL After attaching both mounting brackets, position the ZyWALL in the rack by lining up the holes in the brackets with the appropriate holes on the rack. Secure the ZyWALL to the rack with the rack-mounting screws. 3 Figure 2 Rack Mounting 1.3 Front Panel This section introduces the ZyWALL's front panel. Figure 3 ZyWALL Front Panel 1.3.

1 Front Panel LEDs The following table describes the LEDs. Table 1 Front Panel LEDs LED PWR Green Red COLOR STATUS Off On On DESCRIPTION The ZyWALL is turned off. The ZyWALL is turned on. There is a hardware component failure. Shut down the device, wait for a few minutes and then restart the device (see Section 1.5 on page 35). If the LED turns red again, then please contact your vendor. Breathing The ZyWALL is in power saving mode. ZyWALL USG 50 User's Guide 33 Chapter 1 Introducing the ZyWALL Table 1 Front Panel LEDs (continued) LED SYS COLOR STATUS Green Off On Blinking Red On Off Blinking Orange Off On DESCRIPTION The ZyWALL is not ready or has failed. The ZyWALL is ready and running. The ZyWALL is booting. The ZyWALL had an error or has failed. There is no traffic on this port. The ZyWALL is sending or receiving packets on this port. This port has a successful link. 1, 2 ... Green 1.

4 Management Overview You can use the following ways to manage the ZyWALL. Web Configurator The Web Configurator allows easy ZyWALL setup and management using an Internet browser. This User's Guide provides information about the Web Configurator. Figure 4 Managing the ZyWALL: Web Configurator Command-Line Interface (CLI) The CLI allows you to use text-based commands to configure the ZyWALL. You can access it using remote management (for example, SSH or Telnet) or via the console port. See the Command Reference Guide for more information about the CLI. 34 ZyWALL USG 50 User's Guide Chapter 1 Introducing the ZyWALL Console Port You can use the console port to manage the ZyWALL using CLI commands.



[You're reading an excerpt. Click here to read official ZYXEL ZYWALL USG 50 user guide](http://yourpdfguides.com/dref/3685299)
<http://yourpdfguides.com/dref/3685299>

See the Command Reference Guide for more information about the CLI. The default settings for the console port are as follows. Table 2 Console Port Default Settings SETTING Speed Data Bits Parity Stop Bit Flow Control VALUE 115200 bps 8 None 1 Off 1.

5 Starting and Stopping the ZyWALL Here are some of the ways to start and stop the ZyWALL. Always use Maintenance > Shutdown > Shutdown or the shutdown command before you turn off the ZyWALL or remove the power. Not doing so can cause the firmware to become corrupt. Table 3 Starting and Stopping the ZyWALL METHOD Turning on the power Rebooting the ZyWALL DESCRIPTION A cold start occurs when you turn on the power to the ZyWALL. The ZyWALL powers up, checks the hardware, and starts the system processes. A warm start (without powering down and powering up again) occurs when you use the Reboot button in the Reboot screen or when you use the reboot command. The ZyWALL writes all cached data to the local storage, stops the system processes, and then does a warm start. If you press the RESET button, the ZyWALL sets the configuration to its default values and then reboots. Clicking Maintenance > Shutdown > Shutdown or using the shutdown command writes all cached data to the local storage and stops the system processes. Wait for the device to shut down and then manually turn off or remove the power.

It does not turn off the power. Power off occurs when you turn off the power to the ZyWALL. The ZyWALL simply turns off. It does not stop the system processes or write cached data to local storage. Using the RESET button Clicking Maintenance > Shutdown > Shutdown or using the shutdown command Disconnecting the power ZyWALL USG 50 User's Guide 35 Chapter 1 Introducing the ZyWALL The ZyWALL does not stop or start the system processes when you apply configuration files or run shell scripts although you may temporarily lose access to network resources.

36 ZyWALL USG 50 User's Guide CHAPTER 2 Features and Applications This chapter introduces the main features and applications of the ZyWALL. 2.1 Features The ZyWALL's security features include VPN, firewall, anti-virus, content filtering, IDP (Intrusion Detection and Prevention), ADP (Anomaly Detection and Protection), and certificates. It also provides bandwidth management, NAT, port forwarding, policy routing, DHCP server and many other powerful features. The rest of this section provides more information about the features of the ZyWALL.

High Availability To ensure the ZyWALL provides reliable, secure Internet access, set up one or more of the following: · Multiple WAN ports and configure load balancing between these ports. · One or more 3G (cellular) connections. Virtual Private Networks (VPN) Use IPsec, SSL to provide secure communication between two sites over the Internet or any insecure network that uses TCP/IP for communication. The ZyWALL also offers hub-and-spoke IPsec VPN. Flexible Security Zones Many security settings are made by zone, not by interface, port, or network. As a result, it is much simpler to set up and to change security settings in the ZyWALL. You can create your own custom zones. You can add interfaces and VPN tunnels to zones. ZyWALL USG 50 User's Guide 37 Chapter 2 Features and Applications Firewall The ZyWALL's firewall is a stateful inspection firewall. The ZyWALL restricts access by screening data packets against defined access rules.

It can also inspect sessions. For example, traffic from one zone is not allowed unless it is initiated by a computer in another zone first. Intrusion Detection and Prevention (IDP) IDP (Intrusion Detection and Protection) can detect malicious or suspicious packets and respond instantaneously. It detects pattern-based attacks in order to protect against network-based intrusions. See Section 31.6.2 on page 496 for a list of attacks that the ZyWALL can protect against. You can also create your own custom IDP rules. Anomaly Detection and Prevention (ADP) ADP (Anomaly Detection and Prevention) can detect malicious or suspicious packets and respond instantaneously. It can detect: · Anomalies based on violations of protocol standards (RFCs Requests for Comments) · Abnormal flows such as port scans.

The ZyWALL's ADP protects against network-based intrusions. See Section 32.3.4 on page 524 and Section 32.3.

5 on page 527 for more on the kinds of attacks that the ZyWALL can protect against. You can also create your own custom ADP rules. Bandwidth Management Bandwidth management allows you to allocate network resources according to defined policies. This policy-based bandwidth allocation helps your network to better handle applications such as Internet access, e-mail, Voice-over-IP (VoIP), video conferencing and other business-critical applications.

Content Filter Content filtering allows schools and businesses to create and enforce Internet access policies tailored to the needs of the organization. You can also subscribe to category-based content filtering that allows your ZyWALL to check web sites against an external database of dynamically-updated ratings of millions of web sites. You then simply select categories to block or monitor, such as pornography or racial intolerance, from a pre-defined list. 38

ZyWALL USG 50 User's Guide Chapter 2 Features and Applications Anti-Virus Scanner With the anti-virus packet scanner, your ZyWALL scans files transmitting through the enabled interfaces into the network. The ZyWALL helps stop threats at the network edge before they reach the local host computers.

Anti-Spam The anti-spam feature can mark or discard spam. Use the white list to identify legitimate e-mail. Use the black list to identify spam e-mail. The ZyWALL can also check e-mail against a DNS black list (DNSBL) of IP addresses of servers that are suspected of being used by spammers. Application Patrol Application patrol (App. Patrol) manages instant messenger (IM), peer-to-peer (P2P) applications like MSN and BitTorrent.

You can even control the use of a particular application's individual features (like text messaging, voice, video conferencing, and file transfers). Application patrol has powerful bandwidth management including traffic prioritization to enhance the performance of delaysensitive applications like voice and video.

You can also use an option that gives SIP priority over all other traffic. This maximizes SIP traffic throughput for improved VoIP call sound quality. 2.2 Applications These are some example applications for your ZyWALL. See also Chapter 7 on page 109 for configuration tutorial examples. ZyWALL USG 50 User's Guide 39 Chapter 2 Features and Applications 2.2.1 VPN Connectivity Set up VPN tunnels with other companies, branch offices, telecommuters, and business travelers to provide secure access to your network.

You can also set up additional connections to the Internet to provide better service.



[You're reading an excerpt. Click here to read official ZYXEL](http://yourpdfguides.com/dref/3685299)

[ZYWALL USG 50 user guide](http://yourpdfguides.com/dref/3685299)

<http://yourpdfguides.com/dref/3685299>

Figure 5 Applications: VPN Connectivity 2.2.2 SSL VPN Network Access You can configure the ZyWALL to provide SSL VPN network access to remote users. 40 ZyWALL USG 50 User's Guide Chapter 2 Features and Applications 2.

2.2.1 Full Tunnel Mode In full tunnel mode, a virtual connection is created for remote users with private IP addresses in the same subnet as the local network. This allows them to access network resources in the same way as if they were part of the internal network. Figure 6 Network Access Mode: Full Tunnel Mode 192.

168.1.100 https:// LAN (192.168.1.X) Web Mail File Share Web-based Application Non-Web Application Server ZyWALL USG 50 User's Guide 41 Chapter 2 Features and Applications 2.2.3 User-Aware Access Control Set up security policies that restrict access to sensitive information and shared resources based on the user who is trying to access it. Figure 7 Applications: User-Aware Access Control 2.2.

4 Multiple WAN Interfaces Set up multiple connections to the Internet on the same port, or set up multiple connections on different ports. In either case, you can balance the loads between them. Figure 8 Applications: Multiple WAN Interfaces 42 ZyWALL USG 50 User's Guide CHAPTER 3 Web Configurator The ZyWALL Web Configurator allows easy ZyWALL setup and management using an Internet browser. 3.1 Web Configurator Requirements In order to use the Web Configurator, you must · Use Internet Explorer 7 or later, or Firefox 1.5 or later · Allow pop-up windows (blocked by default in Windows XP Service Pack 2) · Enable JavaScripts (enabled by default) · Enable Java permissions (enabled by default) · Enable cookies The recommended screen resolution is 1024 x 768 pixels. 3.2 Web Configurator Access 1 Make sure your ZyWALL hardware is properly connected. See the Quick Start Guide. ZyWALL USG 50 User's Guide 43 Chapter 3 Web Configurator Open your web browser, and go to http://192.

168.1.1. By default, the ZyWALL automatically routes this request to its HTTPS server, and it is recommended to keep this setting. The Login screen appears. 2 Figure 9 Login Screen 3 Type the user name (default: "admin") and password (default: "1234"). If your account is configured to use an ASAS authentication server, use the OTP (One-Time Password) token to generate a number. Enter it in the One-Time Password field. The number is only good for one login. You must use the token to generate a new number the next time you log in.

4 Click Login. If you logged in using the default user name and password, the Update Admin Info screen (Figure 10 on page 44) appears. Otherwise, the dashboard (Figure 11 on page 45) appears. Figure 10 Update Admin Info Screen 44 ZyWALL USG 50 User's Guide Chapter 3 Web Configurator The screen above appears every time you log in using the default user name and default password. If you change the password for the default user account, this screen does not appear anymore. Follow the directions in this screen. If you change the default password, the Login screen (Figure 9 on page 44) appears after you click Apply. If you click Ignore, the Installation Setup Wizard opens if the ZyWALL is using its default configuration (see Chapter 4 on page 59); otherwise the dashboard appears as shown next. 5 Figure 11 Dashboard A BC 3.3 Web Configurator Screens Overview The Web Configurator screen is divided into these parts (as illustrated in Figure 11 on page 45): · A - title bar · B - navigation panel · C - main window 3.

3.1 Title Bar The title bar provides some icons in the upper right corner. Figure 12 Title Bar ZyWALL USG 50 User's Guide 45 Chapter 3 Web Configurator The icons provide the following functions. Table 4 Title Bar: Web Configurator Icons LABEL Logout Help About Site Map Object Reference Console DESCRIPTION Click this to log out of the Web Configurator. Click this to open the help page for the current screen. Click this to display basic information about the ZyWALL. Click this to see an overview of links to the Web Configurator screens. Click this to open a screen where you can check which configuration items reference an object. Click this to open the console in which you can use the command line interface (CLI). See the CLI Reference Guide for details on the commands.

Click this to open a popup window that displays the CLI commands sent by the Web Configurator. CLI 3.3.1.1 About Click this to display basic information about the ZyWALL.

Figure 13 Title Bar The following table describes labels that can appear in this screen. Table 5 Title Bar: Web Configurator Icons LABEL Boot Module Current Version Released Date OK DESCRIPTION This shows the version number of the software that handles the booting process of the ZyWALL. This shows the firmware version of the ZyWALL. This shows the date (yyyy-mm-dd) and time (hh:mm:ss) when the firmware is released. Click this to close the screen.

46 ZyWALL USG 50 User's Guide Chapter 3 Web Configurator 3.3.2 Navigation Panel Use the menu items on the navigation panel to open screens to configure ZyWALL features. Click the arrow in the middle of the right edge of the navigation panel to hide the navigation panel menus or drag it to resize them. The following sections introduce the ZyWALL's navigation panel menus and their screens. Figure 14 Navigation Panel 3.3.2.1 Dashboard The dashboard displays general device information, system status, system resource usage, licensed service status, and interface status in widgets that you can rearrange to suit your needs. See Chapter 8 on page 157 for details on the dashboard.

3.3.2.2 Monitor Menu The monitor menu screens display status and statistics information. Table 6 Monitor Menu Screens Summary FOLDER OR LINK System Status Port Statistics Interface Status Traffic Statistics Session Monitor DDNS Status IP/MAC Binding Login Users Cellular Status Displays packet statistics for each physical port. Displays general interface information and packet statistics. Collect and display traffic statistics. Displays the status of all current sessions. Displays the status of the ZyWALL's DDNS domain names. Lists the devices that have received an IP address from ZyWALL interfaces using IP/MAC binding.

Lists the users currently logged into the ZyWALL. Displays details about the ZyWALL's 3G connection status. TAB FUNCTION ZyWALL USG 50 User's Guide 47 Chapter 3 Web Configurator Table 6 Monitor Menu Screens Summary (continued) FOLDER OR LINK AppPatrol Statistics VPN Monitor IPsec SSL Displays and manages the active IPsec SAs. Lists users currently logged into the VPN SSL client portal. You can also log out individual users and delete related session information.

Collect and display statistics on the viruses that the ZyWALL has detected. Collect and display statistics on the intrusions that the ZyWALL has detected.



[You're reading an excerpt. Click here to read official ZYXEL
ZYWALL USG 50 user guide
http://yourpdfguides.com/dref/3685299](http://yourpdfguides.com/dref/3685299)

Report Cache Anti-Spam Report Status Collect and display content filter statistics Manage the ZyWALL's URL cache. Collect and display spam statistics. Displays how many mail sessions the ZyWALL is currently checking and DNSBL (Domain Name Service-based spam Black List) statistics. Lists log entries. TAB FUNCTION Displays bandwidth and protocol statistics. Anti-X Statistics Anti-Virus IDP Content Filter Log 3.3.2.3 Configuration Menu Use the configuration menu screens to configure the ZyWALL's features. Table 7 Configuration Menu Screens Summary FOLDER OR LINK Quick Setup Licensing Registration Registration Service Signature Update Anti-Virus IDP/AppPatrol System Protect Network Register the device and activate trial services. View the licensed service status and upgrade licensed services. Update anti-virus signatures immediately or by a schedule. Update IDP signatures immediately or by a schedule.

Update system-protect signatures immediately or by a schedule. TAB FUNCTION Quickly configure WAN interfaces or VPN connections. 48 ZyWALL USG 50 User's Guide Chapter 3 Web Configurator Table 7 Configuration Menu Screens Summary (continued) FOLDER OR LINK Interface TAB Port Role Ethernet PPP Cellular VLAN Bridge Trunk FUNCTION Use this screen to set the ZyWALL's flexible ports as LAN1 or DMZ. Manage Ethernet interfaces and virtual Ethernet interfaces. Create and manage PPPoE and PPTP interfaces. Configure a cellular Internet connection for an installed 3G card. Create and manage VLAN interfaces and virtual VLAN interfaces. Create and manage bridges and virtual bridge interfaces. Create and manage trunks (groups of interfaces) for load balancing and link High Availability (HA). Create and manage routing policies. Create and manage IP static routing information. Configure device-level RIP settings. Configure device-level OSPF settings, including areas and virtual links. Configure zones used to define various policies. Define and manage the ZyWALL's DDNS domain names.

Set up and manage port forwarding rules. Set up and manage HTTP redirection rules. Configure SIP, H.323, and FTP pass-through settings. Routing Policy Route Static Route RIP OSPF Zone DDNS NAT HTTP Redirect ALG IP/MAC Binding Summary Exempt List Auth. Policy Firewall Firewall Session Limit VPN IPsec VPN SSL VPN VPN Connection VPN Gateway Access Privilege Global Setting Profile Configure IP to MAC address bindings for devices connected to each supported interface. Configure ranges of IP addresses to which the ZyWALL does not apply IP/MAC binding. Define rules to force user authentication. Create and manage level-3 traffic rules. Limit the number of concurrent client NAT/firewall sessions. Configure IPsec tunnels. Configure IKE tunnels. Configure SSL VPN access rights for users and groups. Configure the ZyWALL's SSL VPN settings that apply to all connections. ZyWALL USG 50 User's Guide 49 Chapter 3 Web Configurator Table 7 Configuration Menu Screens Summary (continued) FOLDER OR LINK AppPatrol TAB General FUNCTION Enable or disable traffic management by application and see registration and signature information.

Manage traffic of the most commonly used web, file transfer and e-mail protocols. Manage instant messenger traffic. Manage peer-to-peer traffic. Manage VoIP traffic. Manage streaming traffic. Manage other kinds of traffic. Turn anti-virus on or off, set up anti-virus policies and check the anti-virus engine type and the antivirus license and signature status. Set up anti-virus black (blocked) and white (allowed) lists of virus file patterns. Search for signatures by signature name or attributes and configure how the ZyWALL uses them. Display and manage IDP bindings.

Create and manage IDP profiles. Create, import, or export custom signatures. Display and manage ADP bindings. Create and manage ADP profiles. Create and manage content filter policies.

Create and manage the detailed filtering rules for content filtering policies. Turn anti-spam on or off and manage anti-spam policies. Set up a black list to identify spam and a white list to identify legitimate e-mail. Have the ZyWALL check e-mail against DNS Black Lists. Create and manage users. Create and manage groups of users. Manage default settings for all users, general settings for user sessions, and rules to force user authentication. Create and manage host, range, and network (subnet) addresses. Create and manage groups of addresses. Common IM Peer to Peer VoIP Streaming Other Anti-X Anti-Virus General Black/White List Signature IDP General Profile Custom Signatures ADP Content Filter General Profile General Filter Profile Anti-Spam General Black/White List DNSBL Object User/Group User Group Setting Address Address Address Group 50 ZyWALL USG 50 User's Guide Chapter 3 Web Configurator Table 7 Configuration Menu Screens Summary (continued) FOLDER OR LINK Service Schedule AAA Server Active DirectoryDefault Active DirectoryGroup LDAP-Default LDAP-Group RADIUS-Default RADIUS-Group Auth. Method Certificate My Certificates Trusted Certificates ISP Account SSL Application Endpoint Security System Host Name Date/Time Console Speed DNS WWW Service Control Login Page SSH TELNET FTP SNMP Vantage CNM Language Log & Report Configure the system and domain name for the ZyWALL. Configure the current date, time, and time zone in the ZyWALL. Set the console speed. Configure the DNS server and address records for the ZyWALL. Configure HTTP, HTTPS, and general authentication.

Configure how the login and access user screens look. Configure SSH server and SSH service settings. Configure telnet server settings for the ZyWALL. Configure FTP server settings. Configure SNMP communities and services. Configure and allow your ZyWALL to be managed by the Vantage CNM server. Select the Web Configurator language. TAB Service Service Group FUNCTION Create and manage TCP and UDP services. Create and manage groups of services. Create one-time and recurring schedules.

Configure the default Active Directory settings. Create and manage groups of Active Directory servers. Configure the default LDAP settings. Create and manage groups of LDAP servers. Configure the default RADIUS settings.

Create and manage groups of RADIUS servers. Create and manage ways of authenticating users. Create and manage the ZyWALL's certificates. Import and manage certificates from trusted sources. Create and manage ISP account information for PPPoE/PPTP interfaces.

Create SSL web application objects. Create Endpoint Security (EPS) objects. ZyWALL USG 50 User's Guide 51 Chapter 3 Web Configurator Table 7 Configuration Menu Screens Summary (continued) FOLDER OR LINK Email Daily Report Log Setting TAB FUNCTION Configure where and how to send daily reports and what reports to send. Configure the system log, e-mail logs, and remote syslog servers. 3.3.2.4 Maintenance Menu Use the maintenance menu screens to manage configuration and firmware files, run diagnostics, and reboot or shut down the ZyWALL.



[You're reading an excerpt. Click here to read official ZYXEL ZYWALL USG 50 user guide](http://yourpdfguides.com/dref/3685299)
<http://yourpdfguides.com/dref/3685299>

Table 8 Maintenance Menu Screens Summary FOLDER OR LINK File Manager TAB Configuration File Firmware Package Shell Script FUNCTION Manage and upload configuration files for the ZyWALL. View the current firmware version and to upload firmware.

Manage and run shell script files for the ZyWALL. Collect diagnostic information. Capture packets for analysis. Restart the ZyWALL. Turn off the ZyWALL. Diagnostics Reboot Shutdown Diagnostic Packet Capture 3.3.3 Main Window The main window shows the screen you select in the navigation panel. The main window screens are discussed in the rest of this document. Right after you log in, the Dashboard screen is displayed.

See Chapter 8 on page 157 for more information about the Dashboard screen. 3.3.3.1 Warning Messages Warning messages, such as those resulting from misconfiguration, display in a popup window.

Figure 15 Warning Message 52 ZyWALL USG 50 User's Guide Chapter 3 Web Configurator 3.3.3.2 Site Map Click Site MAP to see an overview of links to the Web Configurator screens. Click a screen's link to go to that screen.

Figure 16 Site Map 3.3.3.3 Object Reference Click Object Reference to open the Object Reference screen. Select the type of object and the individual object and click Refresh to show which configuration settings reference the object. The following example shows which configuration settings reference the ldap-users user object (in this case the first firewall rule). Figure 17 Object Reference ZyWALL USG 50 User's Guide 53 Chapter 3 Web Configurator The fields vary with the type of object. The following table describes labels that can appear in this screen. Table 9 Object References LABEL Object Name DESCRIPTION This identifies the object for which the configuration settings that use it are displayed. Click the object's name to display the object's configuration screen in the main window.

This field is a sequential value, and it is not associated with any entry. This is the type of setting that references the selected object. Click a service's name to display the service's configuration screen in the main window. If it is applicable, this field lists the referencing configuration item's position in its list, otherwise N/A displays. This field identifies the configuration item that references the object. If the referencing configuration item has a description configured, it displays here. Click this to update the information in this screen. Click Cancel to close the screen. # Service Priority Name Description Refresh Cancel 3.3.

3.4 CLI Messages Click CLI to look at the CLI commands sent by the Web Configurator. These commands appear in a popup window, such as the following.

Figure 18 CLI Messages Click Clear to remove the currently displayed information. See the Command Reference Guide for information about the commands.

3.3.4 Tables and Lists The Web Configurator tables and lists are quite flexible and provide several options for how to display their entries. 54 ZyWALL USG 50 User's Guide Chapter 3 Web Configurator 3.3.

4.1 Manipulating Table Display Here are some of the ways you can manipulate the Web Configurator tables. 1 Click a column heading to sort the table's entries according to that column's criteria. Figure 19 Sorting Table Entries by a Column's Criteria 2 Click the down arrow next to a column heading for more options about how to display the entries. The options available vary depending on the type of fields in the column. Here are some examples of what you can do: · Sort in ascending alphabetical order · Sort in descending (reverse) alphabetical order · Select which columns to display · Group entries by field · Show entries in groups · Filter by mathematical operators (<, >, or =) or searching for text Figure 20 Common Table Column Options ZyWALL USG 50 User's Guide 55 Chapter 3 Web Configurator Select a column heading cell's right border and drag to re-size the column. 3 Figure 21 Resizing a Table Column 4 Select a column heading and drag and drop it to change the column order. A green check mark displays next to the column's title when you drag the column to a valid new location. Figure 22 Changing the Column Order 5 Use the icons and fields at the bottom of the table to navigate to different pages of entries and control how many entries display at a time. Figure 23 Navigating Pages of Table Entries 56 ZyWALL USG 50 User's Guide Chapter 3 Web Configurator 3.

3.4.2 Working with Table Entries The tables have icons for working with table entries. A sample is shown next. You can often use the [Shift] or [Ctrl] key to select multiple entries to remove, activate, or deactivate. Figure 24 Common Table Icons Here are descriptions for the most common table icons. Table 10 Common Table Icons LABEL Add DESCRIPTION Click this to create a new entry. For features where the entry's position in the numbered list is important (features where the ZyWALL applies the table's entries in order like the firewall for example), you can select an entry and click Add to create a new entry after the selected entry. Double-click an entry or select it and click Edit to open a screen where you can modify the entry's settings. In some tables you can just click a table entry and edit it directly in the table.

For those types of tables small red triangles display for table entries with changes that you have not yet applied. To remove an entry, select it and click Remove. The ZyWALL confirms you want to remove it before doing so. To turn on an entry, select it and click Activate. To turn off an entry, select it and click Inactivate.

To connect an entry, select it and click Connect. To disconnect an entry, select it and click Disconnect. Edit Remove Activate Inactivate Connect Disconnect Object References Select an entry and click Object References to open a screen that shows which settings use the entry. See Section 12.3.

2 on page 236 for an example. Move To change an entry's position in a numbered list, select it and click Move to display a field to type a number for where you want to put that entry and press [ENTER] to move the entry to the number that you typed. For example, if you type 6, the entry you are moving becomes number 6 and the previous entry 6 (if there is one) gets pushed up (or down) one. 3.3.4.3 Working with Lists When a list of available entries displays next to a list of selected entries, you can often just double-click an entry to move it from one list to the other. In some lists ZyWALL USG 50 User's Guide 57 Chapter 3 Web Configurator you can also use the [Shift] or [Ctrl] key to select multiple entries, and then use the arrow button to move them to the other list. Figure 25 Working with Lists 58 ZyWALL USG 50 User's Guide CHAPTER 4.1 Installation Setup Wizard Screens 4 Installation Setup Wizard If you log into the Web Configurator when the ZyWALL is using its default configuration, the first Installation Setup Wizard screen displays.



[You're reading an excerpt. Click here to read official ZYXEL
ZYWALL USG 50 user guide
http://yourpdfguides.com/dref/3685299](http://yourpdfguides.com/dref/3685299)