




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for CASIO 5034. You'll find the answers to all your questions on the CASIO 5034 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual CASIO 5034 User guide CASIO 5034 Operating instructions CASIO 5034 Instructions for use CASIO 5034 Instruction manual CASIO 5034

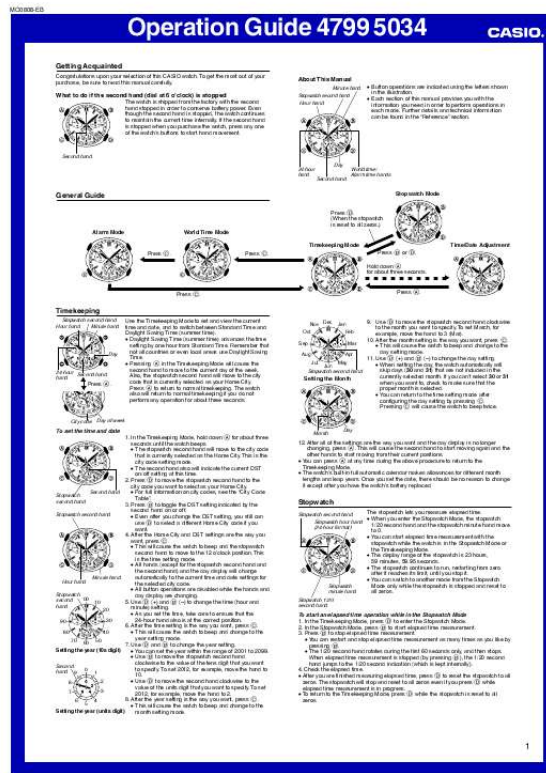

[You're reading an excerpt. Click here to read official CASIO 5034 user guide](http://yourpdfguides.com/dref/1312580)  
<http://yourpdfguides.com/dref/1312580>

**Manual abstract:**

To get the most out of your purchase, be sure to read this manual carefully. About This Manual Minute hand Stopwatch second hand Hour hand What to do if the second hand (dial at 6 o'clock) is stopped The watch is shipped from the factory with the second hand stopped in order to conserve battery power. Even though the second hand is stopped, the watch continues to maintain the current time internally. If the second hand is stopped when you purchase the watch, press any one of the watch's buttons to start hand movement. · Button operations are indicated using the letters shown in the illustration. · Each section of this manual provides you with the information you need in order to perform operations in each mode. Further details and technical information can be found in the "Reference" section. Second hand 24-hour hand Day Second hand World time/ Alarm time hands General Guide Press D. (When the stopwatch is reset to all zeros.) Alarm Mode World Time Mode Stopwatch Mode L L Timekeeping Mode Time/Date Adjustment L L Press C.

Press C. Press B or D. Hold down A for about three seconds. L L L Press C. Press A.

Timekeeping Stopwatch second hand Minute hand Hour hand Day 24-hour Second hand hand L Press A. Use the Timekeeping Mode to set and view the current time and date, and to switch between Standard Time and Daylight Saving Time (summer time). · Daylight Saving Time (summer time) advances the time setting by one hour from Standard Time. Remember that not all countries or even local areas use Daylight Saving Time. @@@@Press A to return to normal timekeeping.

@@@@To set March, for example, move the hand to 3 (Mar). 10. After the month setting is the way you want, press C. Sep Mar · This will cause the watch to beep and change to the day setting mode. Apr Aug 11. Use D (+) and B (-) to change the day setting. Jul May · When setting the day, the watch automatically will Jun skip days (30 and 31) that are not included in the Stopwatch second hand currently selected month. If you can't select 30 or 31 Setting the Month when you want to, check to make sure that the proper month is selected. · You can return to the time setting mode after configuring the day setting by pressing C. Pressing C will cause the watch to beep twice.

Nov Oct Dec Jan Feb City code Day of week To set the time and date 1. In the Timekeeping Mode, hold down A for about three seconds until the watch beeps. · The stopwatch second hand will move to the city code that is currently selected as the Home City. This is the city code setting mode. · The second hand also will indicate the current DST on/off setting at this time. 2. Press D to move the stopwatch second hand to the city code you want to select as your Home City. Second hand · For full information on city codes, see the "City Code Stopwatch Table". second hand 3. Press B to toggle the DST setting indicated by the second hand on or off.

Stopwatch second hand · Even after you change the DST setting, you still can use D to select a different Home City code if you want. 4. After the Home City and DST settings are the way you want, press C. · This will cause the watch to beep and the stopwatch second hand to move to the 12 o'clock position. This is the time setting mode.

· All hands (except for the stopwatch second hand and the second hand) and the day display will change Minute hand automatically to the current time and date settings for Hour hand the selected city code. · All button operations are disabled while the hands and Stopwatch day display are changing. 00 second 10 5. Use D (+) and B (-) to change the time (hour and hand minute) setting. 20 · As you set the time, take care to ensure that the 24-hour hand also is at the correct position.

30 90 6. After the time setting is the way you want, press C. 40 · This will cause the watch to beep and change to the 80 year setting mode. 70 50 60 7. Use D and B to change the year setting. Setting the year (10s digit) · You can set the year within the range of 2001 to 2099. · Use B to move the stopwatch second hand clockwise to the value of the tens digit that you want Second to specify. To set 2012, for example, move the hand to hand 9 0 1 10. · Use D to move the second hand clockwise to the 2 8 value of the units digit that you want to specify. To set 3 7 2012, for example, move the hand to 2.

8. After the year setting is the way you want, press C. 4 6 5 · This will cause the watch to beep and change to the Setting the year (units digit) month setting mode. L Month Day 12. After all of the settings are the way you want and the day display is no longer changing, press A. This will cause the second hand to start moving again and the other hands to start moving from their current positions. · You can press A at any time during the above procedure to return to the Timekeeping Mode. @@@@In the Timekeeping Mode, press D to enter the Stopwatch Mode. 2. In the Stopwatch Mode, press B to start elapsed time measurement.

3. Press B to stop elapsed time measurement. @@@@4. Check the elapsed time. @@@@In the Timekeeping Mode, press B to start elapsed time measurement.

@@@@Press B to stop elapsed time measurement. @@@@3. Check the elapsed time. @@@@· Alarm operations are performed in accordance with the Timekeeping Mode time. · Pressing any button stops the alarm tone operation.

To toggle an alarm on and off In the Alarm Mode, press A to toggle the alarm setting indicated by the second hand ON or OFF. Adjusting the Home Positions If you notice that the watch hands are not indicating 12 o'clock, ON/OFF settings, or other indicator settings correctly, you can adjust the "home positions" of the hands manually to correct them. World Time Stopwatch second hand City code Second hand The World Time Mode shows you the current time in 27 cities (29 time zones) around the world. A simple operation swaps your Home City with the currently selected World Time city. · When you enter the World Time Mode, the stopwatch second hand will move automatically to the city code that is currently selected as the World Time city code. At the same time, the World Time dial hands will move to the current time in that city. · If the current time shown for a city is wrong, check your Home City settings and make the necessary changes. · All of the operations in this section are performed in the World Time dial World Time Mode. (24-hour format) To view the time in another city In the World Time Mode, use D to move the stopwatch second hand to the city code of the city you want to select as the World Time city. · The World Time dial hands will move to indicate the current time in the selected city code.

The day display will continue to indicate the day in your Home City.



[You're reading an excerpt. Click here to read official CASIO 5034 user guide](http://yourpdfguides.com/dref/1312580)  
<http://yourpdfguides.com/dref/1312580>

· For full information on city codes, see the "City Code Table". To check whether the time for the selected city code is Standard Time or Daylight Saving Time  
1. In the World Time Mode, use D to select the city code that you want to check. 2. Press A. · The second hand will move to OFF in the case of Standard Time,  
and ON in the case of Daylight Saving Time. · If you do not perform any operation for about three seconds, the watch will automatically return to normal  
timekeeping. To toggle a city code time between Standard Time and Daylight Saving Time 1. In the World Time Mode, use D to select the city code whose  
Standard Time/Daylight Saving Time setting you want to change.

2. Hold down A for about three seconds until the watch beeps. This will cause the second hand to toggle between ON (Daylight Saving Time) and OFF  
(Standard Time). · Note that you cannot switch between Standard Time and Daylight Saving Time while GMT is selected as the city L Hold down code. A for  
three · Note that the Standard Time/Daylight Saving Time seconds.

setting affects only the currently displayed city code. Other city codes are not affected. To adjust the home positions 1. In the Timekeeping Mode, as you hold  
down A, hold Stopwatch second hand down C for about three seconds until the watch beeps. · This indicates that the watch is in the time and day home  
position adjustment mode.

· If the second hand moves to "0", it is in the correct home position. If it doesn't, use D to move the second hand to "0". · The stopwatch second hand is also in  
the proper home position if it moves to 12 o'clock. If it doesn't, press B to move it to 12 o'clock. Second hand 2. After confirming that the second hand and  
stopwatch Correct second hand and second hand are both at the proper home positions, stopwatch second hand press C. @@@@As you set the  
time, take care to ensure that the 24-hour hand also is at the correct position. 24-hour hand 3. accordance with the Greenwich Mean Time (GMT) differential  
of each city, based on your Home City time setting. · GMT differential is calculated by this watch based on Universal Time Coordinated (UTC\*) data.

\* UTC is the world-wide scientific standard of timekeeping. It is based upon carefully maintained atomic (cesium) clocks that keep time accurately to within  
microseconds. Leap seconds are added or subtracted as necessary to keep UTC in sync with the Earth's rotation. The reference point for UTC is Greenwich,  
England. 2 Operation Guide 4799 5034 City Code Table City Code PPG HNL ANC LAX DEN CHI NYC CCS RIO 02 01 GMT LON PAR ATH JED THR

DXB KBL KHI DEL DAC RGN BKK HKG TYO ADL SYD NOU WLG City Pago Pago Honolulu Anchorage Los Angeles Denver Chicago New York Caracas

Rio De Janeiro UTC Differential 11.0 10.0 09.0 08.0 07.0 06.

0 05.0 04.0 03.0 02.0 01.

0 +00.0 +01.0 +02.0 +03.0 +03.

5 +04.0 +04.5 +05.0 +05.5 +06.0 +06.5 +07.0 +08.0 +09.0 +09.

5 +10.0 +11.0 +12.0 Other major cities in same time zone Papeete Nome San Francisco, Las Vegas, Vancouver, Seattle/Tacoma, Dawson City, Tijuana El  
Paso, Edmonton, Culiacan Houston, Dallas/Fort Worth, New Orleans, Mexico City, Winnipeg Montreal, Detroit, Miami, Boston, Panama City, Havana,  
Lima, Bogota La Paz, Santiago, Port Of Spain Sao Paulo, Buenos Aires, Brasilia, Montevideo Praia Dublin, Lisbon, Casablanca, Dakar, Abidjan Milan,  
Rome, Madrid, Amsterdam, Algiers, Hamburg, Frankfurt, Vienna, Stockholm, Berlin Cairo, Jerusalem, Helsinki, Istanbul, Beirut, Damascus, Cape Town  
Kuwait, Riyadh, Aden, Addis Ababa, Nairobi, Moscow Shiraz Abu Dhabi, Muscat Male Mumbai, Kolkata, Colombo Jakarta, Phnom Penh, Hanoi, Vientiane  
Singapore, Kuala Lumpur, Beijing, Taipei, Manila, Perth, Ulaanbaatar Seoul, Pyongyang Darwin Melbourne, Guam, Rabaul Port Vila Christchurch, Nadi,  
Nauru Island London Paris Athens Jeddah Tehran Dubai Kabul Karachi Delhi Dhaka Yangon Bangkok Hong Kong Tokyo Adelaide Sydney Noumea  
Wellington · Based on data as of December 2006. 3 .



[You're reading an excerpt. Click here to read official CASIO 5034  
user guide](http://yourpdfguides.com/dref/1312580)

<http://yourpdfguides.com/dref/1312580>