




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO KOR-631G. You'll find the answers to all your questions on the DAEWOO KOR-631G in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO KOR-631G
User guide DAEWOO KOR-631G
Operating instructions DAEWOO KOR-631G
Instructions for use DAEWOO KOR-631G
Instruction manual DAEWOO KOR-631G

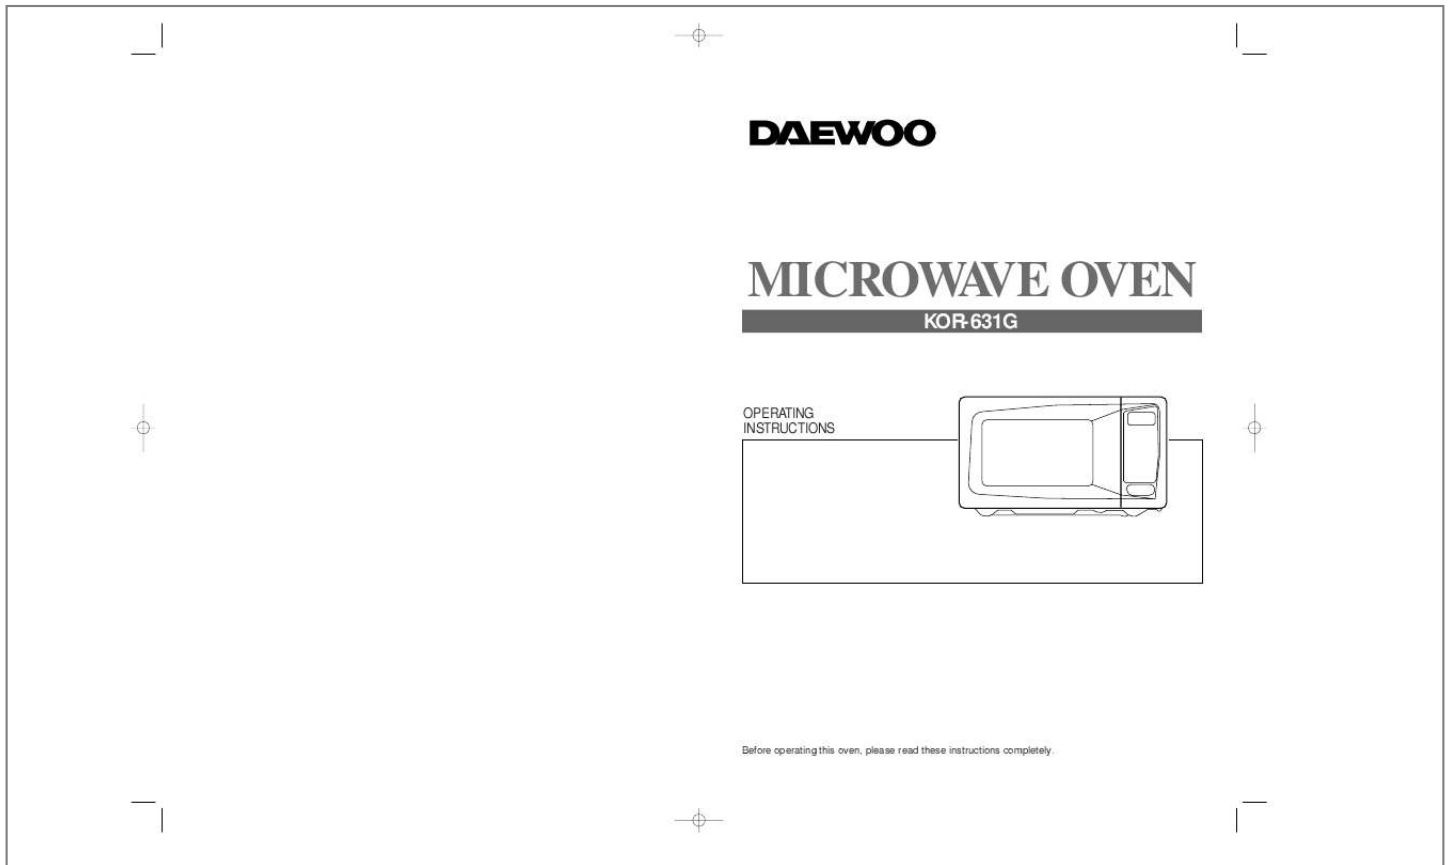

[You're reading an excerpt. Click here to read official DAEWOO KOR-631G user guide](http://yourpdfguides.com/dref/2306591)
<http://yourpdfguides.com/dref/2306591>

Manual abstract:

@@@(e) WARNING : Liquids or other foods must not be heated in sealed containers since they are liable to explode. (f) WARNING : Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. This appliance must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a earthing wire with a earthing plug. The plug must be plugged into an outlet that is properly installed and earthed. WARNING : Improper use of the earthing plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the earthing instructions are not completely understood, or if doubt exists as to whether the appliance is properly earthed. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade earthing plug, and a 3slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

INSTALLATION 1 Steady, flat location This oven should be set on a steady, flat surface. This oven is designed for counter top use only. 2 Leave space behind and side All air vents should be kept a clearance. If all vents are covered during operation, the oven may overheat and, eventually, oven failure. 3 Away from radio and TV sets Poor television reception and radio interference may result if the oven is located close to a TV, Radio antenna, feeder and so on.

Position the oven as far from them as possible. TABLE OF CONTENTS PRECAUTIONS

.....

.....

....

....

.....

.....

....

....

.....

.....

....

....

.....

.....

....

....

.....1 EARTHING INSTRUCTIONS

.....

.....

....

.....

.....

....

....

.....

.....

....

....

.....

.....

....

2 INSTALLATION.....

.....

.....

....

....

.....

.....

....

....

.....

.....

.....
.....
.....

.....2 SPECIFICATIONS ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....3 IMPORTANT

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

3 IMPORTANT SAFETY INSTRUCTIONS.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.4 FEATURES DIAGRAM

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

5 OPERATION PROCEDURE.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.7 CONTROLS

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....8 SETTING THE CLOCK ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.8 TIME DEFROSTING.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

...8 WEIGHT DEFROSTING .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

9 COOKING IN ONE STAGE

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....10 COOKING IN TWO STAGES

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....10 KITCHEN TIMER MODE

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....11 SPEEDY COOK

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....12 ONE TOUCH COOKING.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
12 AUTO COOK.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...13 LESS, MORE

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

14 CHILD SAFETY LOCK

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....
..14 TO STOP THE OVEN WHILE THE OVEN IS OPERATING.....

.....
.....
.....
.....

.....
....14 COOKING UTENSILS .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....15 CARE AND CLEANING ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....15 BEFORE YOU CALL FOR SERVICE ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....16 QUESTIONS AND ANSWERS

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

...16 1 4 Away from heating appliance and water taps Keep the oven away from hot air, steam or splash when choosing a place to position it, or the insulation might be adversely affected and breakdowns occur. 5 Power supply · Check your local power source. This oven requires a current of approximately 6 amperes, 230V 50Hz. · Power supply cord is about 0.8 meters long. · The voltage used must be the same as specified on this oven. Using a higher voltage may result in a fire or other accident causing oven damage.

Using low voltage will cause slow cooking. We are not responsible for damage resulting from use of this oven with a voltage of ampere fuse other than those specified. · If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. 6 Examine the oven after unpacking for any damage such as: A misaligned door, Broken door, A dent in cavity. If any of the above are visible, DO NOT INSTALL, and notify dealer immediately.

7 Do not operate the oven if it is colder than room temperature. (This may occur during delivery in cold weather.) Allow the oven to become room temperature before operating. 8 The minimum height of free space necessary above the top surface of the oven is 100mm. 2 SPECIFICATIONS POWER SUPPLY POWER CONSUMPTION MICROWAVE OUTPUT POWER FREQUENCY OUTSIDE DIMENSIONS (W X H X D) CAVITY DIMENSIONS (W X H X D) NET WEIGHT TIMER POWER LEVELS 230V AC 50 Hz SINGLE PHASE WITH EARTHING 1200 W 800 W 2450 MHz 465 X 279 X 360 mm 290 X 220 X 306 mm APPROX.

13KG 59 min. 90 sec. 10 LEVELS IMPORTANT SAFETY INSTRUCTIONS WARNING : To prevent fire, burns, electric shock and other warnings: Listed below are, as with all appliances, certain rules to follow and safeguards to assure high performance from this oven: 1. Do not use the oven for any reason other than food preparation, such as for drying clothes, paper, or any other nonfood items or for sterilizing purposes. 2. Do not use the oven when empty, this could damage the oven. 3. Do not use the oven cavity for any type of storage, such as papers, cookbook, cookware, etc. 4. Do not operate the oven without the glass tray in place.

Be sure it is properly sitting on the rotating base. 5. Make sure you remove caps or lids prior to cooking when you cook food sealed in bottles. 6. Do not put foreign material between the oven surface and door. It could result in excessive leakage of microwave energy. 7. Do not use recycled paper products for cooking. They may contain impurities which could cause sparks and/or fires when used during cooking. 8.

Do not pop popcorn unless popped in a microwave approved popcorn popper or unless it's commercially packaged and recommended especially for microwave ovens. Microwave popped corn produces a lower yield than conventional popping; there will be a number of unpopped kernels. Do not use oil unless specified by the manufacturer. 9. Do not cook any food surrounded by a membrane, such as egg yolks, potatoes, chicken livers, etc. , without first piercing them several times with a fork. 10. Do not pop popcorn longer than the manufacturer's directions. (popping time is generally below 3 minutes). Longer cooking does not yield more popped corn, it can cause scorchings and fire.

Also, the cooking tray can become too hot to handle or may break. 11. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames. 12. When heating food in plastic or paper containers, check the oven frequently due to the possibility of ignition. 13. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns. *

Specifications are subject to change without notice. IMPORTANT The wires in this mains lead are coloured in accordance with the following code. Green-and-yellow : Earth Blue : Neutral Brown : Live As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: the wire which is coloured green-andyellow must be connected to the terminal in the plug which is marked with the letter 'E' or by the earth symbol or green-and-yellow.

The letter 'N' or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red. WARNING: This appliance must be earthed. 14. Always test the temperature of food or drink which has been heated in a microwave oven before you give it to somebody, especially to children or elderly people. This is important because things which have been heated in a microwave oven carry on getting hotter even though the microwave oven cooking has stopped.



[You're reading an excerpt. Click here to read official DAEWOO KOR-631G user guide](http://yourpdfguides.com/dref/2306591)
<http://yourpdfguides.com/dref/2306591>

15. Eggs in their shell and whole hard-boiled eggs shall not be heated in microwave ovens since they may explode. 16. Keep the waveguide cover clean at all times.

Wipe the oven interior with a soft damp cloth after each use. If you leave grease or fat anywhere in the cavity it may overheat, smoke or even catch fire when next using the oven. 17. Never heat oil or fat for deep frying as you cannot control the temperature and doing so may lead to overheating and fire. 18.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container. 4 3 FEATURES DIAGRAM 2 7 3 4 5 FEATURES DIAGRAM (continued) q M/W DEF TIMER LOCK g 1. BREAD 2. SOUP 3. BAKED POTATO 4.

FRESH VEGETABLE 5. FROZEN VEGETABLE Auto Cook e w Pasta 1 Dish Warmer Frozen Pizza r Auto Defrost t y Fish 6 o u Poultry Meat 1 h o u r 10M 10m in 1M Defrost in 1m 10S Clock 0 i p s Power Kitchen Timer 9 8 a STOP/ CLEAR START/ SPEEDY COOK 1. Door latch-When the door is closed it will automatically shut off. If the door is opened while the oven is operating, the magnetron will automatically shut off. 2. Door seal-The door seal maintains the microwave within the oven cavity and prevents microwave leakage. 3. Oven cavity 4. Spatter shield-Protects the microwave outlet from splashes of cooking foods. 5.

Safety interlock system-Prevents the oven from operating while the door is opened. 6. Door release button-Pushing this button stops oven operation and opens the door. 7. Glass cooking tray-Made of special heat resistant glass. The tray must always be in proper position before operating. Do not cook food directly on the tray. 8. Roller guide-Supports the glass cooking tray. 9.

Door screen-Allows viewing of food. The screen is designed so that light can pass through, but not the microwaves. 10. Time set pad-Used to set the cooking time and the present time. 11.

Display-Coonutes 90 seconds.(59:90) 3. Touch START pad. When you touch START pad, the DEF indicator starts blinking to show the oven is in the DEFROST mode. The display counts down the time to show you how much defrosting time is left in the DEFROST mode.

@@@Follow the steps below for easy defrosting. 1. Touch Meat pad. @@Touch Power pad. (Select the desired power level.) The M/W indicator lights. The display will show what you touched. This example shows power level 5. NOTE: If steps 1 and 2 are omitted, the oven will cook at full power. The display will show what you touched.

2. Touch the time set pads for the cooking time. MEAT DEFROSTING begins. The display will show what you touched. @@Touch START pad. The display will show what you touched. @@@@When the cooking time ends, you will hear 3 beeps. Meat 2. Select the desired defrosting weight. (Refer to the weight defrost chart below.

) 3. Touch START pad. 1. @@Select the desired defrosting weight. (Refer to the weight defrost chart below.

) 3. Touch START pad. 1. Touch Fish pad. POULTRY DEFROSTING begins.

The g indicator light and "300" is displayed. @@Select the desired defrosting weight. (Refer to the weight defrost chart below.) 3. Touch START pad. @@@@1. Touch Defrost pad. @@Touch the time set pads for the defrosting time you want. 3.Touch Power pad.

@@The display will show what you touched. This example shows power level 5. The display will show what you touched. 4. Touch the time set pads for the desired cooking time. 5. @@@@The display counts down the time remaining in DEFROST mode. @@At the end of DEFROST mode, the oven will beep and start M/W cook. The DEF indicator goes off and the M/W indicator starts blinking. The display counts down the time remaining in M/W mode. When M/W cook ends, you will hear 3 beeps. @@@@Touch Kitchen Timer pad. @@Touch SPEEDY COOK pad. When you touch SPEEDY COOK, ":30" is displayed. After 1.

5 seconds, the oven starts reheating. 2. Press the amount of time you want to count down. 3. Touch START pad.

The display will show what you touched. ONE TOUCH COOKING One touch cook allows you to cook or reheat many of your favorite foods by touching just one pad. To increase quantity, touch the chosen pad until number in display is same as the desired quantity to cook. 1. Touch Pasta pad once for 1 serving or twice for 2 serving. When you touch Pasta pad once, "1" is displayed. After the 1.5 seconds, the display is changed into cooking time and the oven starts cooking. The TIMER indicator starts blinking and the display counts down the time remaining in KITCHEN TIMER mode. When KITCHEN TIMER mode ends, you will hear 3 beeps.

HOW TO USE TO DELAY THE START OF COOKING Kitchen Timer 1. Touch Kitchen Timer pad. The TIMER indicator lights and " : 0" is displayed. The display will show what you touched. The M/W indicator lights and the selected power level & cooking time are displayed. Pasta 2. Press the amount of time you want to delay. 3. Program the desired power level and cooking time for food to be cooked. 4.

Touch START pad. * PASTA * · 1 serving : Touch Pasta once. · 2 serving : Touch Pasta twice within 1.5 seconds. When you touch START pad, the TIMER indicator starts blinking and the display counts down the time remaining in KITCHEN TIMER mode.

When KITCHEN TIMER mode ends, the oven will beep. The TIMER indicator goes off and M/W indicator starts blinking. The display counts down the time remaining in M/W mode. When M/W cook ends, you will hear 3 beeps. NOTE: 1.

Place pasta into a deep casserole and double quantity of water. 2. Cover with lid or plastic wrap. After cooking, stir. 3. If possible, let stand 3 to 5 minutes or until liquid has been absorbed. HOW TO USE TO SET A HOLDING TIME 1. Program the desired cooking time. The M/W indicator lights and the selected time is displayed. The TIMER indicator lights and " : 0" is displayed.

The display will show what you touched. Frozen Pizza 1. Touch Frozen Pizza pad once for 200g or twice for 400g. When you touch Frozen Pizza pad once, "200" is displayed. After 1.5 seconds, the display is changed into the cooking time and the oven starts cooking. Kitchen Timer 2. Touch Kitchen Timer pad. 3. Press the amount of time you want the oven to hold.

4. Touch START pad. * FROZEN PIZZA * · 200g : Touch Frozen Pizza once. · 400g : Touch Frozen Pizza twice within 1.5 seconds.

The M/W indicator starts blinking and the display counts down the time remaining in M/W mode. When the M/W cook ends, the oven will beep. The M/W indicator goes off and TIMER indicator starts blinking. The display counts down the time remaining in KITCHEN TIMER mode. When the KITCHEN TIMER mode ends, you will hear 3 beeps.

NOTE: Your oven can be programmed for 59 minutes 90 seconds. (59:90) 11 NOTE: 1. Use only one frozen pizza at a time. 2. Use only frozen pizza made for microwave ovens. 3. If the cheese of frozen pizza does not melt sufficiently, cook a few seconds longer. 4. Some brands of frozen pizza may require more or less cooking time.

[You're reading an excerpt. Click here to read official DAEWOO KOR-631G user guide](#)



<http://yourpdfguides.com/dref/2306591>

12 ONE TOUCH COOKING (CONTINUED) Dish Warmer I.

Touch Dish Warmer pad once for 350g or twice for 450g. When you touch Dish Warmer pad once, "350" is displayed. After 1.5 seconds, the display is changed into the cooking time and the oven starts cooking. LESS, MORE To alter one touch cooking or cooking time whilst oven is in operation, use LESS or MORE. (except for defrosting) Press LESS/MORE to decrease/increase the one touch cooking time in multiples of 10 seconds. The overall one touch cooking time can be increased to a maximum of 59 minutes 50 seconds. Press LESS/MORE to decrease/increase the cooking time in multiples of 1 minute. The overall cooking time can be increased to a maximum of 59 minutes. * DISH WARMER * · 350 g : Touch Dish Warmer once.

· 450 g : Touch Dish Warmer twice within 1.5 seconds. CHILD SAFETY LOCK NOTE: 1 Put food on microwave plate. 2. Cover with the vented plastic wrap. The safety lock prevents unwanted oven operation such as by small children. To set, press and hold STOP/CLEAR for 3 seconds, a beep sounds and LOCK indicator lights. To cancel, press and hold STOP/CLEAR for 3 seconds, a beep sounds and LOCK indicator goes off. AUTO COOK Auto Cook allows you to cook or reheat many of your favorite foods by repeatedly touching auto cook pad. TO STOP THE OVEN WHILE THE OVEN IS OPERATING 1. Press STOP/CLEAR pad. · You can restart the oven by touching START pad. · Touch STOP/CLEAR once more to erase all instructions. · You must enter in new instructions. 2. Open the door. · You can restart the oven by closing the door and touching START. Auto Cook 1. Touch Auto Cook pad. When you touch Auto Cook pad once, "AC-1" is displayed.

By repeatedly touching this pad, you can select other food category as shown in the chart below. NOTE: Oven stops operating when door is opened. CATEGORY AC-1 AC-2 AC-3 AC-4 AC-5 FOOD BREAD SOUP BAKED POTATO FRESH VEGETABLE FROZEN VEGETABLE WEIGHT 4slices(40-50g each) 350g 3potatoes(200-250g each) 200g 200g package TOUCH PAD Touch Auto Cook once Touch Auto Cook twice Touch Auto Cook three times Touch Auto Cook four times Touch Auto Cook five times 2. @@Microwave energy is produced by high frequency radio waves. @@@@* The oven doesn't work; 1. Check that the power cord is securely plugged in. 2. Check that the door is firmly closed. 3. Check that the cooking time is set.

4. Check for a blown circuit fuse or tripped main circuit breaker in your house. * Sparking in the cavity; 1. Check utensils. Metal containers or dishes with metal trim should not be used. 2. Check that metal skewers or foil does not touch the interior walls. If there is still a problem, contact the service station. A list of these stations is included in the oven. DO NOT ATTEMPT TO SERVICE THE OVEN YOURSELF ! 1.

Dishes with metal trim of any type-should not be used. This will cause sparking. 2. Glass or ceramic heat proof dishes-excellent for microwave cooking. 3. China dishes and plates-without metal trim may be used to cook and heat individual portions of food. 4. Wood or straw-use only for short period, wood contains some moisture and the microwave energy may cause the wood to dry out and crack. 5. Aluminum foil-may be used in very small pieces for shielding only.

Any aluminum foil used should never be closer than 2.5cm from side walls of oven. 6. Plastic-most heat resistant plastic dinnerware may be used for heating food. However polyethylene, melamine, phenol are unsuitable for use in the oven. They become hot in the microwave. 7. Wax paper-use as a cover to avoid spatters. 8. Metal-in general, metal utensils should not be used in microwave oven.

QUESTIONS AND ANSWERS * Q : I accidentally ran my microwave oven without any food in it. Is it damaged? * A : Running the oven empty for a short time will not damage the oven. However, it is not recommended. * Q : Can the oven be used with the glass tray or roller guide removed? * A : No. Both the glass tray and roller guide must always be used in the oven before cooking.

* Q : Can I open the door when the oven is operating? * A : The door can be opened anytime during the cooking operation. Then microwave energy will be instantly switched off and the time setting will maintain until the door is closed and START is touched. * Q : Why do I have moisture in my microwave oven after cooking? * A : The moisture on the side of your microwave oven is normal. It is caused by steam from cooking food hitting the cool oven surface. * Q : Dose microwave energy pass through the viewing screen in the door? * A : No.

The metal screen bounces back the energy to the oven cavity. The holes are made to allow light to pass through. They do not let microwave energy pass through. CARE AND CLEANING Although your oven is provided with safety features, it is important to observe the following: 1. It is important not to defeat or tamper with safety interlocks. 2. Do not place any object between the oven front face and the door or allow residue to accumulate on sealing surfaces. Wipe the sealing area frequently with a mild detergent, rinse and dry. Never use abrasive powders or pads. 3.

When opened, the door must not be subjected to strain, for example, a child hanging on an opened door or any load could cause the oven to fall forward to cause injury and also damage to the door. Do not operate the oven if it is damaged, until it has been repaired by a trained service technician. It is particularly important that the oven closes properly and that there is no damage to the: i) Door(bent) ii) Hinges and Hookes(broken or loosened) iii) Door seals and sealing surfaces. 4. The oven should not be adjusted or repaired by anyone except a properly trained service technician. 15 16 .



[You're reading an excerpt. Click here to read official DAEWOO KOR-631G user guide](http://yourpdfguides.com/dref/2306591)
<http://yourpdfguides.com/dref/2306591>