




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KODAK PLAYTOUCH ZI10. You'll find the answers to all your questions on the KODAK PLAYTOUCH ZI10 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KODAK PLAYTOUCH ZI10
User guide KODAK PLAYTOUCH ZI10
Operating instructions KODAK PLAYTOUCH ZI10
Instructions for use KODAK PLAYTOUCH ZI10
Instruction manual KODAK PLAYTOUCH ZI10

Front view

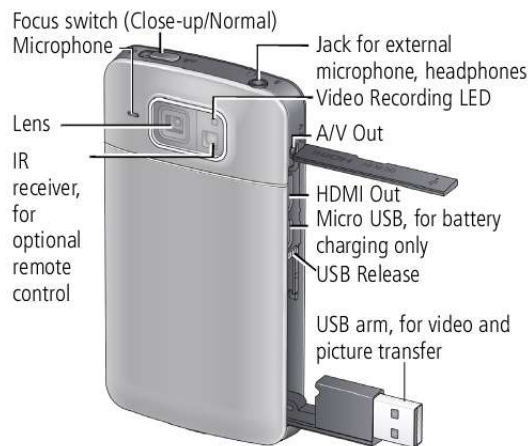

Download the Extended user guide www.kodak.com/go/manuals

www.kodak.com/go/playtouchsupport

ENGLISH

1



[You're reading an excerpt. Click here to read official KODAK PLAYTOUCH ZI10 user guide](http://yourpdfguides.com/dref/4732967)
<http://yourpdfguides.com/dref/4732967>

Manual abstract:

book Page 1 Friday, August 5, 2011 7:57 AM Front view Focus switch (Close-up/Normal) Microphone Lens IR receiver, for optional remote control Jack for external microphone, headphones Video Recording LED A/V Out HDMI Out Micro USB, for battery charging only USB Release USB arm, for video and picture transfer Download the Extended user guide www.kodak.com/go/manuals www.kodak.com/go/playtouchsupport 1 ENGLISH urg_01150.book Page 2 Friday, August 5, 2011 7:57 AM ENGLISH Accessing the USB arm 1 Open the door. 2 Slide the USB lock. 3 Pull down the USB arm. www.kodak.com/go/manuals Download the Extended user guide 2 www.kodak.com/go/easysharecenter urg_01150.book Page 3 Friday, August 5, 2011 7:57 AM Back view, touchscreen gestures Power button Battery compartment, SD/SDHC Card slot Speaker Battery charging light Record/OK button Strap post Tripod socket Tap (or tap and hold) Swipe Drag Download the Extended user guide www.kodak.com/go/manuals www.kodak.com/go/playtouchsupport 3 ENGLISH urg_01150.book Page 4 Friday, August 5, 2011 7:57 AM ENGLISH Understanding the status icons Liveview Current mode Battery level Settings Recording Recording Face detection brackets Zoom control (Wide, Telephoto) Capture Mode Review Effects Current video length Zoom control Review Current video length Battery level (or DC-In connected) Previous Scrubber bar Single/Multi-up/Timeline View Edit Delete Share Volume Next Download the Extended user guide www.kodak.com/go/manuals 4 www.kodak.com/go/easysharecenter urg_01150.book Page 5 Friday, August 5, 2011 7:57 AM 1 Insert the Li-Ion battery. Charge whenever necessary. Notched corner 2 Turn off the camera, then connect it. KODAK Camera USB Cable, Micro B / 5-Pin Do not plug this cable into a computer. Your adapter may differ. Charging light: •Blinking = charging •Off = charged (approx. 2 hours) See other charging solutions see page 6 5 www.kodak.com/go/playtouchsupport ENGLISH □ Charging the battery urg_01150.book Page 6 Friday, August 5, 2011 7:57 AM Charge using an external charger A charger may be an optional accessory and differ from the one pictured. ENGLISH 1 2 6 www.kodak.com/go/easysharecenter urg_01150.book Page 7 Friday, August 5, 2011 7:57 AM Your camera has limited internal memory—perfect for a few practice videos/pictures. We strongly suggest that you purchase an SD or SDHC Card. (Maximum supported card size is 32 GB.) CAUTION: A card can only be inserted one way; forcing it may cause damage. @@@@ (To change your language or date/time in the future, see page 14.) To set the language: 1 Drag up/down to view your language. (For more information on using touchscreen gestures, see page 3.) 2 Tap your language. 8 www.kodak.com/go/easysharecenter urg_01150.book Page 9 Friday, August 5, 2011 7:57 AM To set the date: 1 Tap to scroll through month, date, year. (Tap/hold to scroll quickly.) 2 Tap MDY to change the date format. 3 The time screen is below the date screen. Drag up to view and set the time. (For more information on using touchscreen gestures, see page 3.) To set the time: 1 Tap to scroll through hour and minute. (Tap/hold to scroll quickly.) 2 Tap AM to choose AM or PM. @@ Press it again to stop recording. @@ Take close-up videos/pictures. Slide the Focus switch (see page 1) to Close-up . Tap the Effects icon choose an effect.

@@@ Plug in headphones or an external microphone, then tap Headphone or Microphone. www.kodak.com/go/easysharecenter 10 urg_01150.book Page 11 Friday, August 5, 2011 7:57 AM Play Volume 1 Tap the Review icon . (You can rotate the camera right or left, according to your preference.) 2 For previous/next video/picture, swipe or tap the left/right side of the LCD. 3 To play a video, tap the Play icon. 4 To delete a video/picture, tap , then follow the prompts. Enhancing your experience □ □ □ Use the sharing features (see page 18). Use the editing features (see page 17). View videos/pictures as thumbnails and select them for sharing. (See the Extended user guide www.kodak.com/go/manuals.) Plug in headphones, then tap Headphone. . □ □ Access the Volume controls; tap the volume icon NOTE: To switch to recording mode, press the Record/OK button. www.kodak.com/go/playtouchsupport 11 ENGLISH □ Reviewing videos/pictures urg_01150.book Page 12 Friday, August 5, 2011 7:57 AM □ Downloading software When you connect the camera to the computer, you can download ARCSOFT MEDIAIMPRESSION for KODAK Software (for WINDOWS OS-based computers), the KODAK Camera Setup App (for WINDOWS and MAC OS), or both. @@ 1 Make sure the computer is connected to the Internet. 2 Use the USB arm to connect the camera. @@@@ @ HD 720p/60 fps—Best for sports and action. HD 720p—Best for viewing on a computer. @@@@ Show or hide: □ Individual social networking sites □ E-mail addresses (all or none) Microphone Gain Sounds and LED Choose the sensitivity of the internal or external microphone (if one is connected). Turn camera sounds and video recording light on/off. www.kodak.com/go/playtouchsupport 13 urg_01150.book Page 14 Friday, August 5, 2011 7:57 AM Doing more with your camera Setting Safe Mode Description Protect your videos, pictures, and settings. When Safe mode is on: □ You can take and review videos/pictures, but cannot edit, share, or delete them. change the settings. □ You can turn on the camera, but you cannot LCD Brightness LCD Glare Shield Feature Set LCD brightness. Auto sets the LCD brightness for you based on current light conditions. (Does not control the brightness of actual videos or pictures.) Make the LCD easier to see in different situations. (See page 15.) Digital Image Turn on to reduce video blur. (Turn off when using a Stabilization tripod.) Face Detection Brackets Show/hide face detect brackets. Video Output NTSC—Used in North America and Japan; most common format. PAL—Used in Europe and China. Date and Time Language 14 Set the date and time. (See page 8.) Choose your language. www.kodak.com/go/easysharecenter urg_01150.

book Page 15 Friday, August 5, 2011 7:57 AM Doing more with your camera Setting Format SD Card About Reset Settings Description Delete everything on the card and format the card. View firmware and software version. Reset all settings to factory defaults. Applying an LCD Glare Shield filter Make the LCD easier to see in different conditions, such as the glare of bright sunlight. (Filters do not control the brightness or contrast of actual videos or pictures.) IMPORTANT: To apply an LCD Glare Shield filter, the feature must be turned on in the Settings menu (see page 14). 1 Tap the Settings icon , then tap LCD Glare Shield. @@@@ @ 2 Tap the Edit icon . The Editing menu appears. 3 Tap a choice: Trim Video—See page 17.

Single Frame Extraction—See page 18. @@ 1 Tap the Review icon 2 Tap the Edit icon Trim Video. . then In (Start) 3 Drag the In marker to the desired video start. Drag the Out (End) Out marker to the desired video end. @@@@ The frame is saved as a new picture.

@@@ Plug in headphones or an external microphone, then tap Headphone or Microphone. www.kodak.com/go/easysharecenter 10 urg_01150.book Page 11 Friday, August 5, 2011 7:57 AM Play Volume 1 Tap the Review icon . (You can rotate the camera right or left, according to your preference.) 2 For previous/next video/picture, swipe or tap the left/right side of the LCD. 3 To play a video, tap the Play icon. 4 To delete a video/picture, tap , then follow the prompts. Enhancing your experience □ □ □ Use the sharing features (see page 18). Use the editing features (see page 17). View videos/pictures as thumbnails and select them for sharing. (See the Extended user guide www.kodak.com/go/manuals.) Plug in headphones, then tap Headphone. . □ □ Access the Volume controls; tap the volume icon NOTE: To switch to recording mode, press the Record/OK button. www.kodak.com/go/playtouchsupport 11 ENGLISH □ Reviewing videos/pictures urg_01150.book Page 12 Friday, August 5, 2011 7:57 AM □ Downloading software When you connect the camera to the computer, you can download ARCSOFT MEDIAIMPRESSION for KODAK Software (for WINDOWS OS-based computers), the KODAK Camera Setup App (for WINDOWS and MAC OS), or both. @@ 1 Make sure the computer is connected to the Internet. 2 Use the USB arm to connect the camera. @@@@ @ HD 720p/60 fps—Best for sports and action. HD 720p—Best for viewing on a computer. @@@@ Show or hide: □ Individual social networking sites □ E-mail addresses (all or none) Microphone Gain Sounds and LED Choose the sensitivity of the internal or external microphone (if one is connected). Turn camera sounds and video recording light on/off. www.kodak.com/go/playtouchsupport 13 urg_01150.book Page 14 Friday, August 5, 2011 7:57 AM Doing more with your camera Setting Safe Mode Description Protect your videos, pictures, and settings. When Safe mode is on: □ You can take and review videos/pictures, but cannot edit, share, or delete them. change the settings. □ You can turn on the camera, but you cannot LCD Brightness LCD Glare Shield Feature Set LCD brightness. Auto sets the LCD brightness for you based on current light conditions. (Does not control the brightness of actual videos or pictures.) Make the LCD easier to see in different situations. (See page 15.) Digital Image Turn on to reduce video blur. (Turn off when using a Stabilization tripod.) Face Detection Brackets Show/hide face detect brackets. Video Output NTSC—Used in North America and Japan; most common format. PAL—Used in Europe and China. Date and Time Language 14 Set the date and time. (See page 8.) Choose your language. www.kodak.com/go/easysharecenter urg_01150.

book Page 15 Friday, August 5, 2011 7:57 AM Doing more with your camera Setting Format SD Card About Reset Settings Description Delete everything on the card and format the card. View firmware and software version. Reset all settings to factory defaults. Applying an LCD Glare Shield filter Make the LCD easier to see in different conditions, such as the glare of bright sunlight. (Filters do not control the brightness or contrast of actual videos or pictures.) IMPORTANT: To apply an LCD Glare Shield filter, the feature must be turned on in the Settings menu (see page 14). 1 Tap the Settings icon , then tap LCD Glare Shield. @@@@ @ 2 Tap the Edit icon . The Editing menu appears. 3 Tap a choice: Trim Video—See page 17.

Single Frame Extraction—See page 18. @@ 1 Tap the Review icon 2 Tap the Edit icon Trim Video. . then In (Start) 3 Drag the In marker to the desired video start. Drag the Out (End) Out marker to the desired video end. @@@@ The frame is saved as a new picture.

@@@ Plug in headphones or an external microphone, then tap Headphone or Microphone. www.kodak.com/go/easysharecenter 10 urg_01150.book Page 11 Friday, August 5, 2011 7:57 AM Play Volume 1 Tap the Review icon . (You can rotate the camera right or left, according to your preference.) 2 For previous/next video/picture, swipe or tap the left/right side of the LCD. 3 To play a video, tap the Play icon. 4 To delete a video/picture, tap , then follow the prompts. Enhancing your experience □ □ □ Use the sharing features (see page 18). Use the editing features (see page 17). View videos/pictures as thumbnails and select them for sharing. (See the Extended user guide www.kodak.com/go/manuals.) Plug in headphones, then tap Headphone. . □ □ Access the Volume controls; tap the volume icon NOTE: To switch to recording mode, press the Record/OK button. www.kodak.com/go/playtouchsupport 11 ENGLISH □ Reviewing videos/pictures urg_01150.book Page 12 Friday, August 5, 2011 7:57 AM □ Downloading software When you connect the camera to the computer, you can download ARCSOFT MEDIAIMPRESSION for KODAK Software (for WINDOWS OS-based computers), the KODAK Camera Setup App (for WINDOWS and MAC OS), or both. @@ 1 Make sure the computer is connected to the Internet. 2 Use the USB arm to connect the camera. @@@@ @ HD 720p/60 fps—Best for sports and action. HD 720p—Best for viewing on a computer. @@@@ Show or hide: □ Individual social networking sites □ E-mail addresses (all or none) Microphone Gain Sounds and LED Choose the sensitivity of the internal or external microphone (if one is connected). Turn camera sounds and video recording light on/off. www.kodak.com/go/playtouchsupport 13 urg_01150.book Page 14 Friday, August 5, 2011 7:57 AM Doing more with your camera Setting Safe Mode Description Protect your videos, pictures, and settings. When Safe mode is on: □ You can take and review videos/pictures, but cannot edit, share, or delete them. change the settings. □ You can turn on the camera, but you cannot LCD Brightness LCD Glare Shield Feature Set LCD brightness. Auto sets the LCD brightness for you based on current light conditions. (Does not control the brightness of actual videos or pictures.) Make the LCD easier to see in different situations. (See page 15.) Digital Image Turn on to reduce video blur. (Turn off when using a Stabilization tripod.) Face Detection Brackets Show/hide face detect brackets. Video Output NTSC—Used in North America and Japan; most common format. PAL—Used in Europe and China. Date and Time Language 14 Set the date and time. (See page 8.) Choose your language. www.kodak.com/go/easysharecenter urg_01150.

book Page 15 Friday, August 5, 2011 7:57 AM Doing more with your camera Setting Format SD Card About Reset Settings Description Delete everything on the card and format the card. View firmware and software version. Reset all settings to factory defaults. Applying an LCD Glare Shield filter Make the LCD easier to see in different conditions, such as the glare of bright sunlight. (Filters do not control the brightness or contrast of actual videos or pictures.) IMPORTANT: To apply an LCD Glare Shield filter, the feature must be turned on in the Settings menu (see page 14). 1 Tap the Settings icon , then tap LCD Glare Shield. @@@@ @ 2 Tap the Edit icon . The Editing menu appears. 3 Tap a choice: Trim Video—See page 17.

Single Frame Extraction—See page 18. @@ 1 Tap the Review icon 2 Tap the Edit icon Trim Video. . then In (Start) 3 Drag the In marker to the desired video start. Drag the Out (End) Out marker to the desired video end. @@@@ The frame is saved as a new picture.



[You're reading an excerpt. Click here to read official KODAK PLAYTOUCH ZI10 user guide](http://yourpdfguides.com/dref/4732967)
<http://yourpdfguides.com/dref/4732967>

Sharing via social networking sites It's never been easier to share videos and pictures on your favorite social networking sites. 1 Tap the Review icon . 2 Tap the icon. 3 Drag or swipe to see available social networking sites.

Tap one or more sites. 1 First, create a new email address. (See Add a new email address.) 1 Tap the Review icon . 2 Tap the icon. 3 Tap the desired email address. 4 When finished, tap X. 5 Add a new email address 1 Tap the icon. 2 Tap Sharing Settings. 3 Tap Manage Email. 4 Tap New Email. Tap each letter. 5 Use the USB arm (see page 12). video/pictures to the computer. Videos are choppy or jumpy on a computer. Long videos are split into separate videos. 6 Use ARCSOFT MEDIA large energy, become hot, or leak. 7 Remove the batteries when the product is stored. 8 Dispose of batteries according to local and national regulations.

Go to www.kodak.com/go/kes. 1 If water has entered the camera, remove the battery/card. 2 Wait until camera reaches operating temperature before using. 3 Blow gently on the lens or LCD to remove dust and dirt. 4 Service agreements may be available in your country. Contact a dealer of KODAK Products for more information. 5 In the US, go to the Electronics Industry Alliance Web site at www.eiae.org or go to Kodak at www.kodak.com/go/support. Limited Warranty Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty period specified on your KODAK Product packaging. Retain the original dated sales receipt.

Proof of purchase date is required with any request for warranty repair. Limited warranty coverage Warranty service is only available from within the country where the products were originally purchased. You may be required to ship products, at your expense, to the authorized service facility for the country where the products were purchased. 1 If Kodak is unable to repair or replace a product, Kodak will, at its option, refund the purchase price paid for the product provided the product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty.

If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is nemarks of Eastman Kodak Company. HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC. 4H7218_en www.kodak.com/go/playtouchsupport 27 .



[You're reading an excerpt. Click here to read official KODAK PLAYTOUCH ZI10 user guide](http://yourpdfguides.com/dref/4732967)
<http://yourpdfguides.com/dref/4732967>