




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA MILESTONE XT720. You'll find the answers to all your questions on the MOTOROLA MILESTONE XT720 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA MILESTONE XT720
User guide MOTOROLA MILESTONE XT720
Operating instructions MOTOROLA MILESTONE XT720
Instructions for use MOTOROLA MILESTONE XT720
Instruction manual MOTOROLA MILESTONE XT720

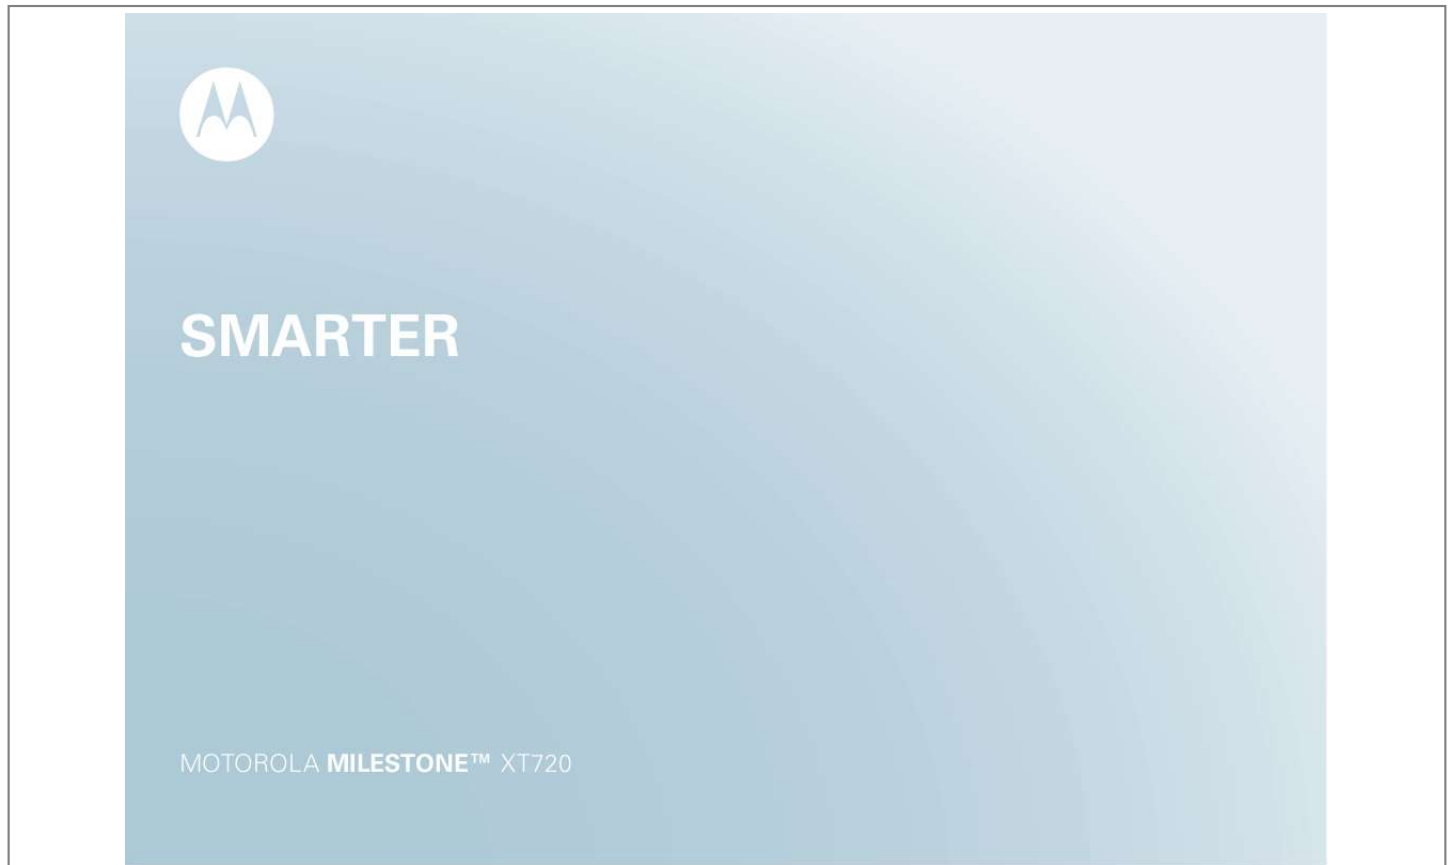

[You're reading an excerpt. Click here to read official MOTOROLA MILESTONE XT720 user guide](http://yourpdfguides.com/dref/3213959)
<http://yourpdfguides.com/dref/3213959>

Manual abstract:

Get more from the Web, with a huge screen and full HTML. Search, browse, everything you want to do, all made easier. · Maps, entertainment and more. The latest technology and apps. MotoNav and Google Maps™ to find your way. @@@@Camera key Menu key Press to open menu options. Microphone Search key Press for text search. More information On your computer--Go to www.motorola.com/mymilestonext720.

Note: Your phone might look a little different. Congratulations 1 Contents Your phone

.....
.....
.....
... 1 Let's go . .
.....
.....
.....
.....
... 2 Touchscreen & keys . .
.....
.....
... 4 Home screen . .
.....
.....
.....
... 6 Calls . .
.....
.....
.....
8 Web
.....
.....
.....
..... 10 Google Maps™
.....
.....
..... 12 Latitude
.....
.....
.....
.....
... 14 Apps for all
.....
.....
.....
... 15 Manage your life
.....
.....
.....
... 16 Contacts
.....
.....
.....
..... 18 Messaging
.....
.....

.....

..... 20 *Text entry*

.....

.....

.....

..... 22 *Tips & tricks*

.....

.....

.....

..... 23 *Personalise*

.....

.....

.....

..... 24 *Photos & videos*

.....

.....

.....

..... 26 *Music*

.....

.....

.....

.....

.....

..... 29 *Bluetooth™ wireless*

.....

.....

.....

..... 33 *Wi-Fi*

.....

.....

.....

.....

.....

..... 35 *USB & memory card*

.....

.....

.....

..... 36 *Tools*

.....

.....

.....

.....

.....

..... 37 *Management*

.....

.....

.....

..... 37 *Security*

.....

.....

.....

.....

.....

..... 38 *Troubleshooting*

.....

.....

.....

.....

.....

..... 39 *Safety, regulatory & legal*

.....

.....

.....

40 Let's go Let's get you up and running Assemble & charge 1 SIM in 2 microSD in (may already be inserted) 3 battery in 4 cover on 5 charge up 3H
Caution: Please read "Safety, regulatory & legal" on page 40. 2 Let's go Set up & go The first time you turn on your phone, a setup wizard guides you through signing in to your existing Google™ account. If you don't have a Google account, you can create one using the wizard. Tip: Remember to write down your username and password, and keep them in a safe place. Your phone comes with a microSD memory card installed - you can fill it with photos, videos and music from your computer using "USB drag & drop" on page 35. Turn it on & off To turn on your phone, press and hold Power (on top of the phone). To turn off your phone, press and hold Power, then tap Power off. Wi-Fi connect If you want to use a Wi-Fi computer network for even faster Internet access, press Menu > Settings > Wireless & networks > Wi-Fi settings. Cool content & more Browse and download thousands of the coolest apps on the planet from Android Market™. Learn more about downloading new apps with "Market™" on page 15.

Let's go 3 Touchscreen & keys a few essentials Drag To scroll through a list or move slowly, drag across the touchscreen. Try it: On the home screen, tap Contacts, then drag your Contacts list up or down. J John Wasser L Touch tips Here are some tips on how to navigate around your phone. Tap To choose an icon or option, tap it. Leo Mans M Monica Jenkins R Contacts Market YouTube Maps Tip: When you drag or flick a Roberta Heaton list, a scroll bar appears on the right.

Drag the scroll bar to move the list to a letter A - Z. Flick Tap & hold To open special options, tap and hold an icon or other item. Try it: On the home screen, tap Contacts, then tap and hold a contact to open options. J To scroll through a list or move quickly, flick across the touchscreen (drag quickly and release). John Wasser L Tip: When you flick a long list, tap the screen to stop it from scrolling.

Pinch-to-zoom Take a closer look at maps, web pages or photos. To zoom in, touch the screen with two fingers and then slide them apart. To zoom out, drag your fingers together. Leo Mans M Monica Jenkins R Roberta Heaton W Wendy West 4 Touchscreen & keys My Sign Draw on your screen to get to your favourite apps. To open My Sign, tap the My Sign icon on the home screen or in the Applications tab. Draw the sign for the action you want. For example, draw a "V" to go to voicemail. To see which actions are already assigned to signs, press Menu > List gestures. You'll also see several signs that are unassigned. To assign an action to a sign, press Menu > Add gesture.

Call Voicemail *86 Key tips Menu, home & back Press Home to close any menu or app and return to the home screen. On the home screen, press and hold Home to show the last few apps you used, then tap an app to open it. Press Search voice search. for text search or press and hold for Press Menu to open menu options or press Back to go back. Sleep & wake up To save your battery, prevent accidental taps, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power. To wake up the touchscreen, just press Power again. To change how long your phone waits before the screen goes to sleep automatically, press Menu > Settings > Sound & display > Screen timeout. Tip: To make the screen lock when it goes to sleep, use "Screen lock" on page 37. Touchscreen & keys 5 Power key menu Press and hold Power to open the power key menu, where you can turn off the phone (Power off), or turn Flight mode or Silent mode on or off. Adjust volume Press the volume keys to change the ring volume (on the home screen) or the earpiece volume (during a call).

Home screen quick access to the things you need most Quick start: Home screen The home screen gives you all your latest information in one place. It's what you see when you turn on the phone or press Home from a menu. It's basically like this: Volume Keys 11:35 PM Status indicators Spin the screen The touchscreen can rotate 90 degrees to stay the right way up when you rotate your phone: Find it: Menu > Orientation > Settings > Sound & display Status Bar Tap & drag this bar down to check notifications. Contacts Market YouTube Maps Shortcuts Tap to open. Applications Tab Drag up to see all your apps. Note: Your home screen might look a little different. 6 Home screen The home screen extends beyond what you see on the screen to give you more room for adding shortcuts, widgets and more. Flick the home screen left and right to see more panels or to add widgets or shortcuts. Applications tab All the apps on your phone, including the apps that came with it and the ones you download and install, are listed in alphabetical order in your Applications tab. To open the Applications tab, tap .

Widgets Add a widget, such as a clock, music player or a calendar that shows upcoming appointments. To open a widget, tap it. To add widgets, press Menu > Add > Widgets.



[You're reading an excerpt. Click here to read official MOTOROLA MILESTONE XT720 user guide](http://yourpdfguides.com/dref/3213959)
<http://yourpdfguides.com/dref/3213959>

Note: If you install apps from Android Market that have widgets, tap and hold the home screen, then select a widget to add to the home screen. Running multiple apps No need to close an app before opening another one. Your phone runs multiple apps, all at the same time. You can open a new app while already running another. Press Home to return to the home screen. Open the Applications tab and tap the app you want. To switch from one running app to another, press and hold Home to see what apps are already open, then tap the one you want.

You can view up to the last six apps that you ran. Shortcuts To add shortcuts to the home screen, open the Applications tab, then tap and hold the shortcut you want. It will be added to the home screen. Or, press Menu > Add > Shortcuts. Search To search, tap Search on the front of the phone. Tap the text box & type.

Then, tap the icon. Apps Your phone already comes with some apps, and you can download and install more (see "Browse & install apps" on page 15. To open an app, tap it. Home screen 7 Phone status & notifications The status bar at the top of the screen contains icons that tell you about messages and phone status.

To view your notifications, tap the status bar and drag it down. Icons on the right tell you about your phone's status: Bluetooth™ active GPS active Wi-Fi active downloading vibrate silent mute call speakerphone active Google™ sync network (full signal) network (roaming) GPRS (fast data) Calls it's good to talk. Quick start: Calls Dialling options Find it: Home > Phone Phone Call log Contacts Favourites EDGE (faster data) 3G (fastest data) flight mode battery (charging) battery (full charge) alarm set 1 4 GHI 2 ABC 5 JKL 3 DEF 6 MNO Contacts Tap to open, then tap an entry to call. Recent calls Tap to open, then tap an entry to call. 7 PQRS Tip: To see today's date, tap and hold the status bar at the top of the screen.

8 TUV 0 9 WXYZ Call Enter a phone number and tap here to call it. 8 Calls In-call options During a call, tap Bluetooth to use a Bluetooth™ device. Tip: You can press Home or Back to leave the active call display. To reopen it, tap Home in progress. Add Call Bluetooth End Mute Speaker · To use a Bluetooth™ device, tap Bluetooth.

Enter numbers during a call To enter numbers during a call, tap Dialpad. Dialpad Speaker Add call End Dialpad > Phone > Return to call Bluetooth Mute Speaker To mute a call, tap Mute. Make & answer calls To make a call, press Home number, and then tap . To answer a call, drag To end a call, tap End. To ignore a call, drag to the left. > Phone, enter a Recent calls Find it: Home > Phone > Call log · To call a number, tap it. · To send a text message, create a contact, view a contact or other options, tap and hold an entry. · To clear the list, press Menu > Clear call log to the right. Hands-free Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

During a call: · To use the speakerphone, tap Speaker. Frequent calls Find it: Home > Phone > Favourites · To call a number, tap it. · To send a text message, view a contact or other options, tap and hold an entry. Calls 9 Conference calls To start a conference call, call the first number. After they answer, tap Add call and call the next number. When the next number answers, tap Merge call. Web You don't need a computer, surf the web with your phone Quick start: Browser Your phone number Find it: Menu > Settings > About phone > Status > My phone number <http://www.google.com> Find it: Home > Browser 11:35 PM Connection Wi-Fi or over the air. Emergency calls Note: Your service provider programmes one or more emergency phone numbers (such as 999 or 112) that you can call under any circumstances, even when your phone is locked.

Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work arch. 2 Enter text in the search box, like an address, business or city, and then tap . Tip: If it's an address you have visited before, select from the list shown. Get directions 1 Press Menu > Directions. 2 Enter a starting point address or tap and select My current location, Contacts or Point on map. 3 Enter an end point address or tap and select My current location, Contacts or Point on map. 4 Select your mode of transport (car, public transport or walk), then tap Go. Your directions are shown as a list. To view your directions on a map, tap Show on map.

Tap Clear Map to clear your selections. Map view Shows a map, complete with names of streets, rivers, lakes, mountains and borders. This is the default view. Satellite view Shows map on top of aerial photo. Traffic view If available in your area, real-time traffic conditions are shown on the roads as colour-coded lines. 5 When you have finished, press Menu > Clear map. > More Google Maps™ 13 Latitude where are your friends & family? Note: This feature is not available in all areas. Check with your service provider. invites them to sign in to Latitude with their Google account. To remove friends: 1 Press Menu > Latitude to show your friend list, then tap a friend in your list.

2 Tap Remove. Join Latitude See where your friends and family are on Google Maps™. Plan to meet up, check that your parents got home safely or just stay in touch. Don't worry, your location is not shared unless you agree to it. You need to join Latitude and then invite your friends to view your location or accept their invitations. When using Google Maps, press Menu > Join Latitude. Read the privacy policy and if you agree with it, tap Agree & share. Share location When you receive a request to share location details you can choose to: · Accept and share back--see your friend's location, and your friend can see yours. · Accept, but hide my location--see your friend's location, but they can't see yours. · Don't accept--location information is not shared between you and your friend.

Add & remove friends Find it: Home To add friends: 1 Press Menu > Add friends. 2 Tap Select from Contacts or Add via email address, then tap a contact > Add friends. If your friends already use Latitude, they'll receive an email request and a notification. If they have not yet joined Latitude, they'll receive an email request that 14 Latitude > Maps > Menu > Latitude Hide your location Press Menu > Latitude to show your friend list. Tap your contact name, then press Menu > Privacy > Hide your location.

Turn off Latitude Press Menu Tap Menu > Latitude to show your friend list. > Privacy > Turn off Latitude. Apps for all get the app you want Manage & restore apps To manage your apps, from your phone's home screen press Menu > Settings > Applications > Manage applications Market Market™ Find it: Home > Get all the fun games and cool apps you want! Market provides you with access to software developers everywhere, so you can find the app you want.



You're reading an excerpt. Click here to read official MOTOROLA MILESTONE XT720 user guide
<http://yourpdfguides.com/dref/3213959>

If you need help or have questions about Android Market, press Menu > Help. Browse & install apps Scroll to and tap the app you want to install. Then, tap Install (if the app is free) or Buy. Warning: If an app you are downloading requires access to your data or control of functions on your phone, you'll be asked to give your permission. After selecting Install, the app will download. After selecting Buy, you may be asked to sign in to an additional Google account. Sign in and select Purchase now to proceed. Follow the on-screen instructions. To see the download progress, open the notifications window. After you download an app, the icon for that app appears on your Applications tab (see "Apps" on page 7). Tap the app to open the details screen—from here you can review, uninstall and more. To reinstall any downloaded items, press Home > Market > Download.

All previously installed apps are listed and available for download. Apps for all 15 Manage your life stay on top of things Tips · To search for messages, tap Menu > Search. · To set new email notifications, such as having a special sound play when you receive a message, tap Menu > Settings > Email notifications, then select the ringtone and vibrate options. · To label an email thread, tap and hold a message, then tap Change labels. What can you manage? Email, contacts and calendar on your phone give you access to the same personal information that you add, view and edit on your computer with the use of Microsoft™ Outlook™. You can: · View Google™ and Exchange contacts in one list. · Schedule and respond to meeting requests. · Access your company directory. For more information, see "Synchronise with Microsoft™ Office Outlook™" on page 17. Email Set up an account Find it: Home > > Email The email setup wizard will guide you through setting up your email account.

Create a new email Find it: Home > Compose > > Email > Menu Google Mail Create a new email Find it: Home > > Menu > Compose > Google Mail Enter the recipient's email address and message, then tap Send. Tip: Press Menu or Add cc/bcc. for options, like Add attachment Enter the recipient's email address and message, then tap Send. Tip: Press Menu Cc/Bcc. for options, like Attach or Add Calendar Find it: Home > > Calendar 16 Manage your life View your calendar in different ways: Press Menu > Day or Week.

When you highlight an event in the day and week views, more details appear. Add calendar events From any calendar view, press Menu > New event. Enter event details and tap Done. Manage calendar events September 2009 Sun Mon Tue Wed Thu Fri Sat Select apps to synchronise 1 Tap Background data. Tip: To save battery power do not tap Background data.

30 31 1 2 3 4 5 6 7 8 9 10 11 12 2 Tap Add account to add the apps you want to synchronise, like Google, Facebook or Corporate. 13 14 15 16 17 18 19 Synchronise with Microsoft™ Office Outlook™ If you use Microsoft™ Office Outlook™ on your work computer, your phone can synchronise emails and events with your Microsoft™ Exchange server. Find it: Menu > Settings > Accounts & sync > Add account > Corporate 1 Enter your username (username@company.com), password, email address and server details including domain name and security type (the server address is the same URL you use to access your company's email using the Web on your computer). Note: Contact your business IT department for server details. 2 Tap Next. 3 Set up your sync options: select email, contacts or calendar. 4 Tap Save & Sync. Manage your life 17 20 21 22 23 24 25 26 27 4 28 5 29 6 30 7 1 8 2 9 3 10 To edit an event, tap and hold the event, then tap Edit event. Edit event details and, when you've finished, tap Done.

Google data synchronisation Find it: Menu > Settings > Accounts & sync The Google apps on your phone give you access to the same personal information (emails, events and contacts) that you have on a computer using Google Mail, Calendar and Contacts. It's easy to synchronise the Google apps information you want to keep up to date. Contacts Contacts like you've never had before Import contacts from your SIM Note: You need to set up an email account (see page 16) before you can import contacts from your SIM. Find it: Contacts > Menu > Import from SD card > Import/Export Quick start: Contacts Find it: Home > Contacts Phone Call log Contacts Favourites Displaying 5 contacts J Note: You might have already imported contacts from your SIM during "Set up & go" on page 3. Monica Jenkins L Call, text or email contacts Contacts List Tap to view contact information. Tap & hold to edit, delete and more. Find it: Contacts Roberta Heaton M For View contact, Call contact, Text contact, Add to favourites or other options, tap and hold the contact. Wendy West R Edit or delete contacts Find it: Contacts John Wasser W Leo Mans Menu Options Press Menu to edit sync groups or to add/import new contacts. Tap the contact, then press Menu or Delete contact. > Edit contact Tip: To search the list, press Menu > Search and type a name.

When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster. Tip: When editing a contact, you can set a ringtone, address and other details that will be saved on your phone. Create contacts Find it: Contacts > Menu > New contact 18 Contacts Select the account to save the contact to, then type the contact name and details. Edit contact Messaging sometimes it's best 2 text, or IM or email.

.. Quick start: Messaging Google contact mcg30203@gmail.com 11:35 PM Find it: Home Tap Home to choose a different type for this entry. > > Messaging Messages First name Surname New message Compose new message 15451231234 (2) Tap + to add another entry.

Phone Home Phone Let's meet for dinner tonight. 5:30PM 14565678234 (2) Tap - to remove this entry. To see more details, flick up. Hanging out with my friends. . . 9:00PM Network Msg (5) Email Home Done Sorry for sending so many. . . 9:01PM 13334545544 Message list Tap to open a message.

Tap & hold to move, delete and more. Email Revert Don't forget to bring your own... 13 Apr Me (2) Draft Fantastic day! 13 Apr When you've finished, tap Done. Groups Find it: Contacts > Menu Tip: To see more messages, flick or drag up. > Display options Read & reply to messages · To open a message and all of its replies, tap it. · To respond to a message, just open it and enter your response in the text box at the bottom.



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/3213959)

[MILESTONE XT720 user guide](http://yourpdfguides.com/dref/3213959)

<http://yourpdfguides.com/dref/3213959>

Messaging 19 You can put your Contacts into groups that you create (like "friends" "family" or "work"). You can then find , contacts faster by showing one group at a time.

· To open options, tap and hold a message. Touch to change your online status message. Create messages Find it: Messaging > Compose Touch to change your picture. 3G Friends list b@gmail.com Enter the recipient and message.

In text messages and emails, press Menu for options, like Insert smiley or Attach. on andriod phone Touch to change your status. Opened chats. Touch a callout to open the chat screen and start chatting with your friend. Online status: Available Idle Busy Offline Hi, how are you? Send & receive attachments To send a file in a message, open a new message and press Menu > Attach.

When you receive a message with an attachment, open the message and tap the file name to download it. Then, tap the name again to open it. Some file formats can be converted to HTML for faster viewing, and your phone will show a button that says Get HTML version. Friends list Jen Alfred offline Alvin offline Anson offline Anu Tip: To send and receive large attachments faster, use a Wi-Fi connection. See "Wi-Fi" on page 34. Google Talk™ Google Talk instant messaging lets you chat with other Google Talk users on phones or on the web. Find it: Home > > Talk Press Menu to see a list of your Google Talk friends, send invitations to add new friends, and much more. Instant messages To send and receive instant messages, you can use an instant messaging app (such as Google Talk™) or your browser. 20 Messaging · To download and use an instant messaging app, press Home > Market > Apps > Communication, then choose an app for your provider. Once you download the app, you'll see it on your Applications tab (see "Apps" on page 7).

· If you don't see an app for your IM provider, you can use your Web browser. Press Home > Browser, then enter your provider's Web site and tap Go. Once you're there, follow the link to sign in. Note: Your IM options will depend on your IM provider. To browse instant messaging apps from your computer, go to www.android.com/market. Text entry think keyboard, now think smaller Typing tips To...

Enter alternate characters Enter capital letters Cut or Copy selected text Paste cut or copied text Delete a character (hold to delete a line) Tap Alternate Tap Shift Tap and hold text > Cut or Copy Tap and hold > Paste Tap Delete Voicemail When you have a new voicemail, shows at the top of your screen. To hear the voicemail, tap Phone, then tap and hold . To change text entry settings, change languages and see the dictionary of terms you've used, from the home screen, press Menu > Settings > Language & keyboard. Text entry 21 Touchscreen keypad To open a display keypad, tap a text field. To close the keypad, press Back .

language. Your phone also automatically enters apostrophes in some words, like "don't". Find it: Menu > Settings > Language & keyboard · To change the language and the style for your touchscreen keypad, tap Select locale. · To edit your dictionary, tap User dictionary. · To change the sounds, corrections and other settings for your touchscreen keypad, tap Android keyboard.

Type to compose Send Text Entry Tap to type a message. qwe a s z ?123 r dfx c t y ui k op l ghj v b nm . Delete , Shift Space Symbols/numbers Tap to open a keypad for symbols and numbers. To change your settings for this keypad, from the home screen, press Menu > Settings > Language & keyboard > Android keyboard. Text entry settings When you use the touchscreen keypad, your phone suggests words from your dictionary and chosen 22 Text entry Tips & tricks a few handy hints To... Return to home screen See recently dialled numbers Sleep/wake your phone Set screen timeout Press Home Tap . Battery tips Want to extend your battery life? Try these: · Turn off automatic applications sync: Menu > Settings > Accounts & sync · Turn off Bluetooth power: Menu > Settings > Wireless & networks > Bluetooth · Turn off Wi-Fi: Menu > Settings > Wireless & networks > Wi-Fi · Add a Power control widget: Menu > Widgets > Power control > Add Phone > Call log. Press Power .

Press Menu > Settings > Sound & display > Screen timeout. Set HDMI format Press Menu > Settings > HDMI > HDMI Format > 720P 480P or Automatic. , Press . . Note: The Power control widget is a simple way to enable/disable Wi-Fi, Bluetooth™ wireless, GPS, Sync (turns on/off all active accounts, Google, Exchange and Facebook) and display brightness. Search Show last few apps used Turn sound on/off Turn Flight mode on/off Press and hold Home Press and hold Power > Silent mode. Press and hold Power > Flight mode. Tips & tricks 23 Personalise add your personal touch Wallpaper To apply a new wallpaper:

1 Find an empty spot on your home screen, then tap and hold. 2 Tap Wallpapers. 3 Tap Media gallery to select a photo as your wallpaper or tap Live wallpapers or Wallpaper gallery to choose a wallpaper that comes with your phone.

Widgets To create a new widget: 1 Find an empty spot on your home screen where you want to add a widget, then tap and hold. Tip: You can flick left or right to open other panels on your home screen. 2 Tap Widgets. 3 Tap the type of widget. If necessary, enter the widget settings.

You can personalise widgets with content that you choose. Sounds features set volume for media and videos Menu > Settings > Sound & display > Music/video volume play tones when using dial pad Menu > Settings > Sound & display > Audible touch tones Ringtones To personalise your ringtones: Find it: Menu > Settings > Sound & display > Phone ringtone or Notification ringtone To set your vibrate options: Find it: Menu > Phone vibrate > Settings > Sound & display play sound on screen selection Menu selection > Settings > Sound & display > Audible 24 Personalise Display settings features set display brightness Menu > Settings > Sound & display > Brightness set orientation Menu > Settings > Sound & display > Orientation set animation Menu > Settings > Sound & display > Animation Photos & videos see it, capture it, share it! Photos Take & share photos Take that family photo and post it online for everyone to see. Note: To get the clearest photos, wipe the lens clean with a soft, dry cloth before you take a picture. Find it: Press Camera 829 A Scenes Date & time Set date, time, time zone and formats: Find it: Menu > Settings > Date & time WIDE A Flash Brightness Language & region Set your menu language and region: Find it: Menu > Select locale > Settings > Language & keyboard A Capture Mode A View Note: Photos are stored on your microSD memory card.



[You're reading an excerpt. Click here to read official MOTOROLA MILESTONE XT720 user guide](http://yourpdfguides.com/dref/3213959)
<http://yourpdfguides.com/dref/3213959>

Picture Resolution is 8MP unless you change it.

, To take the photo, press Camera Tap the photo for more options: Photos & videos 25 . To set the photo as a wallpaper or contact photo, tap Set as . To send the photo in a message or post it online, tap Share. For more info on sharing your photos, see "Share your photo gallery" on page 27. To delete the photo, tap Delete. Photo options In the viewfinder, tap: options Scenes Flash Brightness Capture mode View In the viewfinder, press Menu the camera menu: options Face detect Image stabilisation Picture resolution Panorama resolution Review time Web upload address > Settings to open Detect faces stored on your phone. Prevent the camera from shaking when taking a photo. Select the resolution for your photos. Set to 8MP. Choose from 2MP, 1MP and VGA.

Choose from 2 seconds, 4 seconds and 6 seconds. Enter the web site address where you want to upload your photos. Choose from Auto, Portrait, Landscape and more. Choose from Flash on, Flash off and Auto flash. Tap - or + to change the brightness setting. Choose from Camera, Camcorder and more. View your photos in the Camera gallery. 26 Photos & videos View your photos Find it: Home > > Gallery > Camera Categories Tap left or right to open. Camera To send your photo in a message or post it online: 1 Tap and hold a photo, then tap Share. 2 Choose how you want to share--like Bluetooth, Google Mail or Messaging.

Manage your photos Find it: Home > > Gallery > Camera Tap and hold a photo, then: To delete the photo, tap Delete. To set the photo as a contact picture or wallpaper, tap More >Set as. Tip: To copy photos to/from a computer, go to "USB drag & drop" on page 35. Edit your photos Tap left or right to scroll. Thumbnail Tap to view photo.

Press Home > > Gallery > Camera, tap & hold the photo, then tap More > Crop, Rotate left or Rotate right. Play a slideshow Press Home > > Gallery > Camera pictures, tap a picture, then tap Slideshow to start a slideshow. To stop the slideshow, tap the display. To return to the gallery, press Back . Share your photo gallery Find it: Home > > Gallery > Camera Photos & videos 27 Videos Record & share videos Find it: Press 829 Play your videos Find it: Home Camcorder A Scenes > > Gallery > Video > Album A Flash Brightness WIDE A Capture Mode 00:02 -00:00 A View Tip: To send your video in a message, set the video quality to Low (for MMS messages) by pressing Menu > Settings > Video resolution.

To record the video, press video. Press to stop the Video controls Progress bar Note: To see the controls while the video is playing, tap the display. Tap the video for more options: To send the video in a message or post it online, tap Share. For more info on sharing your photos, see "Share your photo gallery" on page 27. To play the video, tap . To delete the video, tap Delete. 28 Photos & videos Music when music is what you need...

Set up music What music transfer tools do I need? To put music on your computer and then load it on your phone, you need: A MicrosoftTM WindowsTM computer or AppleTM MacintoshTM A USB data cable. 11:35 PM Quick start: Music Tap, tap, play--instant music. Just open your music library, then select what you want to play. Find it: Home > > 11:35 PM Music Music You need a memory card Your music is stored on your memory card. Your phone supports removable microSD memory cards up to 32 GB capacity. To make sure your memory card is installed, go to "Assemble & charge" on page 2. Mark Knopfler And Emmylou... Real Live Roadrunning Romeo And Juliet [Live] (Album Version) Tip: To see the available memory on your memory card, press Menu > Settings > SD card & phone storage.

1:14 3:45 halo-beyonce What music file formats can I play? Your phone can play many types of files: AMR-NB/WB, MP3, PCM/WAV, AAC, AAC+, eAAC+, MIDI, OH and WMA. Note: Your phone does not support any DRM protected files. Categories Tap a category, then tap a song or playlist. Music controls Tip: When a song is playing, you can add it to a playlist by pressing Menu > Add to playlist. Music 29 What headphones can I use? Your phone has a 3.

5 mm headset jack for wired stereo listening. You can go wireless with BluetoothTM stereo headphones or speakers (see "BluetoothTM wireless" on page 33). You will not be able to use the files on your memory card while it is connected. 3 Tap Mount (if asked) to connect your memory card. 4 Find "Removable Device" (your memory card) in the "My Computer" window.

5 Drag and drop your music to a folder on your memory card. Tip: To help manage your music, create a "Music" folder on your memory card. 6 When you've finished, use the "Safely Remove Hardware" feature to finish. Get music Transfer music using USB Transfer music files from a computer to your memory card. 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show in the status bar. Note: You may need to remove the USB data cable from the charger power head.

Note: Make sure you connect the phone to a high power USB port. These are usually located on your computer. Note: Your phone supports MicrosoftTM WindowsTM XP Windows VistaTM and AppleTM MacintoshTM.

, Other operating systems may not be compatible. 2 Your phone shows a USB connection icon at the top of the screen. Flick down, then tap USB connection.

30 Music Play music Music library Open your music library, then select what you want to play. Find it: Home > > Music Music player Just tap a song or playlist to get going. 11:35 PM Music 11:35 PM Open playlist Shuffle on/off Categories Tap to list songs or playlists. Mark Knopfler And Emmylou... Real Live Roadrunning Romeo And Juliet [Live] (Album Version) Repeat off/all/ current Artist Album Song title Music controls halo-beyonce 1:14 3:45 Total song time Your music is stored by artists, albums, songs and playlists.

Tap a category, then tap the song or playlist you want to play. Press Menu > Party shuffle to randomly play all your songs. Progress bar Music player controls controls play/pause previous/next fast forward/rewind Tap Tap / / . . / .

Music 31 Tap and hold controls view playlist shuffle repeat volume view library turn shuffle on/off add to playlist use as ringtone delete Hide, wake, turn off Press Home to use another app. Your music will continue to play. When you see in the status bar, a song is playing. Flick down to see details. Tap the song to return to the music controls.



[You're reading an excerpt. Click here to read official MOTOROLA MILESTONE XT720 user guide](http://yourpdfguides.com/dref/3213959)
<http://yourpdfguides.com/dref/3213959>

To turn off your music tap . Tap Tap Tap . . . Playlists To add a song from the music library to a playlist, tap and hold the song then tap Add to playlist. Choose an existing playlist or tap New to create a new playlist. To add a song to the playlist you're playing, press Menu > Add to playlist in the music player. To edit, delete and rename playlists, tap and hold the playlist in the music library. Press the side volume keys. Press Menu Press Menu shuffle.

> Library. > Party > Add to > Use as > Delete. Press Menu playlist. Press Menu ringtone. Press Menu 32 Music Bluetooth™ wireless lose the wires and go wireless Connect new devices Note: This feature requires an optional accessory. To connect with a new device, you need to pair with it. You only need to do this once for each device--to connect again, see "Reconnect devices" on page 33. 1 Make sure the device you are pairing with is in discoverable mode. Note:

Refer to the guide that came with the device for details. 2 Press Menu > Settings > Wireless & networks > Bluetooth settings.

3 Tap Bluetooth to turn on and scan. If Bluetooth is already on, tap Scan for devices. Quick start: Bluetooth wireless Find it: Menu > Settings > Wireless & networks > Bluetooth settings Bluetooth settings Bluetooth Device name (###) 38.4 MHz Class 1.5 Tap to turn on & scan.

Discoverable Make device discoverable Scan for devices Bluetooth devices Tap to re-scan. 4 Tap a device to connect. 5 If necessary, tap OK, or enter the device passkey (like 0000) to connect to the device. When the device is connected, the Bluetooth indicator appears in the status bar. Note: Using a mobile device or accessory while driving may cause distraction and may be illegal.

Always obey the laws and drive safely. (found device name) Pair with this device Tap to connect. Turn Bluetooth power on or off Find it: Press Menu > Settings > Wireless & networks > Bluetooth. Note: To extend battery life, turn Bluetooth power off when not in use. Reconnect devices To reconnect your phone to a paired device automatically, simply turn on the device. Bluetooth™ wireless 33 To manually reconnect your phone with a paired device, tap the device name in the Bluetooth devices list. Wi-Fi home, office or hotspot Disconnect devices To disconnect your phone from a paired device automatically, simply turn off the device. To manually disconnect your phone from a paired device, tap the device name in the devices list, then press Menu > Disconnect.

Quick start: Wi-Fi Find it: Menu > Wi-Fi settings > Settings > Wireless & networks Edit properties To edit the device name, press Menu > Settings > Wireless & networks > Bluetooth settings > Device name. Enter a name and tap OK.

Note: Your phone's Wi-Fi features and power levels are not permitted for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Wi-Fi features in France unless you are indoors. Use a wireless network for fast Internet access and to download data. Wi-Fi settings Wi-Fi

Network notification Notify me when an open network is available Wi-Fi networks Tap to turn on & scan. Your network Tap to connect. Add Wi-Fi network 34

Wi-Fi Turn Wi-Fi on or off Find it: Menu > Wi-Fi. > Settings > Wireless & networks USB & memory card connect your phone and computer, then drag & drop Note: To extend battery life, turn off Wi-Fi power when not in use. USB drag & drop You can transfer your pictures, videos, music, ringtones and more from your computer to your phone's memory card. 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show in the status bar.

Note: You may need to remove the USB data cable from the charger power head. Note: Make sure you connect the phone to a high power USB port. These are usually located directly on your computer. 2 Your phone shows a USB connection icon at the top of the screen. Flick down, then tap USB connection.

You will not be able to use the files on your memory card while it is connected. 3 Tap Mount (if asked) to connect your memory card. 4 On your computer, use the "My Computer" window to find "Removable Disk". USB & memory card 35 Wi-Fi search & connect To find networks in your range: 1 Press Menu >

Settings > Wireless & networks > Wi-Fi settings. 2 Tap Wi-Fi to turn on and scan.

If Wi-Fi is already on, press Menu > Scan. Your phone lists the networks it finds within range. Tip: To see your phone's MAC address or other Wi-Fi details, press Menu > Advanced. 3 Tap a network to connect. 4 If necessary, enter Network SSID, Security and Wireless password and tap Connect. When your phone is connected to the network, the wireless indicator appears in the status bar. Tip: When you are in range and Wi-Fi is on, you will automatically reconnect to available networks you've connected to before. 5 Click on the "Removable Disk" icon to access the memory card. 6 Drag and drop your pictures, videos, music, ringtones and more to your phone folder. To help manage your files, you can create more folders in your phone folder.

7 When you've finished, use the "Safely Remove Hardware" feature to finish. Tools stay on top of things Alarm clock Find it: Home > > Alarm clock To turn on an alarm, tap the tick box. When an alarm sounds, tap Dismiss to turn it off or Snooze to delay. To add an alarm, press Menu > Add alarm, then enter alarm details. To enable or disable an alarm, tap the tick box. Memory card Note: You need the memory card installed for some features on your phone, like Camera. Remove or format your memory card Before you remove or format your memory card you need to unmount it. Press Menu > Settings > SD card & phone storage > Unmount SD card. To format your memory card, tap Format SD card. Warning: All data on your memory card will be deleted.

Calculator Find it: Home > > Calculator Your calculator has basic and advanced views. To change views, press Menu > Advanced panel or Basic panel. 36

Tools Management stay in control Security help keep your phone safe Wireless manager Find it: Menu > Settings > Wireless & networks Manage all your wireless connections: Wi-Fi, Bluetooth™, Flight mode and mobile networks. Quick start: Security Find it: Menu > Settings > Location & security > Phone lock settings Flight mode Use Flight mode to turn all your wireless connections off--useful when flying. Update my phone There may be software updates available to keep your phone up to date.

Press Menu > Settings > About phone > System updates to see if your phone is up to date.



[You're reading an excerpt. Click here to read official MOTOROLA MILESTONE XT720 user guide](http://yourpdfguides.com/dref/3213959)
<http://yourpdfguides.com/dref/3213959>

If it isn't, tap Update. Screen lock Network You should not need to change any network settings. Contact your service provider for help. Press Menu > Settings > Wireless & networks > Mobile networks to show options for roaming networks, network selection, operator selection and access point names. Note: You can make emergency calls on a locked phone (see "Emergency calls" on page 10). A locked phone still rings, but you need to unlock it to answer. Lock the screen in the following ways: · Press Power . · Let the screen time out (don't press anything). · Switch the power off. Management 37 To unlock the screen, press Power Set unlock password or pattern . PUK code To unlock your SIM PIN, you need to enter your PIN unlock code (PUK code) when prompted. Note: Your PUK code is supplied by your service provider. To set an unlock password or a pattern that you need to draw to unlock your screen, press Menu > Settings > Location & security > Phone lock settings, then tap Phone lock type and follow the instructions. To turn the lock off, press Menu > Settings > Location & security > Phone lock settings, tap Phone lock type and tap None.

Forgotten your pattern or passcode? If you forget your pattern or passcode, see your service provider. Lock your SIM To lock your SIM (the next time you power up the phone you will need to enter your SIM PIN), press Menu > Settings > Location & security > Set up SIM card lock > Lock SIM card. Enter your SIM PIN code. Caution: If you enter an incorrect PIN code three times, your phone locks your SIM card and asks for your PIN unlock code. Change SIM PIN To change your SIM PIN, press Menu > Settings > Location & security > Set up SIM card lock > Change SIM PIN. 38 Security Troubleshooting We're here to help Crash recovery In the unlikely event that your phone stops responding to taps and key presses, try a quick reset. Remove the back cover and battery ("Assemble & charge" on page 2), then replace them and switch your phone on as usual. @@@@ Water can get into the phone's circuits, leading to corrosion. @@@@ Don't place your battery near a heat source. Excessive heat can damage the phone or the battery. @@@@ Motorola mobile devices are designed to work with Motorola batteries. @@@@ Additional information on proper disposal and recycling may be found on the Web: · www.motorola.com/recycling · www.rbr.org/call2recycle/ (in English only) Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling centre or national recycling organisations for more information on how to dispose of batteries. Warning: Never dispose of batteries in a fire because they may explode. 032375o 40 Battery Charging Notes for charging your phone's battery: · When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging. · New batteries are not fully charged. · New batteries or batteries stored for a long time may take more time to charge. · Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging. Battery Charging Specific Absorption Rate (ICNIRP) SAR (ICNIRP) differences in the SAR value for later products; in all cases, products are designed to be within the guidelines. The World Health Organisation has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure, then you can do so by limiting the length of calls or using a hands-free device to keep the mobile device away from the head and body. Additional information can be found on the Web sites of the World Health Organisation (<http://www.who.int/emf>) and Motorola, Inc. (<http://www.motorola.com/rfhealth>).

Your model wireless phone meets international guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health, and to account for any variations in measurements. The guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). The ICNIRP SAR limit for mobile devices used by the general public is 2 watts per kilogram (W/kg) and the highest SAR value for this mobile device when tested at the ear is 0.6 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this guide. In this case, the highest tested SAR value is 0.75 W/kg. The tests are carried out in accordance with international guidelines for testing. The SAR information includes the Motorola testing protocol, assessment procedure and measurement uncertainty range for this product. As SAR is measured utilising the mobile device's highest transmitting power, the actual SAR of this mobile device while operating is typically below that indicated above. This is due to automatic changes to the power level of the mobile device to ensure it only uses the minimum level required to reach the network. While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause European Union Directives Conformance Statement EU Conformance [Only Indoor Use Allowed In France] Hereby, Motorola declares that this product is in compliance with: · The essential requirements and other relevant provisions of Directive 1999/5/EC · All other relevant EU Directives 0168 Product Approval Number The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rte. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site. 41 Software Copyright Notice Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed or reproduced in any manner to the extent allowed by law.



[You're reading an excerpt. Click here to read official MOTOROLA MILESTONE XT720 user guide](http://yourpdfguides.com/dref/3213959)
<http://yourpdfguides.com/dref/3213959>

Furthermore, the purchase of Motorola products shall not be deemed to grant, either directly or by implication or estoppel or otherwise, any licence under the copyrights, patents or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product. Software Copyright Notice The Motorola Web site opensource.motorola.com also contains information regarding Motorola's use of open source. Motorola has created the opensource.

motorola.com website to serve as a portal for interaction with the software community-at-large. To view additional information regarding licences, acknowledgments and required copyright notices for open source packages used in this Motorola phone, please press Menu Key > Settings > About Phone > Legal information > Open source licences. In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications. GPS & AGPS Your mobile device can use Global Positioning System (GPS) signals for location-based applications. GPS uses satellites controlled by the U.S. government that are subject to changes implemented in accordance with the Department of Defense policy and the Federal Radio Navigation Plan. These changes may affect the performance of location technology on your mobile device. Your mobile device can also use Assisted Global Positioning System (AGPS), which obtains information from the mobile network to improve GPS performance.

AGPS uses your wireless service provider's network and therefore airtime, data charges and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details. GPS & AGPS Content Copyright The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Content Copyright Open source software information For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, you may send your request in writing to the address below. Please make sure that the request includes the model number and the software version number. MOTOROLA, INC. OSS Management 600 North US Hwy 45 Libertyville, IL 60048 USA OSS Information Your Location Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones that are connected to a wireless network transmit location-based information.

Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola and other third parties providing services. 42 Emergency Calls When you make an emergency call, the mobile network may activate the AGPS technology in your mobile device to tell the emergency responders your approximate location. AGPS has limitations and might not work in your area. Therefore: · Always tell the emergency responder your location to the best of your ability; and · Remain on the phone for as long as the emergency responder instructs you. Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy. Operational Precautions For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

Performance Tips · Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals. · Move away from radios, entertainment equipment and other electronic devices. Product Operation When placing or receiving a phone call, hold your mobile device just like you would a landline phone. If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimetres (1 inch) from your body when transmitting. Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

Navigation Motorola strives to provide complete and accurate mapping information, directions and other navigational data, using a combination of governmental and private location information sources. These sources may contain inaccurate or incomplete data. In some countries, complete information may not be available. Therefore, you should visually confirm that the navigational instructions are consistent with what you see.

All drivers should pay attention to road conditions, closures, traffic and all other factors that may impact driving. Always obey posted road signs. Navigation RF Energy Interference/Compatibility Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices. Safety & General Information This section contains important information on the safe and efficient operation of your mobile device.

Read this information before using your mobile device. Safety Information Follow Instructions to Avoid Interference Problems Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an aeroplane mode or similar feature, consult airline staff about using it in-flight. Exposure to Radio Frequency (RF) Energy Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate using your mobile device, the system handling your call controls the power level at which your mobile device transmits. Implantable Medical Devices If you have an implantable medical device, such as a pacemaker or defibrillator, consult your doctor before using this mobile device.



[You're reading an excerpt. Click here to read official MOTOROLA MILESTONE XT720 user guide](http://yourpdfguides.com/dref/3213959)
<http://yourpdfguides.com/dref/3213959>

43 Persons with implantable medical devices should observe the following precautions: · ALWAYS keep the mobile device more than 20 centimetres (8 inches) from the implantable medical device when the mobile device is turned ON. · DO NOT carry the mobile device in the breast pocket.

· Use the ear opposite the implantable medical device to minimise the potential for interference. · Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place. Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your health care provider. Symbol Key Your battery, charger or mobile device may contain symbols, defined as follows: Symbol 032374o Definition Important safety information follows. Do not dispose of your battery or mobile device in a fire. 032376o Driving Precautions Using a mobile device while driving may cause distraction. End a call if you can't concentrate on driving. Enter information about your destination and route prior to your drive. Do not input data or engage in text messaging while driving.

Keep your eyes on the road while driving. Listen to the audible turn-by-turn directions, if available. Also, using a mobile device or accessory may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products. Responsible driving practices can be found at www.motorola.com/callsmart (in English only).

032375o Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information. Do not dispose of your battery or mobile device with normal household waste.

Do not let your battery, charger or mobile device get wet. Listening at full volume to music or voice through a headset may damage your hearing. Operational Warnings Obey all posted signs when using mobile devices in public areas. Potentially Explosive Atmospheres Areas with potentially explosive atmospheres are often, but not always, posted and can include fuelling areas, such as below decks on boats, fuel or chemical transfer or storage facilities or areas where the air contains chemicals or particles, such as grain dust or metal powders. When you are in such an area, turn off your mobile device and do not remove, install or charge batteries. In such areas, sparks can occur and cause an explosion or fire. Batteries & Chargers Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage or other hazard. For more information, see "Battery Use & Safety". 44 Keep your mobile device & its accessories away from small children These products are not toys and may be hazardous to small children. For example: · A choking hazard may exist for small, detachable parts.

· Improper use could result in loud sounds, possibly causing hearing injury. · Improperly handled batteries could overheat and cause a burn. If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked. For more information about hearing, see our website at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only). Glass Parts Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove.

Stop using your mobile device until the glass is replaced by a qualified service centre. Repetitive Motion When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a doctor. [Nov0109] Seizures/Blackouts Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts or if you have a family history of such occurrences, please consult your doctor before playing video games or enabling a flashing-lights feature (if available) on your mobile device. Discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour and stop use if you are tired. Caution About High Volume Usage Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected.

To protect your hearing: · Limit the amount of time you use headsets or headphones at high volume. · Avoid turning up the volume to block out noisy surroundings. · Turn the volume down if you can't hear people speaking near you. 45 FCC Notice to Users The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label. Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3). This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna.

· Increase the separation between the equipment and the receiver.



[You're reading an excerpt. Click here to read official MOTOROLA MILESTONE XT720 user guide](http://yourpdfguides.com/dref/3213959)
<http://yourpdfguides.com/dref/3213959>