




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MOTOROLA W360. You'll find the answers to all your questions on the MOTOROLA W360 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MOTOROLA W360
User guide MOTOROLA W360
Operating instructions MOTOROLA W360
Instructions for use MOTOROLA W360
Instruction manual MOTOROLA W360

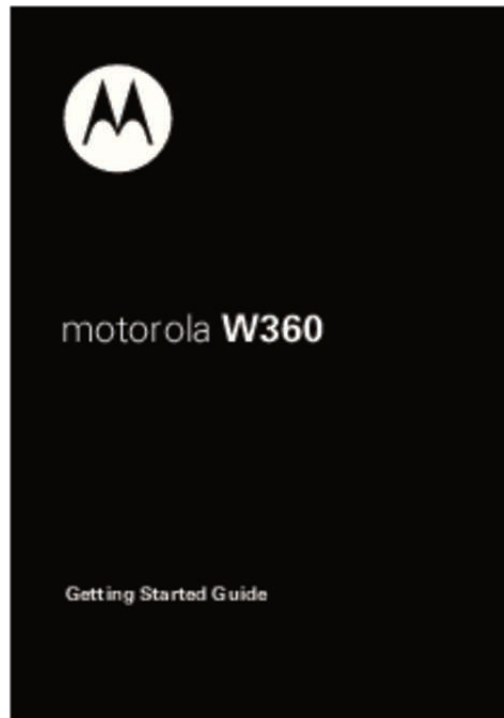

[You're reading an excerpt. Click here to read official MOTOROLA W360 user guide](http://yourpdfguides.com/dref/5466035)
<http://yourpdfguides.com/dref/5466035>

Manual abstract:

@@However, all key locations, sequences, and functions are the same. @@@@Plug the battery charger into your phone and an electrical outlet. Your phone may take several seconds to start charging the battery. @@When charging is complete, the battery indicator stops flashing, and your display shows Battery Full. For tips on battery life and charging, see the Battery Tips section of this guide. Get started turn phone on & off Press and hold O for a few seconds, or until the display turns on or off. Make a call Enter a phone number and press N. Answer a call When your phone rings and/or vibrates, press N. end a call Press O. Basics menus Press the center key s to open the Main Menu.

Press the navigation key S up, down, right, or left to highlight a menu option. Press the center key s or SELECT to select the highlighted option. Basics emergency calls To call the emergency number: Press keypad keys to enter the emergency number, then press N to call it. Your service provider programs one or more emergency phone numbers (such as 112 or 911) that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted. note: Emergency numbers vary by country.

Your phone's preprogrammed emergency number(s) may not work in all locations. Sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Basics voicemail Find it: s > e Messages > Voicemail recent calls Find it: s > s Recent Calls Shortcut: Press N from the home screen to see a list of dialed calls. Lock/unlock your keypad Find it: s > * basics status indicators Status indicators show at the top of the home screen: Signal Strength GPRS Active WAP Active Roaming Active + Service Provider Battery Level Ring Style New Message Ph. book 12:00 Message Active Line basics menu map n s e Phonebook Recent Calls Messages • Create Message • Message Inbox • Outbox • Drafts • Voicemail * • Browser Msgs * • Quick Notes • MMS Templates Tools • Calculator • Calendar • Shortcuts • Chat * • SIM Toolkit * • Lantern Games & Apps WebAccess • Browser • Web Shortcuts • Go to URL • History • Web Sessions • Web Settings h Multimedia • Camera • Pictures • Sounds • Radio • Voice Notes Alarm Clock Settings • Personalize • USB • Ring Styles • Call Forward * • In-Call Setup • Headset & Car Setting • Initial Setup • Auto Power Off • Phone Status • Security • Network • Lantern A w É Q á *Optional features.

This is the standard main menu layout. Your phone's menu may be a little different. Customize change ring To change ring volume: Find it: s > w Settings > Ring Styles > Style Detail > Ring Volume Press S up or down to raise or lower ringer volume, then press Ok. (You can't change the volume for the Silent or Vibrating style.) To change ring style: Find it: s > w Settings > Ring Styles > Styles Scroll to the style you want and press Select: y Loud Ring | Vibrating † Vibe and Ring z Soft Ring Ò Silent customize set phone to vibrate Find it: s > w Settings > Ring Styles > Style Scroll to Vibrating and press Select. Press Back to return to the previous menu. To save battery life, a shorter backlight display time should be chosen. TIP audio player play music Find it: s > h Multimedia > Sounds Press s to select the file you want to play. Play stop forward back exit audio player Press S up. Images take a photo Find it: s > h Multimedia > Camera Your phone displays the viewfinder: Timer Press s center key to take the picture.

Press S up or down to view camera settings. Note: Press h Multimedia > Pictures to see your stored pictures and photos. FM radio using the FM radio You can quickly turn on your radio by pressing on the keypad. Note: The headset must be inserted into the phone for the FM radio to function. If you try to turn it on without inserting the earpiece, your phone will display Please Insert The Earpiece. The FM radio will automatically tune into the lowest available frequency when you use it for the first time. To turn the radio off, press FM Radio or unplug the headset. Find it: s > h Multimedia > FM Radio phonebook store phonebook entry Enter a phone number from the home screen. press Store. Enter name for new phonebook entry.

press Save to store the entry. Call phonebook entry Find it: s > n Phonebook Scroll to the entry you want to call and press N. text messages send a text message Find it: s > e Messages > Create Message > New Short Msg Type the message. To insert a picture or sound press Options > Insert. Or Press Options and select New Number to enter a new phone number.

press Send to send the message. USB drag/drop USB drag and drop accessing phone's USB memory: Direct the USB connection to your phone's USB memory. Find it: s > w Settings > USB > USB Disk Connect your phone to the PC using a mini-USB cable. Your PC will show the phone's USB memory as "Removable Disk". click on "Removable Disk" to access files stored in the phone's USB memory.

To copy files, drag and drop them as follows: MP3/AAC files: > Storage > Melody Wallpapers: > Storage > Picture Battery Use & Battery Safety • Motorola recommends you always use Motorola-branded batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers. Caution: Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard. Improper battery use, or use of a damaged battery, may result in a fire, explosion, or other hazard. • Battery usage by children should be supervised. □ Important: Motorola mobile devices are designed to work best with qualified batteries. If you see a message on your display such as Invalid Battery or Unable to Charge, take the following steps: • Remove the battery and inspect it to confirm that it bears a Motorola "Original Equipment" hologram; • If there is no hologram, the battery is not a qualified battery; • If there is a hologram, replace the battery and retry charging it; • If the message remains, contact a Motorola Authorized Service Center. □ New batteries or batteries stored for a long time may take more time to charge. □ Charging precautions: When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.

Always take your mobile device with you when you leave your vehicle. □ When storing your battery, keep it in a cool, dry place. □ It is normal over time for battery life to decrease, and for the battery to exhibit shorter runtime between charges or require more frequent or longer charging times.



[You're reading an excerpt. Click here to read official MOTOROLA W360 user guide](http://yourpdfguides.com/dref/5466035)
<http://yourpdfguides.com/dref/5466035>

• Avoid damage to battery and mobile device. Do not disassemble, open, crush, bend, deform, puncture, shred, or submerge the battery or mobile device. avoid dropping the battery or mobile device, especially on a hard surface. If your battery or mobile device has been subjected to such damage, take it to a Motorola Authorized Service Center before using. Do not attempt to dry it with an appliance or heat source, such as a hair dryer or microwave oven. □ Use care when handling a charged battery—particularly when placing it inside a pocket, purse, or other container with metal objects. Contact with metal objects (such as jewelry, keys, beaded chains) could complete an electrical circuit (short circuit), causing the battery to become very hot, which could cause damage or injury.

Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center for proper battery disposal. warning: Never dispose of batteries in a fire because they may explode. Before using your phone, read the battery safety information in the “Safety and General Information” section. Com Certain mobile phone features are dependent on the capabilities and settings of your service provider’s network.

Additionally, certain features may not be activated by your service provider, and/or the provider’s network settings may limit the feature’s functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user’s guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation. MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office.

All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user’s authority to operate the equipment. Service & repairs If you have questions or need assistance, we’re here to help. Com/consumer/support, where you can select from a number of customer care options. Specific Absorption Rate Data This model meets international guidelines for exposure to radio waves. your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR.

The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0. 46 W/kg. 1 As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide. 2 In this case, the highest tested SAR value is 0. 57 W/kg. 1 As SAR is measured utilizing the device’s highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network. While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines. The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices.

They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a “hands-free” device to keep the mobile phone away from the head and body. @@@@ 2. @@@@ Safety and General Informatnue a call if you can’t concentrate on driving. • Use handsfree operation, if available. @ Do not place a mobile device in the airbag deployment area.

@ Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can’t concentrate on driving. @ Always obey the laws and regulations on the use of these products. @@@@ in such areas, sparks can occur and cause an explosion or fire. @ Do not dispose of your battery or mobile device in a fire.

@ Contact your local regulatory authorities for more information. Do not throw your battery or mobile device in the trash. @ Do not let your battery, charger, or mobile device get wet. @@@@ choking Hazards a choking hazard to small children. Keep your mobile device and its accessories away from small children. Glass Parts Some parts of your mobile device may be made of glass. @ if glass breaks, do not touch or attempt to remove.

@ Seizures/Blackouts Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired. Caution About High Volume Usage Listening at full volume to music or voice through a headset may damage your hearing. Repetitive Motion When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician. FCC Notice to Users The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxx on the product label. Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user’s authority to operate the equipment. This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



[You're reading an excerpt. Click here to read official MOTOROLA](#)

[W360 user guide](#)

<http://yourpdfguides.com/dref/5466035>

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Hearing Aid Compatibility with Mobile Phones Some Motorola phones are measured for compatibility with hearing aids.

If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies. When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings. T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device’s telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.) Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones. Information from the World Health Organization Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children’s RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

/peh-emf Caring for the Environment by Recycling When you see this symbol on a Motorola product, do not dispose the product with household waste. Disposal of your Mobile Device and Accessories Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling Disposal of your Mobile Device Packaging and User’s Guide Product packaging and user’s guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details. Privacy and Data Security Privacy and Data Security Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information: • Monitor access—Keep your mobile device with you and do not leave it where others may have unmonitored access.

Lock your device’s keypad where this feature is available. Keep software up to date—If Motorola or a software/application vendor releases a patch or software fix for your mobile device which updates the device’s security, install it as soon as possible. Erase before recycling—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device, see the section entitled “master clear” or “delete data” in this user’s guide. Note: For information on backing up your mobile device data before erasing it, go to www.motorola.com and then navigate to the “downloads” section of the consumer Web page for “Motorola Backup” or “Motorola Phone Tools. @@@@ com , or contact your service provider. Smart Practices While Driving Drive Safe, Call Smart SM Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. always obey them.

The use of these devices may be prohibited or restricted in certain areas. Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips: • Get to know your Motorola mobile device and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road. • When available , use a handsfree device. If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today. Position your mobile device within easy reach. Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.



[You're reading an excerpt. Click here to read official MOTOROLA W360 user guide](http://yourpdfguides.com/dref/5466035)
<http://yourpdfguides.com/dref/5466035>

Rain, sleet, snow, ice, and even heavy traffic can be hazardous. □ Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely. □ Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.

If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue. □ Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road. □ Use your mobile device to call for help. Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.

* • Use your mobile device to help others in emergencies. If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you. * • Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number. Hal ini disebabkan oleh perubahan otomatis pada level daya perangkat tersebut untuk memastikan perangkat tersebut menggunakan level minimum yang diperlukan untuk menjangkau jaringan. Lingkungan yang Mudah Menimbulkan Bahaya Ledakan Di area yang berpotensi menimbulkan ledakan tidak selalu terdapat tanda peringatan, misalnya seperti di area pengisian bahan bakar, di bawah dek kapal motor, di lokasi penyimpanan atau pengiriman bahan bakar atau bahan kimia, atau di area dengan udara sekitar yang mengandung partikel atau bahan kimia, seperti butiran, debu, atau serbuk logam. .



[You're reading an excerpt. Click here to read official MOTOROLA](http://yourpdfguides.com/dref/5466035)

[W360 user guide](http://yourpdfguides.com/dref/5466035)

<http://yourpdfguides.com/dref/5466035>