



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for OLYMPUS VG-130. You'll find the answers to all your questions on the OLYMPUS VG-130 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual OLYMPUS VG-130
User guide OLYMPUS VG-130
Operating instructions OLYMPUS VG-130
Instructions for use OLYMPUS VG-130
Instruction manual OLYMPUS VG-130

OLYMPUS®


DIGITAL CAMERA

VG-140/D-715

VG-130/D-710

VG-120/D-705

Instruction Manual

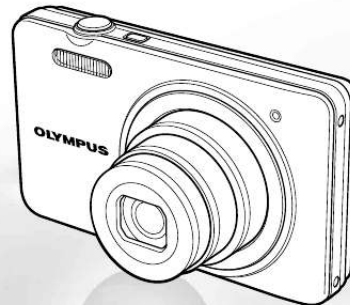

- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- In the interest of continually improving our products, Olympus reserves the right to update or modify information contained in this manual.
- The screen and camera illustrations shown in this manual were produced during the development stages and may differ from the actual product. Unless otherwise specified, the explanation about these illustrations is provided for VG-140/D-715.



[You're reading an excerpt. Click here to read official OLYMPUS VG-130 user guide](http://yourpdfguides.com/dref/3828403)

<http://yourpdfguides.com/dref/3828403>

Manual abstract:

@@@ The screen and camera illustrations shown in this manual were produced during the development stages and may differ from the actual product. Unless otherwise specified, the explanation about these illustrations is provided for VG-140/D-715. Step 1 Checking the contents of the box or Digital camera Strap LI-70B Lithium Ion Battery F-2AC USB-AC adapter USB cable AV cable Other accessories not shown: warranty card Contents may vary depending on purchase location. OLYMPUS Setup CD-ROM Step 2 4 Preparing the Camera Step 3 5 Shooting and Playing Back Images "Preparing the Camera" (p. 12) "Shooting, Viewing, and Erasing" (p. 19) Step How to Use the Camera Step Printing "Camera Settings" (p. 3) "Direct printing (PictBridge)" (p. 47) "Print Reservations (DPOF)" (p. 51) Contents Names of Parts ..

.....
.....
.....

..... 8 Preparing the Camera

.....
.....
.....

..... 12 Shooting, Viewing, and Erasing .

.....
.....
.....

. 19 Using Shooting Modes

.....
.....
.....

... 26 Using Shooting Functions ..

.....
.....
.....

.... 30 Menus for Shooting Functions .

.....
.....
.....

... 34 Menus for Playback, Editing, and Printing Functions

.....
.....
.....

.....
.....
.....

..... 38 Menus for Other Camera Settings ...

.....
.....
.....

. 41 Printing....

.....
.....
.....

.....
.....
.....

..... 47 Usage Tips .

.....
.....
.....

.....
.....
.....

. 54 Appendix

.....
.....
.....

.....
.....
.....

..... 59 2 EN Camera Settings Using the Direct Buttons Frequently used functions can be accessed using the direct buttons. Shutter button (p. 20) Zoom buttons (p. 21) R button (shooting movies) (p.

20) q button (switch between shooting and playback) (p. 20, 22) M E button (menu guide) (p. 25) Arrow pad F (up) / INFO button (change information display) (p. 22, 25) The symbols FGHI displayed for image selections and settings indicate that the arrow pad is to be used. X Y MD Time 2011 . 02 . 26 12 : 30 Y/M/D H (left) I (right) Cancel MENU Set OK 4/30 Q button (p. 17) G (down) / D button (erase) (p. 24) Single Print NORM 14M FILE 100 0004 '11/02/26 12:30 Print OK More EN 3 Using the Menu Use the menu to change camera settings such as the shooting mode.

There may be menus that are unavailable depending on other related settings or the s mode (p. 26). Function menu Press H during shooting to display the function menu. The function menu is used to choose the shooting mode and provides access to frequently used shooting settings. Shooting mode Selected option Program Auto P 0.

0 WB AUTO ISO AUTO P Function menu 4 14M Shooting Setup menu (p. 5) To select the shooting mode Use HI to select a shooting mode and press the Q button. To select the function menu Use FG to select a menu and use HI to select a menu option. Press the Q button to set the function menu. 4 EN Setup menu Press the m button during shooting or playback to display the setup menu.

The setup menu provides access to a variety of camera settings, including options not listed in the function menu, display options, and the time and date. 1 Press the m button. The setup menu is displayed. 1 2 4 14M Normal Face/iESP Off On On Set OK Reset Image Size Compression AF Mode Digital Zoom AF Illuminat. Icon Guide Use FG to select the desired submenu 2 and then press the Q button. Once a setting is selected, the display returns to the previous screen. There may be additional operations. "Menu Settings" (p. 34 to 46) 1 2 1 2 Pixel Mapping Video Out Power Save Bright NTSC On English Exit MENU 2 Press H to highlight the page tabs. Use FG to select the desired page tab and press I.

Submenu 1 1 1 2 World Time Exit MENU Set OK Page tab 1 2 Pixel Mapping Video Out Power Save Bright NTSC Off English Pixel Mapping Video Out Power Save Bright NTSC Off English 5 2 Press the m button to complete the setting. 1 2 1 2 World Time Exit MENU Set OK World Time Exit MENU Set OK 3 1 2 Use FG to select the desired submenu 1 and then press the Q button. Submenu 2 Pixel Mapping Video Out Power Save Bright NTSC Off English 1 2 1 2 1 2 Pixel Mapping Power Save Bright Video Out NTSC Off Power Save Off On W English World Time World Time Exit MENU Set OK Back MENU Set OK EN 5 Menu Index Menus for Shooting Functions Program Auto P 0.0 WB AUTO ISO AUTO 1 2 3 4 5 6 7 8 9 1 2 Reset Image Size Compression AF Mode Digital Zoom AF Illuminat. Icon Guide 14M Normal Face/iESP Off On On Set OK 1 2 Image Size Frame Rate VGA 30fps On 1 2 1 2 Exit MENU Exit MENU Set OK 4 14M 1 Shooting mode P (Program Auto)

.....
.....p. 19 M (iAUTO) ..
.....

.....p. 26 N (DIS Mode) ..

.....p. 26 s (Scene Mode)

.....p. 26 P (Magic Filter)

.....p. 28 ~ (Panorama).....

.....p. 29 2 Flash.....

.....p. 30 3 Macro .

.....p. 30 4 Self-timer

.....p. 31 *1 5 6 7 8 9 Exposure compensation ..

.....p. 31 White balance...

.....
.....

.p. 32 ISO

.....
.....
.....

.....p. 32 Drive ..

.....
.....
.....

.p. 33 # (Setup) p (Shooting menu 1) Reset ...

.....
.....

.....p.
34 Image Size

.....p. 34 Compression .

.....
.....p.

34 AF Mode

.....p. 35 Digital Zoom ..

....p. 36 AF Illuminat.*I....

.p. 36 Icon Guide ...

.....
.....

.p. 37 q (Shooting menu 2) Date Stamp

.....
.....p.
37 A (Movie menu) Image Size

.....p. 35 Frame Rate .

.....p. 35 R (Movie sound recording) ...

p. 36 VG-140/D-715 and VG-130/D-710 only 6 EN Menus for Playback, Editing, and Printing Functions 1 2 1 1 2 Slideshow Edit Erase Print Order ? y Set
OK 1 q (Playback menu) Slideshow

..... p. 38 Edit ..

.....
.....
.....

... p. 38, 39 Erase

.....
.....
.....

.. p. 39 Print Order

.....
.....

... p. 40 ? (Protect)

.....
.... p.
40 y (Rotate).....
.....

..... p. 40 Exit MENU Menus for Other Camera Settings 1 2 1 2 1 2 Format Backup USB Connection q Power On Keep K Settings Pw On Setup Sound Settings
Storage Yes Yes On Set OK Exit MENU 1 r (Settings 1) Memory Format/ Format

.....
.....
.....

.. p. 41 Backup

.....
.....

..... p. 41 USB Connection .

.....
p. 41 q Power On

..... p. 42 Keep K Settings ...

..... p. 42 Pw On Setup ...

.....
.....

... p. 42 Sound Settings

..... p. 43 2 s (Settings 2) Pixel Mapping ..

.....
.....

... p. 43 s (Monitor)

.....
p. 43 Video Out....

.....
.....

... p. 44 Power Save

.....
.....

.. p. 45 W (Language).....

..... p. 45 X (Date/time)

.....
.... p.

45 World Time

..... p.
46 EN 7 Names of Parts Camera unit 1 2 3 5 6 7 1 Multi-connector 2 Connector cover

.....
..... p. 14, 16, 44, 47 .

.....
.....
.. p. 14, 16, 44, 47 3 Strap eyelet ..

..... p. 9 4 Battery/card compartment 5 Flash.

.....
.....
.....

..... p. 30 6 Self-timer lamp .

.....
.....

.. p. 31 cover

.....

.....
.....
p. 12 8 9 4 10 7 Lens.....

.....
.....
p. 59, 73 8 Microphone....
..... p.

36, 38 9 Speaker 10 Tripod socket AF illuminator*1
... p. 36 *1 VG-140/D-715 and VG-130/D-710 only 8 EN 1 2 4 5 6 7 8 9 10 11 1 2 3 4 5 6 3 n button .

.....
.. p. 17, 19 Shutter button

..... p. 20 Monitor .

.....
.....
..... p. 19, 54 Zoom buttons .

.....
... p.
21 Indicator lamp
.... p. 14, 16 R button (shooting movies)

.. p. 20 7 q button (switch between shooting and playback)

p. 20, 22 8 Q button (OK)....

.....
. p. 4, 17 9 Arrow pad

.....
.....
p. 3 INFO button (change information display)
.....

... p. 22, 25 D button (erase)

..... p.
24 10 E button (menu guide)

.....
.....
.....
. p. 25 11 m button

p. 5 Attaching the camera strap Pull the strap tight so that it does not come loose. EN 9 Monitor Shooting mode display 1 22 21 20 19 18 17 2 P 0.0 P 0:34
WB AUTO ISO AUTO VGA 4 14M NORM z DATE # 3 4 5 6 7 8 9 10 1 Battery check..

.....
..... p.

16 2 Shooting mode p. 19, 26 3 Flash..

.....
.....
.....
..... p. 30 Flash standby/flash charge ..

.....
..... p.
54 4 Macro

.....
.. p. 30 5 Self-timer ..

.....

.....

..... p. 31 6 Exposure compensation

.....

.....

.....

.....

.. p. 31 7 White balance.



[You're reading an excerpt. Click here to read official OLYMPUS VG-130 user guide](http://yourpdfguides.com/dref/3828403)
<http://yourpdfguides.com/dref/3828403>

.
.....
..... p. 32 8 ISO .

.....
.....
.....
.....

p. 32 9 Drive

.....
.....
.....

p. 33 10 Setup menu

.....
.....

. p. 5 11 Recording with sound (movies)

.....
... p.

36 12 Date stamp

.....

... p. 37 13 World time

.....
.....

..... p. 46 14 Compression 15 Image size (still images)...

.....
.. p. 34 (still images)..

.....
..... p.

34 (still images).....

.....

. p. 19 16 Number of storable pictures 17 Current memory ...

..... p. 61 18 Movie recording icon .

... p. 20 19 Continuous recording length 20 Image size 16 15 14 13 12 11 1/100 F2.8 (movies)

.....
.....

..... p. 20 (movies) ..

.....
.....

p. 35 24 23 21 AF target mark.....

..... p. 20 22 Camera shake warning 23 Aperture value

.....
.....

p. 20 24 Shutter speed

..... p. 20 10 EN Playback mode display Normal display 1 234 10 56 4/30 1 6 1 Battery check...

.....
.....

... p. 16 2 Print reservation/number of prints

.....
...p. 51/p.

49 Protect

.....

. p. 40 Adding sound ...

.....

..... p. 38 Current memory ..

..... p.

61 Frame number/ total number of images (still images)....

.....

..... p. 22 Elapsed time/ total recording time (movies) ...

.....

.....

.... p.

23 7 Shooting mode p. 19, 26 8 Shutter speed ..

.....

... p. 20 9 Aperture value .

.....

..... p. 20 10 ISO .

.....

.....

.....

.....

p. 32 11 Exposure compensation

.....

.....

.....

..... p. 31 12 White balance..

.....

.....

... p. 32 13 Image size

..... p. 34, 35 14 File number 15 Date and time .

.....

.....

.... p. 17 16 Compression (still images)....

.....

. p. 34 Frame rate (movies) ...

.....

.....

.... p. 35 17 Volume

.....

.....

.....

p. 43 3 4 5 6 17 '11/02/26 12:30 15 Movie 00:12/00:34 Still image Detailed display 1 234 10 56 4/30 7 8 9 10 11 1/1000 F2.8 2.0 12 13 14 15 P 1/1000 F2.8 2.0 ISO WB 100 AUTO P ISO WB 100 AUTO NORM 14M FILE 100 0004 '11/02/26 12:30 NORM 14M FILE 100 0004 '11/02/26 12:30 16 EN 11 Preparing the Camera Inserting the battery and the SD/SDHC memory card (sold separately) Always use SD/SDHC memory cards with this camera. Do not insert any other types of memory card. Insert the battery with the C symbol on the same side as the battery lock knob. Damage to the battery exterior (scratches, etc.) may produce heat or an explosion.

Insert the battery while sliding the battery lock knob in the direction of the arrow. Slide the battery lock knob in the direction of the arrow to unlock, and then remove the battery. Battery/card compartment cover 1 1 2 Turn off the camera before opening the battery/card compartment cover. When using the camera, be sure to close the battery/ card compartment cover. Insert the card straight until it clicks into place.

Do not touch the contact area directly. 2 Battery lock knob 3 2 1 Write-protect switch This camera allows the user to take pictures using the internal memory even when no SD/SDHC memory card (sold separately) is inserted. "Using an SD/SDHC memory card" (p. 60) "Number of storable pictures (still images)/Continuous recording length (movies) in the internal memory and SD/SDHC memory cards" (p. 62) 12 EN To remove the SD/SDHC memory card Windows 1 2 1 Insert the supplied CD in a CD-ROM drive.

Wino 1.5 GHz or better 1 GB or more (2 GB or more recommended) 1 GB or more 1024 × 768 pixels or more Minimum 32,000 colors (16,770,000 colors recommended) * Other languages can be selected from the language combo box. For information on using the software, see online help. 3 Copy the camera manual. Click the "Camera Instruction Manual" button to open the folder containing the camera manuals. Copy the manual for your language to the computer. EN 15 Charging the battery with the supplied USB-AC adapter The included F-2AC USB-AC adapter (hereafter referred to as USB-AC adapter) differs depending on the region where you purchased the camera. The supplied USB-AC adapter is for charging and playback only. Do not take pictures while the USB-AC adapter is connected to the camera. The camera cannot playback without the battery even when connected to the USB-AC adapter.

2 Indicator lamp On: Charging Off: Charged The battery is not fully charged at the time of purchase. Before use, be sure to charge the battery until the

indicator lamp turns off (up to 3 hours). If the indicator lamp does not light, the camera is not correctly connected or the battery, camera, or USBAC adapter may not be functioning as expected. For details on the battery and the USB-AC adapter, see "The battery and USB-AC adapter" (p. 59). The battery can be charged while the camera is connected to the computer. Charging time varies depending on the performance of a computer. (There may be cases in which it takes approx. 10 hours.) 1 USB cable (supplied) USB connector USB connector When to charge the batteries Charge the battery when the error message shown below appears.

Multiconnector Multiconnector Flashes in red Connector cover Connector cover Battery Empty AC outlet AC outlet 4 14M Monitor top left Error message 16 EN Operation guide Operation guides displayed at the bottom of the screen indicate that the m button, Q button, or zoom buttons should be used. 1 2 Date, time, time zone, and language The date and time set here are saved to image file names, date prints, and other data. You can also choose the language for the menus and messages displayed in the monitor. Reset Image Size Compression AF Mode Digital Zoom AF Illuminat. Icon Guide 14M Normal Face/iESP Off On On Set OK 1 Sel.

Image 1 2 Press the n button to turn on the camera. The date and time setting screen is displayed when the date and time are not set. X Y MD Time Exit MENU Set OK ---- . -- . ---- : -OK Y/M/D Erase/Cancel MENU Operation guide Cancel MENU Date and time setting screen 2 Use FG to select the year for [Y].

X Y MD Time 2011 . -- . ---- : -- Y/M/D Cancel MENU EN 17 3 Press I to save the setting for [Y]. X Y MD Time 2011 . -- . ---- : -- Y/M/D Cancel MENU 4 As in Steps 2 and 3, use FGHI and the Q button to set [M] (month), [D] (day), [Time] (hours and minutes), and [Y/M/D] (date order). For a more accurate setting, press the Q button when the time signal hits 00 seconds while setting the minutes. The menus can be used to change the selected date and time. [X] (Date/time) (p. 45) 5 Use HI to select your home time zone and press the Q button.

Use FG to turn daylight saving time ([Summer]) on or off. '11.02.26.12:30 Seoul Tokyo Summer Set OK The menus can be used to change the selected time zone. [World Time] (p. 46) 6 Use FGHI to select your language and press the Q button. The menus can be used to change the selected language. [W] (Language) (p. 45) 18 EN Shooting, Viewing, and Erasing Shooting with the optimum aperture value and shutter speed [Program Auto] In this mode, automatic shooting settings are activated while also allowing changes to a wide range of other shooting menu functions, such as exposure compensation, white balance, etc.

as needed. Current shooting mode display Program Auto P 0.0 WB AUTO ISO AUTO 1 Press the n button to turn on the camera. [Program Auto] indicator 4 14M Press the n button again to turn off the camera. P 0. 0 WB AUTO ISO AUTO 2 Hold the camera and compose the shot.



[You're reading an excerpt. Click here to read official OLYMPUS VG-130 user guide](http://yourpdfguides.com/dref/3828403)
<http://yourpdfguides.com/dref/3828403>

Monitor 4 14M # Horizontal grip Number of storable still pictures (p. 62) Monitor (standby mode screen) If the [Program Auto] indicator is not displayed, press H to display the function menu and then set the shooting mode to P. "Using the Menu" (p. 4) Vertical grip When holding the camera, take care not to cover the flash with your fingers, etc.

EN 19 3 Press the shutter button halfway down to focus on the subject. When the camera focuses on the subject, the exposure is locked (shutter speed and aperture value are displayed), and the AF target mark changes to green. The camera was unable to focus if the AF target mark flashes red. Try focusing again. AF target mark Shooting movies 1 Press the R button to start recording. P 0:34 REC 0:00 0:34 Press halfway 1/400 F2.8 REC Shutter speed Aperture value 0:00 Continuous recording length (p. 62) Current length Lights up red when recording "Focusing" (p. 56) 4 Sound will also be recorded. The shooting mode selected for still photography applies to movies (some shooting modes have no effect).

To take the picture, gently press the shutter button all the way down while being careful not to shake the camera. P 2 Press the R button again to end recording. During sound recording, only the digital zoom can be used. To record a movie with optical zoom, set [R] (Movie sound recording) (p. 36) to [Off]. Press fully 1/400 F2.8 Image review screen To view images during shooting Pressing the q button enables playback of images. To return to shooting, either press the q button or press the shutter button halfway down. 20 EN Using the zoom Pressing the zoom buttons adjusts the shooting range. Pressing the wide (W) button Pressing the telephoto (T) button To take larger images [Digital Zoom] The type and amount of zoom can be identified from the appearance of the zoom bar.

The display differs depending on the options selected for [Digital Zoom] (p. 36) and [Image Size] (p. 34). [Off] selected for [Digital Zoom]: Image size Zoom bar Zoom bar P 0.0 WB AUTO ISO AUTO P 0.

0 WB AUTO ISO AUTO 14M Optical zoom range Other Image zoomed and cropped.*1 4 14M # 4 14M # Optical zoom: 5× Digital zoom: 4× [On] selected for [Digital Zoom]: Image size 14M Digital zoom range Zoom bar Other Image zoomed and cropped.*1 Digital zoom range *1 If an image size is less than the full resolution after reaching the maximum optical zoom, the camera will automatically resize and crop the image to the selected image size and enter the digital zoom range if [Digital Zoom] is [On]. Photographs taken with the zoom bar displayed in red may appear "grainy." EN 21 Changing the shooting information display The display of the screen information can be changed to best match the situation, for example, the need for a clear view of the screen or for making a precise composition by using the grid display.

Viewing images 1 Press the q button. Number of frames/Total number of images 4/30 1 Press F (INFO). The displayed shooting information changes in the order shown below each time the button is pressed. "Shooting mode display" (p. 10) Normal '11/02/26 12:30 P 0.0 WB AUTO ISO AUTO Playback image No information 2 P Use HI to select an image. 4 14M Displays previous image Displays next image Detailed P 0.0 WB AUTO ISO AUTO Hold I to fast forward and hold H to reverse. The display size of the images can be changed. "Index view and close-up view" (p.

24) 4 14M NORM To play sound recordings To play sound recorded with an image, select the image and press the Q button. A ! icon appears on images with which sound has been recorded. [R] (still images) (p. 38) During audio playback Press FG to adjust volume. 22 EN To play back movies Select a movie, and press the Q button. 4/30 Operations during pausing playback 00:14/00:34 Movie Play OK '11/02/26 12:30 Movie During pause Operations during movie playback Cueing Press F to display the first frame and press G to display the last frame. Press I or H to advance or rewind one frame at a time. Hold I or H pressed for continuous advance or rewind. Press the Q button to resume playback. Advancing and rewinding one frame at a time Resuming playback Elapsed time/ Total recording time 00:12/00:34 During playback To stop movie playback Press the m button.

Pausing and resuming playback Press the Q button to pause playback. To resume playback during pause, fast forward, or rewind, press the Q button. Press I to fast forward. Press I again to increase the fast forward speed. Press H to rewind.

The rewinding speed increases each time H is pressed. Use FG to adjust the volume. Fast forward Rewind Adjusting the volume EN 23 Erasing images during playback (Single image erase) Index view and close-up view Index view enables quick selection of a desired image. Close-up view (up to 10× magnification) allows checking of image details. 1 Display the image you want to erase and press G (D).

Erase 1 Press the zoom buttons. Erase Cancel Cancel MENU Set OK Single-image view 4/30 Close-up view W 4/30 2 Press FG to select [Erase], and press the Q button. For erasing multiple images at the same time, see "Erasing images [Erase]" (p. 39). '11/02/26 12:30 T '11/02/26 12:30 W Index view '11/02/26 T 2 4 W '11/02/26 T 2 4 24 EN To select an image in index view Use FGHI to select an image, and press the Q button to display the selected image in single-image view. Using the menu guide Pressing the E button in the setup menu displays a description of the current item. "Using the Menu" (p. 4) To scroll an image in close-up view Use FGHI to move the viewing area. Changing the image information display Shooting information settings displayed on the screen can be changed. 1 Press F (INFO).

The displayed image information changes in the order shown below each time the button is pressed. Normal 10 4/30 No information '11/02/26 12:30 Detailed 10 4/30 1/1000 F2.8 2.0 ISO WB 100 AUTO P FILE NORM 14M 100 0004 '11/02/26 12:30 EN 25 Using Shooting Modes To change the shooting mode The shooting mode (P, M, N, s, P, ~) can be changed by using the function menu. "Using the Menu" (p. 4) The default settings of the function are highlighted in . Reducing blur on shooting (N mode) This mode enables the user to reduce blur that is caused by camera shake and subject movement. 1 Set the shooting mode to N. N mode indicator Shooting with automatic settings (M mode) According to the scene, the camera automatically selects the optimal shooting mode from [Portrait]/[Landscape]/[Night+Portrait]/[Sport]/[Macro].



[You're reading an excerpt. Click here to read official OLYMPUS VG-130 user guide](http://yourpdfguides.com/dref/3828403)
<http://yourpdfguides.com/dref/3828403>

This is a fully automatic mode that allows the user to take pictures using the best mode for the shooting scene simply by pressing the shutter button. 0.0 WB AUTO 4 14M # 1 Set the shooting mode to M. The icon changes depending on the scene that the camera automatically selects. Using the best mode for the shooting scene (s mode) 1 Set the shooting mode to s. Scene Mode 4 14M # In some cases, the camera may not select the desired shooting mode. When the camera cannot identify which is the optimal mode, [Program Auto] will be selected. There are some limitations on settings in M mode. 4 14M 26 EN 2 Press G to go to the submenu. Portrait Option B Portrait/F Landscape/ G Night Scene*/I/M Night+Portrait/ C Sport/N Indoor/W Candle*/I/ R Self Portrait/S Sunset*/I/ X Fireworks*/I/V Cuisine/ d Documents/K Beach & Snow/ Pet *1 Application The camera takes a picture using the optimum settings for the scene conditions. 4 14M 3 Use HI to select the best shooting mode for the scene, and press the Q button.

When the subject is dark, noise reduction is automatically activated. This approximately doubles the shooting time during which no other pictures can be taken. 4 14M # Icon indicating current s mode In s mode, the optimum shooting settings are pre-programmed for specific shooting scenes. For this reason, some settings cannot be changed in some modes. 1 Use HI to select [Pet], and press the Q button to set. 2 Hold the camera to align the AF target mark on the subject and press the Q button. When the camera recognizes the subject, the AF target mark automatically tracks the subject movement to focus on it continuously. "To focus on a moving subject continuously (AF Tracking)" (p. 35). To take pictures of a moving subject like a pet ([Pet]) ([EN 27 Shooting with special effects (P mode) Add an artistic effect to your photo by selecting the desired magic filter.

3 Use HI to select the desired effect and then press the Q button to set. 1 Set the shooting mode to P. Magic Filter 0.0 WB AUTO 4 14M 0.0 WB AUTO # Icon indicating current P mode 4 14M Shooting mode Option [Pop Art \ Pin Hole] Fish Eye @ Drawing*1 ; Soft Focus : Punk j Sparkle 2 Press G to go to the submenu. Magic Filter Pop Art *1 0.0 WB AUTO Two images are saved, an unmodified image and an image to which the effect has been applied. In P mode, the optimum shooting settings are pre-programmed for each effect. For this reason, some settings cannot be changed in some modes. 28 EN Creating panoramic images (~ mode) Take pictures that can be joined to form a panorama using the supplied software.

The focus, exposure, zoom position (p. 21), and white balance (p. 32) are locked at the first frame. The flash (p. 30) is fixed to \$ (Flash Off) mode. 3 Press the shutter button to take the first frame, and then compose the second shot. Before first shot 1 Set the shooting mode to ~. Panorama P 0.0 WB AUTO ISO AUTO Set OK 4 14M After first shot 2 Use FGHI to select the pan direction. 1 2 Exit MENU After the first shot, the area shown in the white frame reappears on the side of the display opposite the pan direction.

Frame subsequent photographs so that they overlap with the image on the monitor. 4 Repeat Step 3 until the number of desired frames is taken, and then press the m button when finished. Panorama shooting is possible for up to 10 frames. For information on creating panoramas, see the online help for the supplied software. EN 29 Using Shooting Functions "Using the Menu" (p. 4) The default settings of the function are highlighted in . Shooting closeups (Macro shooting) This function enables the camera to focus and shoot subjects at close distances. Using the flash The flash functions can be selected to best match the shooting conditions. 1 Select the macro option in the shooting function menu. 1 P Off 0.

0 Select the flash option in the shooting function menu. Flash Auto P 4 14M 0.0 WB AUTO ISO AUTO WB AUTO ISO AUTO 2 Off Use HI to select the setting option, and press the Q button to set. Option Description Macro mode is deactivated. This enables shooting as close as 20 cm/7.9 in.*1 (60 cm/23.6 in.*2) to the subject. This enables shooting as close as 5 cm/2.

0 in. to the subject. 4 14M 2 Use HI to select the setting option, and press the Q button to set. Option Description The flash fires automatically in lowlight or backlight conditions. Pre-flashes are emitted to reduce the occurrence of red eye in your photos.

The flash fires regardless of the available light. The flash does not fire. Macro Super Macro*3 *1 *2 *3 Flash Auto Redeye Fill In Flash Off When the zoom is at the widest (W) position. When the zoom is at the most telephoto (T) position. The zoom is automatically fixed.

The flash (p. 30) and zoom (p. 21) cannot be set during super macro shooting. 30 EN Using the self-timer After the shutter button is pressed all the way down, the picture is taken after a short delay. Adjusting the brightness (Exposure compensation) The standard brightness (appropriate exposure) set by the camera based on the shooting mode (M and s excluded) can be adjusted brighter or darker to obtain a desired shot. 1 Select the self-timer option in the shooting function menu. P Y Off 2 12 1 Select the exposure compensation option in the shooting function menu. Exposure Comp. 0.0 0.

0 WB AUTO ISO AUTO P 0.3 0.0 0.3 WB AUTO ISO AUTO # 4 14M 2 Use HI to select the setting option, and press the Q button to set. Option Description The self-timer is deactivated. The self-timer lamp turns on for approx. 10 seconds, then blinks for approx. 2 seconds, and then the picture is taken. The self-timer lamp blinks for approx. 2 seconds, and then the picture is taken.

Y Off Y 12 sec 2 Use HI to select the desired brightness, and press the Q button. Y 2 sec Self-timer shooting is automatically canceled after one shot. To cancel the self-timer after it starts Press the m button. EN 31 Adjusting to a natural color scheme (White balance) For more natural coloring, choose a white balance option suited to the scene. Selecting the ISO sensitivity 1 Select the ISO setting option in the shooting function menu.

1 Select the white balance option in the shooting function menu. WB WB Auto P P ISO 200 0.0 WB AUTO ISO AUTO ISO 100 ISO 200 0.0 WB AUTO ISO 400 1/400 F2.8 2 Use HI to select the setting option, and press the Q button to set.

Option Description The camera automatically adjusts the sensitivity according to the shooting scene. The ISO sensitivity is fixed to the selected value. 2 Use HI to select the setting option, and press the Q button to set. Option Description The camera automatically adjusts the white balance according to the shooting scene.



[You're reading an excerpt. Click here to read official OLYMPUS VG-130 user guide](http://yourpdfguides.com/dref/3828403)

For shooting outdoors under a clear sky. For shooting outdoors under a cloudy sky. For shooting under tungsten lighting. For shooting under white fluorescent lighting (offices, etc.). ISO Auto Value WB Auto 5 Sunny 3 Cloudy 1 Incandescent "ISO" is short for "International Organization for Standardization.

" ISO standards specify the sensitivity for digital cameras and film, thus codes such as "ISO 100" are used to represent sensitivity. In the ISO setting, although smaller values result in less sensitivity, sharp images can be taken under fully lit conditions. Larger values result in higher sensitivity, and images can be taken at fast shutter speeds even under low light conditions. However, high sensitivity introduces noise into the resulting picture, which may give it a grainy appearance. > Fluorescent 32 EN Sequential shooting (Drive) Pictures are taken sequentially while the shutter button is held down. 1 Select the drive option in the shooting function menu. P 0.0 WB AUTO ISO AUTO Sequential MENU Option o Single Description One frame is shot each time the shutter button is pressed. Take sequential shots using the focus, brightness (exposure) and white balance set in the first frame. The camera takes sequential shots at a faster speed than in [j].

The camera takes sequential shots at approximately 10 frames/sec. j*1 Sequential c d *1 HighSpeed1 HighSpeed2 The shooting speed varies depending on the settings for [Image Size/Compression] (p. 34). When set to [j], the flash (p. 30) cannot be set to [Redeye].

In addition, when set to [c] or [d], the flash is fixed to [Flash Off]. When set to [c] or [d], [Image Size] is limited to [3] or lower, and the ISO sensitivity is fixed to [ISO Auto]. EN 33 For information on using the menus, see "Using the Menu" (p. 4). Menus for Shooting Functions The default settings of the function are highlighted in .

Restoring the shooting functions to the default settings [Reset] p (Shooting menu 1) Reset Submenu 2 Shooting mode (p. 26) Flash (p. 30) Macro (p. 30) Self-timer (p. 31) Application Restores the following menu functions to the default settings. Yes Exposure compensation (p. 31) White balance (p. 32) ISO (p. 32) Drive (p. 33) . Menu functions in z (Shooting menu)/A (Movie menu) (p.

34 to 37) No The current settings will not be changed. Selecting the image quality for still images [Image Size/Compression] p (Shooting menu 1) Image Size/Compression Submenu 1 Submenu 2 14M (4288×3216) 8M (3264×2448) 5M (2560×1920) Image Size 3M (2048×1536) 2M (1600×1200) 1M (1280×960) VGA (640×480) Fine Normal Application Suitable for printing pictures at A3 (11×17 in.). Suitable for printing pictures up to A3 (11×17 in.). Suitable for printing pictures at A4 (8.5×11 in.). Suitable for printing pictures up to A4 (8.5×11 in.

). Suitable for printing pictures at A5 (5×7 in.). Suitable for printing pictures at postcard size. Suitable for viewing pictures on a TV or using pictures on emails and web sites.

Shooting at high quality. Shooting at normal quality. 16:9S (1920×1080) Suitable for playing pictures on a widescreen TV and for printing on A5 or 5"×7". Compression "Number of storable pictures (still images)/Continuous recording length (movies) in the internal memory and SD/SDHC memory cards" (p. 62) 34 EN For information on using the menus, see "Using the Menu" (p.

4). Selecting the image quality for movies [Image Size/Frame Rate] A (Movie menu) Submenu 1 Image Size Selecting the focusing area [AF Mode] p (Shooting menu 1) AF Mode Submenu 2 Application The camera focuses automatically. (If a face is detected, it is shown by a white frame*1; when the shutter button is pressed halfway and the camera is able to focus, the frame color is changed to green*2 if the camera is able to focus. If no face is detected, the camera chooses a subject in the frame and focuses automatically.) The camera focuses on the subject located within the AF target mark. The camera tracks the subject movement automatically to focus on it continuously. Image Size/Frame Rate Application Submenu 2 Frame Rate *1 720P (1280×720)/ Select the image quality based on VGA (640×480)/ QVGA (320×240) the image size and frame rate. Higher frame rates provide N 30fps*1/ smoother movie O 15fps*1 images. Face/iESP frames per second "Number of storable pictures (still images)/Continuous recording length (movies) in the internal memory and SD/SDHC memory cards" (p. 62) Spot AF Tracking *1 *2 For some subjects, the frame may not appear or may take some time to appear.

If the frame blinks in red, the camera is unable to focus. Try again to press the shutter button halfway. To focus on a moving subject continuously (AF Tracking) 1 Hold the camera to align the AF target mark on the subject and press the Q button. 2 When the camera recognizes the subject, the AF target mark automatically tracks the subject movement to focus on it continuously. 3 To cancel the tracking, press the Q button. Depending on the subjects or the shooting conditions, the camera may be unable to lock the focus or fail to track the subject movement. When the camera fails to track the subject movement, the AF target mark changes to red. EN 35 For information on using the menus, see "Using the Menu" (p. 4). Shooting at higher magnifications than optical zoom [Digital Zoom] p (Shooting menu 1) Digital Zoom Submenu 2 Off On Application Disable digital zoom.

Enable digital zoom. [Digital Zoom] is not available when [% Super Macro] (p. 30) is selected. The option selected for [Digital Zoom] affects the appearance of the zoom bar. "To take larger images [Digital Zoom]" (p.

21) Using the AF illuminator to focus on a shadowed subject [AF Illuminat.] (VG-140/D-715, VG-130/D-710) p (Shooting menu 1) AF Illuminat. Submenu 2 Off On Application The AF illuminator is not used. When the shutter button is pressed halfway down, the AF illuminator turns on to aid focusing. AF illuminator Recording sound when shooting movies [R] [R A (Movie menu) Submenu 2 Off On R Application No sound is recorded.

Sound is recorded. When set to [On], only the digital zoom can be used during movie recording. To record the movie with the optical zoom, set [R] (movies) to [Off]. 36 EN For information on using the menus, see "Using the Menu" (p. 4). Displaying icon guides [Icon Guide] p (Shooting menu 1) Icon Guide Submenu 2 Off Application No icon guide is displayed. The explanation of the selected icon will be displayed when a shooting mode or shooting function

menu icon is selected (position the cursor on the icon for a while to display the explanation). Program Auto Icon guide Imprinting the date of recording [Date Stamp] q (Shooting menu 2) Date Stamp Submenu 2 Off On Application Do not imprint the date.



[You're reading an excerpt. Click here to read official OLYMPUS](http://yourpdfguides.com/dref/3828403)

[VG-130 user guide](http://yourpdfguides.com/dref/3828403)

<http://yourpdfguides.com/dref/3828403>

Stamp new photographs with the date of recording. [Date Stamp] is not available if the clock has not been set.

"Date, time, time zone, and language" (p. 17) The date stamp can not be deleted. [Date Stamp] is not available in ~ mode or during sequential shooting. 0.0 WB AUTO ISO AUTO On P Functions can be changed manually. 4 14M EN 37 For information on using the menus, see "Using the Menu" (p. 4). Menus for Playback, Editing, and Printing Functions Playing back pictures automatically [Slideshow] q (Playback menu) Slideshow Cropping images [P] [P q (Playback menu) Edit P 1 Use HI to select an image, and press the Q button. 2 Use the zoom buttons to choose the crop size and FGHI to position the crop.

To start a slideshow After pressing the Q button, the slideshow starts.

To stop the slideshow, press the Q button or the m button. During a slideshow, press I to advance one frame, H to go back one frame. Changing the image size [Q] [Q q (Playback menu) Submenu 2 8 640 × 480 9 320 × 240 Edit Q Set OK Application This saves a high-resolution image as a separate image with a smaller size for use in e-mail attachments and other applications. 3 Press the Q button. The edited image will be saved as a separate image.

Adding sound to still images [R] [R q (Playback menu) Edit R 1 Use HI to select an image. 2 Aim the microphone toward the sound source. 1 Use HI to select an image. 2 Use FG to select the size, and press the Q button. Microphone 3 Press the Q button.

Recording starts. The camera adds (records) sound for approx. 4 seconds while playing back the image. 38 EN For information on using the menus, see "Using the Menu" (p. 4). Retouching images [Perfect Fix] q (Playback menu) Edit Perfect Fix Depending on the picture, the editing may not be effective. The retouching process may lower the image resolution. Submenu 1 All Lighting Fix Redeye Fix Application [Lighting Fix] and [Redeye Fix] are applied together. Only sections darkened by backlighting and dim lighting are brightened. Eyes that are reddened by the flash are corrected.

Erasing images [Erase] q (Playback menu) Submenu 1 All Erase Sel. Image Erase Erase Application All images in the internal memory or card will be erased. Images are individually selected and erased. Deletes the image displayed. When erasing pictures in a internal memory, do not insert the card into the camera. When erasing pictures from the card, insert a card into the camera in advance. To erase all images [All Erase] 1 Use FG to select [All Erase], and press the Q button. 2 Use FG to select [Yes], and press the Q button. 1 Use FG to select a correction method, and press the Q button. 2 Use HI to select an image for retouching, and press the Q button.

The retouched image is saved as a separate image. To individually select and erase images [Sel. Image] 1 Use FG to select [Sel. Image], and press the Q button. 2 Use HI to select the image to be erased, and press the Q button to add a R mark to the image.

Press the W zoom button to display an index view. Images can be quickly selected using FGHI. Press the T button to return to the single frame display. Sel. Image R mark OK Erase/Cancel MENU EN 39 For information on using the menus, see "Using the Menu" (p.

4). 3 Repeat Step 2 to select the images to be erased, and then press the m button to erase the selected images. 4 Use FG to select [Yes], and press the Q button. The images with a R mark are erased. Rotating images [y] [y q (Playback menu) y 1 Use HI to select an image. 2 Press the Q button to rotate the image. 3 If necessary, repeat Steps 1 and 2 to make settings for other images, and press the m button. The new picture orientations will be saved even after the power is turned off. Saving print settings to the image data [Print Order] q (Playback menu) Print Order "Print Reservations (DPOF)" (p. 51) Print reservation can be set only for still images that are recorded to the card.

Protecting images [?] [? q (Playback menu) ? Protected images cannot be erased by [Erase] (p. 24, 39), [Sel. Image], or [All Erase] (p. 39), but all images are erased by [Memory Format]/[Format] (p. 41). 1 Use HI to select an image. 2 Press the Q button. Press the Q button again to cancel the settings. 3 If necessary, repeat Steps 1 and 2 to protect other images, and press the m button. 40 EN For information on using the menus, see "Using the Menu" (p. 4). Menus for Other Camera Settings Erasing data completely [Memory Format]/[Format] r (Settings 1) Memory Format/Format Before formatting, check that no important data is left in the internal memory or card. Cards must be formatted with this camera before first use or after being used with other cameras or computers. Submenu 2 Yes No *1 Selecting a method for connecting the camera to other devices [USB Connection] r (Settings 1) Submenu 2 Auto USB Connection Application When the camera is connected to another device, the settings selection screen is displayed. Select when transferring images to a computer or when using the supplied software with the camera connected to a computer.

Select when transferring images to a computer running Windows Vista or Windows 7 without using the supplied software. Select when connecting to a PictBridge-compatible printer. Application Completely erases the image data in the internal memory*1 or card (including protected images). Cancels formatting. MTP Storage Be sure to remove the card before formatting the internal memory.

Copying images in the internal memory to the card [Backup] r (Settings 1) Submenu 2 Yes No Print Backup Application Backs up image data in the internal memory to the card. Cancels the backup. Copying pictures to a computer without using the supplied software This camera is compatible with the USB Mass Storage Class. You can transfer and save the image data on your computer while the camera and the computer are connected. System requirements It takes some time to back up data. Check that the battery has sufficient power before starting the backup. Windows Macintosh Windows XP (Service Pack 1 or later) / Windows Vista / Windows 7 Mac OS X v10.3 or later EN 41 For information on using the menus, see "Using the Menu" (p. 4). Even if a computer has USB ports, proper operation is not guaranteed in the following cases.

computers with USB ports installed using an expansion card, etc. computers without a factory-installed OS and home-built computers Saving the mode when the camera is turned off [Keep K Settings] r (Settings 1) Submenu 2 Yes Keep K Settings Application The shooting mode is saved when the camera is turned off and is reactivated the next time the camera is turned on. The shooting mode is set to P mode when the camera is turned on. Turning on the camera with the q button [q Power On] [q r (Settings 1) Submenu 2 No Yes q Power On Application The camera is not turned on.



[You're reading an excerpt. Click here to read official OLYMPUS](http://yourpdfguides.com/dref/3828403)

[VG-130 user guide](http://yourpdfguides.com/dref/3828403)

<http://yourpdfguides.com/dref/3828403>

To turn on the camera, press the *n* button. Press and hold the *q* button to turn the camera on in playback mode. No Choosing the opening screen display [Pw On Setup] *r* (Settings 1) Submenu 2 Off On Pw On Setup Application No opening screen is displayed. The opening screen is displayed when the camera is turned on. 42 EN For information on using the menus, see "Using the Menu" (p. 4).

Selecting the camera sound and its volume [Sound Settings] *r* (Settings 1) Submenu 2 Sound Type Adjusting the brightness of the monitor [*s*] *s* (Settings 2) Submenu 2 Bright/Normal Sound Settings Submenu 3 Application Choose the sound made by camera controls. Adjusts the image playback volume. Choose the volume of the sound made by camera controls. *s* Application 1/2/3 OFF (No Sound) or 5 levels of volume OFF (No Sound) or 5 levels of volume Selects the monitor brightness depending on the surrounding brightness. *q* Volume Volume Adjusting the CCD and the image processing function [Pixel Mapping] *s* (Settings 2) Pixel Mapping This function has already been adjusted at factory shipping, and no adjustment is needed right after purchase.

Approximately once a year is recommended. For best results, wait at least one minute after taking or viewing pictures before performing pixel mapping. If the camera is turned off during pixel mapping, be sure to perform it again. To adjust the CCD and the image processing function Press the *Q* button when [Start] (Submenu 2) is displayed. The camera checks and adjusts the CCD and the image processing function at the same time.

EN 43 For information on using the menus, see "Using the Menu" (p. 4). Selecting a video signal system to match your TV [Video Out] *s* (Settings 2) Video Out The TV video signal system varies depending on the countries and regions. Before viewing camera images on your TV, select the video output according to your TV's video signal type. Submenu 2 NTSC PAL Application Connecting the camera to a TV in North America, Taiwan, Korea, Japan, and so on. Connecting the camera to a TV in European countries, China, and so on. The factory default settings differ according to the region where the camera is sold. To play back camera images on a TV 1 Use the camera to select the same video signal system as the one of connected TV ([NTSC]/[PAL]). 2 Connect the TV and camera. Multi-connector AV cable (supplied) Connector cover Connect to the TV video input jack (yellow) and audio input jack (white).

3 Turn on the TV, and change "INPUT" to "VIDEO (an input jack connected to the camera)." For details on changing the input source of the TV, refer to the TV's instruction manual. 4 Press the *q* button, and use *HI* to select the image for playback. Depending on the TV's settings, the displayed images and information may become cropped. 44 EN For information on using the menus, see "Using the Menu" (p. 4). Saving battery power between shots [Power Save] *s* (Settings 2) Submenu 2 Off On Setting the date and time [X] [X *s* (Settings 2) X Power Save Application To select the date display order 1 Press *I* after setting Minute, and use *FG* to select the date display order. X Y MD Time Cancels [Power Save]. When the camera is not being used for approx. 10 seconds, the monitor automatically turns off to save battery power.

2011 . 02 . 26 12 : 30 Y/M/D To resume standby mode Press any button. Date order Cancel MENU Set OK Changing the display language [W] [W *s* (Settings 2) Submenu 2 Languages 2 Press the *Q* button to complete the operation. "Date, time, time zone, and language" (p.

17) W Application The language for the menus and error messages displayed on the monitor is selected. 1 Use *FGHI* to select your language and press the *Q* button. EN 45 For information on using the menus, see "Using the Menu" (p. 4). Switching between home and travel destination time zones [World Time] *s* (Settings 2) World Time You will not be able to select a time zone using [World Time] if the camera clock has not first been set using [X].

Submenu 2 x Home/Alternate *z* x*1 *z**1, 2 *1 *2 Submenu 3 Application The time in the home time zone (the time zone selected for *x* in submenu 2). The time in the travel destination time zone (the time selected for *z* in submenu 2). -- -- Select the home time zone (*x*). Select the travel destination time zone (*z*). In areas where daylight saving time is in effect, use *FG* to turn daylight saving time ([Summer]) on. When you select a time zone, the camera automatically calculates the time difference between the selected zone and the home time zone (*x*) to display the time in the travel destination time zone (*z*). 46 EN Printing Direct printing (PictBridge*1) By connecting the camera to a PictBridge-compatible printer, you can print images directly without using a computer. To find out if your printer supports PictBridge, refer to the printer's instruction manual. *1 PictBridge is a standard for connecting digital cameras and printers of different makers and printing out pictures directly. The printing modes, paper sizes, and other parameters that can be set with the camera vary depending on the printer that is used.

For details, refer to the printer's instruction manual. For details on the available paper types, loading paper, and installing ink cassettes, refer to the printer's instruction manual. *Y* button 2 Turn on the printer, and then connect the printer and camera. Multi-connector Connector cover USB cable (supplied) Printing images at the printer's standard settings [Easy Print] In the setup menu, set [USB Connection] (p. 41) to [Print]. Easy Print Start Custom Print OK 1 Display the image to be printed on the monitor. "Viewing images" (p. 22) 3 4 Press *I* to start printing. To print another image, use *HI* to select an image, and press the *Q* button. EN 47 To exit printing After a selected image is displayed on the screen, disconnect the USB cable from the camera and printer.

Submenu 2 Print All Print Multi Print All Index Exit Print OK Application This prints the image selected in Step 5. This prints all images stored in the internal memory or card. This prints one image in a multiple layout format. This prints an index of all images stored in the internal memory or card. This prints images based on the print reservation data on the card.

Print Order*1 Changing the printer's settings for printing [Custom Print] *1 [Print Order] is available only when print reservations have been made. "Print Reservations (DPOF)" (p. 51) 1 2 Follow Steps 1 and 2 for [Easy Print] (p. 47), and press the *Q* button. Use *FG* to select the print mode, and press the *Q* button.

Print Mode Select Print All Print Multi Print All Index Print Order Exit MENU Set OK 3 Use *FG* to select [Size] (Submenu 3), and press *I*.



[You're reading an excerpt. Click here to read official OLYMPUS](#)

[VG-130 user guide](#)

<http://yourpdfguides.com/dref/3828403>

If the [Printpaper] screen is not displayed, the [Size], [Borderless], and [Pics/Sheet] are set to the printer's standard. Printpaper Size Standard Borderless Standard Back MENU Set OK 48 EN 4 Use FG to select the [Borderless] or [Pics/Sheet] settings, and press the Q button. Submenu 4 Application The image is printed with a border around it ([Off]). The image is printed to fill the entire paper ([On]). The number of images per sheet ([Pics/Sheet]) is selectable only when [Multi Print] is selected in Step 2. To make the detailed printer settings 1 Use FGHI to select the setting, and press the Q button. Print Info <x Date File Name P Exit MENU 1 Without Without Off/On *1 (The number of images per sheet varies depending on the printer.) *1 Set OK The available settings for [Borderless] vary depending on the printer. If [Standard] is selected in Steps 3 and 4, the image is printed at the printer's standard settings.

4/30 Submenu 5 Submenu 6 <x 0 to 10 Application This selects the number of prints. Selecting [With] prints the images with the date. Selecting [Without] prints the images without the date. Date With/Without NORM 14M 100 0004 '11/02/26 12:30 FILE File Name Single Print Print OK More Selecting [With] prints the file name on the image. With/Without Selecting [Without] does not print any file name on the image. (Proceeds to This selects a portion of the the setting image for printing. screen.) 5 6 Use HI to select an image. Press F to make a print reservation for the current image. Press G to make the detailed printer settings for the current image.

P EN 49 To crop an image [P] [P 1 Use the zoom buttons to select the size of the cropping frame, use FGHI to move the frame, and then press the Q button. 9 Use FG to select [Print], and press the Q button. Printing starts. When [Option Set] is selected in [All Print] mode, [Print Info] screen is displayed. When printing is finished, the [Print Mode Select] screen is displayed.

Print Mode Select Print All Print Multi Print All Index Print Order P Exit MENU Set OK Set OK 2 Use FG to select [OK], and press the Q button. To cancel printing OK Cancel Back MENU Set OK 1 When [Do Not Remove USB Cable] is displayed, press the m button, use FG to select [Cancel], and then press the Q button. 7 8 If necessary, repeat Steps 5 and 6 to select the image to be printed, make the detailed settings, and set [Single Print]. Press the Q button. Print Do Not Remove USB Cable Print Cancel MENU Continue Cancel Print Cancel Set OK Back MENU Set OK 10 Press the m button.

11 When the message [Remove USB Cable] is displayed, disconnect the USB cable from the camera and printer. 50 EN Print Reservations (DPOF *1) In print reservations, the number of prints and date imprint option are saved in the image on the card. This enables easy printing at a printer or print shop supporting DPOF by using only the print reservations on the card without a computer or a camera. *1 DPOF is a standard for storing automatic printout information from digital cameras. Print reservations can be set only for the images stored on the card. Insert a card with recorded images before making print reservations. DPOF reservations set by another DPOF device cannot be changed by this camera. Make changes using the original device. Making new DPOF reservations with this camera will erase the reservations made by the other device. DPOF print reservations can be made for up to 999 images per card.

Single-frame print reservations [<] 1 2 Display the setup menu. "Using the Menu" (p. 4) From the playback menu q, select [Print Order] and then press the Q button. Print Order < U Exit MENU Set OK 3 Use FG to select [<], and press the Q button. 4/30 0 NORM 14M FILE 100 0004 '11/02/26 12:30 Set OK EN 51 4 Use HI to select the image for print reservation. Use FG to select the quantity. Press the Q button. X Reserving one print each of all images on the card [U] 1 2 3 Follow Steps 1 and 2 in [<] (p. 51). Use FG to select [U], and press the Q button.

Follow Steps 5 and 6 in [<]. No Date Time Back MENU Set OK Resetting all print reservation data 5 No Submenu 2 Application This prints the image only. This prints the image with the shooting date. This prints the image with the shooting time. Print Order 1 (1) 1 2 Follow Steps 1 and 2 in [<] (p. 51). Use FG to select either [<] or [U], and press the Q button. Print Order Setting Print Ordered Reset Keep Back MENU Set OK Date Time 3 Set Cancel Set OK Use FG to select [Reset], and press the Q button. Back MENU 6 Use FG to select [Set], and press the Q button. 52 EN Resetting the print reservation data for selected images 1 2 3 4 5 6 7 Follow Steps 1 and 2 in [<] (p.

51). Use FG to select [<], and press the Q button. Use FG to select [Keep] and press the Q button. Use HI to select the image with the print reservation you want to cancel. Use FG to set the print quantity to "0". @@@@ Insert recharged batteries in the correct direction. @@@@ Condensation*1 may have occurred. @@@@ "Vertical lines appear on the screen". @@@@ The lines do not appear, however, in the final image. "The light is caught in the picture".

@@"Error message" (p. @@@@ "Date, time, time zone, and language" (p. @@ Cancel sleep mode. @@@@ This is because the camera automatically performs actions of auto focus as far as it is ready to shoot. Error message Corrective action Internal memory/Card problem Take pictures before viewing them. Problem with selected image Use photo retouch software, etc. to view the image on a computer. If the image still cannot be viewed, the image file is corrupted. No Picture Error message When one of the messages below is displayed on the monitor, check the corrective action. Error message Corrective action Card problem Insert a new card.

Card problem The card write-protect switch is set to the "LOCK" side. Release the switch. Internal memory problem · Insert a card. · Erase unwanted images.*1 Card problem · Replace the card.

· Erase unwanted images.*1 Card problem Use FG to select [Format], and press the Q button. Next, use FG to select [Yes], and press the Q button.*2 Internal memory problem Use FG to select [Memory Format], and press the Q button. Next, use FG to select [Yes], and press the Q button.

*2 Picture Error Problem with selected image Use photo retouch software, etc. to The Image Cannot edit the image on a computer. Be Edited Battery problem Charge the battery. Connection problem Connect the camera and computer or printer correctly. Printer problem Load paper into the printer. Printer problem Refill the ink in the printer. Printer problem Remove the jammed paper. Printer problem Return to the status where the printer can be used.



[You're reading an excerpt. Click here to read official OLYMPUS](#)

[VG-130 user guide](#)

<http://yourpdfguides.com/dref/3828403>

Printer problem Turn off the camera and printer, check the printer for any problems, and then turn the power on again. Card Error Battery Empty Write Protect No Connection Memory Full No Paper Card Full Card Setup No Ink Power Off Format Jammed Settings Changed*3 Set OK Memory Setup Power Off Memory Format Set OK Print Error EN 55 Error message Corrective action Problem with selected image Use a computer to print.

Shooting tips When you are unsure of how to take a picture that you envision, refer to the information below. Cannot Print *1 *4 *2 *3 *4 Before erasing important images, download them to a computer. All data will be erased. This is displayed, for instance, when the printer's paper tray has been removed. Do not operate the printer while making the print settings on the camera. This camera may be unable to print images taken by other cameras. Focusing

"Focusing on the subject" Taking a picture of a subject not in the center of the screen After focusing on an object at the same distance as the subject, compose the shot, and take the picture. Pressing the shutter button halfway (p. 20) Set [AF Mode] (p. 35) to [Face/iESP] Taking a picture in [AF Tracking] mode (p.

35) The camera tracks the subject movement automatically to focus on it continuously. Taking a picture of subjects where autofocus is difficult In the following cases, after focusing on an object (by pressing the shutter button halfway down) with high contrast at the same distance as the subject, compose the shot, and take the picture. Subjects with low contrast When extremely bright objects appear in the center of the screen 56 EN Camera shake Object with no vertical lines*1 *1 It is also effective to compose the shot by holding the camera vertically to focus, and then returning to the horizontal position to take the picture. When objects are at different distances "Taking pictures without camera shake" Taking pictures using N mode (p. 26) Select C (Sport) in s mode (p. 26) The C (Sport) mode uses a fast shutter speed and can reduce the blur incurred by a moving subject. Taking pictures at a high ISO sensitivity If a high ISO sensitivity is selected, pictures can be taken at a high shutter speed even at locations where a flash cannot be used. "Selecting the ISO sensitivity" (p. 32) Exposure (brightness) Fast-moving object The subject is not in the center of the frame "Taking pictures with the right brightness" Taking pictures using [Fill In] (p. 30) flash A subject against backlight is brightened.

Taking pictures using exposure compensation (p. 31) Adjust the brightness while viewing the screen for taking the picture. Normally, taking pictures of white subjects (such as snow) results in images that are darker than the actual subject. Use the exposure compensation to adjust in the positive (+) direction to express whites as they appear. When taking pictures of black subjects, on the other hand, it is effective to adjust in the negative (-) direction. EN 57 Color hue

"Taking pictures with colors at the same shade as they appear" Taking pictures by selecting white balance (p. 32) Best results in most environments can normally be obtained with the [WB Auto] setting, but for some subjects, you should try experimenting with different settings. (This is especially true for sunshade under a clear sky, mixed natural and artificial light settings, and so on.) Playback/Editing tips Playback "Playing images in the internal memory and card" Remove the card when playing pictures in the internal memory "To remove the SD/SDHC memory card" (p. 13) Editing "Erasing the sound recorded to a still image" Record over the sound with silence when playing back the image "Adding sound to still images [R]" (p.

38) Image quality "Taking sharper pictures" Taking pictures with the optical zoom Avoid using digital zoom (p. 21, 36) to take pictures. Taking pictures at a low ISO sensitivity If the picture is taken with a high ISO sensitivity, noise (small colored spots and color unevenness that were not in the original image) can occur, and the image can appear grainy. The resulting image is grainier than with low ISO sensitivity as well. "Selecting the ISO sensitivity" (p. 32) Batteries

"Making batteries last longer" Avoid any of the following operations when not actually taking pictures because they deplete the battery power Repeatedly pressing the shutter button halfway Repeatedly using the zoom Set [Power Save] (p. 45) to [On] 58 EN Appendix Camera care Exterior · Wipe gently with a soft cloth. If the camera is very dirty, soak the cloth in mild soapy water and wring well. Wipe the camera with the damp cloth and then dry it with a dry cloth. If you have used the camera at the beach, use a cloth soaked in clean water and wrung well.

Monitor · Wipe gently with a soft cloth. Lens · Blow dust off the lens with a commercial blower, then wipe gently with a lens cleaner. Battery/USB-AC adapter · Wipe gently with a soft, dry cloth. Do not use strong solvents such as benzene or alcohol, or chemically treated cloth. Mold may form on the lens surface if the lens is left dirty.

· The battery and USB-AC adapter · This camera uses one Olympus lithium ion battery (LI-70B). No other type of batteries can be used. Caution: There is a risk of explosion if the battery is replaced with the incorrect battery type. Dispose of the used battery following the instructions. (p.

66) Power consumption by the camera varies depending on which functions are used. During the conditions described below, power is consumed continuously and the battery becomes exhausted quickly. · The zoom is used repeatedly. · The shutter button is pressed halfway repeatedly in shooting mode, activating the auto focus. · A picture is displayed on the monitor for an extended period of time. · The camera is connected to a printer. Using an exhausted battery may cause the camera to turn off without displaying the battery level warning. The rechargeable battery is not fully charged at the time of purchase. Use the supplied F-2AC USB-AC adapter (hereafter referred to as USB-AC adapter) to charge the battery before use. When the included USB-AC adapter is used, charging usually takes approximately 3 hours (varies on usage).

The supplied USB-AC adapter is for charging and playback only. Do not take pictures while the USB-AC adapter is connected to the camera. The camera cannot playback without the battery even when connected to the USB-AC adapter. · Storage · When storing the camera for extended periods, remove the battery, USB-AC adapter and card, and keep in a cool, dry place that is well ventilated. · Periodically insert the battery and test the camera functions.



[You're reading an excerpt. Click here to read official OLYMPUS](http://yourpdfguides.com/dref/3828403)

[VG-130 user guide](http://yourpdfguides.com/dref/3828403)

<http://yourpdfguides.com/dref/3828403>