Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for EPSON STYLUS SX115. You'll find the answers to all your questions on the EPSON STYLUS SX115 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual EPSON STYLUS SX115
User guide EPSON STYLUS SX115
Operating instructions EPSON STYLUS SX115
Instructions for use EPSON STYLUS SX115
Instruction manual EPSON STYLUS SX115

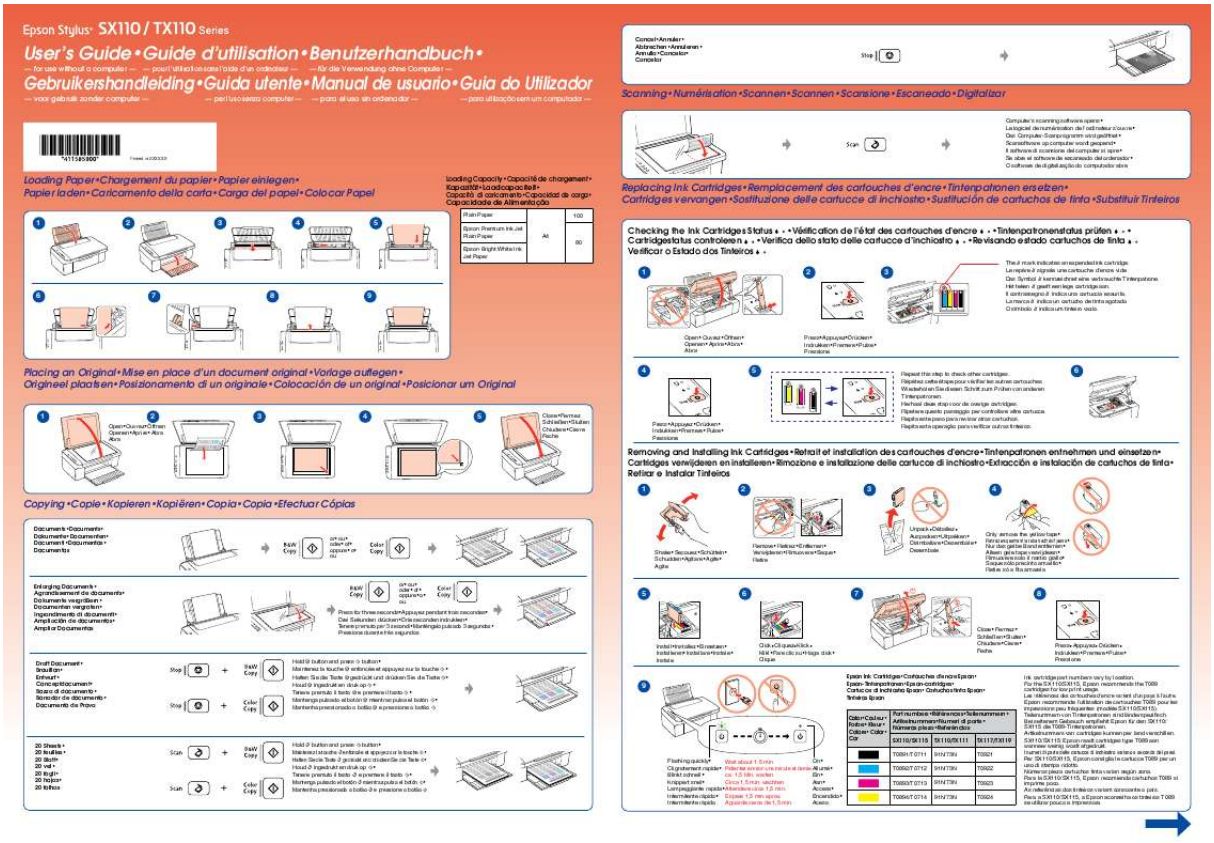

You're reading an excerpt. Click here to read official EPSON STYLUS SX115 user guide
http://yourpdfguides.com/dref/2339989

Manual abstract:

Prepare a new ink cartridge. Close the document cover tightly when you copy. Soft, dry cloth chiffon doux et sec weiches, trockenes Tuch zachte, droge doek panno morbido e asciutto paño suave y seco pano macio e seco Good printout Impression correcte Guter Ausdruck Goede afdruk Stampa corretta Impresión correcta Impressão correcta Hold down the y button and then press the P button Maintenez la touche y enfoncée et appuyez sur la touche P Halten Sie die Taste y gedrückt und drücken Sie die Taste P Houd y ingedrukt en druk op P Tenere premuto il tasto y e quindi premere il tasto P Mantenga pulsado el botón y mientras pulsa el botón P Mantenha pressionado o botão y e pressione o botão P If the light is still on or flashing after you replace the cartridge, try the procedure on the right. @@& If the paper is not ejected, try the procedures below. @@Then turn the printer back on. If the error does not clear, contact your dealer. .

You're reading an excerpt. Click here to read official EPSON STYLUS SX115 user guide
http://yourpdfguides.com/dref/2339989