Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for MAXTOR CENTRAL AXIS. You'll find the answers to all your questions on the MAXTOR CENTRAL AXIS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MAXTOR CENTRAL AXIS
User guide MAXTOR CENTRAL AXIS
Operating instructions MAXTOR CENTRAL AXIS
Instructions for use MAXTOR CENTRAL AXIS
Instruction manual MAXTOR CENTRAL AXIS

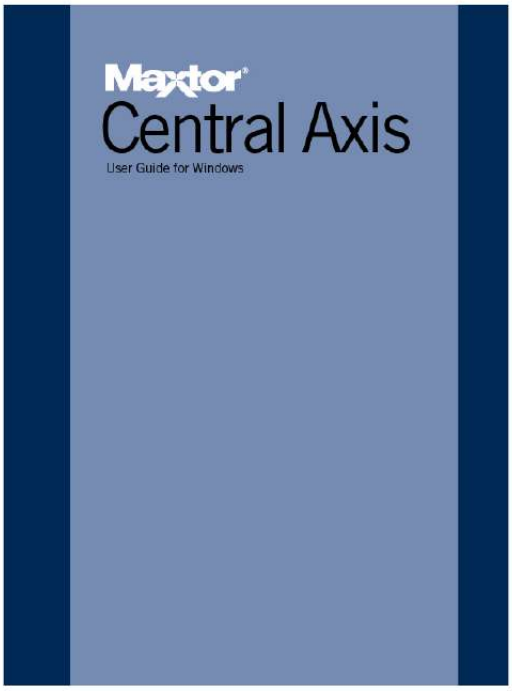

You're reading an excerpt. Click here to read official MAXTOR CENTRAL AXIS user guide
http://yourpdfguides.com/dref/2943821

Manual abstract:

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
. . . .1 Overview . . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . . . .
. .1 Installing the Software . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

1 Installing OneTouch 4 after Installing Central Axis . . . . . .
. . . . .
.6 Using the Maxtor System Tray Icon . . . .
. . . . . .

. . . . . .
. . . . .
. . .7 Restoring the System Tray Icon . .
. . . . . .

. . . . . .
. . . . .
. . .8 Managing Your Drives . .
. . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . . .10 Creating a User Account . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . . . .
11 Account Types . . . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .11 Folder Types . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. .12 Connecting to a User Account . . .
. . . . .
. . . . . .

. . . . . .
. . . . .
. .15 Getting Account Information . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
. . . .17 Managing Settings . . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .19 Drag and Sort . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
.20 Advanced Web Page . . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .21 Folder Tags . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . .22 SimpleView . .
. . . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .23 Shared Folder Backup . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . .24 Updating Your Maxtor Manager Software . . . . . .
. . . . .
. . . . .
. . . . .25 Reading the LED Status Indicators . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .27 Maxtor Central Axis . . .

. . . . . .
. . . . .

. . . . .
. . . . . .

. . . . . .27 MSS II . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
. . . . .31 Backing Up and Restoring Files . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . .34 Creating a Backup Plan . . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . .34 Using Simple Backup . .
. . . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
34 Creating a Custom Backup . . . . . .

. . . . . .
. . . . .
. . . . .
. . .36 Editing Backup Settings . . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . .43 Deleting a Backup Plan . . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . . .48 Maxtor Central Axis i Using Scheduled Backup .
. . . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
. . .50 Turning Off Scheduled Backup . . . . . .

. . . . . .
. . . . .
. . . . .
. . .50 Backing Up Manually . . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . . .51 Viewing the Backup Log . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . . . .
52 Restoring Files . . . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. .54 Restoring an Historical Version . . . . . .
. . . . .
. . . . .
. . . . . .

.55 Restoring the Most Recent Version . . . . . .
. . . . .
. . . . .
. . . . . .56 Using Web Access & Sharing . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .58 Creating a Seagate Global Access Account . . .
. . . . .
. . . . .
. . . . . .

.58 Enabling and Disabling Web Access . . . . . .
. . . . .
. . . . .
. . . . . .

.62 Accessing the Seagate Web Access Website . . . . . .
. . . . .
. . . . .
. . . .69 Using Media Server . . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . . .72 Index .
. . . . .
. . . . . .

. . . . . .
. . . . .
. . . . .
. . . . . .

. . . . . .
. . . . .
. .74 Maxtor Central Axis ii Maxtor Central Axis Getting Started Overview This User Guide is written for both Windows XP and Windows Vista users. The images shown reflect the Windows XP environment, but all information is relevant for the Windows Vista environment as well. The Maxtor Central AxisTM application runs on a variety of devices.
The devices depicted in some of the images in this User Guide may differ from yours, but the information is applicable to your unit as well. The Maxtor

Central Axis adds storage to your network, backs up files across every compatible computer on your network, streams music, videos and photos from your drive to your home entertainment system, and allows you to remotely access and share backed up files via the web. The Maxtor Central Axis offers these features: · Back up files and folders to and restore them from an external USB drive · Access backed up files and folders remotely via the web · Share access to files, photos, music and videos via the web · Use media streaming to play digital photos, music and video on a networked home entertainment system without turning on your computer · Organize files automatically using Drag and SortTM · Give users full access to public folders while restricting access to private folders · View backup and storage status for all users with SimpleViewTM · Mirror data through Drive Configuration Installing the Software To install the Central Axis software, Step 1. Insert the Central Axis CD in your computer. The Install Menu opens: Overview 1 Maxtor Central Axis Figure 1: Install Menu Step 2: Click Install Maxtor Central Axis. The Welcome window opens: Figure 2: Welcome Step 3: Click Next. The EULA language selection window opens: Installing the Software 2 Maxtor Central Axis Figure 3: EULA Language Selection Step 4: Select the region and the language in which you want to read the License Agreement and click Next. The License Agreement window opens in the selected language: Figure 4: License Agreement Step 5: Click Yes to accept the terms of the License Agreement. The Choose Destination Location window opens: Installing the Software 3 Maxtor Central Axis Figure 5: Select a Destination Step 6: Accept the default destination folder or click Browse to select a different folder. Step 7: Click Next.

@@@@@@@Step 3: Accept the default options and let the installer complete. Step 4: Allow your computer to restart. If either OneTouch 4 or Central Axis features are still missing, remove and reinstall both applications: Step 1. In Add or Remove Programs, remove the OneTouch 4 Maxtor Manager software Step 2: In Add or Remove Programs, remove the Central Axis Maxtor Central Axis Manager software Step 3: Reinstall the OneTouch 4 software. Step 4: Reinstall the Central Axis software in the same directory as the OneTouch 4 software. Using the Maxtor System Tray Icon You can use the Maxtor system tray icon to check the status of your Central Axis and to access the drive features. Step 1. To check the status of your drive, roll your mouse over the system tray icon: Figure 10: System Tray Icons The information popup confirms the drive's status. When a backup has failed, the red icon continues to display until the next successful backup. You can find a description of the backup error in the Backup Log.
See Viewing the Backup Log for details on how to access the Backup Log. Step 2: To display the Maxtor Manager menu, click the system tray icon. The Maxtor Manager menu opens: Using the Maxtor System Tray Icon 7 Maxtor Central Axis Figure 11: System Tray Menu Step 3: Select the feature you want to access or select Exit to close the menu (the Maxtor Manager application remains open). Table 1: Using your Mouse with the Maxtor System Tray Icon Click the system tray icon to · Back Up Now · Open SimpleView · Change Account · Edit Backup Settings · Restore · Edit Central Axis Settings · Exit Run your mouse over the icon to show · Status Information · Status for Multiple Events Restoring the System Tray Icon If you select Exit from the System Tray menu, the Maxtor icon disappears from the System Tray. To restore the Maxtor icon to the System Tray, go to Start > Programs > Maxtor > Maxtor Status Icon Using the Maxtor System Tray Icon 8 Maxtor Central Axis Figure 12: Restore System Tray Icon Using the Maxtor System Tray Icon 9 Maxtor Central Axis Managing Your Drives The My Drives window provides a central point from which to manage your Central AxisTM drives.

You're reading an excerpt. Click here to read official MAXTOR CENTRAL AXIS user guide
http://yourpdfguides.com/dref/2943821

It displays all Maxtor devices on your computer's local network. When you open the Maxtor Manager application, one of two My Drives windows opens: · If you've installed only the Central Axis software, the My Drives windows displays that Central Axis: Figure 13: Central Axis Software Installed · If you've installed the software for both a Central Axis and other external Maxtor drives, the My Drives windows displays radio buttons allowing you to display either the external Maxtor drives or the Central Axis shared storage device: 10 Maxtor Central Axis Figure 14: Software for Multiple Drives Installed If your Central Axis does not appear in the My Drives window, make sure your unit is completely powered up and connected to the network. The power LED on the front should shine a solid green and the ethernet LED on the rear should indicate either a green 10/100 MB connection or a 1GB ethernet connection. Further troubleshooting help is available on the Seagate website at http://support.seagate.

com. Creating a User Account Anyone connected to your Central Axis can create user accounts on the Central Axis. You can create public or private (limited access) user accounts and can further customize these accounts by choosing a set of folders appropriate for either home or business use. Account Types Public: All your files are accessible to anyone who has an account on the Central Axis Private: All your files are password-protected except for those placed in your public folder to share with others Creating a User Account 11 Maxtor Central Axis Folder Types Home Folders: Folder My Backup My Documents My Library My Movies My Music My Photos My Sites My Software Public Appropriate for Backed up files Word processing files Electronic books Home videos Digital music collection Digital photos and artwork Web pages Software storage Sharing files with others Business Folders: Folder My Backup My Documents My Multimedia My Photos My Presentations My Projects My Sites My Spreadsheets My Software Public Appropriate for Backed up files Word processing files Audio and video files Digital photos and artwork Presentation files Project files Web pages Spreadsheet files Software storage Sharing files with others To create a user account on your Central Axis, Step 1. In the My Drives window, click the Create a User Account button: Creating a User Account 12 Maxtor Central Axis Figure 15: Create a in web pages that control your account setup and management. Note: You must log in as the admin user to use the Central Axis admin web pages. To access the Central Axis web pages, Step 1. Click Advanced Web Page in the Settings window. If this is your first time signing in, you're asked for the admin account name and password. The Maxtor Central Axis Main Menu opens: Managing Settings 21 Maxtor Central Axis Figure 27: Advanced Web Page Main Menu Step 2: Click the icons across the top of the window to access the Central Axis features.

Note: For detailed instructions on how to use the Advanced Web Page features, see the Maxtor Central Axis Admin User Guide. Folder Tags A Folder Tag is a special icon added to every folder selected for backup to your Central Axis: The Folder Tag setting is global and applies to all drives backed up by Maxtor Manager. To manage Folder Tags, Step 1. Click Folder Tags in the Settings window. The Folder Tags window opens: Managing Settings 22 Maxtor Central Axis Figure 28: Folder Tags Step 2: Decide whether to turn Folder Tags on or off and click Apply to apply and save your preference. SimpleView SimpleView provides an overview of storage and backup information for all accounts on this Central Axis. To open SimpleView, Step 1. Click SimpleView in the Settings window. The SimpleView window opens: Managing Settings 23 Maxtor Central Axis Figure 29: SimpleView Displayed is information on space used, date of last backup, and backup status for each user on this Central Axis. Note: A red Failed icon indicates a problem with your backup status, NOT with your Central Axis unit.

Step 2: Click Done to return to the My Drives window. Note: SimpleView can also be accessed by clicking the Information button in the My Drives window. If a red Failed icon is displayed in the Backup Status column, you can find a description of the backup error in the Backup Log. See Viewing the Backup Log for details on how to access the Backup Log. Shared Folder Backup The Shared Folder Backup feature allows you to back up data on your Central Axis to another drive connected to the Central Axis.

The Shared Folder Backup link in the Settings window takes you directly to the Maxtor Central Axis admin website. The options on this web page allow you to manage the backup of your shared folders. Managing Settings 24 Maxtor Central Axis To set Shared Folder Backup preferences, Step 1. Click Shared Folder Backup in the Settings window. The Shared Folder Backup web page opens: Figure 30: Shared Folder Backup Step 2: Use the options listed to set preferences for your shared backed up folders.

Note: For detailed instructions on how to use the Shared Folder Backup features, see the Maxtor Central Axis Admin User Guide. Updating Your Maxtor Manager Software The Software Update feature automatically informs you each month of whether your Maxtor Manager application software is up to date. However, you can manually check to see if an update is available or you can turn off the automatic Software Update feature. To manually check for updates or turn off Software Update, Step 1. Click Check for Software Update in the Settings window. The Software Update window opens. Managing Settings 25 Maxtor Central Axis Figure 31: Software Update Software Update is turned on by default. Step 2: To turn off Software Update, unselect Check for updates automatically. Step 3: To check for updates now, click Check Now. If an update is available for your software, a Software Update window allows you to download the update: Figure 32: Software Update Available Step 4: Click Yes to download the software update.

When the software update has downloaded, the Install Wizard Welcome window opens. Managing Settings 26 Maxtor Central Axis Step 5: Follow the steps in the Install Wizard to install the update. If your software is up to date, a Software Update window informs you of that: Figure 33: Software Up To Date Reading the LED Status Indicators Information about your system status is provided by the LED status indicators on the front and rear of your device. Maxtor Central Axis The Central Axis LED status indicators inform you about the status of the device: Reading the LED Status Indicators 27 Maxtor Central Axis Figure 34: Central Axis Single Drive LEDs Front View Reading the LED Status Indicators 28 Maxtor Central Axis Figure 35: Central Axis Dual Drive LEDs Front View Table 2: Front LED Activity States LED Descriptions Power: · Illuminated Hard Disk Drive Activity: · Illuminated State Power on Data being transferred Status: · Steady White Status OK; · Flashing White Powering on or off; · Flashing White/Red Combinations See Status LED Error Codes table below Table 3: Status LED Error Codes Flashing LED Descriptions Error 1 White/1 Red 1 White/2 Red Failure to mirror shared folder Hard disk drive S.

You're reading an excerpt. Click here to read official MAXTOR CENTRAL AXIS user guide
http://yourpdfguides.com/dref/2943821

M.A.R.T. Error: Problem with Drive 1 Reading the LED Status Indicators 29 Maxtor Central Axis Table 3: Status LED Error Codes (continued) Flashing LED Descriptions Error 1 White/3 Red 1 White/4 Red 2 White/2 Red 2 White/3 Red Boot Error: Cannot boot from Drive 1 Failure to mount shared folder partition Hard disk drive S.M.

A.R.T Error: Problem with Drive 2 Boot Error: Cannot boot from Drive 2 Figure 36: Central Axis Single Drive LEDs Rear View Reading the LED Status Indicators 30 Maxtor Central Axis Figure 37: Central Axis Dual Drive LEDs Rear View Table 4: Rear LED Activity States LED Descriptions Ethernet Connector: · Amber · Green · Green Flashing State GB connection Network connected Network activity MSS II The MSS II LED indicators inform you about the status of the device: Reading the LED Status Indicators 31 Maxtor Central Axis Figure 38: Drive LEDs Front View Table 5: Front LED Activity States LED Descriptions Status: · Steady Green · Flashing Green · Flashing Green/Amber Combinations Hard Disk Drive Activity: · Illuminated Network Activity: · Flashing Green Table 6: Status LED Error Codes State Status OK Powering on or off See Status LED Error Codes table below Data being transferred Network activity Flashing LED Descriptions 1 Green/1 Amber 1 Green/2 Amber 1 Green/3 Amber 1 Green/4 Amber 2 Green/2 Amber 2 Green/3 Amber Error Failure to mirror shared folder Hard drive S.M.A.

R.T. Error: Problem with Drive 1 Boot Error: Cannot boot from Drive 1 Failure to mount shared folder partition Hard drive S.M.A.

R.T Error: Problem with Drive 2 Boot Error: Cannot boot from Drive 2 Figure 39: Drive LEDs Rear View Reading the LED Status Indicators 32 Maxtor Central Axis Table 7: Rear LED Activity States LED Descriptions Power: · Illuminated Ethernet Connector: · Amber · Green · Green Flashing State Power on GB connection Network connected Network activity Reading the LED Status Indicators 33 Maxtor Central Axis Backing Up and Restoring Files The Central Axis Backup feature allows you to · Schedule the backup of selected folders · Edit backup settings · Launch an immediate file backup · Restore backed up files After the initial backup, the Maxtor Manager software backs up changed files in backed up folders on a schedule you set or when you click Back Up Now in the Backup window. You can create one Backup Plan for each Central Axis connected to your computer. You can select either of two types of Backup Plans: · Simple Backup: Pre-configured to back up your XP My Documents or Vista Personal Folder folder daily at 10:00 p.m. @@To use Simple Backup, Step 1. Click the Backup icon in the Maxtor Manager window. @@@@@@Click the Backup icon in the Maxtor Manager window. @@@@@@Select Include these file types. 2.

@@-- To back up most of the available file types, 1. Select Exclude these file types. 2. @@@@@@Click the Backup icon in the Maxtor Manager window. @@@@@@@@@@To delete a Backup Plan, Step 1. Click the Backup icon in the Maxtor Manager window. @@@@Step 3: Select the Backup Plan you want to delete and click Delete. @@@@@@@@-- OR -- · Select Back Up Now from the System Tray menu: A Backup Progress window tells you when the backup is complete: Backing Up Manually 51 Maxtor Central Axis Figure 58: Manual Backup Complete Viewing the Backup Log The Backup Log is a text-based report of your backup history. To view the Backup Log, Step 1. Click View Backup Log in the Backup window: Viewing the Backup Log 52 Maxtor Central Axis Figure 59: Backup A text file showing the history of your system backups opens: Figure 60: Backup Log Viewing the Backup Log 53 Maxtor Central Axis Restoring Files When you back up the files stored in selected folders, the Maxtor Manager saves ten (10) previous, or historical, versions of each revised file stored on your Central Axis.

You can restore a saved historical version of a backed up file based on the date it was last modified or you can restore the most recent version of a backed up file. · Historical Version: Restore an individual historical version of a file based on the date it was backed up. · Most Recent Version: Restore the most recent version of multiple files and folders by clicking on them in the My Backup folder for your user account on the Central Axis and dragging them to wherever you want to put them on your computer. Note: An encrypted file is restored based on the date it was backed up rather than on the date it was last modified. To restore files, Step 1.

Click the Backup icon in the Maxtor Manager window. The Backup window opens: Figure 61: Backup Listed beneath Restore Files are the date and time of your most recent backup. Step 2: Click Restore Files. The Restore a Backup window opens: Restoring Files 54 Maxtor Central Axis Figure 62: Restore a Backup Restoring an Historical Version To restore a previous version of a file, Step 1. Click Restore historical version of backed up file.

The Restore Historical Version window opens: Restoring Files 55 Maxtor Central Axis Figure 63: Restore Historical Version Step 2: Select a file and file version to be restored and click Restore. The selected file version is restored to the location noted in the Restore Historical Version window. Restoring the Most Recent Version To restore the most recent version of a file, Step 1. Click Restore most recent version. Windows Explorer displays the contents of the Maxtor Backup folder: Restoring Files 56 Maxtor Central Axis Figure 64: Maxtor Backup in Windows Explorer Step 2: Browse to the desired files and folders and drag them to the location on your computer at which you want them restored. Step 3: Close Windows Explorer. Restoring Files 57 Maxtor Central Axis Using Web Access & Sharing The Web Access & Sharing feature allows you to access files you've stored on your Central Axis from any computer with an Internet connection and to share stored files with others via the web. · You manage Web Access by enabling or disabling web access to your files in the Web Access & Sharing window in the Maxtor Manager application on your desktop. · You manage Web Sharing by setting preferences on the Shared Folder Management page on the Maxtor Central Axis admin webpage. To use Web Access, you must have both a Seagate Global Access account and a Central Axis user account.

You probably created a Central Axis user account when you set up your Central Axis (see Managing Your Drives for further information). If you do not yet have a free Seagate Global Access account, you can create one now. Creating a Seagate Global Access Account To create a Seagate Global Access account, Step 1.

[You're reading an excerpt. Click here to read official MAXTOR CENTRAL AXIS user guide](http://yourpdfguides.com/dref/2943821)
http://yourpdfguides.com/dref/2943821

Click the Web Access & Sharing icon in the Maxtor Manager window. The Web Access & Sharing window opens: Figure 65: Web Access & Sharing Creating a Seagate Global Access Account 58 Maxtor Central Axis Step 2: Click Enable/Disable Web Access. Step 3: The Web Access & Sharing local account window opens: Figure 66: Web Access & Sharing Local Account Step 4: Enter the username and password for your local Central Axis account and click Enter. The Seagate Global Access account window opens: Creating a Seagate Global Access Account 59 Maxtor Central Axis Figure 67: Global Access Account Step 5: If you have not yet created a Seagate Global Access account, click Create an Account. The Seagate Sign In page opens: Figure 68: Seagate Sign In Page Step 6: Enter your email address below Don't have an account? and click Send. Creating a Seagate Global Access Account 60 Maxtor Central Axis The page refreshes to indicate that Seagate has sent you an email: Figure 69: Seagate Email Sent Step 7: Check your account for the email from Seagate, which contains a link to the web page on which to open a Seagate Global Access account: Figure 70: Seagate Create Account Email Step 8: Click the link in the Seagate email. The Seagate Global Access Account Setup page opens: Creating a Seagate Global Access Account 61 Maxtor Central Axis Figure 71: Seagate Global Access Account Setup Your username is the email address you used to register for your Global Access account.

Step 9: Enter and re-enter a password for your Global Access account and click Sign In. Step 10: The Seagate Web Access page opens: Figure 72: Seagate Global Web Access You have created a Global Account. You can close the web page and return to the Maxtor Manager application on your desktop. Enabling and Disabling Web Access Web Access allows you to access via the web the same folders on your Central Axis that you can access via the Central Axis desktop application. Before you can access folders stored on your Central Axis via the web, you must enable Web Access for those folders.

To Enabling and Disabling Web Access 62 Maxtor Central Axis do this, you must link your Maxtor Central Axis local account to your Seagate Global Access account. Note: For information on creating a Maxtor Central Axis local account, see Creating a User Account. For information on creating a Seagate Global Access account, see Creating a Seagate Global Access Account. To enable or disable Web Access, Step 1. Click the Web Access & Sharing icon in the Maxtor Manager window.

The Web Access & Sharing window opens: Figure 73: Web Access & Sharing Step 2: Click Enable/Disable Web Access. The Web Access & Sharing local account window opens: Enabling and Disabling Web Access 63 Maxtor Central Axis Figure 74: Web Access & Sharing Local Login Step 3: Enter the username and password for your local Central Axis account and click Enter. The Seagate Global Access account window opens: Enabling and Disabling Web Access 64 Maxtor Central Axis Figure 75: Web Access & Sharing Global Access Login Step 4: Enter your Global Access username (email address) and password and click Enter. @@@@@@To go to the Seagate Web Access website, Step 1. @@The Global Access web page opens. Accessing the Seagate Web Access Website 70 Maxtor Central Axis Figure 82: Global Access Web Page Note: For detailed instructions on how to use the Global Access website features, see the Seagate Global Access User Guide. Accessing the Seagate Web Access Website 71 Maxtor Central Axis Using Media Server Media Server allows you use your Central AxisTM with any UPnP-enabled home entertainment system to play back digital photos, music, and videos on networked home entertainment systems. You can export your favorite music and video playlists. You can even search your iTunes Music folder for music and video files Media Server recognizes files in Our Photos, Our Music, Our Movies, My Photos, My Music, My Movies, and My Multimedia folders. If you put your files in these folders, they are automatically available for use with your entertainment system.

To use Media Server, Step 1. Click the Media Server icon in the Maxtor Manager window. The Media Server window opens: Figure 83: Media Server Step 2: Click Manage Digital Content. The Manage Digital Content page on the Admin website opens: 72 Maxtor Central Axis Figure 84: Manage Digital Content Step 3: Use the options on the Manage Digital Content web page to set preferences for your Media Server. Note: For detailed instructions on how to use the Admin Web Page features, see the Admin User Guide. 73 Maxtor Central Axis Index A Accessing the Seagate Web Access Website 69 Account Types 11 Advanced Web Page 21 B Backing Up and Restoring Files 34 Restoring Files 54 Backing Up Manually 51 Backup Log 52 C Connecting to a User Account 15 Creating a Backup Plan 34 Creating a Custom Backup Using Simple Backup 34 36 Creating a Custom Backup 36 Creating a Seagate Global Access Account 58 Creating a User Account 11 Account Types 11 Folder Types 12 D Deleting a Backup Plan 48 Drag and Sort 20 E Editing Backup Settings 43 Enabling and Disabling Web Access 62 F Folder Tags 22 Folder Types 12 G Getting Account Information 17 Getting Started 1 Installing the Software 1 Using the System Tray Icon 7 I Installing OneTouch 4 after Installing Central Axis 6 74 Maxtor Central Axis Installing the Software 1 L LED Status Indicators 27 Maxtor Central Axis MSS II 31 27 M Managing Settings 19 Advanced Web Page 21 Drag and Sort 20 Folder Tags 22 Shared Folder Backup 24 SimpleView 23 Updating Your Maxtor Manager Software 25 Managing Your Drives 10 Connecting to a User Account 15 Creating a User Account 11 Getting Account Information 17 Managing Settings 19 O Overview 1 R Restoring an Historical Version 55 Restoring Files 54 Restoring an Historical Version 55 Restoring the Most Recent Version 56 Restoring the Most Recent Version 56 Restoring the System Tray Icon 8 S Scheduled Backup 50 Shared Folder Backup 24 SimpleView 23 Status Indicators 27 T Turning Off Scheduled Backup 50 U Updating Your Maxtor Manager Software 25 Using Media Server 72 Using Simple Backup 34 Using the System Tray Icon 7 UsingWebAccess&Sharing 58 75 .

You're reading an excerpt. Click here to read official MAXTOR CENTRAL AXIS user guide
http://yourpdfguides.com/dref/2943821