Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NIKON MB-D11. You'll find the answers to all your questions on the NIKON MB-D11 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual NIKON MB-D11**
**User guide NIKON MB-D11**
**Operating instructions NIKON MB-D11**
**Instructions for use NIKON MB-D11**
**Instruction manual NIKON MB-D11**

Nikon

Multi-Power Battery Pack

# MB-D11

## User's Manual

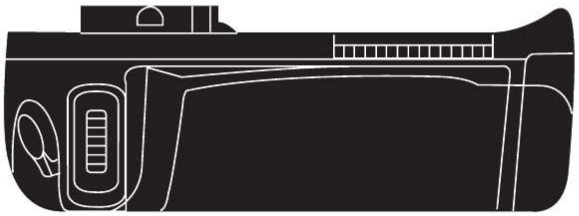

Jp En De Fr Es No Sv Fl Ru Dk Nl Pt It Gr Pl Cz Hu Sk Sl Et Lv Lt Is Ro Ua Ck Ch Kr Th Id Tr Ar

You're reading an excerpt. Click here to read official NIKON MB-D11 user guide
http://yourpdfguides.com/dref/3537941

***Manual abstract:***

*After reading, be sure to keep it where it can be seen by all those who use the product. This symbol indicates that this product is to be collected separately. The following apply only to users in European countries: · For more information, contact the retailer or the local authorities in charge of waste management. Do not use with batteries and battery holders not recommended in this manual. To prevent electrical shorts caused by metal objects touching the power terminals, replace the contact cap when the MB-D11 is not in use. @@@@@@After removing the batteries, take the device to the retailer or a Nikon-authorized service representative for inspection. The MB-D11 is not equipped with a power switch. Use the camera power switch to turn the power on or off. @@@@@@However, there is no guarantee that interthis device that are not expressly approved by ference will not occur in a particular installation. If Nikon Corporation may void the user's authority this equipment does cause harmful interference to to operate the equipment.*

*Radio or television reception, which can be deterNikon Inc. , mined by turning the equipment off and on, the 1300 Walt Whitman Road, Melville, New York user is encouraged to try to correct the interference by one or more of the following measures: 11747-3064, U. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Notice for Customers in Canada CAUTION This Class B digital apparatus complies with Canadian ICES-003. Thank you for your purchase of an MB-D11 multi-power battery pack for use with all Nikon single-lens reflex digital cameras that list the MB-D11 as a compatible accessory in the camera manual.*

*The MB-D11 takes one EN-EL15 rechargeable battery or six AA batteries (alkaline, Ni-MH, or lithium) and includes an alternate shutter-release button, AE-L/AF-L button, multi selector, and main and sub-command dials for taking pictures in "tall" (portrait) orientation. @@@@@@@@@@@@@@@The control lock is not a power switch. Use the camera power switch to turn the camera on and off. Attaching the Battery Pack Before attaching the battery pack, be sure that the camera is off and that the MB-D11 control lock (Figure A- ! 2 The contacts for the MB-D11 are in the base of the camera, where they are protected by a contact cover. Remove the contact cover as shown in Figure B-q and place it in the contact cover holder on the MB-D11 (Figure B- w).*

*3 Position the MB-D11, keeping the MB-D11 mounting screw (Figure C- w) aligned with the camera tripod socket (Figure C- q) and tighten the attachment wheel by rotating it in the direction shown by the LOCK arrow (Figure D). There is no need to remove the battery from the camera before connecting the MB-D11. at default settings , the battery inserted in the camera will be used only after the battery in the MB-D11 is exhausted. The Battery order option in the camera Custom Settings menu (Group d) can be used to change the order in which the batteries are used. see the camera manual for details.*

*@@@@@@@@@@@@@@@@@@@@@@@@@Make sure the holder is fully inserted before turning the latch. @@@@@@Ready fully-charged spare battery or charge battery. @@@@If the s icon blinks, the battery-chamber cover is not locked. close and latch the battery-chamber cover. To ensure that the camera shows the correct battery level when AA batteries are used, choose the appropriate option for MB-D11 battery type in the camera Custom Settings menu (Group d).*

*If the correct option is not selected, the camera may fail to function as expected. Battery Info Battery information can be viewed from the camera setup menu (the camera battery is listed on the left, the MB-D11 on the right). Only the battery level icon is shown when AA batteries are used. Remove the batteries when the MB-D11 is not in use. Note: The illustrations on this page are from the D7000. Be careful not to drop the batteries when removing them from the holder. Power source One EN-EL15 rechargeable Li-ion battery, six LR6 alkaline, HR6 Ni-MH, or FR6 lithium AA batteries, or EH-5a AC adapter (requires EP-5B power connector) 0  40 °C (32  104 °F) Approx. ) with MS-D11EN and optional EP-5B power connector Approx. @@@@@@Cold batteries will recover some of their charge when warmed. @@@@@@Use is not recommended at low temperatures.*

*@@EN-EL15 : Aligner les encoches de la pile avec les parties saillantes du support MS-D11EN, insérer la pile avec la flèche () sur la pile orientée vers les contacts d'alimentation du support de la pile (Figure F- q). Het battery pack aansluiten Controleer voordat u het battery pack aansluit of de camera uit staat en of de bedieningsvergrendeling van de MB-D11 (figuur A- ! 3 Multi power battery pack MB-D11 e accessori. 3 Multi power battery pack MB-D11 e accessori in dotazione . 3 Uso dell'adattatore CA EH-5a e del connettore di alimentazione EP-5B opzionali. 3 Parti del multi power battery pack MB-D11. Utilizzare il multi power battery pack MB-D11 solo con fotocamere compatibili. Per evitare cortocircuiti causati da oggetti metallici a contatto con i contatti di alimentazione, riposizionare il copricontatto quando il multi power battery pack MB-D11 non è utilizzato. Se un portabatterie viene rimosso dal multi power battery pack MB-D11, rimuovere le batterie o sistemare il portabatterie o il coperchio nel proprio contenitore per evitare cortocircuiti causati dal contatto con altri oggetti metallici. @@@@@@@@@@@@Il portabatterie MS-D11EN è inserito nel multi power battery pack MB-D11 al momento della spedizione. Parti del multi power battery pack MB-D11 (Figura A) 9 Contatti di alimentazione (portabatterie MS-D11EN) @0 Portabatterie MS-D11 per batterie AA @1 Contatti di alimentazione (portabatterie MS-D11) 4 MB-D11 Pulsante di scatto, multiselettore, ghiere di comando e pulsante AE-L/AF-L Il multi power battery pack MB-D11 è dotato di un pulsante di scatto (Figura A- ! Collegamento del battery pack Prima di collegare il battery pack, accertarsi che la fotocamera sia spenta e che il blocco dei comandi MB-D11 (Figura A- ! 2 I contatti per il multi power battery pack MB-D11 si trovano sulla base della fotocamera, dove sono protetti da un copricontatto.*

*Rimuovere quest'ultimo come mostrato in Figura B- q e inserirlo nell'apposito alloggiamento sul multi power batt.*

[You're reading an excerpt. Click here to read official NIKON MB-D11 user guide](http://yourpdfguides.com/dref/3537941)
http://yourpdfguides.com/dref/3537941