Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for NILFISK CA 340. You'll find the answers to all your questions on the NILFISK CA 340 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NILFISK CA 340
User guide NILFISK CA 340
Operating instructions NILFISK CA 340
Instructions for use NILFISK CA 340
Instruction manual NILFISK CA 340

SCRUBBER-DRYER

CA 340/CA 340 ET

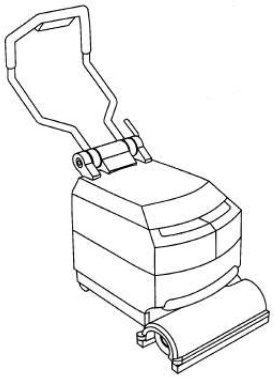

D BEDIENUNGS- UND WARTUNGSANLEITUNG
F MANUEL D'EMPLOI ET D'ENTRETIEN
GB USE AND MAINTENANCE MANUAL
NL GEBRUIKERS- EN ONDERHOUDSHANDLEIDING

Nilfisk Advance
setting standards

CE

08603372(3)2004-05 A

You're reading an excerpt. Click here to read official NILFISK CA 340 user guide
http://yourpdfguides.com/dref/2884795

Manual abstract:

@@Nilfisk uses the symbols below to signal potentially dangerous conditions. Always read this information carefully and take the necessary, measures to protect personnel and property. Repairs, when required, should be performed by Nilfisk service personnel using Nilfisk original replacement parts and accessories. Call Nilfisk for repair parts or service. Please always specify the Model and Serial Number referring to when your machine. Is used to call attention to a situation that could cause severe personal injury. cAUTION! Is used to call attention to a situation that could cause minor personal injury or damage to the machine or other property. When using an electrical appliance, basic precautions should always be followed, including the following. Read all instructions before using this machine. The Model and Serial Number of your machine are shown on the Name plate on the back panel of the machine. @@@@@@@@@@@Do not leave the machine when it is plugged in. Unplug the unit from the outlet when not in use and before servicing. Do not allow machine to be used as a toy. Close attention is necessary when operating near children. Use the machine only as described in this manual.
use only the manufacturer's recommended attachments. Do not use with damaged cord or plug. @@@@ do not run the appliance over the cord. Keep the cord away from heated surfaces. Do not handle the plug, cord or appliance with wet hands.
Do not insert any object into openings. @@@@@@Turn off all controls before unplugging. @@Always fit the mains plug to a correct socket connection. @@For repairs, use original Nilfisk spare parts only. @@When cleaning and servicing the machine, local or national regulations must be applied for the safe disposal of liquids which may contain chemicals, grease, oil, acid, alkalines or other dangerous liquids. When disposing of old machines or machine components local or national regulations must be applied for their safe disposal. Moving parts - unplug machine before servicing. cAUTION! The brush locking screw has a left hand thread. Screw in safety screw with washer and tighten brush. + more brush pressure = turn setscrew to the right.

- less brush pressure = turn setscrew to the left. Fill the solution tank with cleaning solution. Do not fill up the solution tank completely: leave 3 cm from the top of the tank. The solution should be a mixture of water and a cleaning chemical according to the type of job. Press the foot peddle down to raise brush and squeegee. Empty solution tank and rinse it with clean water. 5. Empty recovery tank and rinse it with clean water. Clean them with clean water or replace it if damaged. Clean it with air or replace it if clogged.
11. Store the machine in a clean, dry place. For best results, move machine at a slow walking speed. In case of heavy soilage, scrub floor first with water and switch vacuum motor OFF. Then scrub floor again and pick up the water.
To avoid damaging the floor, keep the machine moving while the brush is turning. When the float closes, the recovery tank must be emptied. The machine will not pick up water with the float closed. 10. When the recovery tank is full, turn the master switch OFF.
remove the recovery tank and drain it (CA340 only). Remove the draining hose and drain the recovery tank in a road drain well or a bucket (only with membrane tank). Before assemblying it again, rinse tank with clean water. @@@@Sound pressure level (at 1. @@Do not carry the machine with a folded down handle bar. Carry the machine only on the specified positions. .

You're reading an excerpt. Click here to read official NILFISK CA 340 user guide
http://yourpdfguides.com/dref/2884795