Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC KX-TGA410. You'll find the answers to all your questions on the PANASONIC KX-TGA410 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PANASONIC KX-TGA410
User guide PANASONIC KX-TGA410
Operating instructions PANASONIC KX-TGA410
Instructions for use PANASONIC KX-TGA410
Instruction manual PANASONIC KX-TGA410

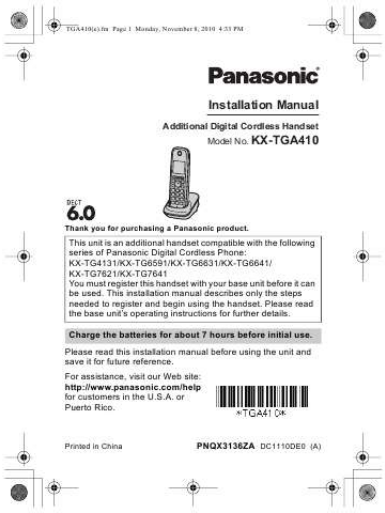

TGA410(e).fm Page 1 Monday, November 8, 2010 4:33 PM

Panasonic

Installation Manual

Additional Digital Cordless Handset
Model No. **KX-TGA410**

DECT **6.0**

Thank you for purchasing a Panasonic product.

This unit is an additional handset compatible with the following series of Panasonic Digital Cordless Phone:
KX-TG4131/KX-TG6591/KX-TG6631/KX-TG6641/
KX-TG7621/KX-TG7641
You must register this handset with your base unit before it can be used. This installation manual describes only the steps needed to register and begin using the handset. Please read the base unit's operating instructions for further details.

Charge the batteries for about 7 hours before initial use.

Please read this installation manual before using the unit and save it for future reference.

For assistance, visit our Web site:
http://www.panasonic.com/help
for customers in the U.S.A. or Puerto Rico.

TGA41Q

Printed in China

PNQX3136ZA DC1110DE0 (A)

You're reading an excerpt. Click here to read official PANASONIC KX-TGA410 user guide
http://yourpdfguides.com/dref/3973507

Manual abstract:

fm Page 1 Monday, November 8, 2010 4:33 PM Installation Manual Additional Digital Cordless Handset Model No. KX-TGA410 Thank you for purchasing a Panasonic product. This unit is an additional handset compatible with the following series of Panasonic Digital Cordless Phone: KX-TG4131/KX-TG6591/KX-TG6631/KX-TG6641/ KX-TG7621/KX-TG7641 You must register this handset with your base unit before it can be used. This installation manual describes only the steps needed to register and begin using the handset. Please read the base unit's operating instructions for further details. Charge the batteries for about 7 hours before initial use. Please read this installation manual before using the unit and save it for future reference. For assistance, visit our Web site: http://www.panasonic.com/help for customers in the U.

*S.A. or Puerto Rico. Printed in China PNQX3136ZA DC1110DE0 (A) TGA410(e).fm Page 2 Monday, November 8, 2010 4:33 PM Accessory information Supplied accessories Accessory item/Order number Charger*1 AC adaptor/PNLV226Z Rechargeable batteries/HHR-4DPA Handset cover *2, *3 Quantity 1 1 2 1 *1 PNLC1018ZB: Black, PNLC1018ZM: Metallic gray PNLC1018ZN: Champagne gold *2 PNYNTGA410BR: Black, PNYNTGA410MR: Metallic gray PNYNTGA410NR: Champagne gold *3 The handset cover comes attached to the handset.*

Note: L Please read the base unit's operating instructions for additional/ replacement accessories. Setting up Connections/Wall mounting 25.4 mm (1 inch) Screws (Not supplied) (120 V AC, 60 Hz) Hooks 2 For assistance, please visit http://www.panasonic.com/help TGA410(e).

fm Page 3 Monday, November 8, 2010 4:33 PM Note: L Use only the supplied Panasonic AC adaptor PNLV226. L The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.) L Make sure that the wall and the fixing method are strong enough to support the weight of the unit. Battery installation/Battery charging Important: L Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on page 2. L Wipe the battery ends (S, T) with a dry cloth. L Avoid touching the battery ends (S, T) or the unit contacts. L Confirm correct polarities (S, T). L USE ONLY Ni-MH batteries AAA (R03) size.

L Do NOT use Alkaline/Manganese/Ni-Cd batteries. Charge for about 7 hours. @@@@@@@@3 {SAVE} s {OFF} For your safety To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product. WARNING Power connection L Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire. L Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire. L Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise.

These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact the Panasonic Call Center at 1-800-211- PANA (1-800-211-7262). 4 For assistance, please visit http://www.panasonic.com/help TGA410(e).

fm Page 5 Monday, November 8, 2010 4:33 PM Installation L To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture. L Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident. CAUTION Installation and location L The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.

Battery L We recommend using the supplied batteries or additional/replacement batteries noted on page 2 for replacement battery information. USE ONLY rechargeable Ni-MH batteries AAA (R03) size. L Do not mix old and new batteries. L Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed. L Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns. L Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual. @@Do not tamper with the base unit (or charger).

@@@@@@@@2. @@3. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions. @@Move away from the electrical appliances. @@Dispose of used batteries according to the instructions. @@L Do not use benzine, thinner, or any abrasive powder. @@@@@@@@@@@@@@@@This device complies with Part 15 of the FCC Rules.

@@Privacy of communications may not be ensured when using this phone. CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. For assistance, please visit http://www.panasonic.

com/help 7 TGA410(e).fm Page 8 Monday, November 8, 2010 4:33 PM Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. FCC RF Exposure Warning: L This product complies with FCC radiation exposure limits set forth for an uncontrolled environment. L This handset may not be collocated or operated in conjunction with any other antenna or transmitter. L For body-worn operation, the handset must be used only with a non-metallic accessory. Use of other accessories may not ensure compliance with FCC RF exposure requirements.

[You're reading an excerpt. Click here to read official PANASONIC KX-TGA410 user guide](http://yourpdfguides.com/dref/3973507)
http://yourpdfguides.com/dref/3973507

@@@@@@@La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale. LEste producto está diseñado para usarse en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir violación de la legislación local.

L L 8 For assistance, please visit http://www.panasonic.com/help TGA410(e).fm Page 9 Monday, November 8, 2010 4:33 PM Notes For assistance, please visit http://www.panasonic.com/help 9 TGA410(e).fm Page 10 Monday, November 8, 2010 4:33 PM If your product is not working properly. . . 1 Reconnect AC adaptor to the base unit.
2 Check if telephone line cord is connected. 3 Use rechargeable Ni-MH batteries. (Alkaline/Manganese/Ni-Cd batteries CANNOT be used.) IMPORTANT! 4 Read troubleshooting page in the base unit's Operating Instructions. Visit our Web site: http://www.
panasonic.com/help L FAQ and troubleshooting hints are available. One Panasonic Way, Secaucus, New Jersey 07094 © Panasonic System Networks Co., Ltd. 2010 10 For assistance, please visit http://www.
panasonic.com/help TGA410(sp).fm Page 1 Friday, November 5, 2010 7:02 PM Manual de instalación Auricular Inalámbrico Digital Adicional Modelo N° KX-TGA410 Gracias por adquirir un producto Panasonic. Esta unidad es un auricular adicional compatible con la siguiente serie de teléfonos inalámbricos digitales Panasonic: KX-TG4131/KX-TG6591/KX-TG6631/KX-TG6641/KX-TG7621/ K.

You're reading an excerpt. Click here to read official PANASONIC KX-TGA410 user guide
http://yourpdfguides.com/dref/3973507