




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH PCP615B90B. You'll find the answers to all your questions on the BOSCH PCP615B90B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH PCP615B90B
User guide BOSCH PCP615B90B
Operating instructions BOSCH PCP615B90B
Instructions for use BOSCH PCP615B90B
Instruction manual BOSCH PCP615B90B

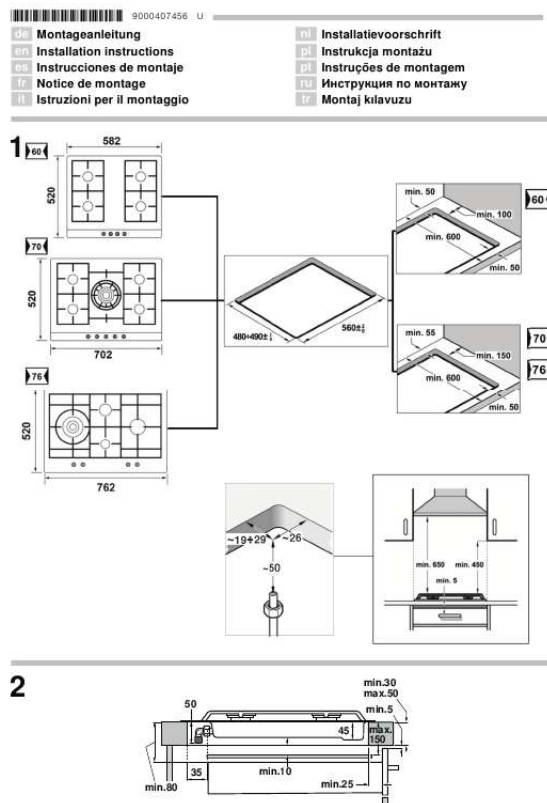

[You're reading an excerpt. Click here to read official BOSCH PCP615B90B user guide](http://yourpdfguides.com/dref/4541608)
<http://yourpdfguides.com/dref/4541608>

Manual abstract:

An oven must have forced ventilation to install a hob above it. Check the dimensions of the oven in the installation manual. If an extractor fan is installed, you must follow the installation manual's instructions, always keeping a minimum distance of 650 mm to the hob. Preparation of the kitchen unit (fig. 1-2) Make an appropriate size cut in the work surface. @@ g. Metal or plywood) 10 mm from the bottom of the hob. This will prevent access to the base of the hob.

@@@Installation of appliance Depending on the model, the adhesive seal may be factoryfitted. If this is the case, it should not be removed under any circumstances, since the adhesive seal prevents leaks.

If the seal has not been factory-fitted, apply it to the underside of the hob. Fitting the appliance onto the kitchen unit: 1. Screw each one of the clips into the position indicated so that they are free to rotate. Press the sides of the hob until it is supported around its entire perimeter. 3.

Turn the clips and tighten them fully. The position of the clips depends on how thick the work surface is. Unscrew the clips and proceed in the reverse order to installation. @@@@Before you begin, turn off the appliance's electricity and gas supply. This appliance has been designed for home use only, not for commercial or professional use.

This appliance cannot be installed on yachts or in caravans. The warranty will only be valid if the appliance is used for the purpose for which it was designed. Before installing, check that local distribution conditions (gas type and pressure) and the appliance's adjustment are compatible (see table I). The appliance's adjustment conditions are written on the label or the specifications plate. @@@@Appliances with electrical supply must be earthed. Do not tamper with the appliance's interior. If necessary, call our Technical Assistance Service. gas connection (fig. @@955 mm) thread that allows for: □ fixed connection.

@@@@@Please remember to insert the seal.

: Danger of leaks! If any connection is handled, check the seal. @@ electric connection (fig. @@@@The cable type and minimum cross-section must be respected. Before installing This appliance is class 3 type, according to the EN 30-1-1 regulation for gas appliances: built-in appliance. The units next to the appliance must be made of non-flammable materials. The laminated covering and glue for adhering it must be heat resistant. @@@The following steps should be taken: A) Changing the nozzles (fig. @@@Primary air adjustment is not necessary with these burners. Remove the control knobs from the taps. @@Never remove the valve reinforcing ring.

3. Adjust the minimum ring setting by turning the by-pass screw using a flat head screwdriver. Depending on the gas to which your appliance is going to be adapted, see table III, carry out the corresponding action: A: firmly tighten the by-pass screws. B: loosen the by-pass screws until the gas flow from the burners is correct: when adjusting the control knob between maximum and minimum, the burner does not go out, nor is there a flame backdraught created. C: the by-pass screws need to be changed by an authorised engineer.

D: do not touch the by-pass screws. If the by-pass screw cannot be accessed, disassemble the grease drip tray, which is fitted to the hob via a series of clips and screws. The following steps must be taken to remove it: 1. Remove the screws from the burners. 3.

@@@@ 4. @@@@These devices are essential for the correct operation of the appliance as they prevent liquids and dirt from entering the appliance. Never remove the tap spindle (Fig. 10). In the event of a malfunction, change the whole tap. caution! After finishing, the sticker indicating the new type of gas must be placed close to the specifications plate. .



[You're reading an excerpt. Click here to read official BOSCH PCP615B90B user guide](http://yourpdfguides.com/dref/4541608)
<http://yourpdfguides.com/dref/4541608>