



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE GLEQ2152EE1. You'll find the answers to all your questions on the FRIGIDAIRE GLEQ2152EE1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FRIGIDAIRE GLEQ2152EE1

User guide FRIGIDAIRE GLEQ2152EE1

Operating instructions FRIGIDAIRE GLEQ2152EE1

Instructions for use FRIGIDAIRE GLEQ2152EE1


Instruction manual FRIGIDAIRE GLEQ2152EE1

Installation Instructions

Dryer

Instrucciones para la instalación

Secadora

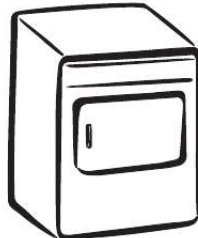

P/N 134917700 (0707)



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEQ2152EE1 user guide](http://yourpdfguides.com/dref/3200352)

<http://yourpdfguides.com/dref/3200352>

Manual abstract:

this will simplify the installation and ensure the dryer is installed correctly and safely. Leave these instructions near the Dryer after installation for future reference. NOTE: The electrical service to the Dryer must conform with local codes and ordinances and the latest edition of the National Electrical Code, ANSI/NFPA 70, or in Canada, the Canadian electrical code C22. 1 part 1. NOTE: The gas service to the Dryer must conform with local codes and ordinances and the latest edition of the National Fuel Gas Code ANSI Z223. This Dryer is not recommended for commercial applications such as restaurants or beauty salons, etc. For your safety the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or loss of life. - Do not store or use gasoline or other flammable vapors and liquid in the vicinity of this or any other appliance. - WHAT TO DO IF YOU SMELL GAS · Do not try to light any appliance. Do not touch any electrical switch; do not use any phone in your building.

Clear the room, building or area of all occupants. Immediately call your gas supplier from a neighbor's phone. If you cannot reach your gas supplier, call the fire department. , with 3 open end spade lug connectors with upturned ends or closed loop connectors and marked for use with clothes dryers.

When the dryer stops, the dampers automatically close to prevent drafts and the entrance of insects and rodents.

to avoid restricting the outlet , maintain a minimum of 12 inches (30. 5 cm) clearance between the vent hood and the ground or any other obstruction. The following are specific requirements for proper and safe operation of your dryer. Failure to follow these instructions can create excessive drying times and fire hazards. do not use plastic flexible duct to exhaust the dryer.

Excessive lint can build up inside exhaust system and create a fire hazard and restrict air flow. restricted air flow will increase dryer times. If your present system is made up of plastic duct or metal foil duct, replace it with a rigid or flexible metal duct. Ensure the present duct is free of any lint prior to installing dryer duct. POWER SUPPLY CORD - The dryer is equipped with a 120 volt 3-wire power cord. NOTE: Do not under any circumstances remove grounding prong from plug. If the dryer is not exhausted outdoors, some fine lint will be expelled into the laundry area. An accumulation of lint in any area of the home can create a health and fire hazard. the dryer must be connected to an exhaust outdoors. Regularly inspect the outdoor exhaust opening and remove any accumulation of lint around the outdoor exhaust opening and in the surrounding area.

Apply moderate pressure downward and rotate lens 180 degrees so holes in lens again align with holes in transition ring. (Figure 11) 12. Remove four (4) screws from side of door opposite of where hinge was mounted. 13. Install four (4) screws securing hinge to door assembly in the new location, take note to place hinge in correct orientation. Install striker (included in literature bag) into hole square plug was previously installed. Flip door so lens side is facing down (Figure 7) and push transition plugs out of transition ring and through lens. (Figure 8). Only required on doors with transition plugs. Flip door, lens side up, apply moderate pressure downward and rotate 180 degrees so holes in lens align with holes in transition ring where handle was installed.

Reinstall door handle by placing the handle mounting bosses through holes in lens and transition ring and installing screws through inner door and tighten into handle bosses. Grasping firmly the top of the door, position the door near the door opening and align the top hinge hole to the top hole in the front panel door opening. Once the first screw is started, attach the second screw to the lower hinge. Once both screws are tightened, install the remaining two screws.

20.

Insert transition plugs through lens and place into transition ring. this appliance MUST be properly grounded. Electrical shock can result if the dryer is not properly grounded. Follow the instructions in this manual for proper grounding. Do not use an extension cord with this dryer.

Approved strain relief must be installed onto power cord. If in doubt, call a licensed electrician. Do not modify plug provided with the appliance. Do not cut or remove the grounding prong from the plug. If in doubt, call a licensed electrician. Do not modify plug provided with the appliance. for a permanently connected dryer: 1. Approved strain relief into the power cord entry hole of the mounting bracket.

Finger tighten the nut only at this time. Finger tighten the nut only at this time. 3. Remove the ground wire from the green ground screw located above the terminal block. Power cord, NEMA 10-30 type SRDT, through the strain relief. 4. Attach the power cord neutral (center wire) conductor to the silver colored center terminal on the terminal block. Reattach the strain relief mounting bracket to the back of the dryer with two screws. Tighten the screws securing the cord restraint firmly against the power cord. Approved 30 amp power cord, NEMA 14-30 type ST or SRDT through the strain relief.

Attach the green power cord ground wire to the cabinet with the green ground screw. 6. Attach the white (neutral) power cord conductor from the power cord and the neutral ground wire from the dryer harness to the silver-colored center terminal on the terminal block. Tighten the screws securing the cord restraint firmly against the power cord. Semi-rigid or approved pipe from gas supply line to the 3/8 inch (0.

Open the shutoff valve in the gas supply line to allow gas to flow through pipe. Place these instructions in a location near the dryer for future reference. NLPWD15 (White), NLPWD15GB (Glacier Blue), NLPWD15P (Platinum) and NLPWD15E (Black), specifically designed for this dryer may be used when elevating the dryer for ease of use. Failure to use accessories certified by the manufacturer could result in personal injury, property damage or damage to the dryer. If replacements parts are needed for your dryer, contact the source where you purchased your dryer, call 1-800-944-9044, or visit our website, www.

Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing. Destroy the carton and plastic bags after the dryer is unpacked. Children might use them for play. Cartons covered with rugs, bedspreads, or plastic sheets can become airtight chambers causing suffocation. place all materials in a garbage container or make materials inaccessible to children. The instructions in this manual and all other literature included with this dryer are not meant to cover every possible condition and situation that may occur. Good safe practice and caution MUST be applied when installing, operating and maintaining any appliance. With the dryer in its final position, adjust one or more of the legs until the dryer is resting solid on all four legs.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](#)

[GLEQ2152EE1 user guide](#)

<http://yourpdfguides.com/dref/3200352>

Plug the power cord into a grounded outlet.

NOTE: Check to ensure the power is off at circuit breaker/fuse box before plugging the power cord into the outlet. 4. Turn on the power at the circuit breaker/fuse box. @@Run the dryer through a cycle check for proper operation. @@@@ 6. If your dryer does not operate, please review the "Avoid Service Checklist" located in your Use and Care Guide before calling for service. No use ductos flexibles de plástico para el escape de la secadora. 7cm) Línea de centro para Center line height la altura del respiradero posterior, for rear, right, left derecho, izquierdo 2. 75" Línea de centro para la Center line altura del respiradero height for rear, posterior, vents right, left derecho, izquierdo El tubo de escape de la secadora DEBE ser instalado hacia el exterior (El escape debe colocarse en la parte exterior y no debajo de la casa móvil. Si el tubo de escape de la secadora corre a través del piso y el área debajo de la casa móvil esta cerrada, el ducto de escape DEBE terminar fuera del recinto, con el extremo final asegurado en contra de la estructura de la casa móvil. Conecte el ducto de escape al sistema de escape exte.



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEQ2152EE1 user guide](http://yourpdfguides.com/dref/3200352)
<http://yourpdfguides.com/dref/3200352>