



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for KONICA MINOLTA BIZHUB PRO C6500. You'll find the answers to all your questions on the KONICA MINOLTA BIZHUB PRO C6500 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


**User manual KONICA MINOLTA BIZHUB PRO C6500**  
**User guide KONICA MINOLTA BIZHUB PRO C6500**  
**Operating instructions KONICA MINOLTA BIZHUB PRO C6500**  
**Instructions for use KONICA MINOLTA BIZHUB PRO C6500**  
**Instruction manual KONICA MINOLTA BIZHUB PRO C6500**



The essentials of imaging

## **bizhub PRO** **C6500**

User's Guide  
Security

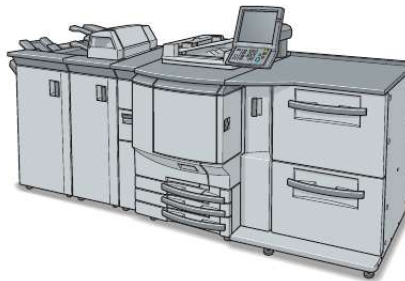

- 1 Security Functions
- 2 Security Strengthen Mode
- 3 Machine Manager Security Functions
- 4 Index



[You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB PRO C6500 user guide](http://yourpdfguides.com/dref/594339)  
<http://yourpdfguides.com/dref/594339>

**Manual abstract:**

Image control program (Image Control II) version: A03U0Y0-0011-G00-11, A03U0Y0-0011-G00-12, A03U0Y0-0011-G00-13, A03U0Y0-0011-G00-14, A03U0Y0-0011-G00-15, A03U0Y0-0011-G00-20, A03U0Y0-0011-G00-25, A03U0Y0-0011-G00-26, A03U0Y0-0011-G00-27, A03U0Y0-0011-G00-30 About the

Firmware version display function: The bizhub PRO Control Software (Image control program) version mentioned above can be confirmed by using the service representative (CE) service mode ROM version display function. When you display the firmware version, the Image control program version will be displayed as follows. Image control program (Image Control II) version: G00 + 2 digits following the hyphen (Ex: G00-\*\*) Please keep this in mind when checking the software version. Copyright © 2007 KONICA MINOLTA BUSINESS TECHNOLOGIES, Inc. FEDERAL OR STATE STATUTES MAY PROHIBIT THE COPYING OF CERTAIN DOCUMENTS OR INFORMATION, RESULTING IN FINES OR IMPRISONMENT FOR VIOLATORS.

ACKNOWLEDGEMENTS: - KONICA MINOLTA, KONICA MINOLTA Logo, and The essentials of imaging are registered trademarks or trademarks of KONICA MINOLTA HOLDINGS, INC. - bizhub PRO is registered trademarks of KONICA MINOLTA BUSINESS TECHNOLOGIES, Inc. EXEMPTION: - No part of this manual may be used or duplicated without permission. - Manufacturer and Sales Company will have no liability for any influences caused by using the printing system and this User's Guide. - The information written in this is subject to change without prior notice.

Composition of User's Guide This machine is provided with the following user's guides as printed matters. \*bizhub PRO C6500 User's Guide - Copier This guide describes an outline of the machine and copy operations. @@@@Please refer to this guide for how to use the Security Strengthen mode, and for detailed machine operation in Security Strengthen mode. To operate safely, be sure to read "Section 1 Safety Information" in "bizhub PRO C6500 User's Guide - Copier" before using the machine. Contents 1 2 Security Functions .

.....  
.....

.....  
.....  
.....

.... 1 Security Strengthen Mode .

.....  
.....  
.....  
.....  
.....

. 3 2.1 2.2 Description of Security Strengthen mode .....

.....  
.....  
.....  
.....

3 Data protected by Security Strengthen mode .....

.....  
.....  
.....

4 3 Machine Administrator Security Functions .....

.....  
.....

5 3.1 3.2 3.3 3.4 3. Turn Security Strengthen mode ON/OFF .....

.....  
.....  
.....  
.....

.....6 HDD lock password ..

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....10 Print audit log .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....  
14 Analyze audit log .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

17 Table of items saved in audit log .....

.....  
.....  
.....  
.....  
.....  
.....

.....19 4 Index.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

21 Security Functions 1 1 Security Functions The bizhub PRO C6500 device has two security modes. Normal mode Use this mode if the machine is used by a single person and there is a low possibility of illicit access and operations. This is the default mode when shipped from the factory. To use regular mode, please see the user's guide for each individual machine. Security Strengthen mode Use this mode if the machine is connected to a local area network, or to external networks through a telephone line or other means.

A machine administrator manages the device according to this user's guide, so that users can have a safe operating environment. Your machine administrator is the only one who can turn the Security Strengthen mode ON and OFF, and make other changes, and your service representative will designate an machine administrator. To turn the Security Strengthen mode ON, the service representative should set a CE authentication password and machine administrator password for the device. Please contact your service representative when using the Security Strengthen mode. Please be sure to use the Security Strengthen mode to prevent data from being accessed or tampered with. The Security icon is displayed on the touch panel if the Security Strengthen mode is activated. @@@@This log will be overwritten if the audit area is depleted. @@@@Only one authentication string can be registered per machine. @@@@for a password that others can easily figure out. @@If a wrong password or fewer than 8 alphanumerical characters are entered and the [OK] key is touched, the warning message "Password does not match" will appear, and no key will work for five seconds.

Enter the right password after five seconds. If authentication fails, the information will be saved in the audit log. Procedure 1 2 Press [Utility/Counter] on the control panel to display the Utility Screen. Touch [03 Machine Admin. Setting]. The Input Password Screen will be displayed. 6 bizhub PRO C6500 Machine Administrator Security Functions 3 3 Enter the password. Use the touch screen keypad to enter the 8-digit Machine Administrator password, then touch [OK].

The Machine Administrator Setting Menu Screen will be displayed. 4 Touch [10 Security Setting].

bizhub PRO C6500 7 3 5 Machine Administrator Security Functions Touch [04 Security Strengthen Set] 6 Turn Security Strengthen mode ON or OFF If you want to turn Security Strengthen mode ON, touch [On] to highlight it. If you want to turn it OFF, touch [Off] to highlight it. 8 bizhub PRO C6500 Machine Administrator Security Functions 3 7 Touch [OK]. The Restart Confirmation popup screen will appear 8 Touch [Yes]. The machine will restart and the new setting will be activated.

bizhub PRO C6500 9 3 3.2 HDD lock password Machine Administrator Security Functions While the Security Strengthen mode is turned ON, a lock password (8 to 32 alphanumeric characters, case sensitive) can be set up on the HDD to protect the data stored on it. If the HDD itself is externally accessed, the data readout will not be available until the correct lock password is entered. 2 Reminder Do not use your name, birthday, employee number, etc. for a password that others can easily figure out.

Be careful not to inform anybody else of the password, or not to let it known to others. 2 Note The HDD lock password functions only when the Security Strengthen mode is ON. When turned OFF, the message "Please set Security Strengthen mode" will be displayed. 2 Note Passwords are case sensitive. If a wrong password or fewer than 8 alphanumeric characters are entered and the [OK] key is touched, the warning message "Password does not match" will appear, and no key will work for five seconds. Enter the right password after five seconds. If authentication fails, the information will be saved in the audit log. ! Detail The main body serial number will be printed at the upper right corner of the audit log. For details, see the next section "Print audit log" and p. 17 for the sample log.

If authentication fails, the information will be saved in the audit log. @@Touch [03 Machine Admin. @@@@The key will not be active until authentication is succeeded. Touch [OK] to return to the previous screen. 8 9 Touch [Check Input] to re-enter the same authentication (NG) log entries specify who made the operation, and show if unauthorized actions were made when password authentication failed. - Even if password authentication succeeded (OK), it shows whether a legitimate user created the action.



[You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB PRO C6500 user guide](http://yourpdfguides.com/dref/594339)  
<http://yourpdfguides.com/dref/594339>

*You need to check carefully when successful authentication occurs after series of failures especially during times other than normal operating hours. Specify unauthorized actions: actions other than password authentication under security All operation results other than password authentication will be indicated as successful (OK), so determine if there were any unauthorized actions by ID and action. - Check the time, and see if the user who operated the specific subject made any unauthorized actions. Actions to take if unauthorized operations are found If it's found that a password has been leaked after analyzing the audit log, change the password immediately.*

*20 bizhub PRO C6500 Index 4 Index A Audit log Analyze 17 Print 14 4 E Enhanced security mode Audit log 3 Normal mode 1 M Machine Administrator Security Functions 5 HDD lock password 10 S Security strengthen mode Data protected 4 Environments 1 Machine Administrator authentication 3 Machine Administrator setting mode 3 Turn ON/OFF 4 bizhub PRO C6500 21 .*



[You're reading an excerpt. Click here to read official KONICA MINOLTA BIZHUB PRO C6500 user guide](http://yourpdfguides.com/dref/594339)  
<http://yourpdfguides.com/dref/594339>