




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LG 22MT55D-PZ. You'll find the answers to all your questions on the LG 22MT55D-PZ in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LG 22MT55D-PZ
User guide LG 22MT55D-PZ
Operating instructions LG 22MT55D-PZ
Instructions for use LG 22MT55D-PZ
Instruction manual LG 22MT55D-PZ

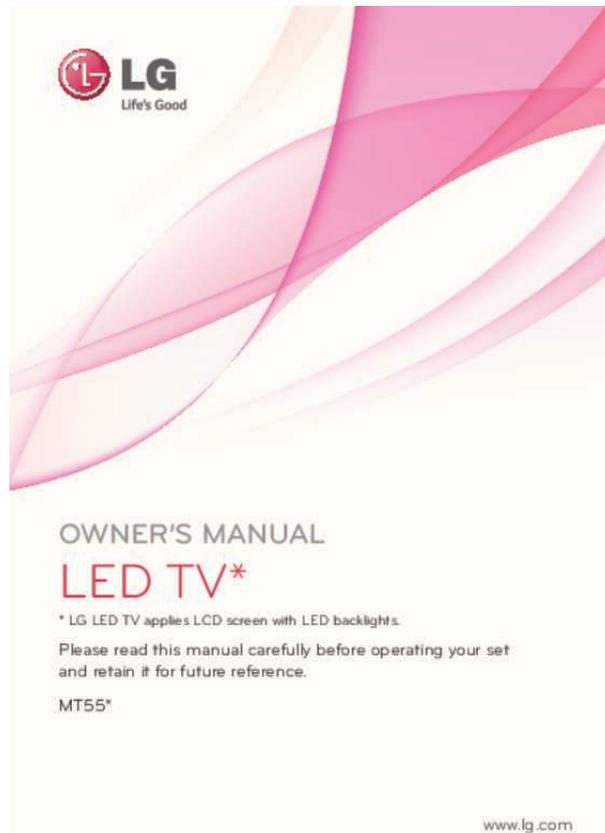

[You're reading an excerpt. Click here to read official LG 22MT55D-PZ user guide](http://yourpdfguides.com/dref/5574753)
<http://yourpdfguides.com/dref/5574753>

263, H.264/AVC [Audio] MP3, AAC, HE-AAC yy *rm, *rmvb [Video] RV30, RV40 [Audio] Dolby Digital, AAC, HE-AAC, RA6(Cook) yy 3gp, 3gp2 [Video] H.264/AVC, MPEG-4 Part2 [Audio] AAC, AMR(NB/WB) yy *DTS / *rm / *rmvb : Depending on model ENGLISH ENG Supported Audio Formats yy File type : mp3 [Bit rate] 32 Kbps - 320 Kbps [Sample freq.] 16 kHz - 48 kHz [Support] MPEG1, MPEG2, Layer2, Layer3 yy File Type : AAC [Bit rate] Free Format [Sample freq.]

] 8 kHz ~ 48 kHz [Support] ADIF, ADTS yy File Type : M4A [Bit rate] Free Format [Sample freq.] 8 kHz ~ 48 kHz [Support] MPEG-4 24 SETTINGS / TO SEE WEB MANUAL yy File Type : WMA [Bit rate] 128 Kbps ~ 320 Kbps [Sample freq.] 8 kHz ~ 48 kHz [Support] WMA7, WMA8, WMA9 Standard yy File Type : WMA [Bit rate] ~ 768 Kbps [Channel / Sample freq.] M0 : up to 2 Channel @ 48 kHz (Except LBR mode), M1 : up to 5.1 Channel @ 48 kHz, M2 : up to 5.1 Channel @ 96 kHz [Support] WMA 10 Pro yy File Type : OGG [Bit rate] Free Format [Sample freq.] 8kHz ~ 48 kHz [Support] OGG Vorbis ENGLISH Supported Photo Formats yy Category : 2D (jpeg, jpg, jpe) [Available file type] SOF0: Baseline, SOF1: Extend Sequential, SOF2: Progressive [Photo size] Minimum: 64 x 64, Maximum: Normal Type: 15360 (W) x 8640 (H), Progressive Type: 1920 (W) x 1440 (H) yy Category : BMP [Photo size] Minimum : 64 x 64, Maximum : 9600 x 6400 yy Category : PNG [Available file type] Interlace, Non-Interlace [Photo size] Minimum : 64 x 64, Maximum : Interlace : 1200 x 800, Non-Interlace : 9600 x 6400 yy BMP and PNG format files may be slower to display than JPEG. TO SEE WEB MANUAL To obtain detailed User Guide information, please visit www.lg.com.

MAINTENANCE 25 MAINTENANCE Cleaning your TV Clean your TV regularly to keep the best performance and to extend the product lifespan. ENGLISH ENG CAUTION yy Make sure to turn the power off and disconnect the power cord and all other cables first. yy When the TV is left unattended and unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges. Screen, frame, cabinet and stand yy To remove dust or light dirt, wipe the surface with a dry, clean, and soft cloth. yy To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent. Then wipe immediately with a dry cloth. CAUTION yy Avoid touching the screen at all times, as this may result in damage to the screen. yy Do not push, rub, or hit the screen surface with your fingernail or a sharp object, as this may result in scratches and image distortions. yy Do not use any chemicals as this may damage the product. yy Do not spray liquid onto the surface.

If water enters the TV, it may result in fire, electric shock, or malfunction. Power cord Remove the accumulated dust or dirt on the power cord regularly. Preventing "Image burn" or "Burn-in" on your TV screen yy If a fixed image displays on the TV screen for a long period of time, it will be imprinted and become a permanent disfigurement on the screen. This is "image burn" or "burn-in" and not covered by the warranty. @@@@No image display and no sound is produced.

The TV turns off suddenly. @@@@to , to). yy Check if the batteries are still working and properly installed (yy Check if the product is turned on. yy Check if the power cord is connected to a wall outlet. yy Check if there is a problem in the wall outlet by connecting other products.

yy Check the power control settings. The power supply may be interrupted. yy Check if the Automatic Standby (Depending on model) / Off Time / Sleep Timer feature is activated in the TIME settings. yy If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity. yy Turn the TV off/on using the remote control. yy Reconnect the HDMI/RGB cable. yy Restart the PC with the TV on. ENGLISH When connecting to the PC (HDMI/DVI/RGB), 'No signal' or 'Invalid Format' is displayed. SPECIFICATIONS 27 SPECIFICATIONS Product specifications may be changed without prior notice due to upgrade of product functions. MODELS Dimensions (W x H x D) Weight With stand (mm) Without stand(mm) With stand (kg) Without stand (kg) Power Consumption Power requirement AC/DC Adapter 22MT55V 22MT55D 508.

5 x 416.6 x 188.4 508.5 x 315 x 65.9 3.4 3.2 30W 19 V 1.6 A 23MT55V 23MT55D 544 x 436.5 x 188.4 544 x 334.
8 x 65.9 3.7 3.4 33W 19 V 2.0 A 24MT55V 24MT55D 566.
8 x 447.7 x 188.4 566.8 x 346.1 x 66.

5 3.9 3.6 33W 19 V 1.6 A ENGLISH ENG Manufacturer : Lien Chang Model : LCAP16B-E, LCAP21C Manufacturer : Honor Model : ADS-45FSN-19 19040GPG, ADS-45SN-19-3 19040G 27MT55V 27MT55D With stand (mm) Without stand(mm) With stand (kg) Without stand (kg) 641.2 x 489.1 x 213.2 641.2 x 391.3 x 77.8 5.

3 4.88 35W 19 V 2.0 A MODELS Dimensions (W x H x D) Weight Power Consumption Power requirement AC/DC Adapter Manufacturer : Lien Chang Model : LCAP16B-E, LCAP21C Manufacturer : Honor Model : ADS-45FSN-19 19040GPG, ADS45SN-19-3 19040G 28 SPECIFICATIONS CI Module Size(W x H x D) Environment condition Operating Temperature Operating Humidity Storage Temperature Storage Humidity Satellite Digital TV Television System DVB-T/T2 DVB-C DVB-S/S2 VHF, UHF C-Band, Ku-Band 6,000 100.0 mm x 55.0 mm x 5.0 mm 10 °C to 35 °C 20 % to 80 % -10 °C to 60 °C 5 % to 90 % Digital TV DVB-T DVB-C Analogue TV PAL/SECAM B/G/I/D/K, SECAM L/L' VHF: E2 to E12, UHF: E21 to E69, CATV: S1 to S20, HYPER: S21 to S47 1,500 75 Ω

ENGLISH Programme Coverage Maximum number of storable programmes External Antenna Impedance VHF, UHF RGB (PC) / HDMI (PC) supported mode Resolution 720 x 400 640 x 480 800 x 600 1024 x 768 1024 x 768 Only HDMI(PC) 1152 x 864 1280 x 720 1280 x 800 1280 x 1024 1400 x 1050 1440 x 900 1600 x 900 1680 x 1050 1920 x 1080 Horizontal Frequency (kHz) 31.468 31.469 37.500 37.879 46.
875 48.363 60.023 56.476 67.500 45.
000 49.702 63.981 79.976 65.317 55.

935 60.000 64.674 65.290 67.500 Vertical Frequency (Hz) 70.080 59.940 75.000 60.317 75.000 60.

004 75.029 70.069 75.000 60.000 59.810 60.020 75.025 59.978 59.887 60.

000 59.883 59.954 60.000 NOTE yy The optimal display resolution is 1920 x 1080 @ 60 Hz. The optimal timing is vertical frequency 60Hz in each mode. HDMI-DTV supported mode Resolution 720 x 480 720 x 576 1280 x 720 Horizontal Frequency (kHz) 31.469 31.500 31.250 37.500 44.
960 45.000 33.720 33.750 28.125 27.000 33.750 56.250 67.430 67.500 Vertical Frequency (Hz) 59.

940 60.000 50.000 50.000 59.940 60.000 59.940 60.000 50.000 24.000 30.

000 50.000 59.940 60.000 1920 x 1080 SPECIFICATIONS 29 Component supported mode ENGLISH ENG Resolution 720 x 480 Horizontal Frequency (kHz) 15.730 15.
750 31.470 31.500 15.625 31.250 37.

500 44.960 45.000 33.720 33.750 28.125 56.250 67.430 67.500 Vertical Frequency (Hz) 59.940 60.

000 59.940 60.000 50.000 50.000 50.000 59.940 60.000 59.940 60.000 50.

000 50.000 59.940 60.000 720 x 576 1280 x 720 1920 x 1080 Component port connecting information Component ports on the TV Y Y Video output ports on DVD player Y Y Y PB PB B-Y Cb Pb PR PR R-Y Cr Pr Make sure to read the Safety Precautions before using the product.



[You're reading an excerpt. Click here to read official LG 22MT55D-PZ user guide](http://yourpdfguides.com/dref/5574753)
<http://yourpdfguides.com/dref/5574753>

Keep the Owner's Manual (CD) in an accessible place for future reference.

The model and serial number of the TV is located on the back and one side of the TV. Record it below should you ever need service. MODEL SERIAL .



[You're reading an excerpt. Click here to read official LG 22MT55D-PZ user guide](http://yourpdfguides.com/dref/5574753)

<http://yourpdfguides.com/dref/5574753>