



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HANNA INSTRUMENTS PRIMO. You'll find the answers to all your questions on the HANNA INSTRUMENTS PRIMO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HANNA INSTRUMENTS PRIMO
User guide HANNA INSTRUMENTS PRIMO
Operating instructions HANNA INSTRUMENTS PRIMO
Instructions for use HANNA INSTRUMENTS PRIMO
Instruction manual HANNA INSTRUMENTS PRIMO

Instruction Manual

Primo Series

EC and TDS Testers with Automatic Temperature Compensation



www.hannainst.com

WARRANTY

The Primo series is warranted for one year against defects in workmanship and materials when used for their intended purpose and maintained according to instructions. This warranty is limited to repair or replacement free of charge. Damages due to accident, misuse, tampering or lack of prescribed maintenance are not covered.

If service is required, contact the dealer from whom you purchased the instrument. If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred. If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization number from the Customer Service department and then send it with shipping costs prepaid. When shipping any instrument, make sure it is properly packaged for complete protection.

Hanna Instruments reserves the right to modify the design, construction and appearance of its products without advance notice.

Dear Customer,
Thank you for choosing a Hanna product.
Please read carefully this instruction manual before using the meter. If you need additional technical information, do not hesitate to e-mail us at tech@hannainst.com.
These instruments are in compliance with the CE directives.

PRELIMINARY EXAMINATION

Remove the instrument from the packing material and examine it carefully. If any damage has occurred during shipment, immediately notify your Dealer or the nearest Hanna Customer Service Center.


Each meter is supplied with batteries and instructions.

Note: Conserve all packing material until the instrument has been observed to function correctly. Any defective item must be returned in its original packing.

ACCESSORIES

- HI 70031P 1413 $\mu\text{S}/\text{cm}$ solution, 20 mL sachet, 25 pcs
- HI 70032P 1382 ppm solution, 20 mL sachet, 25 pcs
- HI 70039P 5.00 mS/cm solution, 20 mL sachet, 25 pcs
- HI 7031L 1413 $\mu\text{S}/\text{cm}$ solution, 500 mL bottle
- HI 7032L 1382 ppm solution, 500 mL bottle
- HI 7039L 5.00 mS/cm solution, 500 mL bottle

FUNCTIONAL DESCRIPTION

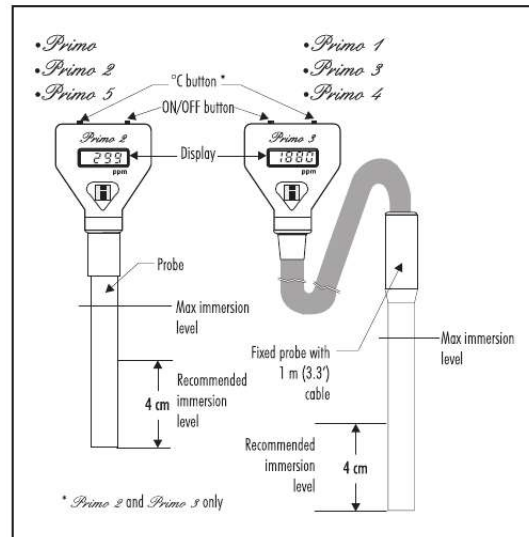

[You're reading an excerpt. Click here to read official HANNA INSTRUMENTS PRIMO user guide](http://yourpdfguides.com/dref/2866113)
<http://yourpdfguides.com/dref/2866113>

Manual abstract:

@@ These instruments are in compliance with the directives. **FUNCTIONAL DESCRIPTION** EC and TDS Testers with Automatic Temperature Compensation
PRELIMINARY EXAMINATION Remove the instrument from the packing material and examine it carefully. If any damage has occurred during shipment, immediately notify your Dealer or the nearest Hanna Customer Service Center. Each meter is supplied with batteries and instructions. Note: Conserve all packing material until the instrument has been observed to function correctly. Any defective item must be returned in its original packing. www.hannainst.com

WARRANTY The Primo series is warranted for one year against defects in workmanship and materials when used for their intended purpose and maintained according to instructions. This warranty is limited to repair or replacement free of charge.

Damages due to accident, misuse, tampering or lack of prescribed maintenance are not covered. If service is required, contact the dealer from whom you purchased the instrument. If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred. @@@@ Over range.

@@@@ · Stir gently and wait for stable reading. The meter automatically compensates for temperature variations. @@ · Press and hold the ON/OFF button for about 3 seconds. @@@@ · Stir gently and wait for about 20 seconds. @@Primo 2 $\pm 2\%$ F.

S. / $\pm 0.5^{\circ}\text{C}$ Primo 5 $\pm 2\%$ F.S. @@Primo 3 $\pm 2\%$ F.S. / $\pm 0.5^{\circ}\text{C}$ Primo 4 $\pm 2\%$ F.S. @@@@ Open the battery compartment and replace the both 1.

5 V batteries, while paying attention to the correct polarity. Batteries should be replaced only in a non hazardous area using the battery type specified in this instruction sheet. Important note: Once the batteries have been replaced, turn the meter OFF and then ON again. Wait for about 30 seconds to allow a complete self-test, and then perform a new calibration. Recommendations for Users Before using these products, make sure that they are entirely suitable for the environment in which they are used. Operation of this instrument in residential areas could cause interference to radio and TV equipment. Any variation introduced by the user to the supplied equipment may degrade the instrument EMC performance. @@.



[You're reading an excerpt. Click here to read official HANNA INSTRUMENTS PRIMO user guide](http://yourpdfguides.com/dref/2866113)
<http://yourpdfguides.com/dref/2866113>