




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH IXO. You'll find the answers to all your questions on the BOSCH IXO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH IXO  
User guide BOSCH IXO  
Operating instructions BOSCH IXO  
Instructions for use BOSCH IXO  
Instruction manual BOSCH IXO

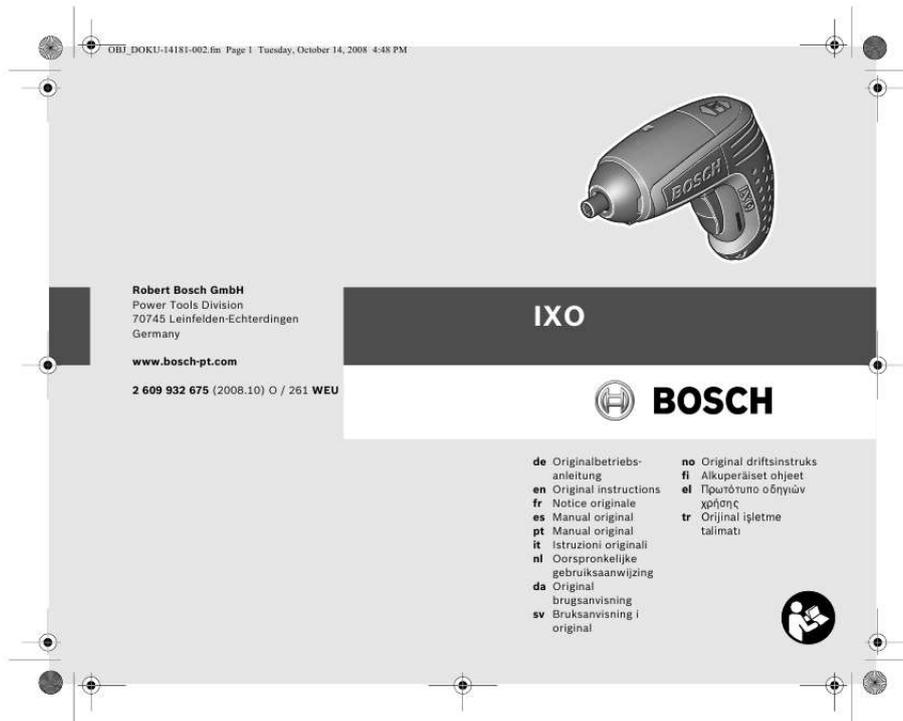

[You're reading an excerpt. Click here to read official BOSCH IXO user guide](http://yourpdfguides.com/dref/2706899)  
<http://yourpdfguides.com/dref/2706899>

**Manual abstract:**

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool. 1) Work area safety a) Keep work area clean and well lit. cluttered or dark areas invite accidents. B) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes. C) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control. 2) Electrical safety a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.

English | 29 b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded. C) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock. d) Do not abuse the cord.

Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges and moving parts. damaged or entangled cords increase the risk of electric shock. E) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

F) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock. 3) Personal safety a) Stay alert, watch what you are doing and use common sense when operating a power tool. @@@@Always wear eye protection. @@ c) Prevent unintentional starting. @@Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents. D) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury. This enables better control of the power tool in unexpected situations. f) Dress properly.

Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts. G) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards. 4) Power tool use and care a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed. English | 31 b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

C) Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally. D) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users. e) Maintain power tools.

Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools. f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. In accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation. 32 | English 5) Battery tool use and care a) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack. B) Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire. C) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. shorting the battery terminals together may cause burns or a fire. D) Under abusive conditions, liquid may be ejected from the battery; avoid contact.

if contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns. @@This will ensure that the safety of the power tool is maintained. @@@@ hold the machine with a firm grip. @@@@ unintentional actuation of the On/Off switch can lead to injuries. Protect the power tool against heat, e. @@Provide for fresh air and seek medical help in case of complaints. the vapours can irritate the respiratory system. @@ check any parts concerned.

Clean such parts or replace them, if required. Keep the battery charger away from rain or moisture. @@Do not charge other batteries. @@Before each use, check the battery charger, cable and plug. @@@@Do not operate the battery charger on easily inflammable surfaces (e.

@@@Read all safety warnings and all instructions. @@@@Cordless Screwdriver Article number Rated voltage No-load speed Max. @@The trade names of the individual machines may vary. @@ uncertainty K=3 dB. The noise level when working can exceed 80 dB(A).

@@@@It may be used for a preliminary assessment of exposure. @@@@An estimation of the level of exposure to vibration should also take into account the times when the tool is switched off or when it is running but not actually doing the job. This may significantly reduce the exposure level over the total working period. Identify additional safety measures to protect the operator from the effects of vibration such as: maintain the tool and the accessories, keep the hands warm, organisation of work patterns. We declare under our sole responsibility that the product described under "Technical data" is in conformity with the following standards or standardization documents: EN 60745 (battery powered product) and EN 60335 (battery charger) according to the provisions of the directives 2006/95/EC, 2004/108/EC, 98/37/EC (until 28 Dec 2009), 2006/42/EC (from 29 Dec 2009). Do not use other battery chargers. The voltage of the power supply must correspond with the data given on the nameplate of the battery charger. Battery chargers marked with 230 V can also be operated with 220 V. note: The battery is supplied partially charged. To ensure full capacity of the battery, completely charge the battery in the battery charger before using your power tool for the first time.



[You're reading an excerpt. Click here to read official BOSCH IXO user guide](http://yourpdfguides.com/dref/2706899)  
<http://yourpdfguides.com/dref/2706899>

English \ 39 The lithium ion battery can be charged at any time without reducing its service life. When the battery is discharged, the machine is automatically switched off by a protective circuit: The inserted tool no longer moves and a slight whistling noise can be heard. Do not continue to press the On/Off switch after the machine has been automatically switched off. When the battery charge-control indicator 5 lights up red while the On/Off switch 8 is depressed half way, then the battery has less than 30% of its capacity and should be charged. The charging procedure starts as soon as the main plug of the battery charger is inserted into the socket and the cordless screwdriver is afterwards placed on the battery charger 11. the battery charge-control indicator 5 indicates the charging progress. The indicator lights up green during the charging process. When the battery charge-control indicator 5 is no longer lit, the battery is fully charged. Disconnect the battery charger from the mains supply when not using it for longer periods. The power tool cannot be used during the charge procedure; it is not defective when inoperative during the charging procedure.

Protect the battery charger against moisture! Do not use double-sided screwdriver blades that are longer than 25 mm. The eccentric driver head 12 enables screwdriving close to edges. The angle driver head 13 enables screwdriving at hard to reach locations. With the torque presetting ring 15 on the torque attachment 14, the requested torque can be preset in 10 steps. @@@@However, this is not possible with the On/Off switch 8 actuated.

@@The indicator for right rotation 4 lights up when the On/Off switch 8 is actuated and the motor is running. Left Rotation: For loosening or unscrewing screws, push the rotational direction switch 9 right to the stop. The indicator for left rotation 6 lights up when the On/Off switch 8 is actuated and the motor is running. switching On and Off To start the machine , press the On/Off switch 8 and keep it pressed. The light 10 is lit when the On/Off switch 8 is slightly or completely pressed in and permits to light the work area when the lighting conditions are bad.

To switch off the machine, release the On/Off switch 8. 42 \ English Fully automatic spi.



[You're reading an excerpt. Click here to read official BOSCH IXO user guide](http://yourpdfguides.com/dref/2706899)

<http://yourpdfguides.com/dref/2706899>