




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ASROCK K10N78D. You'll find the answers to all your questions on the ASROCK K10N78D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ASROCK K10N78D
User guide ASROCK K10N78D
Operating instructions ASROCK K10N78D
Instructions for use ASROCK K10N78D
Instruction manual ASROCK K10N78D

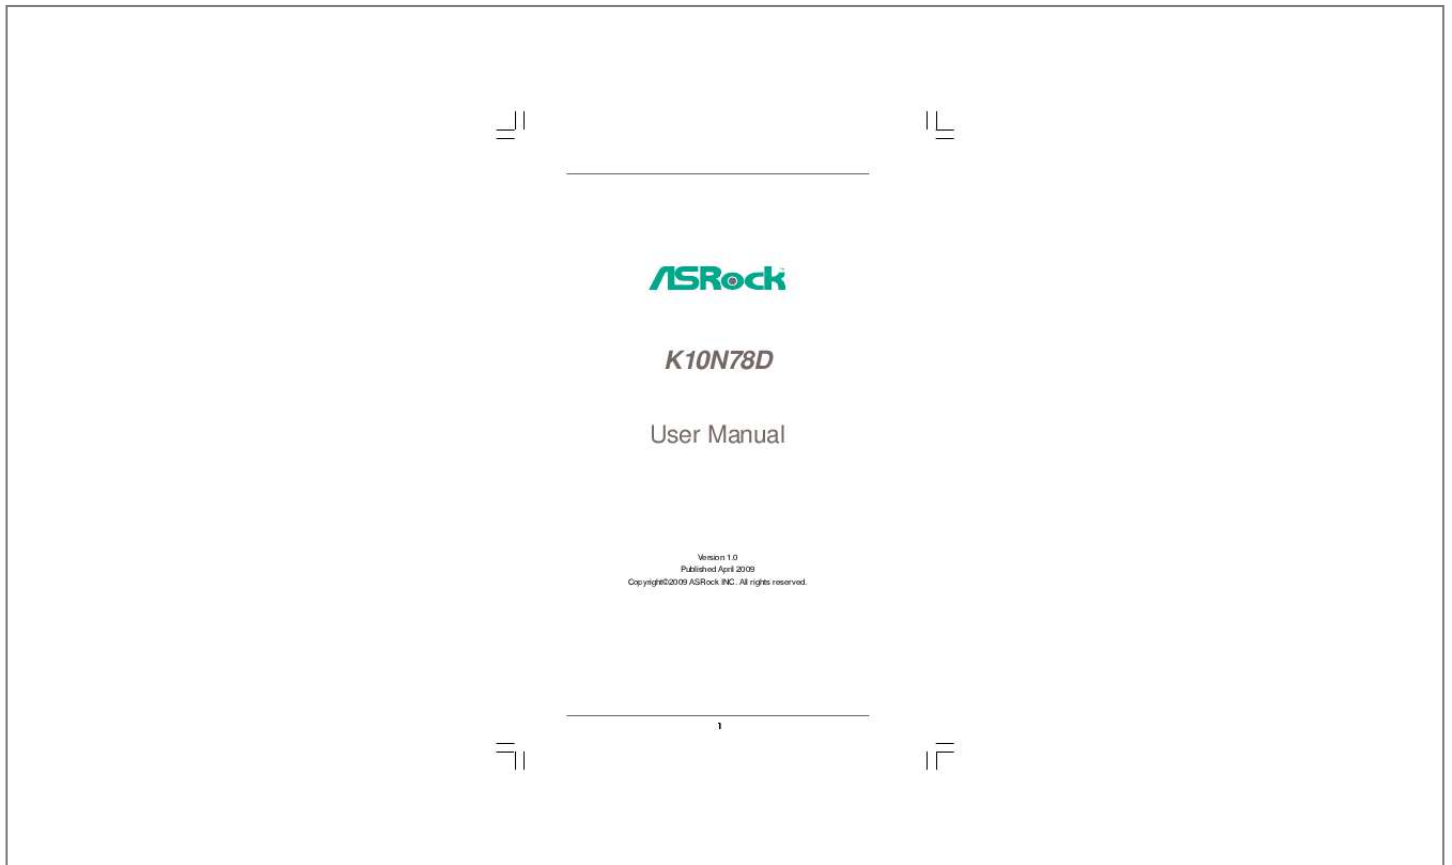

[You're reading an excerpt. Click here to read official ASROCK K10N78D user guide](http://yourpdfguides.com/dref/2642458)
<http://yourpdfguides.com/dref/2642458>

Manual abstract:

In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the manual or product. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CALIFORNIA, USA ONLY The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance. "Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate"

ASRock Website: <http://www.asrock.com>

com 2 Contents 1 . Introduction

.....
.....

.....
.....
.....
.....

.....
. 5 1.1 1.2 1.3 1.
4 Package Contents

.....
.....
.....
.....
.....

..... Specifications

.....
.....
.....
.....
.....
.....
.....
.....

..... Motherboard Layout .

.....
.....
.....
.....
.....
.....

..... I/O Panel .

.....
.....
.....
.....
.....
.....
.....

.....
..... 5 6 10 11 13 14 14 15 2 . Installation .

.....
.....
.....

.....
.....
.....

.....
. 13 Pre-installation Precautions

.....
.....

.....
.....
.....

.....
..... 2.

1 CPU Installation

.....
.....
.....
.....

.....
.....
.....

..... 2.2 Installation of CPU Fan and Heatsink .

.....
.....
.....

..... 2.3 Installation of Memory Modules (DIMM) .

.....
.....
.....

.....
.....

2.4 Expansion Slots (PCI and PCI Express slots)

.....
.....

.....
.....
.....

. 17 2.5 Jumpers Setup

.....
.....
.....

.....
.....
.....

..... 18 2.6 Onboard Headers and Connectors ...

.....
.....
.....

.....
.....

..... 19 2.

7 HDMI_SPDIF Header Connection Guide

.....
.....
.....

..... 23 2.8 SATAII Hard Disk Setup Guide ..

.....
.....
.....
.....

.....
.....

... 24 2.9 Serial ATA (SATA) / Serial ATAII (SATAII) Hard Disks Installation .

.....
.....
.....
.....
.....

.....
.....
.....
.....

25 2.10 Hot Plug and Hot Swap Functions for SATA / SATAII HDDs Devices

.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

..... 25 2.11 SATA / SATAII HDD Hot Plug Feature and Operation Guide ...

.. 26 2.12 Driver Installation Guide ..

.....
.....
.....
.....
.....
.....

... 28 2.13 Installing Windows® XP / XP 64-bit / Vista™ / Vista™ 64-bit Without RAID Functions .

.....
.....
.....
.....
.....

.....
.....

.....
..... 28 2.

13.1 Installing Windows® XP / XP 64-bit Without RAID Functions

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

..... 28 2.13.2 Installing Windows® Vista™ / Vista™ 64-bit Without RAID Functions ..

.....
.....

.....
.....

.....
.....

.....
.....

..... 29 2.14 Installing Windows® XP / XP 64-bit / Vista™ / Vista™ 64-bit With RAID Functions .

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.....
..... 30 2.

14.1 Installing Windows® XP / XP 64-bit With RAID Functions

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

..... 30 2.14.2 Installing Windows® Vista™ / Vista™ 64-bit With RAID Functions ..

.....
.....

.....
.....

.....
.....

.....
.....

..... 31 2.15 Untied Overclocking Technology .

.....
.....

.....
.....

.....
.....
.....
..... 32 SETUP 3 . BIOS S ETUP UTILITY

.....
.....
.....
.....

.....
.....
..... .. 33 3.1 Introduction ..

.....
.....
.....
.....

.....
.....
.....
.....

..... 3.1.1 BIOS Menu Bar .

.....
.....
.....

.....
.....
.....
.....

.....
..... .. 3.1.2 Navigation Keys .

.....
.....

.....
.....
.....
.....

.....
.....

Main Screen

.....
.....
.....
.....

.....
.....
.....
.....

... 33 33 34 34 3.2 3 3.3 3.4 3.5 3.6 3.7 3.

8 4.1 4.2 Smart Screen ...

.....
.....
.....

.....
.....
.....

..... *Advanced Screen ..*

.....
.....
.....
.....
.....
.....
.....

..... *3.4.1 CPU Configuration ..*

.....
.....
.....
.....
.....
.....

..... *3.4.2 Memory Configuration ..*

.....
.....
.....
.....
.....
.....

3.4.3 Chipset Configuration

.....
.....
.....
.....
.....
.....

..... *3.4.4 ACPI Configuration ...*

.....
.....
.....
.....
.....
.....

.... *3.4.5 IDE Configuration*

.....
.....
.....
.....
.....
.....

..... 3.4.6 PCIPnP Configuration ..

.....
.....
.....
.....

.....
.....
.....

.. 3.4.7 Floppy Configuration

.....
.....
.....
.....

.....
.....
.....

8 Super IO Configuration

.....
.....
.....
.....

.....
.....
.....

. 3.4.9 USB Configuration ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

. Hardware Health Event Monitoring Screen

.....
.....
.....

.....
.....
.....

Boot Screen

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 3.6.

1 Boot Settings Configuration

.....
.....
.....

.....
.....
.....

... Security Screen ..

.....
.....
.....

.....
.....
.....
.....
.....
.....
..... 4.2.

4 Contact Information

.....
.....
.....
.....
.....
.....
.....

..... 35 36 37 40 44 45 46 48 49 49 50 51 52 52 53 54 55 55 55 55 55 4. Software Support ...

.....
.....
.....
.....
.....
.....

... 55 4 1. Introduction Thank you for purchasing ASRock K10N78D motherboard, a reliable motherboard produced under ASRock's consistently stringent quality control.

It delivers excellent performance with robust design conforming to ASRock's commitment to quality and endurance. In this manual, chapter 1 and 2 contain introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contain the configuration guide to BIOS setup and information of the Support CD. Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock website without further notice. You may find the latest VGA cards and CPU support lists on ASRock website as well. ASRock website <http://www.asrock.com> If you require technical support related to this motherboard, please visit our website for specific information about the model you are using. www.asrock.com/support/index.asp

1.1 Package Contents ASRock K10N78D Motherboard (ATX Form Factor: 12.0-in x 7.5-in, 30.5 cm x 19.1 cm) ASRock K10N78D Quick Installation Guide ASRock K10N78D Support CD One 80-conductor Ultra ATA 66/100/133 IDE Ribbon Cable Two Serial ATA (SATA) Data Cables (Optional) One Serial ATA (SATA) HDD Power Cable (Optional) One I/O Panel Shield 5 1.2 Specifications - ATX Form Factor: 12.0-in x 7.

5-in, 30.5 cm x 19.1 cm - Solid Capacitor for CPU power - Support for Socket AM2+ / AM2 processors: AMD Phenom™ FX / Phenom / Athlon 64 FX / Athlon 64 X2 Dual-Core / Athlon X2 Dual-Core / Athlon 64 / Sempron processor - Support for AM3 processors: AMD Phenom™ II X4 / X3 and Athlon II X4 / X3 / X2 processors - AMD LIVE!™ Ready - Supports AMD's Cool 'n' Quiet™ Technology - FSB 2600 MHz (5.2 GT/s) - Supports Untied Overclocking Technology (see CAUTION 1) - Supports Hyper-Transport 3.0 (HT 3.

0) Technology - NVIDIA® nForce 720D - Dual Channel DDR2 Memory Technology (see CAUTION 2) - 4 x DDR2 DIMM slots - Support DDR2 1066/800/667/533 non-ECC, un-buffered memory (see CAUTION 3) - Max. capacity of system memory: 16GB (see CAUTION 4) - 1 x PCI Express 2.0 x16 slot (green @ x16 mode) - 3 x PCI Express x1 slots - 3 x PCI slots - 7.1 CH Windows® Vista™ Premium Level HD Audio (VIA® VT1708S Audio Codec) - Gigabit LAN 10/100/1000 Mb/s - Giga PHY Realtek RTL8211CL - Supports Wake-On-LAN I/O Panel - 1 x PS/2 Mouse Port - 1 x PS/2 Keyboard Port - 1 x Coaxial SPDIF Out Port - 1 x Optical SPDIF Out Port - 6 x Ready-to-Use USB 2.0 Ports - 1 x RJ-45 LAN Port with LED (ACT/LINK LED and SPEED LED) - HD Audio Jack: Side Speaker/Rear Speaker/Central/Bass/ Line in/Front Speaker/Microphone (see CAUTION 5) - 6 x SATAII 3.

0Gb/s connectors, support RAID (RAID 0, RAID 1, RAID 0+1, RAID 5 and JBOD), NCQ, AHCI and "Hot Plug" functions (see CAUTION 6) - 1 x ATA133 IDE connector (supports 2 x IDE devices) Platform CPU Chipset Memory Expansion Slot Audio LAN Rear Panel I/O Connector 6 BIOS Feature Support CD Unique Feature Hardware Monitor OS Certifications - 1 x Floppy connector - 1 x COM port header - 1 x HDMI_SPDIF header - CPU/Chassis/NB FAN connector - 24 pin ATX power connector - 4 pin 12V power connector - CD in header - Front panel audio connector - 3 x USB 2.0 headers (support 6 USB 2.0 ports) (see CAUTION 7) - 8Mb AMI BIOS - AMI Legal BIOS - Supports "Plug and Play" - ACPI 1.1 Compliance Wake Up Events - Supports jumperfree - SMBIOS 2.3.1 Support - NB Voltage Multi-adjustment - Supports Smart BIOS - Drivers, Utilities, AntiVirus Software (Trial Version) - ASRock OC Tuner (see CAUTION 8) - Intelligent Energy Saver (see CAUTION 9) - Instant Boot - ASRock Instant Flash (see CAUTION 10) - Hybrid Booster: - CPU Frequency Stepless Control (see CAUTION 11) - ASRock U-COP (see CAUTION 12) - Boot Failure Guard (B.



[You're reading an excerpt. Click here to read official ASROCK K10N78D user guide](http://yourpdfguides.com/dref/2642458)
<http://yourpdfguides.com/dref/2642458>

F.G.) - ASRock AM2 Boost: ASRock Patented Technology to boost memory performance up to 12.5% (see CAUTION 13) - CPU Temperature Sensing - Chassis Temperature Sensing - CPU/Chassis/NB Fan Tachometer - CPU Quiet Fan - Voltage Monitoring: +12V, +5V, +3.

3V, CPU Vcore - Microsoft® Windows® XP / XP Media Center / XP 64-bit / Vista™ / Vista™ 64-bit compliant - FCC, CE, WHQL * For detailed product information, please visit our website: <http://www.asrock.com> 7 WARNING Please realize that there is a certain risk involved with overclocking, including adjusting the setting in the BIOS, applying Untied Overclocking Technology, or using the thirdparty overclocking tools. Overclocking may affect your system stability, or even cause damage to the components and devices of your system. It should be done at your own risk and expense. We are not responsible for possible damage caused by overclocking. CAUTION! 1. 2. This motherboard supports Untied Overclocking Technology. Please read "Untied Overclocking Technology" on page 32 for details.

This motherboard supports Dual Channel Memory Technology. Before you implement Dual Channel Memory Technology, make sure to read the installation guide of memory modules on page 15 for proper installation. Whether 1066MHz memory speed is supported depends on the AM2+ CPU you adopt. If5 6 PS2_USB_PW1 FSB2.6GHz HT3.

0 Dual Channel ATXPWR1 PS2 Mouse Top: SIDE SPK 1 7 FSB800 DDRII_2 (64 bit, 240-pin module) FSB800 DDRII_3 (64 bit, 240-pin module) USB 2.0 T: USB4 B: USB5 USB 2.0 T: USB2 B: USB3 DDR2 1066 USB 2.0 T: USB0 B: USB1 Top: RJ-45 DDRII_1 (64 bit, 240-pin module) DDRII_4 (64 bit, 240-pin module) 35 Bottom: MIC IN Top: LINE IN 34 LAN PHY Phenom II AM2+/AM3 CHA_FAN1 CPU_FAN1 30.5cm (12.

0-in) Optical SPDIF SOCKET AM2 IDE1 Bottom: CTR BASS Center: REAR SPK Center: FRONT PCIE1 8 33 32 31 30 29 Super I/O PCIE2 K10N78D PCIE3 CMOS BATTERY PCI Express 2.0 9 PCIE4 8Mb BIOS 1 CLRCMOS1 28 27 AUDIO CODEC PC11 CD1 NVIDIA nForce 720D Chipset SATAII_6 (PORT 5) RoHS SATAII_5 (PORT 4) 10 11 12 13 14 15 PCI2 USB6_7 SATAII_4 (PORT 3) 26 1 SATAII_3 (PORT 2) SATAII_2 (PORT 1) 25 HD_AUDIO1 1 HDMI_SPDIF1 1 PCI3 1 SPEAKER1 FLOPPY1 PLED PWRBTN NB_FAN1 USB8_9 USB10_11 1 1 COM1 HDLED RESET PANEL 1 1 1 SATAII_1 (PORT 0) 24 23 22 21 20 19 18 17 16 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 PS2_USB_PW1 Jumper ATX 12V Power Connector (ATX12V1) CPU Heatsink Retention Module AM2 940-Pin CPU Socket 2 x 240-pin DDR2 DIMM Slots (Dual Channel A: DDRII_1, DDRII_2; Yellow) 2 x 240-pin DDR2 DIMM Slots (Dual Channel B: DDRII_3, DDRII_4; Orange) ATX Power Connector (ATXPWR1) Primary IDE Connector (IDE1, Blue) NVIDIA nForce 720D Chipset SATAII Connector (SATAII_6 (PORT 5), Red) SATAII Connector (SATAII_5 (PORT 4), Red) SATAII Connector (SATAII_4 (PORT 3), Red) SATAII Connector (SATAII_3 (PORT 2), Red) SATAII Connector (SATAII_2 (PORT 1), Red) SATAII Connector (SATAII_1 (PORT 0), Red) USB 2.0 Header (USB6_7, Blue) USB 2.0 Header (USB10_11, Blue) USB 2.0 Header (USB8_9, Blue) 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 Chassis Speaker Header (SPEAKER 1, Purple) NB Fan Connector (NB_FAN1) System Panel Header (PANEL1, Orange) Serial Port Connector (COM1) Floppy Connector (FLOPPY1) Front Panel Audio Header (HD_AUDIO1, Lime) HDMI_SPDIF Header (HDMI_SPDIF1, Yellow) PCI Slots (PC11- 3) Internal Audio Connector: CD1 (Black) SPI BIOS Chip PCI Express x1 Slot (PCIE4, White) Clear CMOS Jumper (CLRCMOS1) PCI Express x1 Slot (PCIE3, White) PCI Express x16 Slot (PCIE2, Green) PCI Express x1 Slot (PCIE1, White) Chassis Fan Connector (CHA_FAN1) CPU Fan Connector (CPU_FAN1) 10 1.4 I/O Panel 1 2 3 4 5 6 7 8 14 13 12 11 10 9 1 *2 3 4 5 6 **7 PS/2 Mouse Port (Green) LAN RJ-45 Port (LAN1) Side Speaker (Gray) Rear Speaker (Black) Central / Bass (Orange) Line In (Light Blue) Front Speaker (Lime) 8 9 10 11 12 13 14 Microphone (Pink) USB 2.0 Ports (USB01) USB 2.0 Ports (USB23) USB 2.0 Ports (USB45) Optical SPDIF Out Port Coaxial SPDIF Out Port PS/2 Keyboard Port (Purple) * There are two LED next to the LAN port. Please refer to the table below for the LAN port LED indications.

LAN Port LED Indications Activity/Link LED Status Description Status SPEED LED Description ACT/LINK SPEED LED LED Off No Activity Blinking Data Activity Off Orange Green 10Mbps connection 100Mbps connection 1Gbps connection LAN Port ** If you use 2-channel speaker, please connect the speaker's plug into "Front Speaker Jack". See the table below for connection details in accordance with the type of speaker you use. TABLE for Audio Output Connection Audio Output Channels Front Speaker Rear Speaker (No. 7) (No. 4) 2 4 6 8 V V V V -V V V Central / Bass (No. 5) --V V Side Speaker (No. 3) --V 11 To enable Multi-Streaming function, you need to connect a front panel audio cable to the front panel audio header. After restarting your computer, you will find "VIA HD Audio Deck" tool on your system. Please follow below instructions according to the OS you install. For Windows® XP / XP 64-bit OS: Please click "VIA HD Audio Deck" icon , and click "Speaker".

Then you are allowed to select "2 Channel", "4 Channel", "6 Channel" or "8 Channel". Click "Power" to save your change. For Windows® Vista™ / Vista™ 64-bit OS: Please click "VIA HD Audio Deck" icon , and click "Advanced Options" on the left side on the bottom. In "Advanced Options" screen, select "Independent Headphone", and click "OK" to save your change. If you enable Multi-Streaming function, Side Speaker function will be disabled. You can only choose to enable either Multi-Streaming function or Side Speaker function. 12 2. Installation This is an ATX form factor (12.0-in x 7.5-in, 30.5 cm x 19.1 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it. Pre-installation Precautions Take note of the following precautions before you install motherboard components or change any motherboard settings. Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components. 1. 2. 3. 4.

5. Unplug the power cord from the wall socket before touching any component. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components. Hold components by the edges and do not touch the ICs.



[You're reading an excerpt. Click here to read official ASROCK](#)

[K10N78D user guide](#)

<http://yourpdfguides.com/dref/2642458>

Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard. 13 2.1 Step 1. Step 2. Step 3. CPU Installation Unlock the socket by lifting the lever up to a 90 angle. Position the CPU directly above the socket such that the CPU corner with the golden triangle matches the socket corner with a small triangle. Carefully insert the CPU into the socket until it fits in place. The CPU fits only in one correct orientation.

DO NOT force the CPU into the socket to avoid bending of the pins. o Step 4. When the CPU is in place, press it firmly on the socket while you push down the socket lever to secure the CPU. The lever clicks on the side tab to indicate that it is locked. Lever 90° Up CPU Golden Triangle Socket Corner Small Triangle STEP 1: Lift Up The Socket Lever STEP 2 / STEP 3: Match The CPU Golden Triangle To The Socket Corner Small Triangle STEP 4: Push Down And Lock The Socket Lever 2.

2 Installation of CPU Fan and Heatsink After you install the CPU into this motherboard, it is necessary to install a larger heatsink and cooling fan to dissipate heat. You also need to spray thermal grease between the CPU and the heatsink to improve heat dissipation. Make sure that the CPU and the heatsink are securely fastened and in good contact with each other. Then connect the CPU fan to the CPU FAN connector (CPU_FAN1, see Page 10, No. 35). For proper installation, please kindly refer to the instruction manuals of the CPU fan and the heatsink. 14 2.3 Installation of Memory Modules (DIMM) This motherboard provides four 240-pin DDR2 (Double Data Rate 2) DIMM slots, and supports Dual Channel Memory Technology. For dual channel configuration, you always need to install identical (the same brand, speed, size and chip-type) DDR2 DIMM pair in the slots of the same color. In other words, you have to install identical DDR2 DIMM pair in Dual Channel A (DDRII_1 and DDRII_2; Yellow slots; see p.

10 No.5) or identical DDR2 DIMM pair in Dual Channel B (DDRII_3 and DDRII_4; Orange slots; see p.10 No.6), so that Dual Channel Memory Technology can be activated. This motherboard also allows you to install four DDR2 DIMMs for dual channel configuration, and please install identical DDR2 DIMMs in all four slots. You may refer to the Dual Channel Memory Configuration Table below. Dual Channel Memory Configurations DDRII_1 (Yellow Slot) Populated Populated DDRII_2 (Yellow Slot) Populated Populated DDRII_3 DDRII_4 (Orange Slot) (Orange Slot) Populated Populated Populated Populated (1) (2) (3)* * For the configuration (3), please install identical DDR2 DIMMs in all four slots. 1. If you want to install two memory modules, for optimal compatibility and reliability, it is recommended to install them in the slots of the same color. In other words, install them either in the set of yellow slots (DDRII_1 and DDRII_2), or in the set of orange slots (DDRII_3 and DDRII_4).

2. If only one memory module or three memory modules are installed in the DDR2 DIMM slots on this motherboard, it is unable to activate the Dual Channel Memory Technology. If a pair of memory modules is NOT installed in the same Dual Channel, for example, installing a pair of memory modules in DDRII_1 and DDRII_3, it is unable to activate the Dual Channel Memory 4. Technology . It is not allowed to install a DDR memory module into DDR2 slot; otherwise, this motherboard and DIMM may be damaged.

3. 15 Installing a DIMM Please make sure to disconnect power supply before adding or removing DIMMs or the system components. Step 1. Step 2. Unlock a DIMM slot by pressing the retaining clips outward.

Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot. notch break notch break The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation. Step 3. Firmly insert the DIMM into the slot until the retaining clips at both ends fully snap back in place and the DIMM is properly seated. 16 2.4 Expansion Slots (PCI and PCI Express Slots) There are 3 PCI slots and 4 PCI Express slots on this motherboard. PCI slots: PCI slots are used to install expansion cards that have the 32-bit PCI interface. PCIE slots: PCIE1 / PCIE3 / PCIE4 (PCIE x1 slot; White) is used for PCI Express cards with x1 lane width cards, such as Gigabit LAN card, SATA2 card, etc. PCIE2 (PCIE x16 slot; Green) is used for PCI Express cards with x16 lane width graphics cards.

Installing an expansion card Step 1. Before installing the expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation. Remove the system unit cover (if your motherboard is already installed in a chassis). Remove the bracket facing the slot that you intend to use. Keep the screws for later use. Align the card connector with the slot and press firmly until the card is completely seated on the slot. Fasten the card to the chassis with screws.

Replace the system cover. Step 2.

Step 3. Step 4. Step 5. Step 6. 17 2.

5 Jumpers Setup The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is "Short". If no jumper cap is placed on pins, the jumper is "Open". The illustration shows a 3-pin jumper whose pin1 and pin2 are "Short" when jumper cap is placed on these 2 pins. Jumper PS2_USB_PW1 (see p.

10, No. 1) Setting 1_2 2_3 Short pin2, pin3 to enable +5VSB (standby) for PS/2 or +5V +5VSB USB wake up events. Note: To select +5VSB, it requires 2 Amp and higher standby current provided by power supply. Clear CMOS Jumper (CLRCMOS1) (see p.10, No. 30) 1_2 2_3 Default Clear CMOS Note: CLRCMOS1 allows you to clear the data in CMOS. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short pin2 and pin3 on CLRCMOS1 for 5 seconds. However, please do not clear the CMOS right after you update the BIOS.

If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action. 18 2.6 Onboard Headers and Connectors Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard! · Floppy Connector (33-pin FLOPPY1) (see p.



[You're reading an excerpt. Click here to read official ASROCK](http://yourpdfguides.com/dref/2642458)

[K10N78D user guide](http://yourpdfguides.com/dref/2642458)

<http://yourpdfguides.com/dref/2642458>

10, No. 23) Pin1 FLOPPY1 the red-striped side to Pin1 Note: Make sure the red-striped side of the cable is plugged into Pin1 side of the connector. Primary IDE connector (Blue) (39-pin IDE1, see p.10, No. 8) PIN1 IDE1 connect the blue end to the motherboard connect the black end to the IDE devices 80-conductor ATA 66/100/133 cable Note: Please refer to the instruction of your IDE device vendor for the details.

Serial ATA II Connectors (SATAII_1 (PORT 0): see p.10, No. 15) (SATAII_2 (PORT 1): see p.10, No. 14) (SATAII_3 (PORT 2): see p.

10, No. 13) (SATAII_4 (PORT 3): see p.10, No. 12) (SATAII_5 (PORT 4): see p.10, No.

11) (SATAII_6 (PORT 5): see p.10, No. 10) SATAII_3 (PORT 2) SATAII_4 (PORT 3) SATAII_5 (PORT 4) SATAII_6 (PORT 5) These six Serial ATAII (SATAII) connectors support SATA data cables for internal storage devices. The current SATAII interface allows up to 3.0 Gb/s data transfer rate. SATAII_2 (PORT 1) SATAII_1 (PORT 0) Serial ATA (SATA) Data Cable (Optional) Either end of the SATA data cable can be connected to the SATA / SATAII hard disk or the SATAII connector on this motherboard. 19 Serial ATA (SATA) Power Cable (Optional) connect to the SATA HDD power connector connect to the power supply Please connect the black end of SATA power cable to the power connector on each drive. Then connect the white end of SATA power cable to the power connector of the power supply. Besides six default USB 2.0 ports on the I/O panel, there are three USB 2.

0 headers on this motherboard. Each USB 2.0 header can support two USB 2.0 ports. USB 2.0 Headers (9-pin USB10_11) (see p.10 No. 17) 1 USB_PWR P-11 P+11 GND DUMMY GND P+10 P-10 USB_PWR (9-pin USB8_9) (see p.10 No. 18) 1 USB_PWR P-9 P+9 GND DUMMY (9-pin USB6_7) (see p. 10 No. 16) GND P+8 P-8 USB_PWR USB_PWR P-7 P+7 GND DUMMY 1 GND P+6 P-6 USB_PWR Internal Audio Connectors (4-pin CD1) (CD1: see p.10, No. 27) CD-L GND GND CD-R CD1 This connector allows you to receive stereo audio input from sound sources such as a CD-ROM, DVD-ROM, TV tuner card, or MPEG card. This is an interface for the front panel audio cable that allows convenient connection and control of audio devices.

Front Panel Audio Header (9-pin HD_AUDIO1) (see p.10, No. 24) 1 GND PRESENCE# MIC_RET OUT_RET OUT2_L J_SENSE OUT2_R MIC2_R MIC2_L 1. High Definition Audio supports Jack Sensing, but the panel wire on the chassis must support HDA to function correctly. Please follow the instruction in our manual and chassis manual to install your system.

2. If you use AC'97 audio panel, please install it to the front panel audio header as below: 20 A. Connect Mic_IN (MIC) to MIC2_L. B. Connect Audio_R (RIN) to OUT2_R and Audio_L (LIN) to OUT2_L. C. Connect Ground (GND) to Ground (GND). D. MIC_RET and OUT_RET are for HD audio panel only. You don't need to connect them for AC'97 audio panel.

E. Enter BIOS Setup Utility. Enter Advanced Settings, and then select Chipset Configuration. Set the Front Panel Control option from [Auto] to [Enabled]. System Panel Header (9-pin PANEL1) (see p.10, No. 21) 1 PLED+ PLEDPWRBTN# GND This header accommodates several system front panel functions. DUMMY RESET# GND HDLEDHDLED+ Chassis Speaker Header (4-pin SPEAKER 1) (see p.10, No. 19) 1 SPEAKER DUMMY DUMMY +5V Please connect the chassis speaker to this header.

Chassis and NB Fan Connectors (3-pin CHA_FAN1) (see p.10 No. 34) GND +12V CHA_FAN_SPEED Please connect the fan cables to the fan connectors and match the black wire to the ground pin. (3-pin NB_FAN1) (see p.10 No.

20) GND +12V NB_FAN_SPEED CPU Fan Connector (4-pin CPU_FAN1) (see p.10, No. 35) 4321 GND +12V CPU_FAN_SPEED FAN_SPEED_CONTROL Please connect the CPU fan cable to this connector and match the black wire to the ground pin. Though this motherboard provides 4-Pin CPU fan (Quiet Fan) support, the 3-Pin CPU fan still can work successfully even without the fan speed control function. If you plan to connect the 3-Pin CPU fan to the CPU fan connector on this motherboard, please connect it to Pin 1-3.

Pin 1-3 Connected 3-Pin Fan Installation ATX Power Connector (24-pin ATXPWR1) (see p.10, No. 7) 12 24 Please connect an ATX power supply to this connector. 1 13 21 Though this motherboard provides 24-pin ATX power connector, it can still work if you adopt a traditional 20-pin ATX power supply. To use the 20-pin ATX power supply, please plug your power supply along with Pin 1 and Pin 13. 12 24 20-Pin ATX Power Supply Installation 1 13 ATX 12V Power Connector (4-pin ATX12V1) (see p.10, No. 2) Please note that it is necessary to connect a power supply with ATX 12V plug to this connector. Failing to do so will cause power up failure. RRXD1 DDTR#1 DDSR#1 CCTS#1 1 Serial port Header (9-pin COM1) (see p.

10, No.22) This COM1 header supports a serial port module. RRI#1 RRTS#1 GND TTXD1 DDCD#1 HDMI_SPDIF Header (3-pin HDMI_SPDIF1) (see p.10 No. 25) 1 GND SPDIFOUT +5V HDMI_SPDIF header, providing SPDIF audio output to HDMI VGA card, allows the system to connect HDMI Digital TV/projector/LCD devices. Please connect the HDMI_SPDIF connector of HDMI VGA card to this header. Please connect the black end (A) of HDMI_SPDIF cable to the HDMI_SPDIF header on the motherboard. Then connect the white end (B or C) of HDMI_SPDIF cable to the HDMI_SPDIF connector of HDMI VGA card. C. white end (3-pin) SPDIFOUT GND blue black HDMI_SPDIF Cable (Optional) C B A A.

black end +5V SPDIFOUT GND blue black B. white end (2-pin) SPDIFOUT GND blue black 2.7 HDMI_SPDIF Header Connection Guide HDMI (High-Definition Multi-media Interface) is an all-digital audio/video specification, which provides an interface between any compatible digital audio/video source, such as a set-top box, DVD player, A/V receiver and a compatible digital audio or video monitor, such as a digital television (DTV). A complete HDMI system requires a HDMI VGA card and a HDMI ready motherboard with a HDMI_SPDIF header. This motherboard is equipped with a HDMI_SPDIF header, which provides SPDIF audio output to HDMI VGA card, allows the system to connect HDMI Digital TV/projector/ LCD devices.

To use HDMI function on this motherboard, please carefully follow the below steps. · Step 1. Install the HDMI VGA card to the PCI Express Graphics slot on this motherboard. For the proper installation of HDMI VGA card, please refer to the installation guide on page 17. Connect the black end (A) of HDMI_SPDIF cable to the HDMI_SPDIF header (HDMI_SPDIF1, yellow, see page 10, No.

25) on the motherboard. Make sure to correctly connect the HDMI_SPDIF cable to the motherboard and the HDMI VGA card according to the same pin definition. For the pin definition of HDMI_SPDIF header and HDMI_SPDIF cable connectors, please refer to page 22. For the pin definition of HDMI_SPDIF connectors on HDMI VGA card, please refer to the user manual of HDMI VGA card vendor. Incorrect connection may cause permanent damage to this motherboard and the HDMI VGA card.



[You're reading an excerpt. Click here to read official ASROCK](http://yourpdfguides.com/dref/2642458)

[K10N78D user guide](http://yourpdfguides.com/dref/2642458)

<http://yourpdfguides.com/dref/2642458>

Step 2. Step 3. Connect the white end (B or C) of HDMI_SPDIF cable to the HDMI_SPDIF connector of HDMI VGA card. (There are two white ends (2-pin and 3-pin) on HDMI_SPDIF cable. Please choose the appropriate white end according to the HDMI_SPDIF connector of the HDMI VGA card you install.

white end (2-pin) (B) white end (3-pin) (C) Please do not connect the white end of HDMI_SPDIF cable to the wrong connector of HDMI VGA card or other VGA card. Otherwise, the motherboard and the VGA card may be damaged. For example, this picture shows the wrong example of connecting HDMI_SPDIF cable to the fan connector of PCI Express VGA card. Please refer to the VGA card user manual for connector usage in advance. Step 4. Step 5. Connect the HDMI output connector on HDMI VGA card to HDMI device, such as HDTV. Please refer to the user manual of HDTV and HDMI VGA card vendor for detailed connection procedures. Install HDMI VGA card driver to your system. 23 2.

8 SATA SATAII Hard Disk Setup Guide Before installing SATAII hard disk to your computer, please carefully read below SATAII hard disk setup guide. Some default setting of SATAII hard disks may not be at SATAII mode, which operate with the best performance. In order to enable SATAII function, please follow the below instruction with different vendors to correctly adjust your SATAII hard disk to SATAII mode in advance; otherwise, your SATAII hard disk may fail to run at SATAII mode. Western Digital 7 8 5 6 3 4 1 2 If pin 5 and pin 6 are shorted, SATA 1.5Gb/s will be enabled.

On the other hand, if you want to enable SATAII 3.0Gb/s, please remove the jumpers from pin 5 and pin 6. SAMSUNG 7 8 5 6 3 4 1 2 If pin 3 and pin 4 are shorted, SATA 1.5Gb/s will be enabled. On the other hand, if you want to enable SATAII 3.

0Gb/s, please remove the jumpers from pin 3 and pin 4. HITACHI Please use the Feature Tool, a DOS-bootable tool, for changing various ATA features.

Please visit HITACHI's website for details: <http://www.hitachigst.com/hdd/support/download.htm> The above examples are just for your reference. For different SATAII hard disk products of different vendors, the jumper pin setting methods may not be the same. Please visit the vendors' website for the updates. 24 2.9 AT (SAT AT (SAT Serial ATA (SATA) / Serial ATAII (SATAII) Hard Disks Installation This motherboard adopts NVIDIA® nForce 720D chipset that supports Serial ATA (SATA) / Serial ATAII (SATAII) hard disks and RAID functions.

You may install SATA / SATAII hard disks on this motherboard for internal storage devices. This section will guide you to install the SATA / SATAII hard disks. STEP 1: Install the SATA / SATAII hard disks into the drive bays of your chassis. STEP 2: Connect the SATA power cable to the SATA / SATAII hard disk. STEP 3: Connect one end of the SATA data cable to the motherboard's SATAII connector. STEP 4: Connect the other end of the SATA data cable to the SATA / SATAII hard disk. If you plan to use RAID 0, RAID 1 or JBOD function, you need to install at least 2 SATA / SATAII hard disks. If you plan to use RAID 5 function, you need to install 3 SATA / SATAII hard disks. If you plan to use RAID 0+1 function, you need to install 4 SATA / SATAII hard disks.

Functions SAT SAT 2.

10 Hot Plug and Hot Swap Functions for SATA / SATAII HDDs This motherboard supports Hot Plug and Hot Swap functions for SATA / SATAII in RAID / AHCI mode. NVIDIA® nForce 720D chipset provides hardware support for Advanced Host controller Interface (AHCI), a new programming interface for SATA host controllers developed thru a joint industry effort. AHCI also provides usability enhancements such as Hot Plug. NOTE What is Hot Plug Function? If the SATA / SATAII HDDs are NOT set for RAID configuration, it is called "Hot Plug" for the action to insert and remove the SATA / SATAII HDDs while the system is still power-on and in working condition. However, please note that it cannot perform Hot Plug if the OS has been installed into the SATA / SATAII HDD.

What is Hot Swap Function? If SATA / SATAII HDDs are built as RAID1 or RAID 5 then it is called "Hot Swap" for the action to insert and remove the SATA / SATAII HDDs while the system is still power-on and in working condition. 25 SAT SAT Feature 2.11 SATA / SATAII HDD Hot Plug Feature and Operation

Guide This motherboard supports Hot Plug feature for SATA / SATAII HDD in RAID / AHCI mode. Please read below operation guide of SATA / SATAII HDD Hot Plug feature carefully. Before you process the SATA / SATAII HDD Hot Plug, please check below cable accessories from the motherboard gift box pack.

A. 7-pin SATA data cable B. SATA power cable with SATA 15-pin power connector interface A. SATA data cable (Red) B. SATA power cable SATA 7-pin connector The SATA 15-pin power connector (Black) connect to SATA / SATAII HDD 1x4-pin conventional power connector (White) connect to power supply Caution 1. Without SATA 15-pin power connector interface, the SATA / SATAII Hot Plug cannot be processed. 2. Even some SATA / SATAII HDDs provide both SATA 15-pin power connector and IDE 1x4-pin conventional power connector interfaces, the IDE 1x4-pin conventional power connector interface is definitely not able to support Hot Plug and will cause the HDD damage and data loss. Points of attention, before you process the Hot Plug: 1. Below operation procedure is designed only for our motherboard, which supports SATA / SATAII HDD Hot Plug.

*The SATA / SATAII Hot Plug feature might not be supported by the chipset because of its limitation, the SATA / SATAII Hot Plug support information of our motherboard is indicated in the product spec on our website: www.asrock.com 2. @@@@3. @@@@5. @@@@A. Enter BIOS SETUP UTILITY Advanced screen IDE Configuration. B. Set the "SATA Operation Mode" option to [IDE]. STEP 2: Make a SATA / SATAII driver diskette.

A. @@@@Please select CD-ROM as the boot device. C. @@D. Then you will see these messages, Please choose: 1.

Generate AHCI Driver diskette for WindowsXP 2. Generate RAID Driver diskette for WindowsXP 3. Generate AHCI Driver diskette for WindowsXP64 4.

Generate RAID Driver diskette for WindowsXP64 5. @@@@Then press any key.

E. @@@STEP 3: Set Up BIOS. @@@STEP 4: Install Windows® XP / XP 64-bit OS on your system. You can start to install Windows® XP / XP 64-bit on your system. @@@@After reading the floppy disk, the drivers will be presented. Select the driver to install according to the OS you install. The drivers are as below: A. NVIDIA nForce Storage Controller (required) Windows XP B. @@Please select B for Windows® XP 64-bit in AHCI mode. Using SATA / SATAII HDDs without NCQ and Hot Plug functions STEP 1: Set Up BIOS.

A. Enter BIOS SETUP UTILITY Advanced screen IDE Configuration. B. Set the "SATA Operation Mode" option to [IDE]. STEP 2: Install Windows® XP / XP 64-bit OS on your system. 2.13.2 Installing Windows® Vista TM / Vista TM 64-bit Without Functions RAID Functions If you want to install Windows® VistaTM / Windows® VistaTM 64-bit on your SATA / SATAII HDDs without RAID functions, please follow below steps.



[You're reading an excerpt. Click here to read official ASROCK](#)

[K10N78D user guide](#)

<http://yourpdfguides.com/dref/2642458>

@@A. Enter BIOS SETUP UTILITY Advanced screen IDE Configuration.

B. Set the "SATA Operation Mode" option to [AHCI]. STEP 2: Install Windows® Vista™ / Vista™ 64-bit OS on your system. Insert the Windows® Vista™ / Windows® Vista™ 64-bit optical disk into the optical drive to boot your system, and follow the instruction to install Windows® Vista™ / Windows® Vista™ 64-bit OS on your system. When you see "Where do you want to install Windows?" page, please insert the ASRock Support CD into your optical drive, and click the "Load Driver" button on the left on the bottom to load the NVIDIA® AHCI drivers.

NVIDIA® AHCI drivers are in the following path in our Support CD: 29 (There are two ASRock Support CD in the motherboard gift box pack, please choose the one for Windows® Vista™ / Vista™ 64-bit.) .. \I386\AHCI_Vista (For Windows® Vista™ OS) ..

\AMD64\AHCI_Vista64 (For Windows® Vista™ 64-bit OS) After that, please insert Windows® Vista™ / Windows® Vista™ 64-bit optical disk into the optical drive again to continue the installation. Using SATA / SATAII HDDs without NCQ and Hot Plug functions STEP 1: Set Up BIOS. A. Enter BIOS SETUP UTILITY Advanced screen IDE Configuration. B. Set the "SATA Operation Mode" option to [IDE]. STEP 2: Install Windows® Vista™ / Vista™ 64-bit OS on your system. 2.14 Installing Windows® XP / XP 64-bit / Vista™ / With Functions Vista™ 64-bit With RAID Functions If you want to install Windows® XP, Windows® XP 64-bit, Windows® Vista™ or Windows® Vista™ 64-bit on your SATA / SATAII HDDs with RAID functions, please follow below procedures according to the OS you install. 2.

14.1 Installing Windows® XP / XP 64-bit With RAID Functions If you want to install Windows® XP / Windows® XP 64-bit on your SATA / SATAII HDDs with RAID functions, please follow below steps. STEP 1: Set Up BIOS. A. Enter BIOS SETUP UTILITY Advanced screen IDE Configuration. B. Set the "SATA Operation Mode" option to [IDE]. STEP 2: Make a SATA / SATAII driver diskette. Please make a SATA / SATAII driver diskette by following section 2.13.

1 step 2 on page 28. STEP 3: Set Up BIOS. Please follow step 1 to set up the BIOS option "SATA Operation Mode" to [RAID]. STEP 4: Use "RAID Installation Guide" to set RAID configuration. Before you start to configure RAID function, you need to check the RAID installation guide in the Support CD for proper configuration.

Please refer to the BIOS RAID installation guide part of the document in the following path in the Support CD: .. \RAID Installation Guide 30 STEP 5: Install Windows® XP / XP 64-bit OS on your system. You can start to install Windows® XP / Windows® XP 64-bit OS on your system. At the beginning of Windows® setup, press F6 to install a third-party RAID driver.

When prompted, insert the SATA / SATAII driver diskette containing the NVIDIA® RAID driver. After reading the floppy disk, the drivers will be presented. Select the drivers to install. The drivers are as below: A. NVIDIA RAID Driver (required) B. NVIDIA nForce Storage Controller (required) Please select A and B for Windows® XP / XP 64-bit in RAID mode. (There are two RAID drivers needed for RAID mode, you have to select them separately. Please specify the first RAID driver and then specify again for the second one.) NOTE: If you install Windows® XP / Windows® XP 64-bit on IDE HDDs and want to manage (create, convert, delete, or rebuild) RAID functions on SATA / SATAII HDDs, you still need to set up "SATA Operation Mode" to [RAID] in BIOS first.

Then, please set the RAID configuration by using the Windows RAID installation guide part of the document in the following path in the Support CD: .. \RAID Installation Guide 2.14.2 Installing Windows® Vista™ / Vista™ 64-bit With RAID Functions If you want to install Windows® Vista™ / Windows® Vista™ 64-bit on your SATA / SATAII HDDs with RAID functions, please follow below steps. STEP 1: Set Up BIOS. A. Enter BIOS SETUP UTILITY Advanced screen IDE Configuration. B. Set the "SATA Operation Mode" option to [RAID].

STEP 2: Use "RAID Installation Guide" to set RAID configuration. Before you start to configure RAID function, you need to check the RAID installation guide in the Support CD for proper configuration. Please refer to the BIOS RAID installation guide part of the document in the following path in the Support CD: .. \RAID Installation Guide STEP 3: Install Windows® Vista™ / Vista™ 64-bit OS on your system.

Insert the Windows® Vista™ / Windows® Vista™ 64-bit optical disk into the optical drive to boot your system, and follow the instruction to install Windows® Vista™ / Windows® Vista™ 64-bit OS on your system. When you see "Where do you want to install Windows?" page, please insert the ASRock Support CD into your optical drive, and click the "Load Driver" button on the left on the bottom to load the NVIDIA® RAID drivers. NVIDIA® RAID drivers are in the following path in our Support CD: (There are two ASRock Support CD in the motherboard gift box pack, please choose the one for Windows® Vista™ / Vista™ 64-bit.) ..

\I386\ Vista (For Windows® Vista™ OS) .. \AMD64\ Vista64 (For Windows® Vista™ 64-bit OS) 31 After that, please insert Windows® Vista™ / Windows® Vista™ 64-bit optical disk into the optical drive again to continue the installation. NOTE: If you install Windows® Vista™ / Windows® Vista™ 64-bit on IDE HDDs and want to manage (create, convert, delete, or rebuild) RAID functions on SATA / SATAII HDDs, you still need to set up "SATA Operation Mode" to [RAID] in BIOS first. Then, please set the RAID configuration by using the Windows RAID installation guide in the following path in the Support CD: .. \RAID Installation Guide Technology 2.15 Untied Overclocking Technology This motherboard supports Untied Overclocking Technology, which means during overclocking, FSB enjoys better margin due to fixed PCI / PCIE buses. Before you enable Untied Overclocking function, please enter "Overclock Mode" option of BIOS setup to set the selection from [Auto] to [CPU, PCIE, Async].

J. Therefore, CPU FSB is untied during overclocking, but PCI / PCIE buses are in the fixed mode so that FSB can operate under a more stable overclocking environment. Please refer to the warning on page 8 for the possible overclocking risk before you apply Untied Overclocking Technology. 32 3. BIOS SETUP UTILITY 3.1 Introduction This section explains how to use the BIOS SETUP UTILITY to configure your system. The SPI Memory on the motherboard stores the BIOS SETUP UTILITY. You may run the BIOS SETUP UTILITY when you start up the computer. Please press <F2> during the Power-On-Self-Test (POST) to enter the BIOS SETUP UTILITY, otherwise, POST will continue with its test routines.



[You're reading an excerpt. Click here to read official ASROCK](http://yourpdfguides.com/dref/2642458)

[K10N78D user guide](http://yourpdfguides.com/dref/2642458)

<http://yourpdfguides.com/dref/2642458>

If you wish to enter the BIOS SETUP UTILITY after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis.

You may also restart by turning the system off and then back on. Because the BIOS software is constantly being updated, the following BIOS setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.

3 . 1 . 1 BIOS Menu Bar The top of the screen has a menu bar with the following selections: Main To set up the system time/date information Smart To load the BIOS according to your requirements Advanced To set up the advanced BIOS features H/W Monitor To display current hardware status Boot To set up the default system device to locate and load the Operating System Security To set up the security features Exit To exit the current screen or the BIOS SETUP UTILITY Use < > key or < > key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.

33 3 . 1 . 2 Navigation Keys Please check the following table for the function description of each navigation key. Navigation Key(s) // +/<Enter> <F1> <F9> <F10> <ESC> Function Description Moves cursor left or right to select Screens Moves cursor up or down to select items To change option for the selected items To bring up the selected screen To display the General Help Screen To load optimal default values for all the settings To save changes and exit the BIOS SETUP UTILITY To jump to the Exit Screen or exit the current screen 3.2 Main Screen When you enter the BIOS SETUP UTILITY, the Main screen will appear and display the system overview.

BIOS SETUP UTILITY Advanced H/W Monitor Boot Main Smart Security Exit System Overview System Time System Date BIOS Version Processor Type [17:00:09] [Wed 04/29/2009] Use [Enter], [TAB] or [SHIFT-TAB] to select a field. Use [+] or [-] to configure system Time. : K10N78D P1.0 : AMD Phenom (tm) 8650 Triple-Core Processor (64bit) Processor Speed : 2300MHz Microcode Update : 100F23/1000095 : 384KB L1 Cache Size : 1536KB L2 Cache Size : 2048KB L3 Cache Size Total Memory DDRII_A1 DDRII_A2 DDRII_B1 DDRII_B2 : 2048MB Single-Channel Memory Mode : 2048MB/333MHz (DDR2 667) : None : None : None +Tab F1 F9 F10 ESC Select Screen Select Item Change Field Select Field General Help Load Defaults Save and Exit Exit v02.54 (C) Copyright 1985-2005, American Megatrends, Inc. System Time [Hour:Minute:Second] Use this item to specify the system time. System Date [Day Month/Date/Year] Use this item to specify the system date. 34 3.3 Smart Screen In the Smart screen, you can load the BIOS setup according to your requirements. BIOS SETUP UTILITY H/W Monitor Boot Main Smart Advanced Security Exit Smart Settings Save Changes and Exit Load Load Load Load BIOS Defaults Performance Setup Default (IDE/SATA) Performance Setup AHCI Mode Performance Setup RAID Mode Power Saving Setup Default Exit system setup after saving the changes.

F10 key can be used for this operation. BIOS Update Utility ASRock Instant Flash Enter F1 F9 F10 ESC Select Screen Select Item Go to Sub Screen General Help Load Defaults Save and Exit Exit v02.54 (C) Copyright 1985-2005, American Megatrends, Inc. Save Changes and Exit When you select this option, it will pop-out the following message, "Save configuration changes and exit setup?" Select [OK] to save the changes and exit the BIOS SETUP UTILITY. Load BIOS Defaults Load BIOS default values for all the setup questions. F9 key can be used for this operation. Load Performance Setup Default (IDE/SATA) This performance setup default may not be compatible with all system configurations. If system boot failure occurs after loading, please resume optimal default settings. F5 key can be used for this operation. Load Performance Setup AHCI Mode This performance setup AHCI mode may not be compatible with all system configurations.

If system boot failure occurs after loading, please resume optimal default settings. F3 key can be used for this operation. Load Performance Setup RAID Mode This performance setup RAID mode may not be compatible with all system configurations. If system boot failure occurs after loading, please resume optimal default settings. F4 key can be used for this operation.

Load Power Saving Setup Default Load power saving setup default. F6 key can be used for this operation. ASRock Instant Flash ASRock Instant Flash is a BIOS flash utility embedded in Flash ROM. This convenient BIOS update tool allows you to update system BIOS without entering operating systems first like MS-DOS or Windows®. Just launch this tool and save the new BIOS file to your USB flash drive, floppy disk or 35 hard drive, then you can update your BIOS only in a few clicks without preparing an additional floppy diskette or other complicated flash utility.

Please be noted that the USB flash drive or hard drive must use FAT32/16/ 12 file system. If you execute ASRock Instant Flash utility, the utility will show the BIOS files and their respective information. Select the proper BIOS file to update your BIOS, and reboot your system after BIOS update process completes.

3.4 Advanced Screen In this section, you may set the configurations for the following items: CPU Configuration, Memory Configuration, Chipset Configuration, ACPI Configuration, IDE Configuration, PCIPnP Configuration, Floppy Configuration, SuperIO Configuration, and USB Configuration. BIOS SETUP UTILITY H/W Monitor Boot Main Smart Advanced Security Exit Options for CPU Advanced Settings WARNING : Setting wrong values in below sections may cause system to malfunction. CPU Configuration Memory Configuration Chipset Configuration ACPI Configuration IDE Configuration PCIPnP Configuration Floppy Configuration SuperIO Configuration USB Configuration Enter F1 F9 F10 ESC Select Screen Select Item Go to Sub Screen General Help Load Defaults Save and Exit Exit v02.54 (C) Copyright 1985-2005, American Megatrends, Inc. Setting wrong values in this section may cause the system to malfunction. 36 3.

4.1 CPU Configuration BIOS SETUP UTILITY Advanced CPU Configuration Overclock Mode CPU Frequency (MHz) PCIE Frequency (MHz) CPU/LDT Spread Spectrum SATA Spread Spectrum Boot Failure Guard Cool' n' Quiet Secure Virtual Machine Enhanced Halt State L3 Cache Allocation Processor Maximum Frequency North Bridge Maximum Voltage Processor Maximum Voltage Multiplier/Voltage Change HT Bus Speed HT Bus Width [Auto] [200] [100] [Enabled] [Enabled] [Enabled] [Auto] [Enabled] [Disabled] [Auto] x11.5 2300 MHz x9.0 1800 MHZ 1.2500 V [Auto] [Auto] [Auto] If AUTO, multiplier and voltage will be left at the rated frequency/voltage. If Manual, multiplier and voltage will be set based on User Selection in Setup. +F1 F9 F10 ESC Select Screen Select Item Change Option General Help Load Defaults Save and Exit Exit v02.



[You're reading an excerpt. Click here to read official ASROCK](http://yourpdfguides.com/dref/2642458)

[K10N78D user guide](http://yourpdfguides.com/dref/2642458)

<http://yourpdfguides.com/dref/2642458>

54 (C) Copyright 1985-2003, American Megatrends, Inc. AM2 Boost This option appears only when you adopt AM2 CPU. If you set this option to [Enabled], you will enable ASRock AM2 Boost function, which will improve the memory performance. The default value is [Disabled]. Please refer to caution 13 on page 9 for details. Overclock Mode Use this to select Overclock Mode. The default value is [Auto]. Configuration options: [Auto], [CPU, PCIE, Sync].

, [CPU, PCIE, Async.] and [Optimized]. CPU Frequency (MHz) Use this option to adjust CPU frequency. PCIE Frequency (MHz) Use this option to adjust PCIE frequency. CPU/LDT Spread Spectrum This feature will be set to [Enabled] as default.

Configuration options: [Disabled] and [Enabled]. SATA Spread Spectrum This feature will be set to [Enabled] as default. Configuration options: [Disabled] and [Enabled]. Boot Failure Guard Enable or disable the feature of Boot Failure Guard. Cool 'n' Quiet Use this item to enable or disable AMD's Cool 'n' Quiet™ technology. The default value is [Auto]. Configuration options: [Auto], [Enabled] and [Disabled]. If you install Windows® Vista™ and want to enable this function, please set this item to [Enabled]. Please note that enabling this function may reduce CPU voltage and memory frequency, and lead to system stability or compatibility issue with some memory modules or power supplies. Please set this item to [Disable] if above issue occurs.

37 Secure Virtual Machine When this option is set to [Enabled], a VMM (Virtual Machine Architecture) can utilize the additional hardware capabilities provided by AMD-V. The default value is [Enabled]. Configuration options: [Enabled] and [Disabled]. Enhanced Halt State C1E is an enhanced power saving state which is supported by AM2 dual core and AM2+ multi-core processors. The processor will enter C1E power saving state when both of its cores transition into the C1 state. The default value is [Disabled]. Configuration options: [Enabled] and [Disabled]. L3 Cache Allocation This option appears only when you adopt Phenom CPU. The default value is [Auto]. Configuration options: [Auto], [BSP Only] and [All Cores].

Processor Maximum Frequency It will display Processor Maximum Frequency for reference. North Bridge Maximum Frequency This option appears only when you adopt Phenom CPU. It will display North Bridge Maximum Frequency for reference. Processor Maximum Voltage It will display Processor Maximum Voltage for reference. Multiplier/Voltage Change This item is set to [Auto] by default.

If it is set to [Manual], you may adjust the value of Processor Frequency and Processor Voltage. However, it is recommended to keep the default value for system stability. BIOS SETUP UTILITY Advanced CPU Configuration Overclock Mode CPU Frequency (MHz) PCIE Frequency (MHz) CPU/LDT Spread Spectrum SATA Spread Spectrum Boot Failure Guard Cool' n' Quiet Secure Virtual Machine Enhanced Halt State L3 Cache Allocation Processor Maximum Frequency North Bridge Maximum Voltage Processor Maximum Voltage Multiplier/Voltage Change CPU Frequency Multiplier CPU Voltage [Auto] [200] [100] [Enabled] [Enabled] [Enabled] [Auto] [Enabled] [Disabled] [Auto] x11.5 2300 MHz x9.0 1800 MHz 1.

2500 V [Manual] [x11.5 2300 MHz] [1.2500 V] If AUTO, multiplier and voltage will be left at the rated frequency/voltage. If Manual, multiplier and voltage will be set based on User Selection in Setup. +F1 F9 F10 ESC Select Screen Select Item Change Option General Help Load Defaults Save and Exit Exit v02.54 (C) Copyright 1985-2003, American Megatrends, Inc. Processor Frequency This option appears only when you adopt AM2 CPU. This item will show when "Multiplier/Voltage Change" is set to [Manual]; otherwise, it will be hidden. The range of the value depends on the CPU you adopt on this motherboard. However, for system stability, it is not recommended to adjust the value of this item.

38 Processor Voltage This option appears only when you adopt AM2 CPU. This item will show when "Multiplier/Voltage Change" is set to [Manual]; otherwise, it will be hidden. The range of the value depends on the CPU you adopt on this motherboard. However, for safety and system stability, it is not recommended to adjust the value of this item. CPU Frequency Multiplier This option appears only when you adopt Phenom CPU. However, for safety and system stability, it is not recommended to adjust the value of this item. CPU Voltage This option appears only when you adopt Phenom CPU. It allows you to adjust the value of CPU voltage. However, for safety and system stability, it is not recommended to adjust the value of this item. NB Frequency Multiplier This option appears only when you adopt Phenom CPU.

However, for safety and system stability, it is not recommended to adjust the value of this item. NB Voltage This option appears only when you adopt Phenom CPU. It allows you to adjust the value of NB voltage. However, for safety and system stability, it is not recommended to adjust the value of this item. HT Bus Speed This feature allows you selecting Hyper-Transport bus speed.

Configuration options: [Auto], [200 MHz], [400 MHz], [600 MHz], [800 MHz] and [1000 MHz]. If you adopt Phenom CPU, the configuration options are: [Auto], [200 MHz], [400 MHz], [600 MHz], [800 MHz], [1000 MHz], [1800 MHz], [2000 MHz], [2200 MHz], [2400 MHz] and [2600 MHz]. The configuration options depend on the CPU you adopt. HT Bus Width This feature allows you selecting Hyper-Transport bus width. Configuration options: [Auto], [8 Bit] and [16 Bit].

NVIDIA Core Calibration Setting this item to [All Cores] or [Per Core] will enhance the overclocking ability of the processor. Configuration options: [Disabled], [Auto], [All Cores] and [Per Core]. The default value is [Disabled]. CPU Thermal Throttle Use this to enable CPU internal thermal control mechanism to keep the CPU from overheated. Configuration options: [Enabled] and [Disabled]. The default value is [Enabled]. 39 3.4.2 Memory Configuration BIOS SETUP UTILITY Advanced Memory Configuration Memory Clock Flexibility Option Memory Controller Mode Power Down Enable Bank Interleaving Channel Interleaving Timing : 5-5-5-15 CAS Latency (CL) TRCD TRP TRAS Timing : 5-3-3-5-28 TRTP TRRD TWTR TWR [Auto] [Disabled] [Unganged] [Enabled] [Auto] [XOR of Address bit] [Auto] [Auto] [Auto] [Auto] [Auto] [Auto] [Auto] [Auto] +F1 F9 F10 ESC Select Screen Select Item Change Option General Help Load Defaults Save and Exit Exit v02.54 (C) Copyright 1985-2003, American Megatrends, Inc.

Memory Clock This item can be set by the code using [Auto]. You can set one of the standard values as listed: [200 MHz (DDR2 400)], [266 MHz (DDR2 533)], [333 MHz (DDR2 667)] and [400MHz (DDR2 800)]. If you adopt Phenom CPU, there is one more option: [533MHz (DDR2 1066)]. Flexibility Option The default value of this option is [Disabled]. It will allow better tolerance for memory compatibility when it is set to [Enabled]. Memory Controller Mode This option appears only when you adopt Phenom CPU.



[You're reading an excerpt. Click here to read official ASROCK K10N78D user guide](http://yourpdfguides.com/dref/2642458)
<http://yourpdfguides.com/dref/2642458>

It allows you to adjust the memory controller mode. Configuration options: [Unganged] and [Ganged]. The default value is [Unganged]. Power Down Enable Use this item to enable or disable DDR power down mode.

Bank Interleaving Interleaving allows memory accesses to be spread out over banks on the same node, or across nodes, decreasing access contention.

Channel Interleaving This option appears only when you adopt Phenom CPU. It allows you to enable Channel Memory Interleaving. Configuration options: [Disabled], [XOR of Address bit [20:16, 6]], [XOR of Address bit [20:16, 9]], [Address bits 6] and [Address bits 12]. The default value is [XOR of Address bit [20:16, 6]].

CAS Latency (CL) Use this item to adjust the means of memory accessing. Configuration options: [Auto], [3CLK] to [7CLK]. The default value is [Auto].

TRCD Use this to adjust TRCD values. Configuration options: [Auto], [3CLK] to [6CLK].

The default value is [Auto]. 40 TRP Use this to adjust TRP values. Configuration options: [Auto], [3CLK] to [6CLK]. The default value is [Auto]. TRAS Use this to adjust TRAS values. Configuration options: [Auto], [5CLK] to [18CLK]. The default value is [Auto]. TRTP Use this to adjust TRTP values.

Configuration options: [Auto], [2-4 CLK] and [3-5 CLK]. The default value is [Auto].

TRRD Use this to adjust TRRD values. Configuration options: [Auto], [2CLK] to [5CLK]. The default value is [Auto]. TWTR Use this to adjust TWTR values.

Configuration options: [Auto], [1CLK] to [3CLK]. The default value is [Auto]. TWR Use this to adjust TWR values. Configuration options: [Auto], [3CLK] to [6CLK]. The default value is [Auto]. TRC Use this to adjust TRC values.

Configuration options: [Auto], [11CLK] to [26CLK]. The default value is [Auto]. TRWTWB Use this to adjust TRWTWB values. Configuration options: [Auto], [3CLK] to [10CLK]. The default value is [Auto].

TRWTO Use this to adjust TRWTO values. Configuration options: [Auto], [3CLK] to [17CLK]. The default value is [Auto]. TWRRD Use this to adjust TWRRD values. Configuration options: [Auto], [1CLK] to [4CLK].

The default value is [Auto]. TWRWR Use this to adjust TWRWR values. Configuration options: [Auto], [1CLK] to [4CLK]. The default value is [Auto].

TRDRD Use this to adjust TRDRD values. Configuration options: [Auto], [3CLK] to [5CLK]. The default value is [Auto]. TRFC0 Use this to adjust TRFC0 values. Configuration options: [Auto], [75ns], [105ns], [127.5ns], [195ns] and [327.

5ns]. The default value is [Auto]. TRFC1 Use this to adjust TRFC1 values. Configuration options: [Auto], [75ns], [105ns], [127.5ns], [195ns] and [327.5ns].

The default value is [Auto]. 41 MA Timing Use this to adjust values for MA timing. Configuration options: [Auto], [2T], [1T]. The default value is [Auto].

CHA Addr/Cmd Fine Delay Use this to adjust values for CHA Addr/Cmd Fine Delay feature. Configuration options: [Auto], [No Delay], [1/64CLK] to [31/64CLK]. The default value is [Auto]. CHA Addr/Cmd Setup Time Use this to adjust values for CHA Addr/Cmd Setup Time feature. Configuration options: [Auto], [1/2CLK] and [1CLK].

The default value is [Auto]. CHA CS/ODT Fine Delay Use this to adjust values for CHA CS/ODT Fine Delay feature. Configuration options: [Auto], [No Delay], [1/64CLK] to [31/64CLK]. The default value is [Auto]. CHA CS/ODT Setup Time Use this to adjust values for CHA CS/ODT Setup Time feature.

Configuration options: [Auto], [1/2CLK] and [1CLK]. The default value is [Auto]. CHB Addr/Cmd Fine Delay Use this to adjust values for CHB Addr/Cmd Fine Delay feature. Configuration options: [Auto], [No Delay], [1/64CLK] to [31/64CLK]. The default value is [Auto]. CHB Addr/Cmd Setup Time Use this to adjust values for CHB Addr/Cmd Setup Time feature. Configuration options: [Auto], [1/2CLK] and [1CLK]. The default value is [Auto]. CHB CS/ODT

Fine Delay Use this to adjust values for CHB CS/ODT Fine Delay feature. Configuration options: [Auto], [No Delay], [1/64CLK] to [31/64CLK].

The default value is [Auto]. CHB CS/ODT Setup Time Use this to adjust values for CHB CS/ODT Setup Time feature. Configuration options: [Auto], [1/2CLK] and [1CLK]. The default value is [Auto]. CHA CKE Drive Strength Use this to adjust values for CHA CKE Drive Strength. Configuration options:

[Auto], [1.00x], [1.25x], [1.50x] and [2.00x].

The default value is [Auto]. CHA CS/ODT Drive Strength Use this to adjust values for CHA CS/ODT Drive Strength. Configuration options: [Auto], [1.00x], [1.25x], [1.

50x] and [2.00x]. The default value is [Auto]. CHA ADDR/CMD Drive Strength Use this to adjust values for CHA ADDR/CMD Drive Strength. Configuration options: [Auto], [1.

00x], [1.25x], [1.50x] and [2.00x]. The default value is [Auto]. 42 CHA CLK Drive Strength Use this to adjust values for CHA CLK Drive Strength.

Configuration options: [Auto], [0.75x], [1.00x], [1.25x] and [1.

50x]. The default value is [Auto]. CHA DATA Drive Strength Use this to adjust values for CHA DATA Drive Strength. Configuration options: [Auto], [0.75x], [1.00x], [1.25x] and [1.50x]. The default value is [Auto]. CHA DQS Drive Strength Use this to adjust values for CHA DQS Drive Strength.

Configuration options: [Auto], [0.75x], [1.00x], [1.25x] and [1.50x].

The default value is [Auto]. CHA Processor ODT Use this to adjust values for CHA Processor ODT. Configuration options: [Auto], [300 ohms], [150 ohms] and [75 ohms]. The default value is [Auto]. CHB CKE Drive Strength Use this to adjust values for CHB CKE Drive Strength.

Configuration options: [Auto], [1.00x], [1.25x], [1.50x] and [2.00x]. The default value is [Auto]. CHB CS/ODT Drive Strength Use this to adjust values for CHB CS/ODT Drive Strength. Configuration options: [Auto], [1.00x], [1.25x], [1.

50x] and [2.00x]. The default value is [Auto]. CHB ADDR/CMD Drive Strength Use this to adjust values for CHB ADDR/CMD Drive Strength. Configuration options: [Auto], [1.00x], [1.25x], [1.50x] and [2.00x]. The default value is [Auto].

CHB CLK Drive Strength Use this to adjust values for CHB CLK Drive Strength. Configuration options: [Auto], [0.75x], [1.00x], [1.25x] and [1.

50x]. The default value is [Auto]. CHB DATA Drive Strength Use this to adjust values for CHB DATA Drive Strength. Configuration options: [Auto], [0.75x], [1.

00x], [1.25x] and [1.50x]. The default value is [Auto]. CHB DQS Drive Strength Use this to adjust values for CHB DQS Drive Strength. Configuration

options: [Auto], [0.75x], [1.00x], [1.25x] and [1.50x].

The default value is [Auto]. CHB Processor ODT Use this to adjust values for CHB Processor ODT. Configuration options: [Auto], [300 ohms], [150 ohms] and [75 ohms]. The default value is [Auto]. 43 3.4.3 Chipset Configuration BIOS SETUP UTILITY Advanced Chipset Settings Onboard LAN Onboard HD

Audio Front Panel Primary Graphics Adapter DRAM Voltage Chipset Voltage HT Voltage [Enabled] [Auto] [Enabled] [PCI] [Auto] [Auto] [Auto] To set DRAM Voltage. +F1 F9 F10 ESC Select Screen Select Item Change Option General Help Load Defaults Save and Exit Exit v02.54 (C) Copyright 1985-2003,

American Megatrends, Inc. Onboard LAN This allows you to enable or disable the onboard LAN feature.

Onboard HD Audio Select [Auto], [Enabled] or [Disabled] for the onboard HD Audio feature.



[You're reading an excerpt. Click here to read official ASROCK
K10N78D user guide](http://yourpdfguides.com/dref/2642458)
<http://yourpdfguides.com/dref/2642458>