



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for LA CROSSE TECHNOLOGY WS-9228U-WW. You'll find the answers to all your questions on the LA CROSSE TECHNOLOGY WS-9228U-WW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual LA CROSSE TECHNOLOGY WS-9228U-WW User guide LA CROSSE TECHNOLOGY WS-9228U-WW Operating instructions LA CROSSE TECHNOLOGY WS-9228U-WW Instructions for use LA CROSSE TECHNOLOGY WS-9228U-WW Instruction manual LA CROSSE TECHNOLOGY WS-9228U-WW

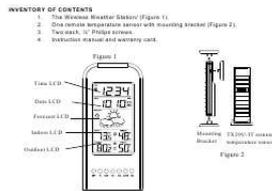


TABLE OF CONTENTS

Table	Page
Inventory of Contents/Accessories	
About WS-9228U-WW	
Quick Setup Guide	
General Set-up Guide	
Radio Frequency	
Display Screen	
Program Sequence and Default Settings	
- Custom Date	
- Setting the LCD Contrast	
- Setting the Year/Zone	
- Display Saving Time Setting	
- Radio Control Time Setting	
- LCD Backlight Setting	
- Setting the Time	
- Setting the Year, Day and Month	
- Setting the Screen	
- Setting the Temperature Format	
- Setting the Temperature Unit	
- Setting the Temperature Sensor	
Features	
- Weather Forecast Icons and Weather Alerts	
- Indoor Temperature, Humidity, & Comfort	
- Low Voltage	
- Display Temperature and Humidity	
- Super-Touch/ST-TOUCH™ (ST-TOUCH & ST-TOUCH)	
- Minimum & Maximum Records (Minimum & Maximum)	
- Additional Weather Control Setting (Set up, View, and a Sequence)	
- Memory	
- Troubleshooting	
- Maintenance & Care	
- Specifications	
- Warranty Information	

This product offers:

INSTANT TRANSMISSION is the standard of all new wireless communication technology, exclusively designed and developed by LA CROSSE TECHNOLOGY™. INSTANT TRANSMISSION allows you to receive updates in only a second, at all your outdoor sites, wherever they are. The transmitter follows your static wireless in real-time!



ADDITIONAL EQUIPMENT (not included):

1. Two front AA 1.5V Alkaline batteries for the Wireless Weather Station.
2. Two front AA 1.5V Alkaline batteries for the remote temperature sensor.
3. One Philips screwdriver for mounting.

ABOUT WS-9228U-WW (Radio Controlled Time)

The WS-9228U-WW station is powered by a radio control system. The signal can be received up to 200 feet away through the outdoor antenna in the weather station. However, due to the nature of the Earth's ionosphere, reception is very limited during daylight hours. The weather station will search for a signal every night when it is in sleep mode. The WS-9228U-WW station receives its signal from the WS-9228U-WW station in Boulder, Colorado. A team of atomic physicists is constantly measuring every second of every day, so an accuracy of one minute is achieved per day. These operations have created an astronomical standard, measuring a second as 9,192,631,770 vibrations of a Cesium-133 atom in a vacuum. For more information on the atomic clock and WS-9228U-WW please see the WS-9228U-WW website at <http://www.lacrosse.com/9228uww>

QUICK SETUP GUIDE

NOTE: Use good quality Alkaline batteries and avoid rechargable batteries.

1. Open the Wireless Weather Station and remote temperature sensor 1 to 2 feet apart.
2. Batteries should be out of both units for 15 minutes.
3. Place the batteries into the remote temperature sensor first and into the weather station.
4. **DO NOT PRESS ANY BUTTONS FOR 15 MINUTES.**

When the WS-9228U-WW Weather Station and remote temperature sensor are left to rest for one hour and the display will show both the indoor temperature and humidity, and an outdoor temperature. If the Wireless Weather Station does not display both temperatures after the 15 minute period, then the set-up is not correct. After both indoor and outdoor temperatures are obtained for 15 minutes you can place your remote temperature sensor around and set your date.

The remote temperature sensor should be placed in a dry shaded area. The temperature sensor has a range of 200 feet. Keep in mind that the 200 feet is in open air with no obstructions and that the weather WS-9228U-WW sensor should operate. Actual transmission range will vary depending on what is in the path of the signal. Each obstruction (roof, walls, floor, ceiling, brick, trees, etc.) will effectively cut signal range in half.

Example: A Wireless Weather Station with a 200 foot range is mounted on an interior wall. An outdoor signal line is placed through one window and, one window up, and across the 10 foot width of the room between the 2 walls. The first wall will reduce the range to 100 feet, and the second wall will reduce the range to 50 feet. Factoring in the 10 foot distance, this leaves a maximum of 77 feet of remaining signal range.

This allowance is typically enough for a frame wall with non-metallic siding. However certain materials can reduce range even further. Metal siding, aluminum, and some types of glass can reduce signal range by as much as 50% more, compared to the 50% reduction typical of most constructions. It is possible to receive a signal through these materials, however maximum range will be much less due to their tendency to absorb or reflect a much larger portion of the sensor's signal.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9228U-WW user guide](http://yourpdfguides.com/dref/3643520)
<http://yourpdfguides.com/dref/3643520>

Manual abstract:

The Weather Station will search for a signal every night when reception is best. The WWVB radio station derives its signal from the NIST Atomic clock in Boulder, Colorado. A team of atomic physicists is continually measuring every second, of every day, to an accuracy of ten billionths of a second per day.

These physicists have created an international standard, measuring a second as 9,192,631,770 vibrations of a Cesium-133 atom in a vacuum. For more information on the atomic clock and WWVB please see the NIST website at <http://www.boulder.nist.gov/timefreq/stations/wwvb.htm>. **QUICK SET-UP GUIDE**

Hint: Use good quality Alkaline Batteries and avoid rechargeable batteries.

INVENTORY OF CONTENTS 1. The Wireless Weather Station/ (Figure 1). 2. One remote temperature sensor with mounting bracket (Figure 2). 3. Two each, ½" Philips screws. 4. Instruction manual and warranty card. Figure 1 Time LCD Date LCD Forecast LCD Indoor LCD Outdoor LCD Mounting TX29U-IT remote Bracket temperature sensor Have the Wireless Weather Station and remote temperature sensor 3 to 5 feet apart. Batteries should be out of both units for 10 minutes.

Place the batteries into the remote temperature sensor first then into the indoor weather station. (All remote temperature sensors must be started before the Wireless Weather Station) 4. **DO NOT PRESS ANY BUTTONS FOR 15 MINUTES.** In this time the Wireless Weather Station and remote temperature sensor will start to talk to each other and the display will show both the indoor temperature and humidity, and an outdoor temperature. If the Wireless Weather Station does not display both temperatures after the 15 minutes please retry the set up as stated above. After both indoor and outdoor temperatures are displayed for 15 minutes you can place your remote temperature sensor outdoor and set your time. The remote temperature sensor should be placed in a dry, shaded area. The temperature sensor has a range of 330 feet. Keep in mind that the 330 feet is in open air with no obstructions and that radio waves **DO NOT** curve around objects. Actual transmission range will vary depending on what is in the path of the signal.

Each obstruction (roof, walls, floors, ceilings, thick trees, etc.) will effectively cut signal range in half. Example: A Wireless Weather Station with a 330 feet range is mounted on an interior wall, so that the signal has to pass through one interior wall, one exterior wall, and across the 10 feet width of the room between the 2 walls. The first wall will reduce the range to 165 feet, and the second wall will reduce the range to 87 feet. Factoring in the 10 foot room, this leaves a maximum of 77 feet of remaining signal range. This allowance is typically enough for a frame wall with non-metallic siding; however certain materials can reduce range even further. Metal siding, stucco, and some types of glass can reduce signal range by as much as ¾ or more, compared to the ½ reduction typical of most obstructions. It is possible to receive a signal through these materials, however maximum range will be much less due to their tendency to absorb or reflect a much larger portion of the sensor's signal. 1. 2.

3. Figure 2 **ADDITIONAL EQUIPMENT** (not included) 1. Two fresh AA 1.5V Alkaline batteries for the Wireless Weather Station. 2. Two fresh AA 1.5V Alkaline batteries for the remote temperature sensor. 3. One, Philips screwdriver for mounting. 3 4 To complete the set up of your Wireless Weather Station after the 15 minutes have passed please follow the steps that follow in the Detailed Set-Up Guide.

DETAILED SET-UP GUIDE I. BATTERY INSTALLATION (When one temperature sensor is being used) 1. 2. First, insert the batteries to the temperature sensor (see "A. Remote Temperature Sensor" below). Within 30 seconds of powering up the sensor, insert the batteries to the Weather Station (see "B. Wireless Weather Station" below). Once the batteries are in place, all segments of the LCD will light up briefly. Following the indoor temperature and humidity, and the time as 12:00 will be displayed. If they are not shown in LCD after 60 seconds, remove the batteries and wait for at least 60 seconds before reinserting them.

Once the indoor data is displayed user may proceed to the next step. After the batteries are inserted, the Weather Station will start receiving data signal from the sensor. The outdoor temperature should then be displayed on the Weather Station. If this does not happen after 2 minutes, the batteries will need to be removed from both units and reset from step 1 and the signal reception icon is no longer shown. * When the signal is successfully received by the Weather Station, the icon will be switched on. (If not successful, the icon will not be shown in LCD) So the user can easily see whether the last reception was successful (icon on) or not (icon off). On the other hand, the short blinking of the icon shows that a reception is being done now. If the signal reception is not successful on the first frequency (915MHz) for 45 seconds, the frequency is changed to 920MHz and the learning is tried another 45 seconds. If still not successful the reception is tried for 45 seconds on 910MHz. This will also be done for resynchronization.

3. **PROGRAM MODE** Programming Note: If 30 seconds is allowed to pass, or the CH button is pressed during the programming mode, the unit will confirm/set the last information entered-- the display will stop flashing and return to normal time-date readings. If you don't leave the program mode during the programming of sections III through XII, you can advance to step 4 of the next program setting. If you do leave the program setting (or want to program a specific setting) follow each instructional step to program that setting. 1.

PROGRAMMING SEQUENCE AND DEFAULT SETTINGS The programming sequence and default (factory) settings are as follows: LCD Contrast Time Zone Daylight Saving Time Radio-controlled time reception 12/24-hour time Time Year Day and Month Snooze (this function not used) Temperature Format Forecast Sensitivity 5 -5 (Eastern) 1 (on) ON 12 12:00 2005 1.1. 10 F 2 A. **REMOTE TEMPERATURE SENSOR** 1. Remove the mounting bracket.

The bracket snaps on and off easily. 2. Remove the battery cover, by sliding the cover down. 3. Observing the correct polarity install 2 AA batteries. The batteries will fit tightly (to avoid start-up problems make sure they do not spring free). 4. Replace the battery cover by sliding upwards. Be sure battery cover is on securely. Battery Cover B.

WIRELESS WEATHER STATION 1. Remove the battery cover. To do this, insert a solid object in the space provided at the lower-central position of the battery cover, then push up and pull out on the battery cover. 2. Observe the correct polarity, and install 2 AA batteries. 3. Replace the battery cover. Please note that while there is a snooze adjustment in the programming this is an unused function as there is no alarm on the indoor weather station. II. **FUNCTION KEYS** The function keys are located on the front of the unit directly below the LCD.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9228U-WW user guide](http://yourpdfguides.com/dref/3643520)
<http://yourpdfguides.com/dref/3643520>

Sensor signal reception icon* III. **SETTING THE LCD CONTRAST** 1. Press and hold the SET button for 5 seconds. 2. "LCD" will show in the time LCD and the number setting will flash.

5. 6. Note: There are 8 LCD contrast levels to choose from--"Lcd 0" is the lightest, and "Lcd 7" is the darkest. 3. 4. IV. Press and release the IN button to select the level you desire.

Press and release the SET button to confirm and advance to the Time Zone setting. 5. Press and release the IN button to select DST on or off. "DST 0" indicates that the feature is off and the WWVB will not change times automatically. "DST 1" indicates that the feature is on and the WWVB will change times automatically. Note: Some locations (Arizona) do not follow Daylight Saving Time, and should select "DST 0." 6. VI. Press and release the SET button to confirm and advance to the radiocontrolled time on/off setting. **TIME ZONE SETTING 1.**

Press and hold the SET button for 5 seconds. 2. "LCD" will show in the time LCD and the number setting will flash. 3. Press and release the SET button again. 4. The time zone will flash in the date LCD. **RADIO-CONTROLLED TIME ON/OFF SETTING 1.** Press and hold the SET button for 5 seconds. 2. "LCD" will show in the time LCD and the number setting will flash. 3. Press and release the SET button three times. 4. "RCC" will appear in the date LCD and "ON" or "OFF" will flash in the time LCD.

5. Press and release the IN button to select your time zone. Note: When a time zone for the U.S. is selected the corresponding abbreviation will appear above the time (please see the table on the next page).

It is possible to select any time zone from 12 GMT to +12 GMT (for example to see the time in another country) **TIME ZONES** GMT 0 ALT Atlantic -4 EST Eastern -5 CST Central -6 MST Mountain -7 PST Pacific -8 ALA Alaska -9 HAW Hawaii -10 Press and release the SET button to confirm and advance to the Daylight Saving Time setting. 5. 6. VII. Press and release the IN button to select radio-controlled time on or off. Press and release the SET button to confirm and advance to the 12/24-hour time setting. **12 OR 24 HOUR TIME SETTING 1.** Press and hold the SET button for 5 seconds. 2. "LCD" will show in the time LCD and the number setting will flash.

3. Press and release the SET button four times. 4. "12h" or "24h" will flash in the time LCD. 6. V. **DAYLIGHT SAVING TIME (DST) SETTING 1.** Press and hold the SET button for 5 seconds. 2. "LCD" will show in the time LCD and the number setting will flash.

3. Press and release the SET button twice. 4. "DST" will appear in the date LCD and either "1" or "0" will flash. 5.

Press and release the IN button to select 12 or 24-hour time format. 7. 8. Note: When in the 12-hour format "P.M." will appear to the left of the hour in the time LCD between the hours of noon and midnight. 6.

VIII. Press and release the SET button to confirm and advance to the time setting. 6. 7. Press and release the SET button to confirm and advance to the day/month setting. The day and month will flash in the date LCD. **TIME SETTING** There are two methods by which the time and date can be set: A) Automatically via WWVB reception, or B) Manually. A. WWVB (Remote Control Time) This method requires you to do nothing, except wait for the signal to be received, and to select a time zone. Reception usually takes approximately 10 minutes during optimal conditions.

The best condition for reception is at night, between midnight and 6:00 am--when there is less atmospheric interference. To keep your time as accurate as possible, Wireless Weather Station conducts a WWVB search every night between these hours, and overrides any manually set time. The WWVB tower icon (appearing in th;sunny" to "partly sunny" to "cloudy" or the reverse. It will not change from "sunny" directly to "rainy", although it is possible for the change to occur quickly. If the symbols do not change then the weather has not changed, or the change has been slow and gradual. B. **WEATHER TENDENCY ARROWS** Other possible displays in the FORECAST LCD are 2 weather tendency arrows, one that points up (on the left side of the LCD) and one that points down (on the right side of the LCD). These arrows reflect current changes in the air pressure. An arrow pointing up indicates that the air pressure is increasing and the weather is expected to improve or remain good, an arrow pointing down indicates that the air pressure is decreasing and the weather is expected to become worse or remain poor. II.

INDOOR TEMPERATURE, HUMIDITY, AND COMFORT LEVEL INDICATOR The current indoor temperature (viewed on the left) and relative humidity (viewed on the right) are displayed in the INDOOR LCD. The comfort level indicator is located at the center of the INDOOR LCD. The indicator will display a happy face icon when the temperature is between 68F and 79F (20C and 25.9C), and the humidity is between 45% and 65%. A sad face icon will be displayed when the temperature and humidity are outside the mentioned ranges.

III. **OUTDOOR TEMPERATURE AND HUMIDITY** The temperature received from the remote temperature sensor is viewed in the OUTDOOR LCD. When there is more than one remote temperature sensor unit in operation, a "boxed" number will appear to between the outdoor temperature and humidity data. This indicates which remote temperature sensor unit (1, 2, or 3) is currently displaying its data in the OUTDOOR LCD. (This feature is explained in further detail in section V--Adding Remote Temperature Sensors).

FEATURES OF THE WS-9228U-IT WWVB Tower Icon (indicates time reception) Weather Tendency Arrow Forecast icon Comfort Level Indicator Satellite icon (indicates outdoor transmission) Remote Sensor Number (Up to 3 Total) I. **WEATHER FORECAST** The weather forecasting feature is estimated to be 75% accurate and is for the next 12 to 24 hours. The weather forecast is based solely upon the change of air pressure over time. The WS-7U-IT averages past air-pressure readings to provide an accurate forecast--creating a necessity to disregard all weather forecasting for 12-24 hours after the unit has been set-up, reset, or moved from one altitude to another (i.e. from one floor of a building to another floor). In areas where the weather is not largely affected by the change of air pressure, the sensitivity setting should be set to 1. A. **WEATHER ICONS** 11 12 IV. **MINIMUM AND MAXIMUM TEMPERATURE RECORDS** The WS-9228U-IT keeps a record of the MINIMUM and MAXIMUM temperature, and the time and date of their occurrence--for both the indoor and outdoor modes.

A. 1. **VIEWING THE INDOOR TEMPERATURE AND HUMIDITY RECORDS** Press the IN button once. "MIN" appears above the indoor temperature and the LCD will flash, indicating that the minimum temperature and humidity, and the time and date of occurrence of the indoor temperature are displayed.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9228U-WW user guide](http://yourpdfguides.com/dref/3643520)
<http://yourpdfguides.com/dref/3643520>

The minimum records will display for 30 seconds before returning to the normal display mode. Press the IN button again (once while "MIN" is still displayed, twice otherwise). "MAX" appears above the indoor temperature and the LCD will flash, indicating that the maximum temperature and humidity, and the time and date of occurrence of the indoor temperature are displayed. While "MAX" is still displayed press the IN button again to return to the current data display.

@@VIEWING THE OUTDOOR TEMPERATURE AND HUMIDITY RECORDS Press the OUT button once. "MIN" appears above the outdoor temperature and the LCD will flash, indicating that the minimum temperature and humidity, and the time and date of occurrence are displayed.

The minimum records will display for 30 seconds before returning to the normal display mode. @@@@ALARM FUNCTION A. @@Each alarm will sound for a complete duration of 2 minutes. 1. 2.

3. 4. 5. 6. 7.

@@@@@To reactivate the alarm, press the AL1 button again. @@Wait 15 seconds and the date will display in the DATE LCD again.

@@@@@1. B. SNOOZING AND STOPPING THE ALARM 1. 2. 3. Press and release the SNZ button to activate the snooze function. @@@@1. (@@31), Alm 1 Time (6:00am), or Alm 2 time (6:00am) VI.

@@@These extra sensors can be purchased through the same dealer as this unit. 1. Remove all the batteries from the receiver and sensor(s) and wait 60 seconds. During these 60 seconds, press any button 20 times to discharge any excess power. 2. Insert the batteries to the first temperature sensor. 3. Within 30 seconds of powering up the first sensor, insert the batteries to the Weather Station. Once the batteries are in place, all segments of the LCD will light up briefly. Following the indoor temperature and indoor humidity, time as 12:00, calendar, and weather icons will be displayed.

If they are not shown in 13 14 4. 5. 6. 7. LCD after 60 seconds, remove the batteries and wait for at least 60 seconds before reinserting them.

The outdoor temperature from the first sensor (channel 1) should then be displayed on the Weather station. If this does not happen and the signal reception icon is not shown, after 2 minutes, the batteries will need to be removed from both units and reset from step 1. Insert the batteries to the second sensor as soon as the outdoor temperature readings from the first sensor are displayed on the Weather station. NOTE: You must insert the batteries into the second sensor within 10 seconds of reception of the first sensor. The outdoor temperature from the second sensor and the "channel 2" icon should then be displayed on the Weather Station.

If this does not happen after 2 minute, the batteries will need to be removed from all the units and reset from step 1. Insert the batteries to the third sensor as soon as the "channel 2" icon and outdoor data are displayed on the Weather Station. Then within 2 minutes, the channel 3 outdoor data from the third sensor will be displayed and the channel icon will shift back to "1" once the third sensor is successfully received. If this is not happen, user shall restart the setting up from step 1. NOTE: You must insert the batteries into the third sensor within 10 seconds of reception of the second sensor. IMPORTANT: Transmission problems will arise if the setting for multiple sensors is not followed as described above. Should transmission problems occur, it is necessary to remove the batteries from all units and start again the set-up from step 1. data. To achieve a true temperature reading, avoid mounting where direct sunlight can reach the remote temperature sensor or Wireless Weather Station. While the remote temperature sensor is weather proof, avoid submersion in water or snow.

We recommend that you mount the remote temperature sensor on an outside North-facing wall. The sending range is 330ft--obstacles such as walls, concrete, and large metal objects can reduce the range. Place both units in their desired location, and wait approximately 15 minutes before permanently mounting to ensure that there is proper reception. The Wireless Weather Station should display a temperature in the OUTDOOR LCD within 4 minutes of setting up. I. THE REMOTE TEMPERATURE SENSOR A. MOUNTING WITH SCREWS 1) Remove the mounting bracket from the remote temperature sensor. 2) Place the mounting bracket over the desired location. 3) Through the three screw holes of the bracket, mark the mounting surface with a pencil. 4) Screw mounting bracket onto the mounting surface.

Ensure that the screws are flush with the bracket. 5) Insert the remote temperature sensor into the bracket. VII. VIEWING AND OPERATING WITH MULTIPLE REMOTE TEMPERATURE SENSOR UNITS 1. To view the temperature of a different remote temperature sensor unit, press and release the CH button.

A shift from one "boxed" number to the next should be observed in the OUTDOOR LCD. 2. To view the Minimum/Maximum temperature and humidity: first select which remote temperature sensor to read data from (indicated by the "boxed" number), then press the OUT button. Pressing this button once will display the minimum temperature and humidity, and the date and time the data was recorded. Pressing this button a second time (while "MIN" is still displayed, otherwise press the button twice) will display the same data for the maximum recordings.

6. To reset the Minimum/Maximum readings, it is necessary to select which remote temperature sensor you wish to reset. Press and hold the OUT button for 5 seconds, the records for the selected remote temperature sensor unit will be reset. MOUNTING Note: Before permanently mounting ensure that the Wireless Weather Station is able to receive WWVB signals from the desired location. Also, extreme and sudden changes in temperature will decrease the accuracy of the Wireless Weather Station, and changes in elevation will result with inaccurate weather forecasting for the next 12 to 24 hours. These changes will require a 12 to 24 hour wait before obtaining reliable B. MOUNTING WITH ADHESIVE TAPE 1) With a nonabrasive solution, clean and dry the back of the mounting bracket and the mounting surface to ensure a secure hold. The mounting surface should be smooth and flat. 2) Remove the protective strip from one side of the tape. 3) Adhere the tape to the designated area on the back of the mounting bracket.

4) Remove the protective strip from the other side of the tape. 5) Position the remote temperature sensor in the desired location, ensuring that the Wireless Weather Station can receive the signal. Note: Mounting with adhesive tape is not recommended as a permanent mounting solution. Only use the adhesive tape during set-up process. II. THE WIRELESS WEATHER STATION The Wireless Weather Station can be mounted in two ways: with the table stand or, on the wall with the use of a wall hanging screw (not included). A. USING THE TABLE STAND The Wireless Weather Station comes with the table stand. If you wish to use the table-stand all that is required is to place the Wireless Weather Station in an appropriate location.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9228U-WW user guide](http://yourpdfguides.com/dref/3643520)
<http://yourpdfguides.com/dref/3643520>

WALL MOUNTING 1) Remove the table-stand. To do this, pull down on the stand from the rear and rotate forward. 2) Fix a screw (not included) into the desired wall, leaving approximately 3/16 of an inch (5mm) extended from the wall. 3) Place the Wireless Weather Station onto the screw using the hanging hole on the backside. 4) Gently pull the Wireless Weather Station down to lock the screw into place.

the case can act as a heat sink to absorb and store heat from external sources (i.e. handling of the case or radiant heat). Also, the much greater range of the outdoor temperature sensor requires a different calibration curve than the indoor range. Error is usually greater at the extreme ends of a range, making it harder to compare different ranges with different curves.

Under non-laboratory conditions, it is difficult to compensate for the above factors and obtain an accurate comparison. **MAINTENANCE AND CARE INSTRUCTIONS** Extreme temperatures, vibration, and shock should be avoided to prevent damage to the units. Clean displays and units with a soft, damp cloth. Do not use solvents or scouring agents; they may mark the displays and casings. Do not submerge in water. Immediately remove all low powered batteries to avoid leakage and damage. Opening the casings invalidates the warranty. Do not try to repair the unit. Contact La Crosse Technology for repairs. **SPECIFICATIONS** Temperature measuring range: Indoor: **TROUBLESHOOTING NOTE:** For problems not solved, please contact La Crosse Technology.

Problem: No reception of WWVB time signal. Solution: 1) Wait overnight for signal. 2) Be sure Weather Station is at least 6 feet from any electrical devices, such as televisions, computers, or other radio-controlled clocks. 3) Remove batteries for five minutes, reinsert and leave the unit alone overnight without pressing buttons. 4) If there are still problems, contact La Crosse Technology **Problem: Hour is incorrect (minute and date are correct) Solution:** Be sure correct time zone and daylight saving time settings are selected. **Problem: The LCD is faint Solution:** 1) Set the LCD contrast to a higher number 2) Replace batteries **Problem: No outdoor temperature is displayed. Solution:** 1) Remove all batteries, reinsert into sender first, then display. 2) Place remote sender closer to display. 3) Be sure all batteries are fresh. 4) Place Remote Control Sender and Weather Station in position so the straight-line signal is not passing through more than two or three walls.

Problem: Temperatures do not match if units are placed next to each other. Solution: Each temperature sensor is manufactured to be accurate to within 2°F plus or minus and under normal conditions, so two sensors could be as much as 4°F different. However, the difference can be exaggerated further because the sensors are designed for different working environments. The indoor sensor is less responsive to ambient air currents because of the shielding effect of the display's case. In addition, **Outdoor: Indoor relative humidity measuring range: Indoor Temperature checking interval: Indoor Humidity checking interval: Outdoor Temperature checking interval (Remote Temperature Sensor): Outdoor Temperature reception (Weather Station): Transmission Range: Power Supply: Weather Station: Remote Temperature Sensor: Battery life cycle: Recommended battery type: Dimensions (H x L x W) Weather Station (without stand): Remote Temperature Sensor: 14.**

1F to 139.8F with 0.2F resolution. (-9.9C to 59.

9C with 0.1C resolution) "OFL" displayed if outside this range. -39.8 F to 139.8F with 0.2F resolution. (-39.9C to 59.9C with 0.1C resolution).

"OFL" displayed if outside this range. 1% to 99% with 1% resolution. (Display "-" if temperature is OL.F; display "-" if < 1% and "99%" if > 99%) Every 10 seconds. Every 15 seconds. Every 4 seconds Every 4 seconds. 330 feet (in open space). 2 x AA, IEC LR6, 1.5V. 2 x AA, IEC LR6, 1.

5V. Approximately 24 months. Alkaline. 3.16" x 1.

17" x 6.65" (80.5 x 29.8 x 169) 5.05" x 1.

50" x 0.83" (128.3 x 38.2 x 21.2 mm) **WARRANTY INFORMATION** La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship. 17 18 This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center. La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above.

All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd. @@@@La

Crosse Technology, Ltd will pay ground return shipping charges to the owner of the product to a USA address only. Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference.. This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances. **LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.** This warranty gives you specific legal rights.

You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you.



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9228U-WW user guide](http://yourpdfguides.com/dref/3643520)
<http://yourpdfguides.com/dref/3643520>

For warranty work, technical support, or information contact: La Crosse Technology 2817 Losey Blvd. S. La Crosse, WI 54601 Phone: 608.782.1610 Fax: 608.796.1020 E-mail: support@lacrossetechnology.com Warranty work: sales@lacrossetechnology.com Information on other products: www.lacrossetechnology.com Questions? Instructions? Please visit: www.lacrossetechnology.com/9228 All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher. This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences. All trademarks and patents are acknowledged.

FCC ID: OMOTX29U (transmitter) RF Exposure mobile: The internal / external antennas used for this mobile transmitter must provide a separation distance of at least 20 cm (8 inches) from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter." Statement according to FCC part 15.19: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Statement according to FCC part 15.21: Modifications not expressly approved by this company could void the user's authority to operate the equipment. Statement according to FCC part 15.105: NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help 19 20 .



[You're reading an excerpt. Click here to read official LA CROSSE TECHNOLOGY WS-9228U-WW user guide](http://yourpdfguides.com/dref/3643520)
<http://yourpdfguides.com/dref/3643520>